



FOREVER REDWOOD


 

 
From the Forest, For the Forest since 1995

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE **BENCH SWING SETS** XL BENCH






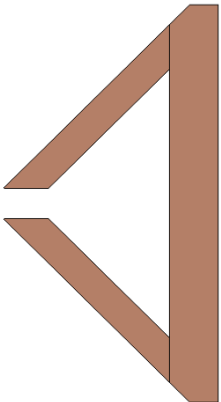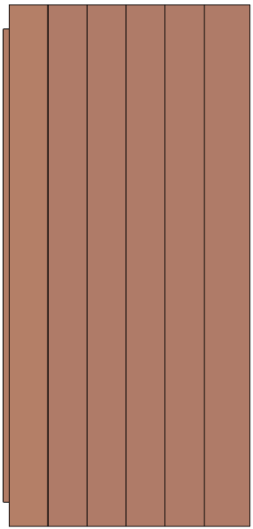







CONTENT OF BOXES - Frame Swing			
Qty.	Description	Drawing	No.
2	Posts		1
2	Legs		2
1	Supports		3
4	Diagonal Supports		4
4	Roof Supports If ordered		5
2	Roof Panel If ordered		6
1	Roof Board If ordered		7

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.

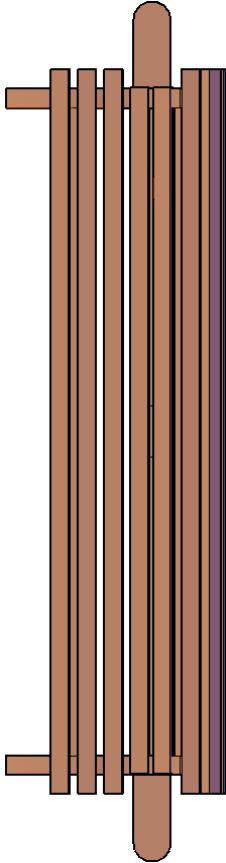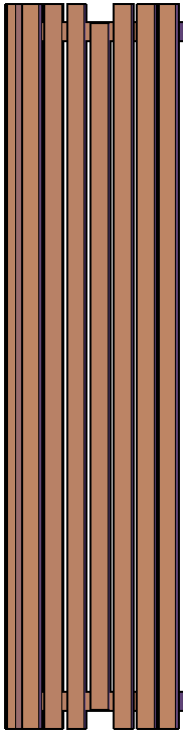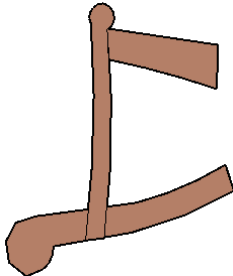


CONTENT OF BOXES – Chair Swing				
Qty.	Description	Drawing	No.	
1	Seat		8	
1	Backrest		9	
2	Armrest		10	

      Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.

HARDWARE LIST		
Description	Drawing	No.
3/8" X 7" Bolts (To attach the posts to the legs. / To attach the roof supports to the posts).		A
3/8" X 8" Bolts (To attach the posts to the legs).		B
5/16" X 3 1/2" Bolts (To attach the support to the posts. / To attach the seat and the backrest to the armrest./ To attach the roof panels to the roof supports).		C
5/16" X 6" Bolts (To attach the roof supports to the posts).		D
5/16" X 4" Bolts (To attach the roof panels to the roof supports).		E
4" Deck Screw (To attach the roof panels to the diagonal supports).		F
2 1/2" Deck Screw (To attach the roof board).		G
3/8" X 3 1/2" Eyebolts (To attach the backrest to the armrest).		H
Quick Links		I
Springs		J
Chains		K

Note: Dimensions of your hardware will vary depending on size.


DESCRIPTION	No
Posts	1
Legs	2
Supports	3
Diagonal Supports	4
Roof Supports	5
Roof Panel	6
Roof Board	7
Seat	8
Backrest	9
Armrest	10

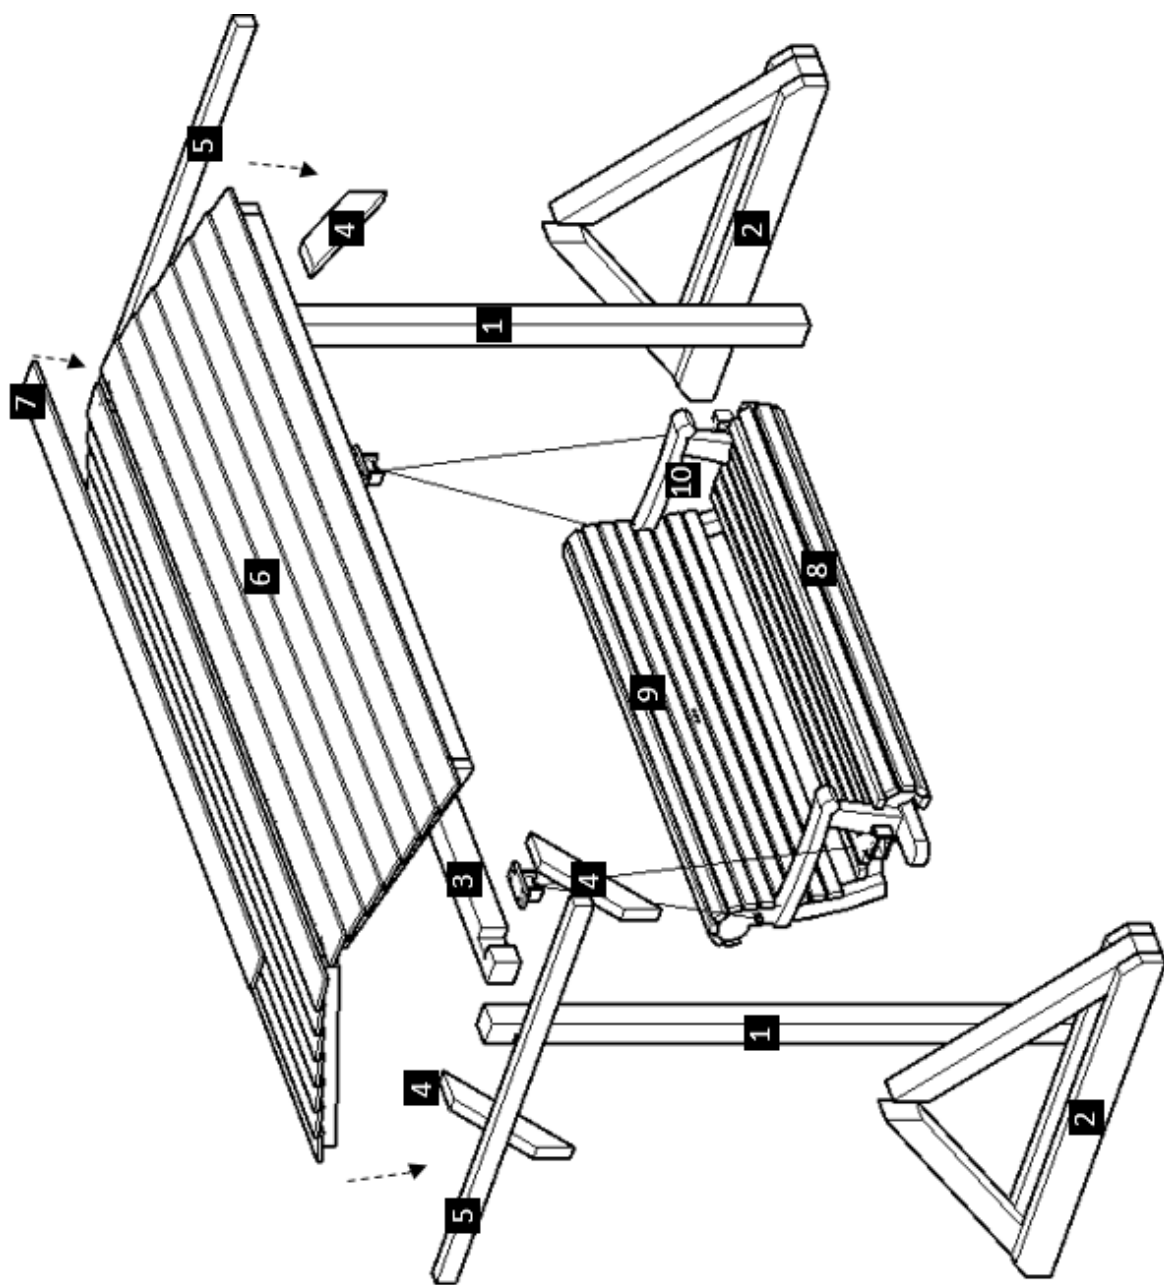


Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.

Option A – Without Swing Roof


Step 1: Attach the post (1) to the legs (2) with 3/8" x 7" bolts (A) and 3/8" x 8" bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

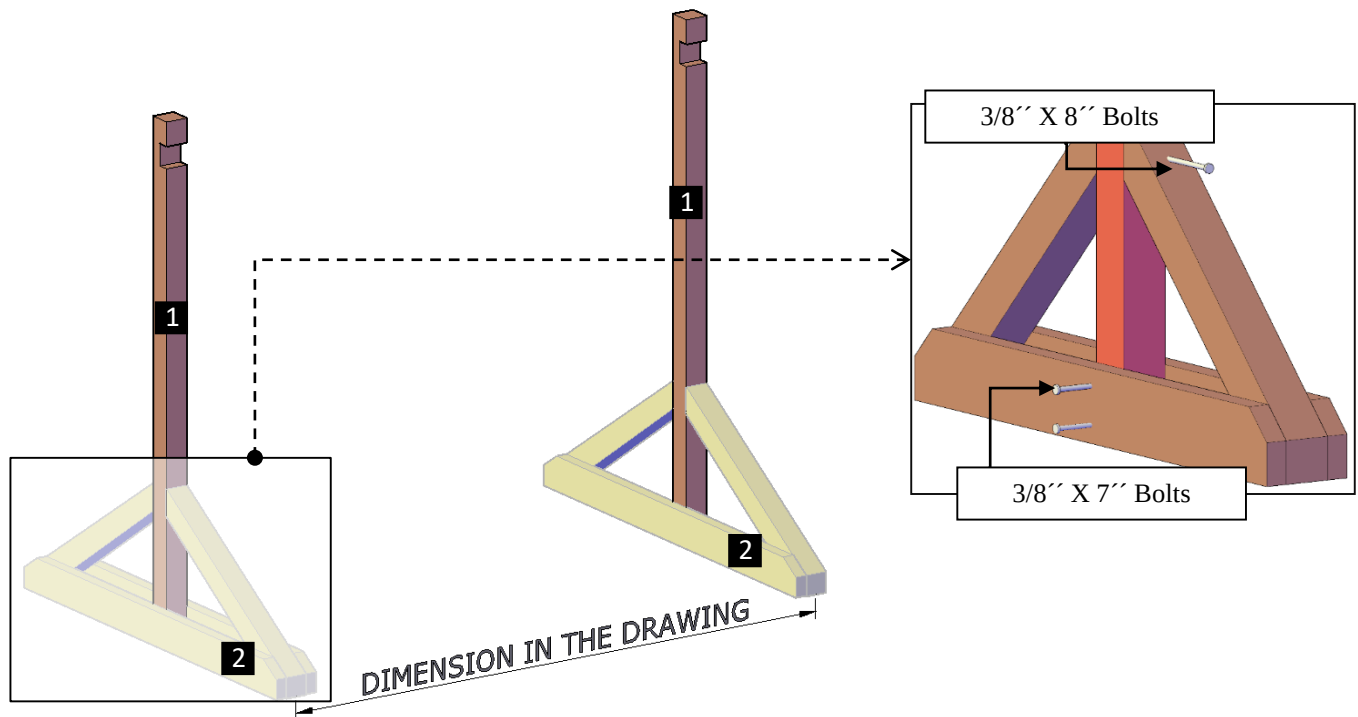


Step 2: Put the Quick Links (I) and the Springs (J) in the hanger's support. After that, put the chains (K). Take a few minutes to adjust the chain height to your preference.

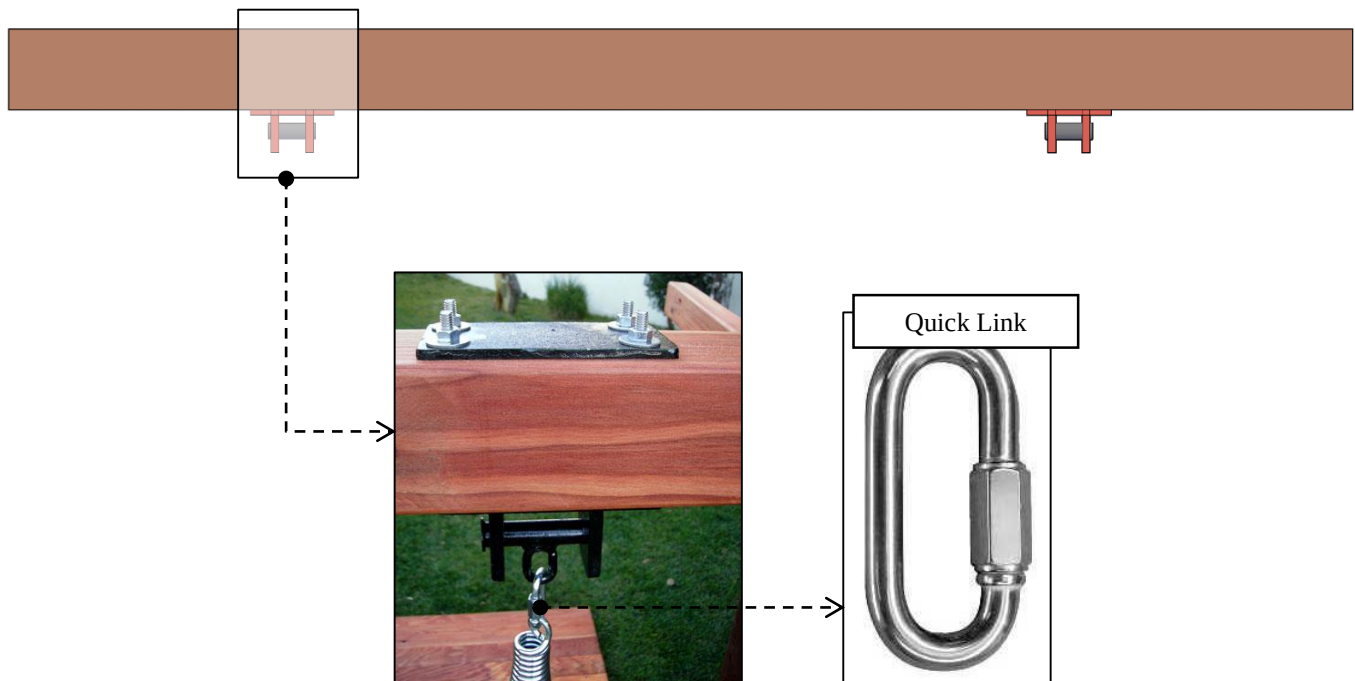

Step 3: Use 5/16" x 3 1/2" bolts (C) to attach the support (3) to the posts. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

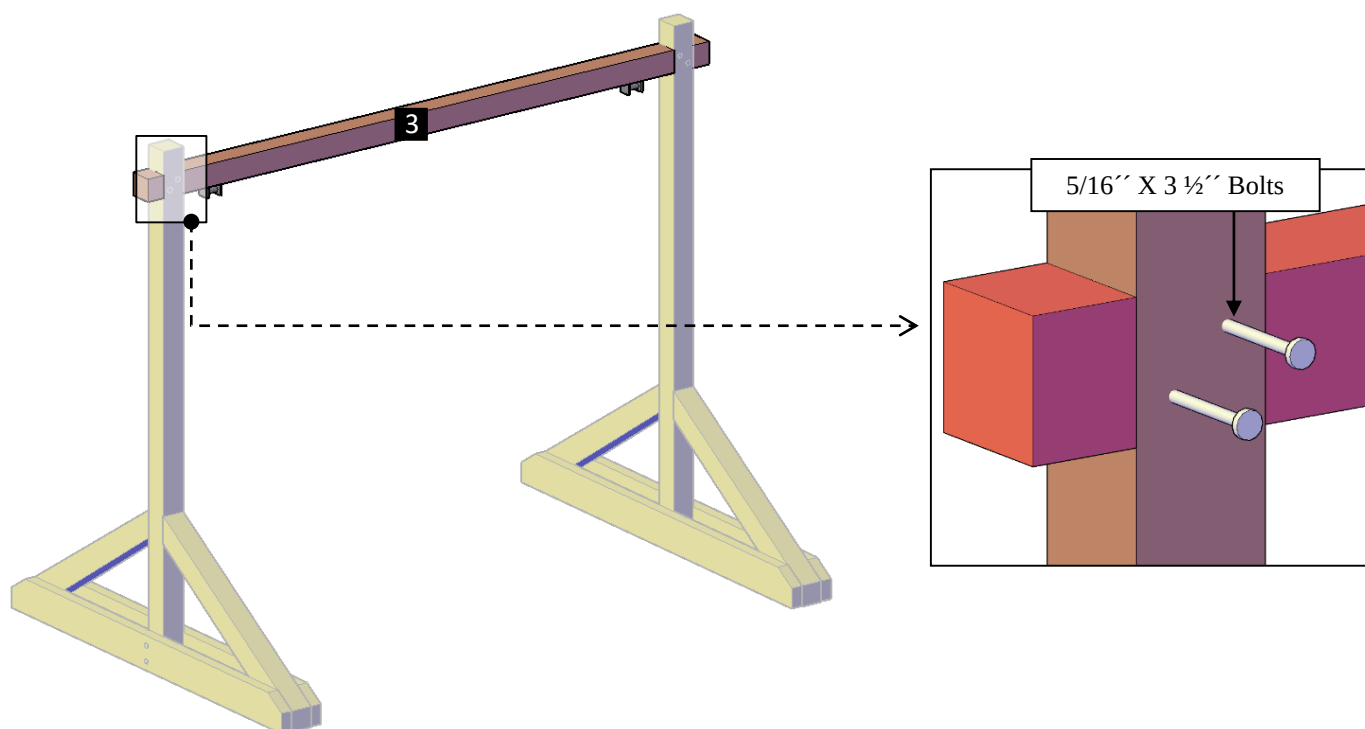


Step 4: Attach the diagonal supports (4) to the posts and to the support with 3/8" x 7" bolts (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

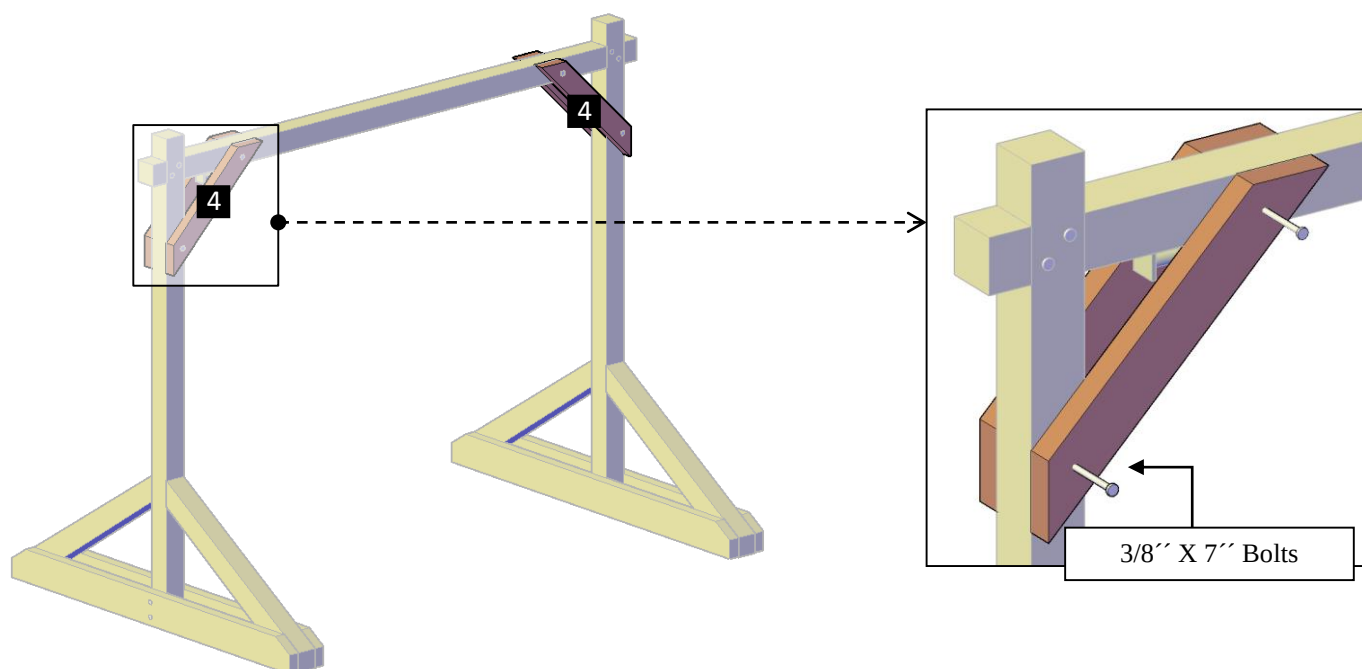


Note: If your Swing Set doesn't include roof, then go to **step 8**.

Option B – With Swing Roof


Step 5: Attach the roof supports (5) to the posts with 5/16" x 6" bolts (D). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

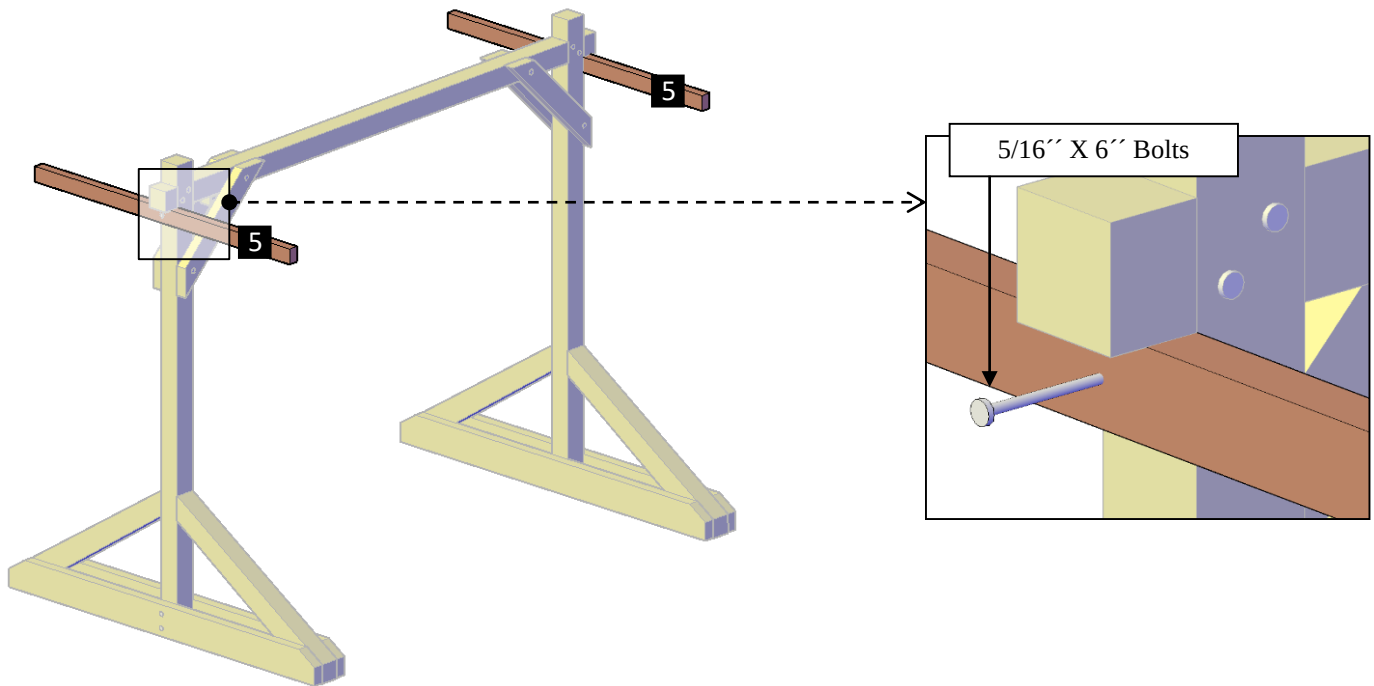


Step 6: Attach the roof panels (6) to the roof supports with 5/16" x 4" bolts (E) and to the diagonal supports with 4" deck screws (F). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

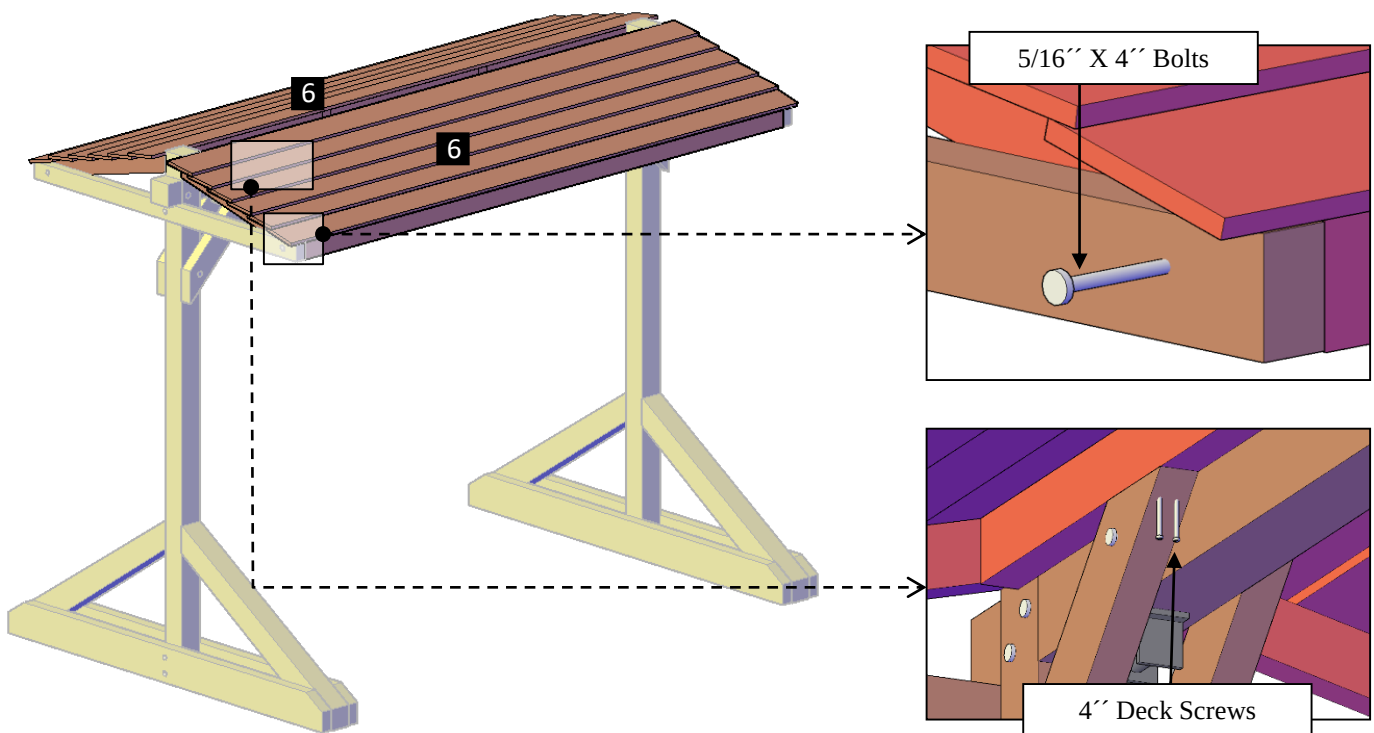


Step 7: Use 2½" deck screws (G) to attach the roof board (7) to the posts. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

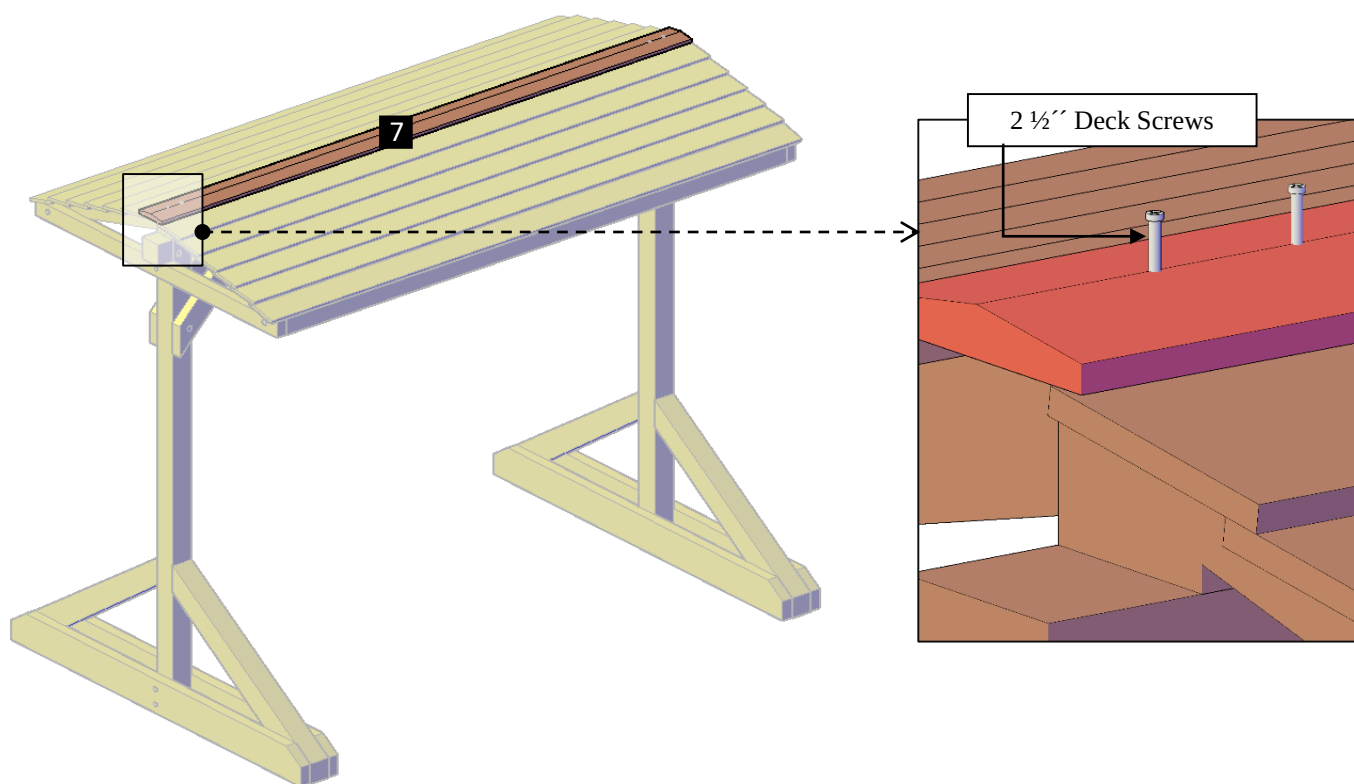


Step 8: Attach the seat (8) to the armrest (10) with 5/16" x 3 ½" bolts (C). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

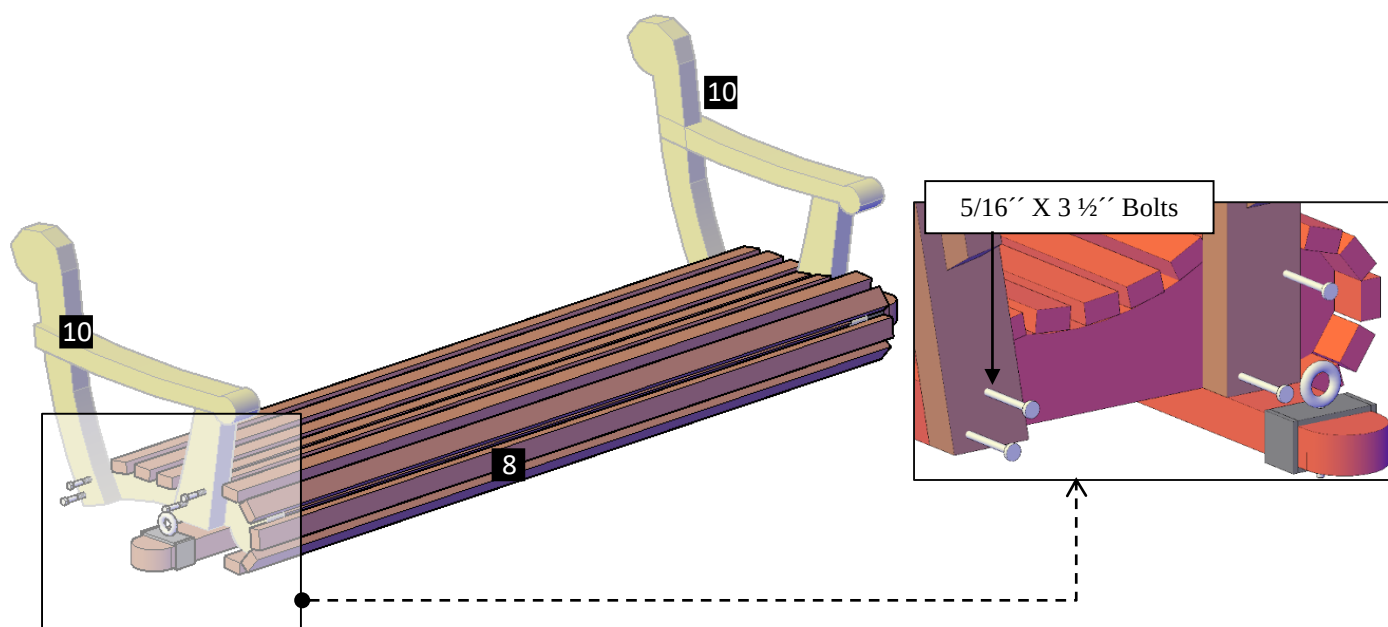


Step 9: Attach the backrest (9) to the armrest with 5/16" x 3 1/2" bolts (C) and 3/8" x 3 1/2" eyebolts (H). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

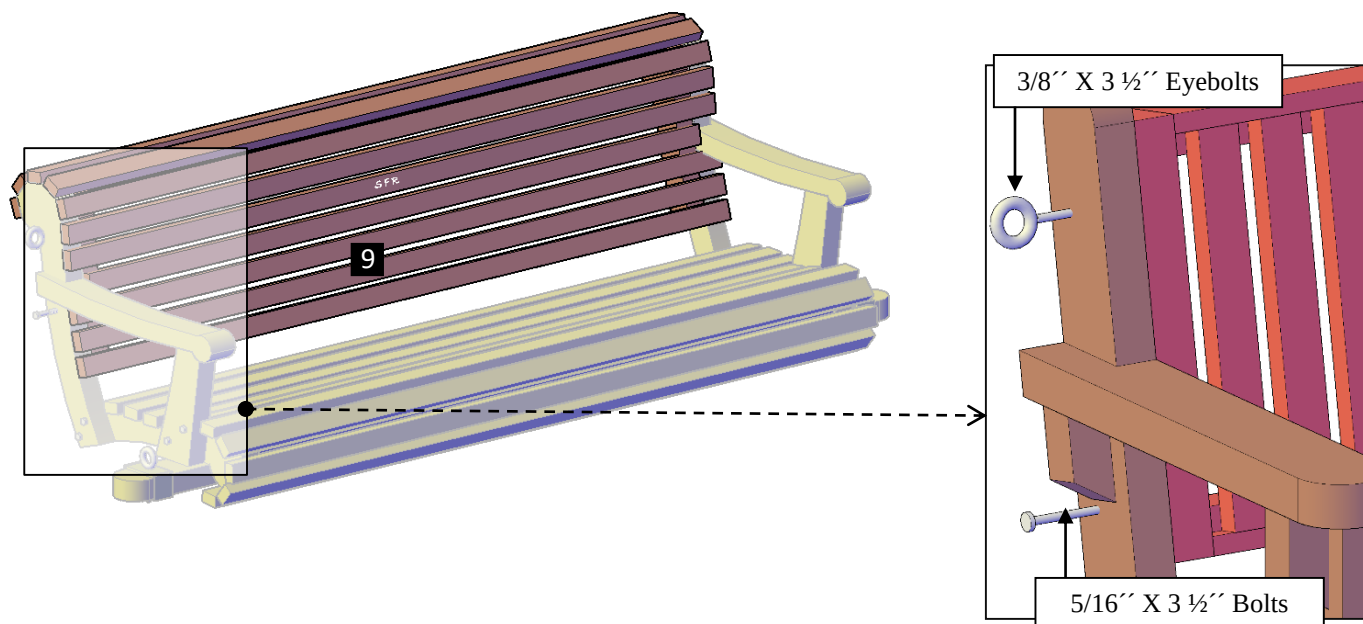


Step 10: Finally, use quick links (I) to join the chair swing to the chains (K).

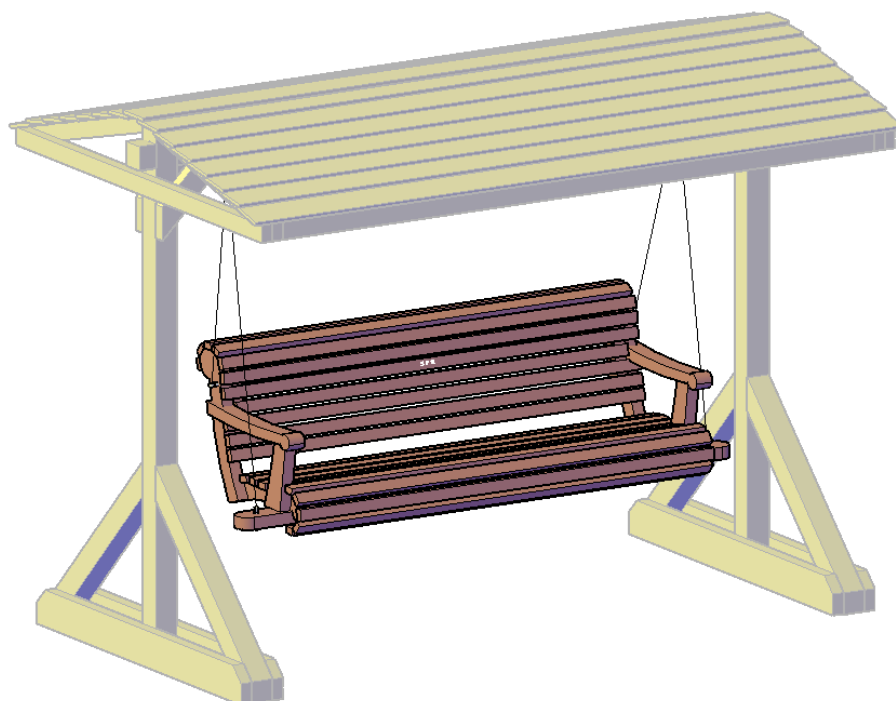

Option A – Without Swing Roof

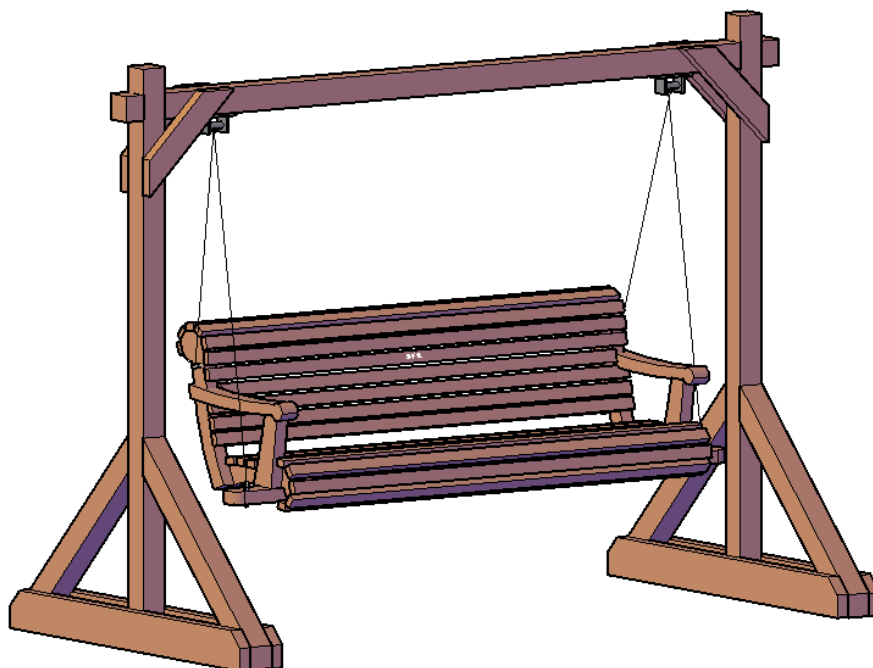

Option B – With Swing Roof

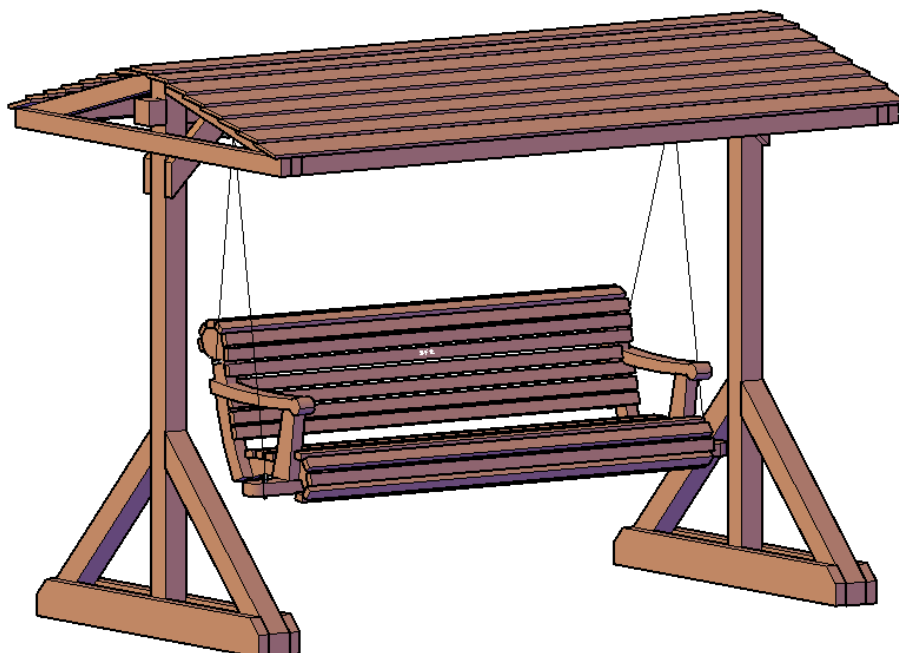



This completes the Swing assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.