



# FOREVER REDWOOD

*From the Forest, For the Forest since 1995*

 
 




---

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

## ASSEMBLY INSTRUCTIONS FOR THE RORY'S GIANT PLAYGROUND SWING SETS






CONTENT OF BOXES				
Qty.	Description	Drawing	No.	
2	Frame Legs		1	
2	Lower Main Support		2	
1	Main Structural Timber		3	
4	Connector Timbers		4	
2	Knee Braces		5	
3	Wooden Seats		6	

*Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.*

HARDWARE LIST		
Description	Drawing	No.
3/8" x 11" Bolts (To attach the frame legs / To attach the frame legs to the main structural timber).		A
3/8" x 6 1/2" Bolts (To attach the frame legs).		B
3/8" X 12" Bolts (To attach the main structural timber to the frame legs).		C
3/8" X 7" Bolts (To attach the connectors timbers and the knee braces to the frame legs).		D
3/8" x 10" Bolts (To attach the knee braces to the main structural timber).		E
Chains (To wooden seats and hangers)		F
Quick Links (To hangers, wooden seats and chains)		G

*Note: Dimensions of your hardware will vary depending on size.*

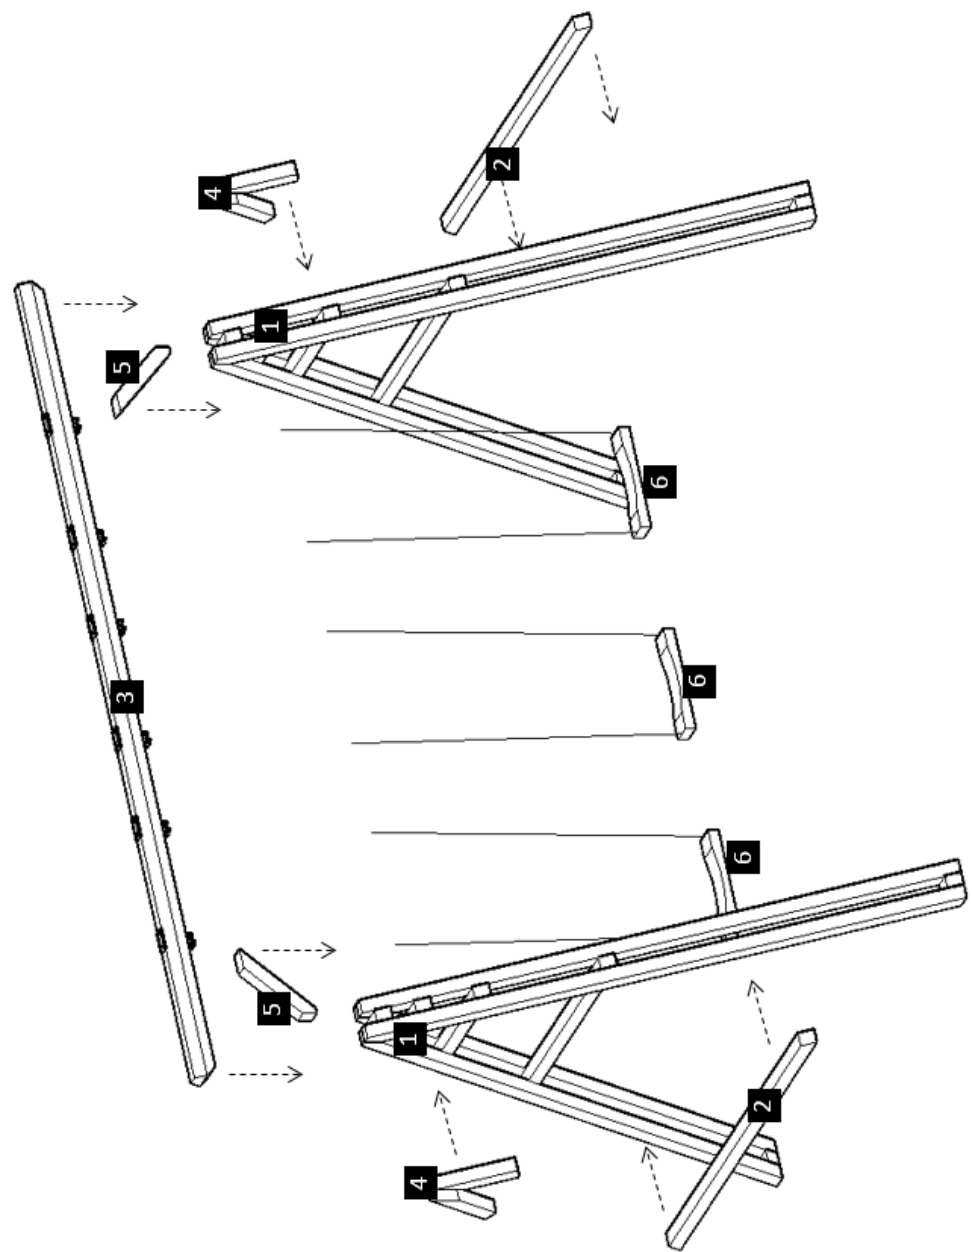

DESCRIPTION	No
Frame Legs	1
Lower Main Support	2
Main Structural Timber	3
Connector Timbers	4
Knee Braces	5
Wooden Seats	6


*Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.*




**Note:** The structure must be assembled on its side, as shown.




**Step 1:** Open the frame legs (1) as shown.

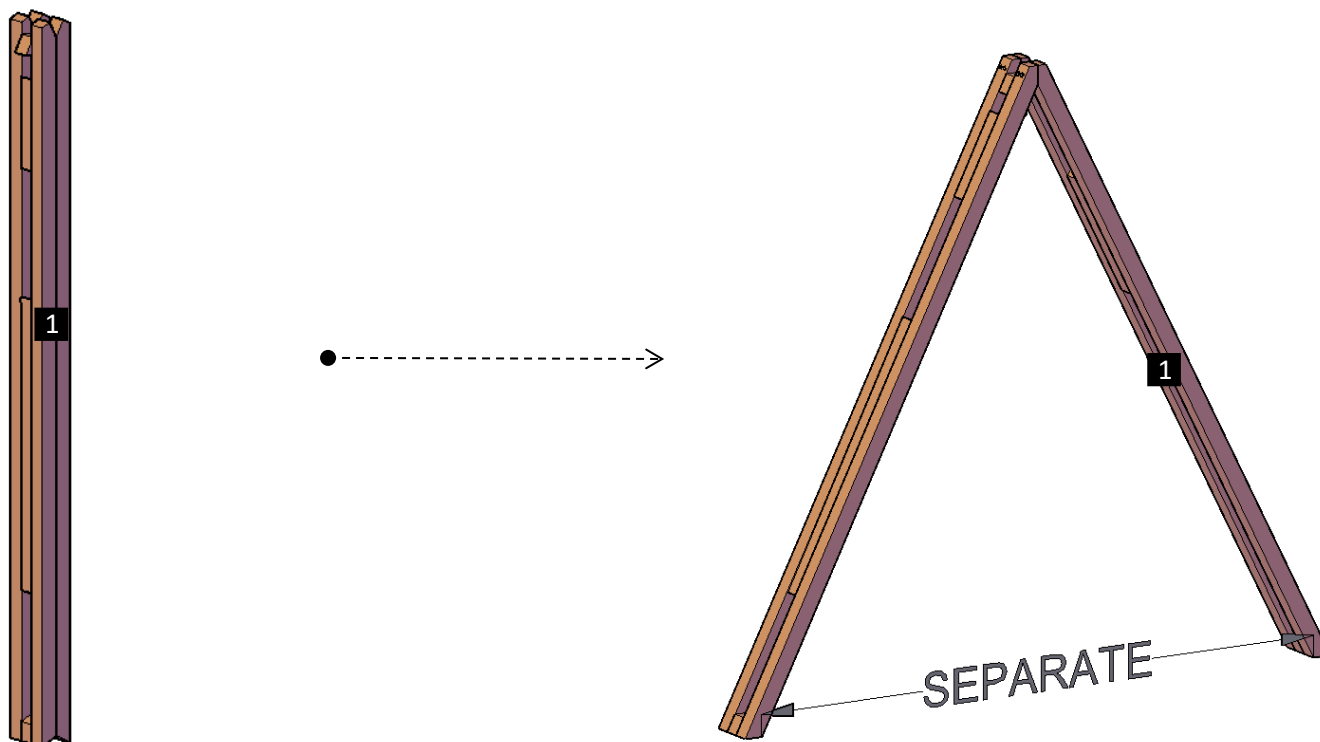


**Step 2:** Pull out the cross support and line up to match the predrilled hole. After that, use 3/8" X 11" Bolts (A) with washer and nut to secure in place.

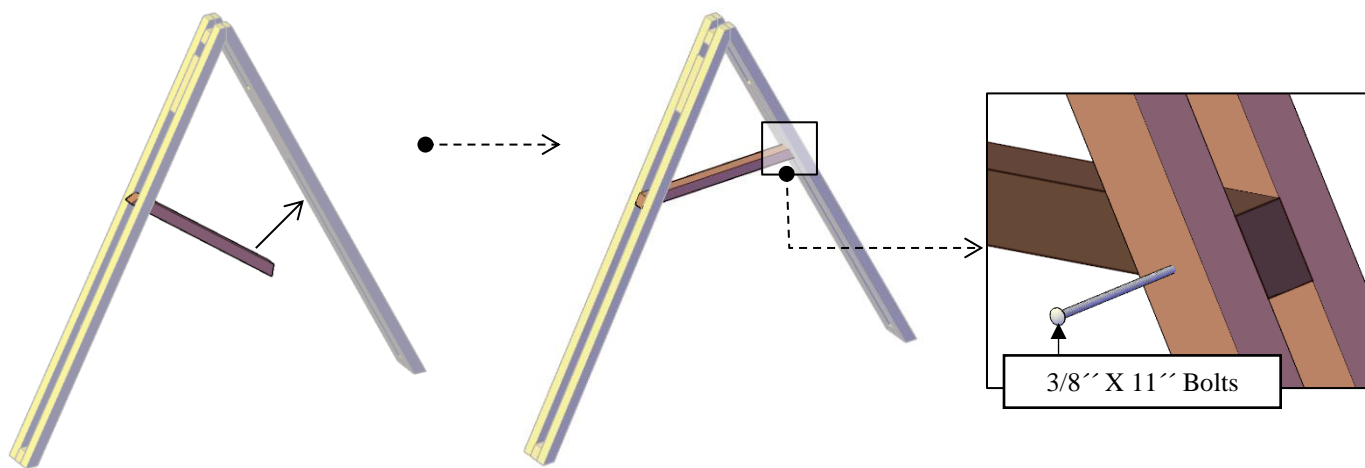


**Step 3:** Use 3/8" X 11" Bolts (A) with washer and nut to attach the lower main support (2) to the frame legs. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

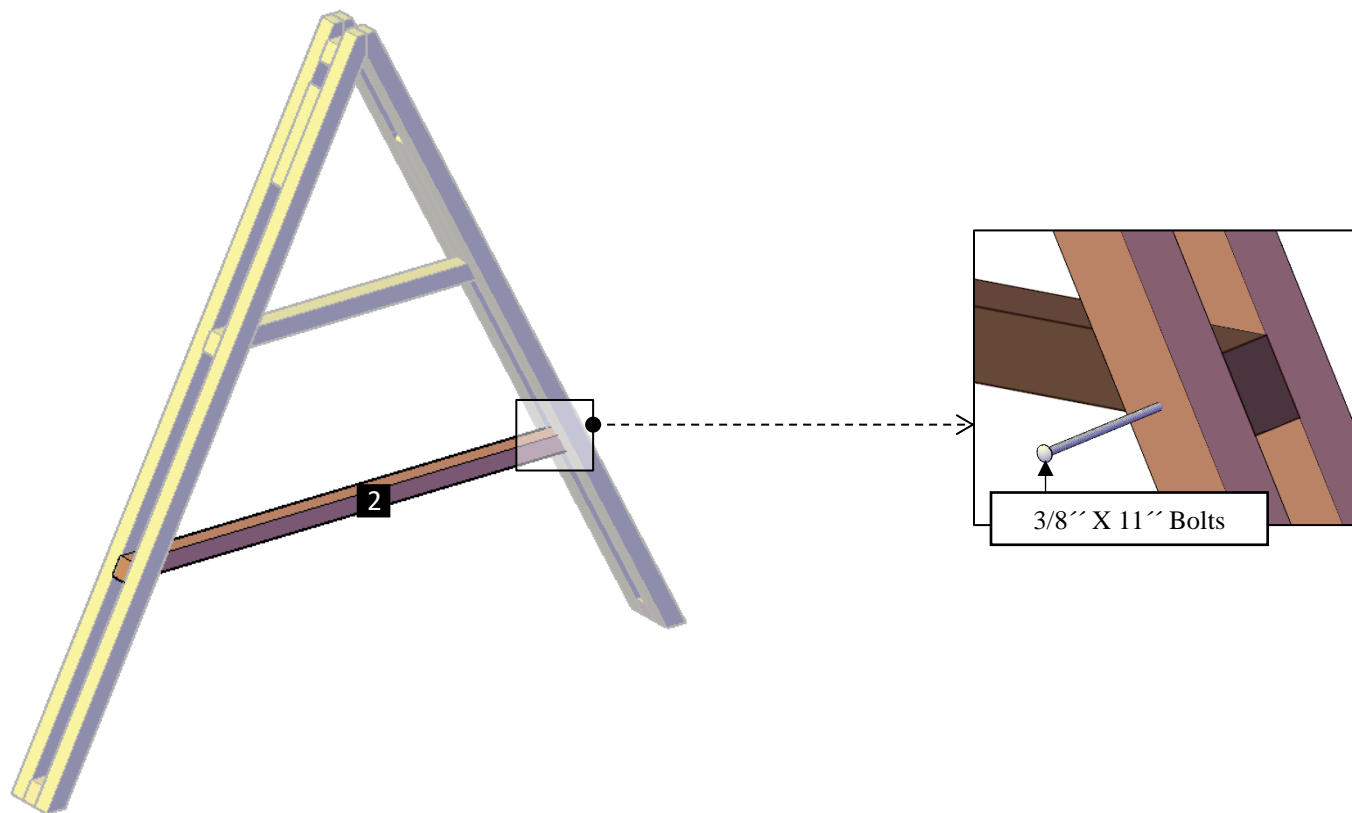


**Step 4:** Put the 3/8" x 6 1/2" bolts (B) with washer and nut as shown.

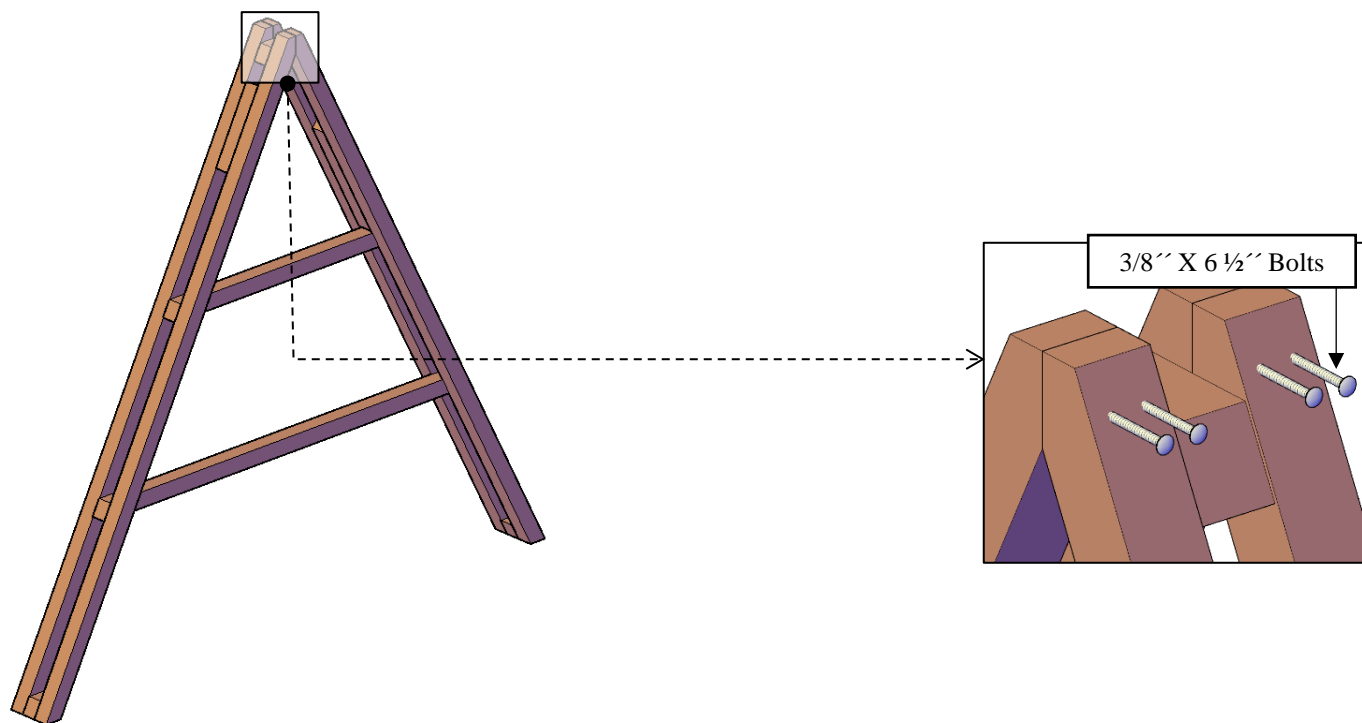


**Step 5:** Place the frame legs in their site.

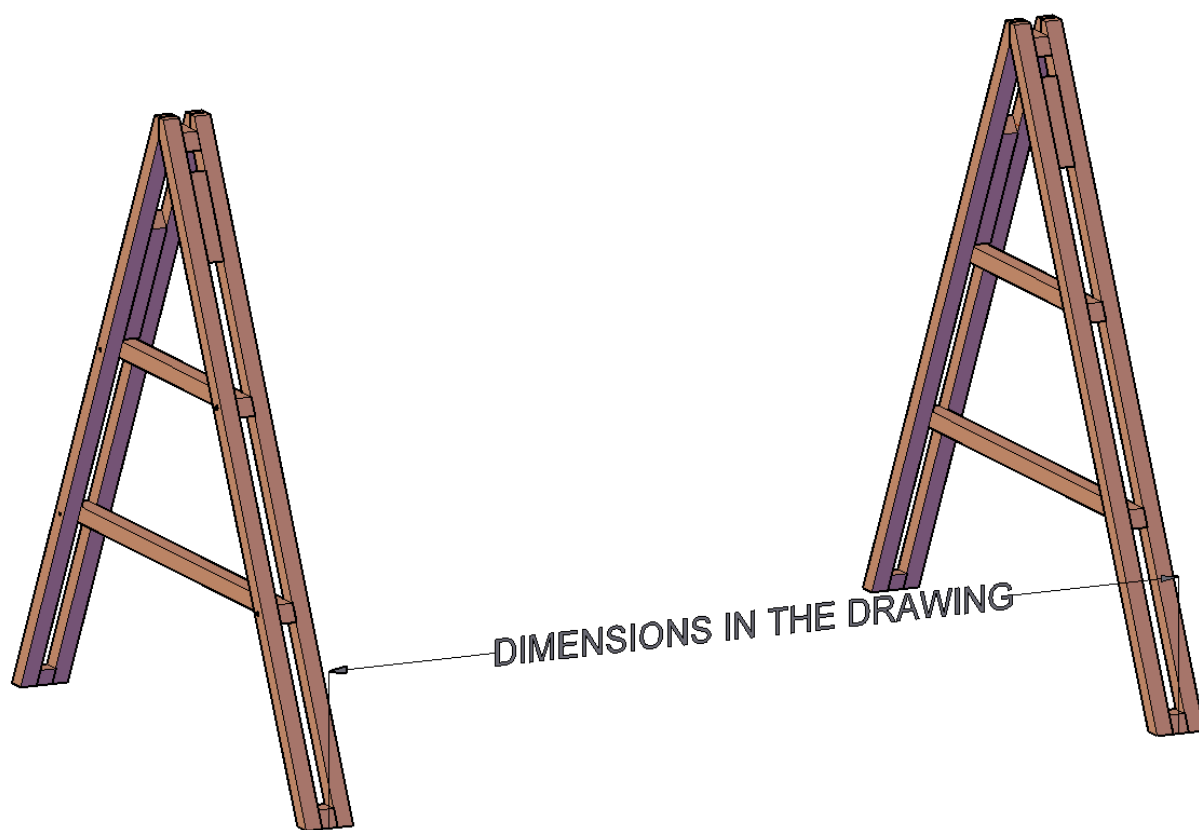

**Step 6:** Put the Quick Links (G) in the hangers. After that, put the chains (F). Take a few minutes to adjust the chain height to your preference.

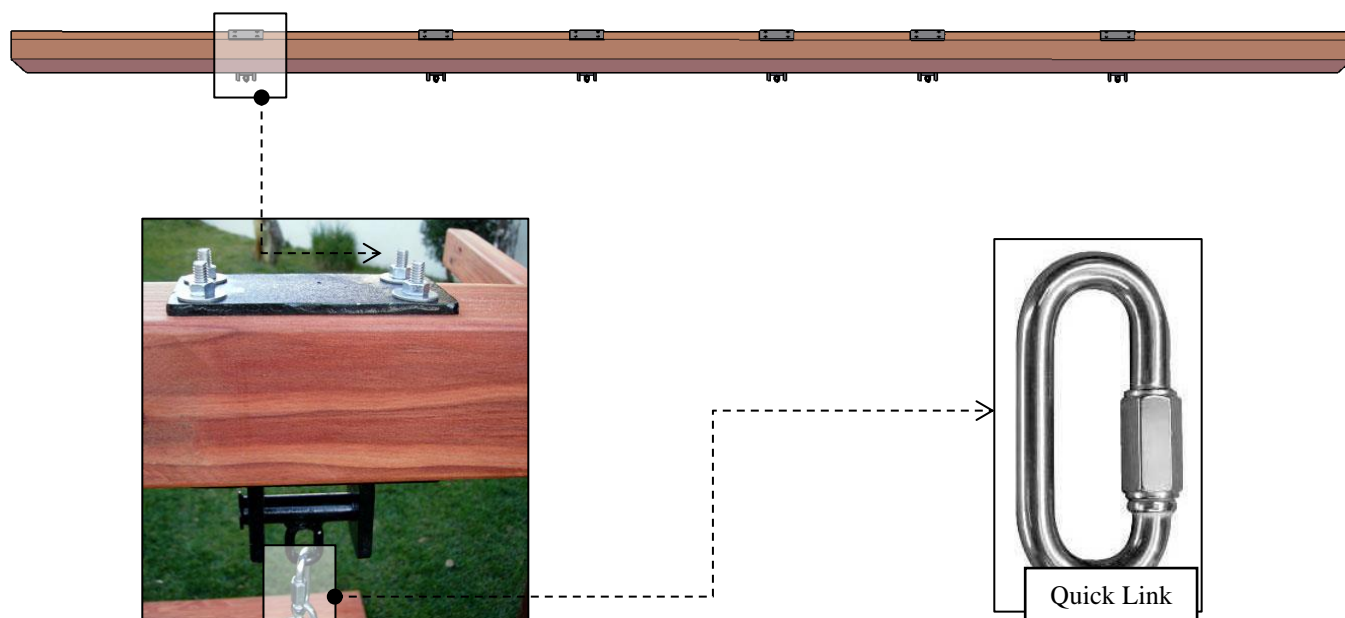


**Step 7:** Attach the main structural timber (3) to the frames legs with 3/8" X 12" bolts (C) with washer and nut. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

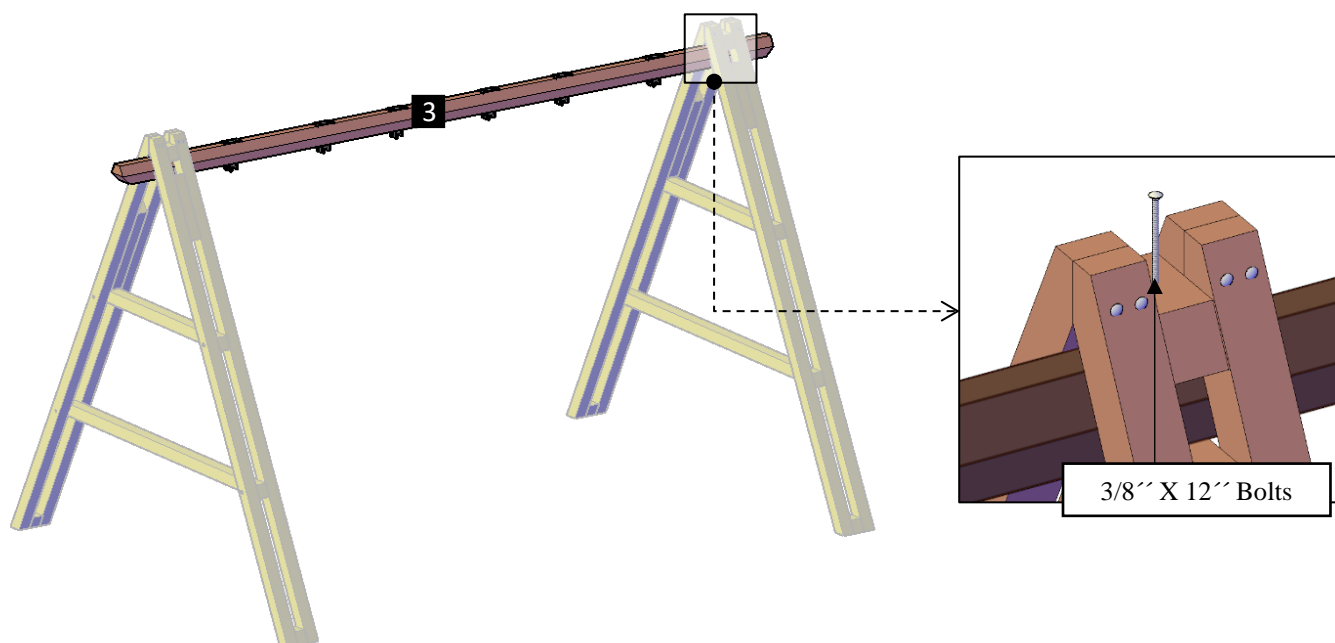





**Step 8:** Pull out the first cross supports and line up to match the predrilled hole. After that, use 3/8" X 11" Bolts (A) with washer and nut to attach.

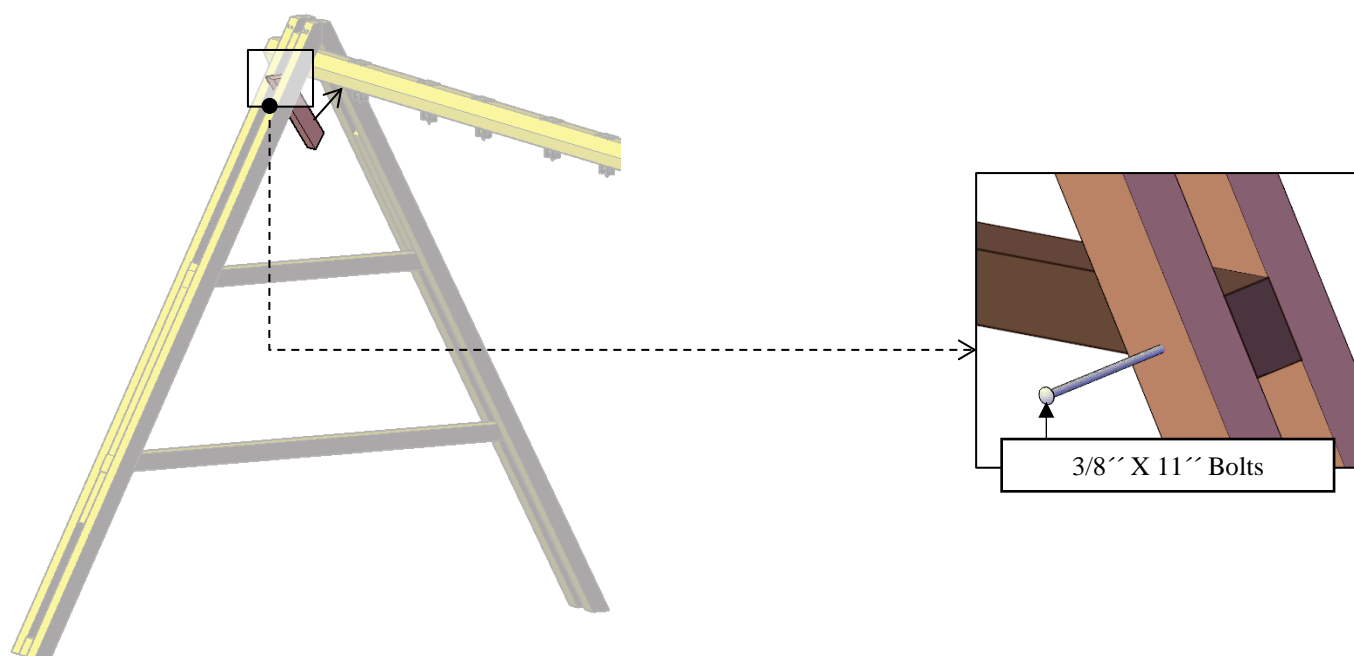


**Step 9:** Pull out the second cross supports and line up to match the predrilled hole. After that, use 3/8" X 11" Bolts (A) with washer and nut to attach.

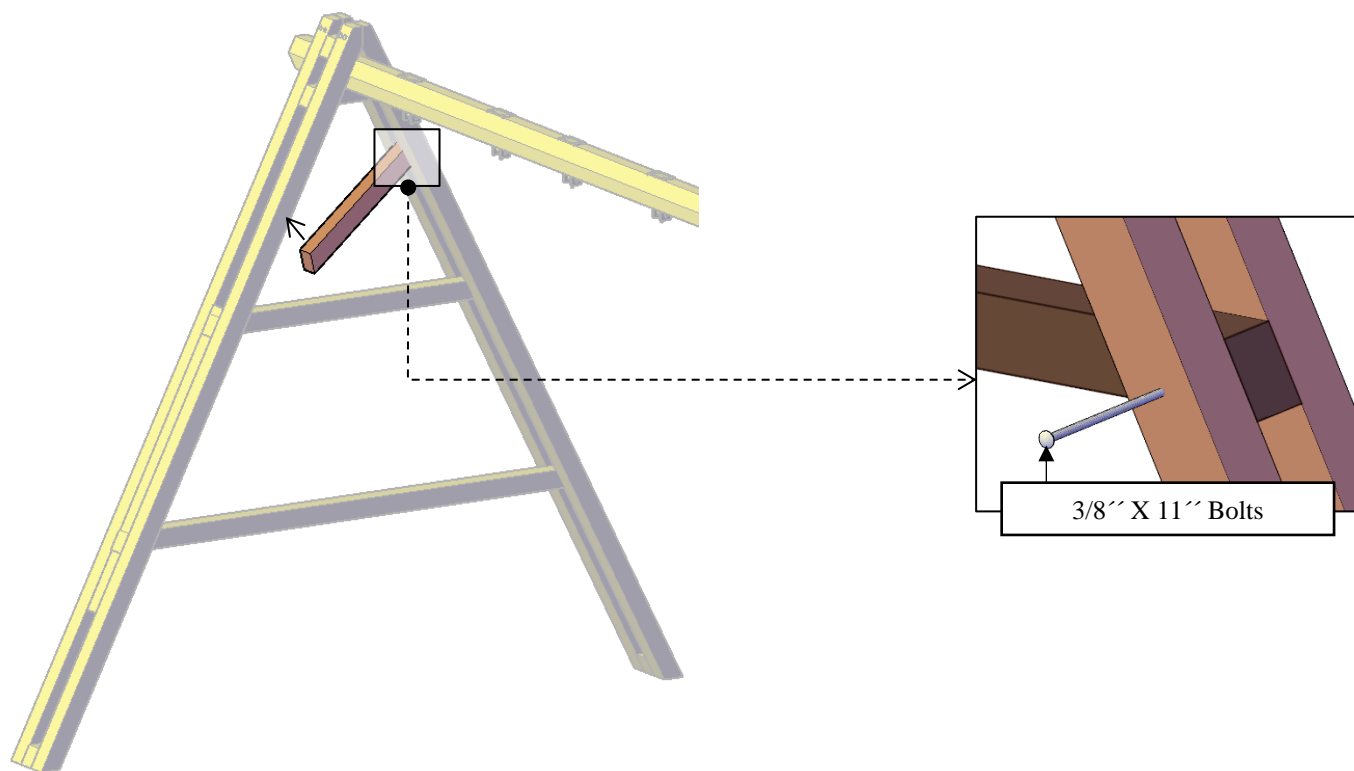



**Step 10:** Attach the connector timbers (4) to reinforce the connection between the frame legs and the main structural timber. Use 3/8" x 7" bolts (D) with washer and nut to attach. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

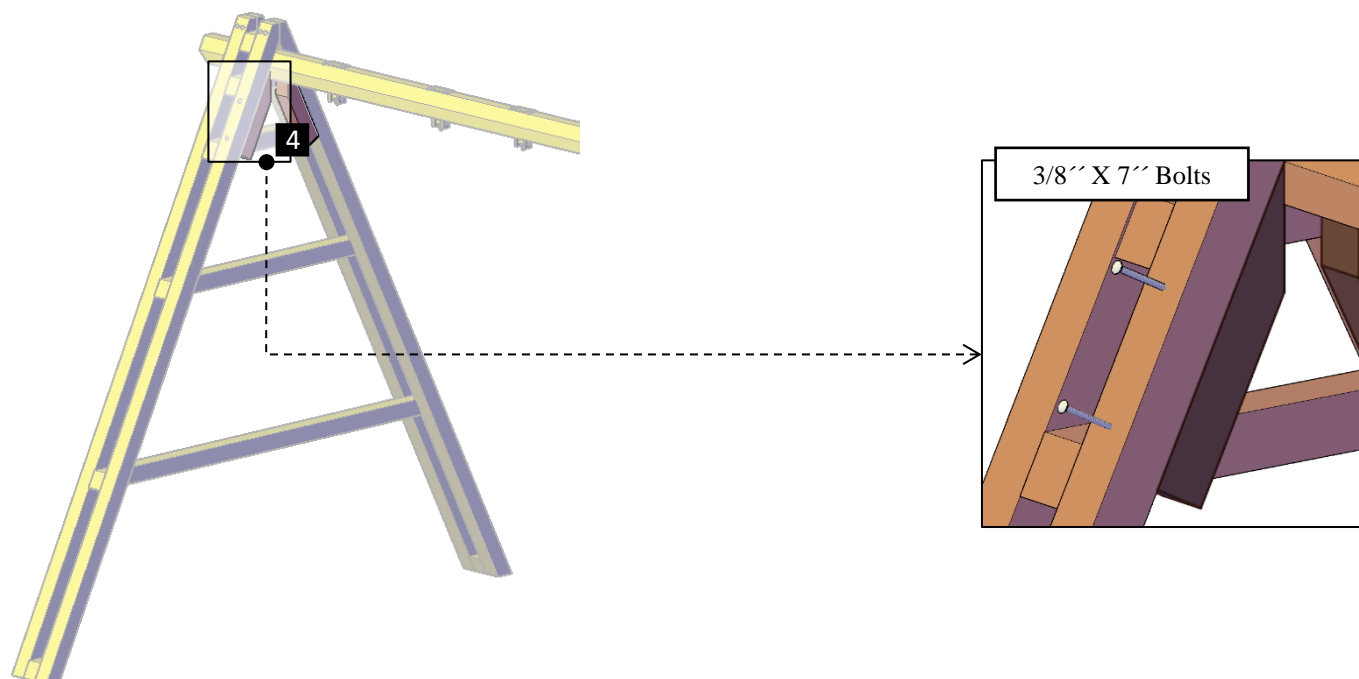

**Step 11:** Attach the knee braces (5) to the main structural timber with 3/8" x 10" bolts (E) and to the frame legs with 3/8" x 7" bolts (D). Don't forget washers and nuts. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

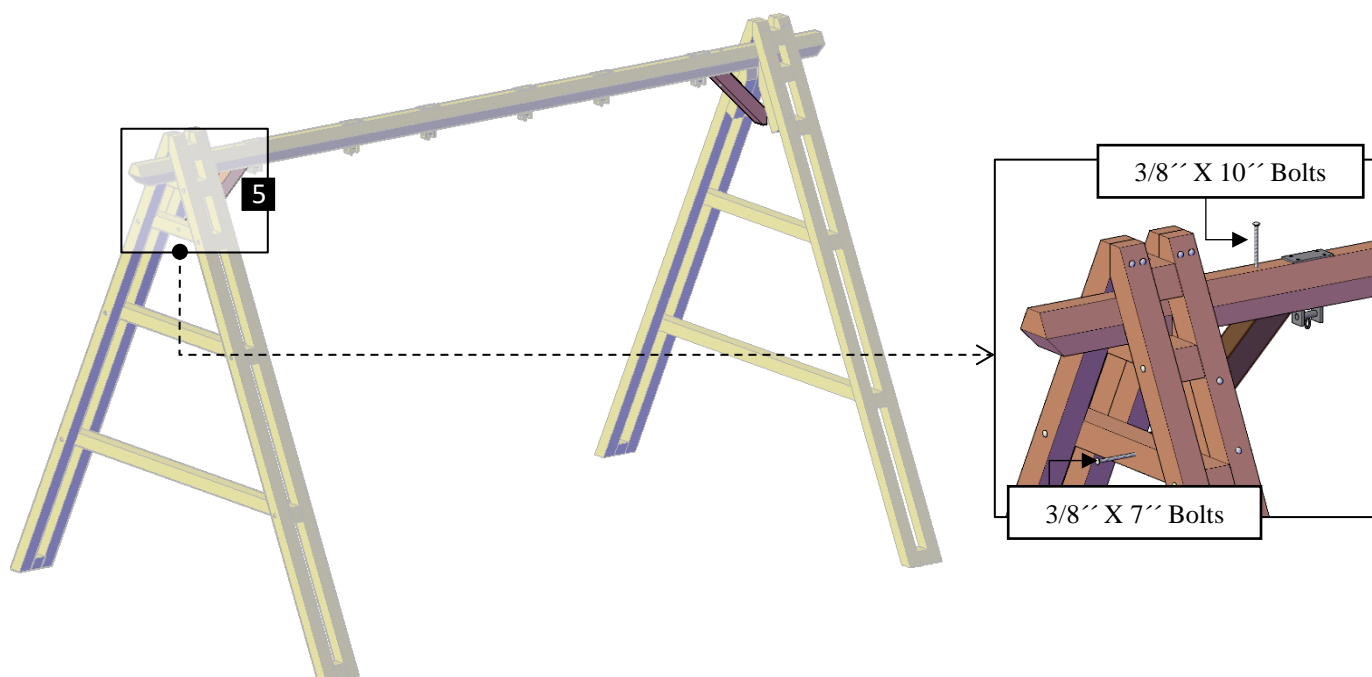

**Step 12:** Use quick links (G) to join the wooden seats to the chains (F).

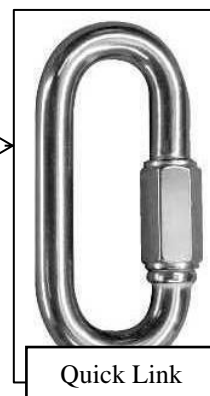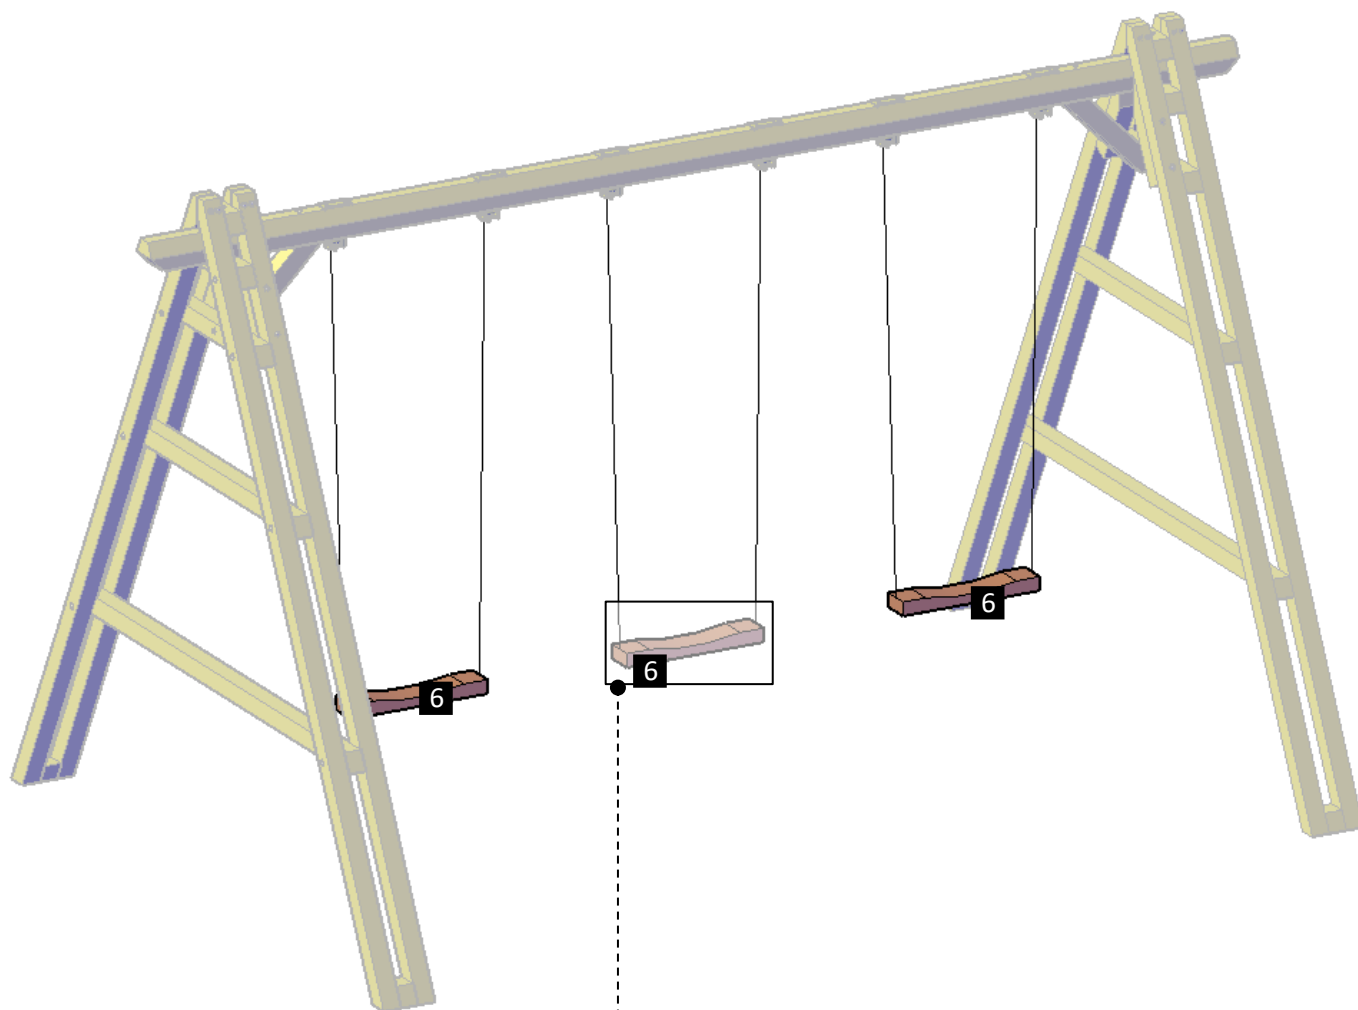

**Step 13:** Finally, with a couple of people helping, turn the swing right side up.



*This completes the Playground Swing Set assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.*