


866.332.2403 (TOLL FREE); 7am - 7pm Pacific Time, Monday-Saturday


ASSEMBLY INSTRUCTIONS FOR THE ROUND WOOD PICNIC BENCH




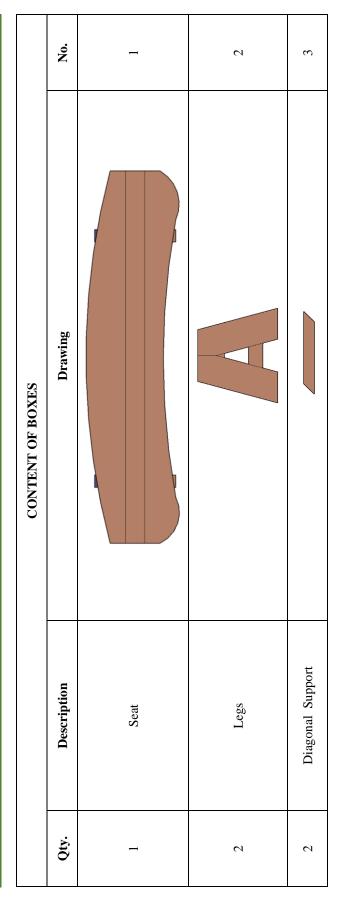


Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.

Note: Dimensions of your hardware will vary depending on size.

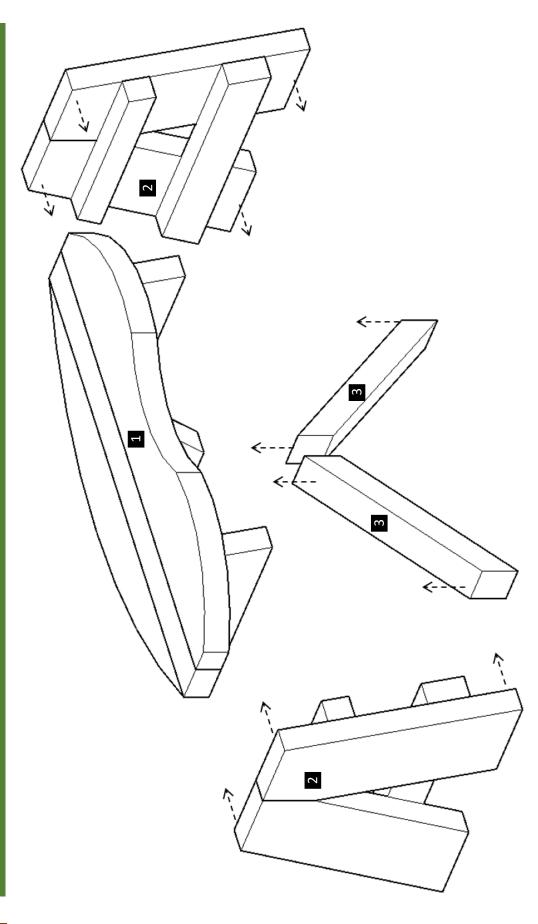

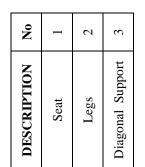


Note: Part numbers in the <u>Drawing</u> are for reference only. These do not match to the numbers marked on the parts sent. **Step 1:** Place the seat upside down. After that, use 5/16 x $3\frac{1}{2}$ bolts (A) to attach the Seat (1) to the legs (2). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

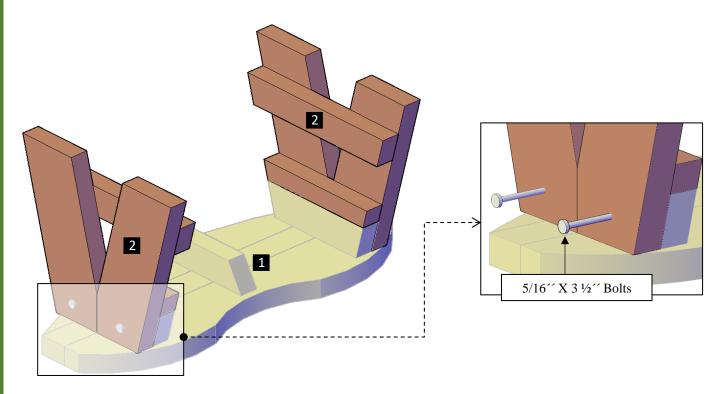

Step 2: Attach the diagonal supports to the legs and to the seat. As shown below.


Small Benches

Attach the diagonal supports (3) to the legs with 5/16 x $3\frac{1}{2}$ bolts (A) and to the seat with a 5/16 x $4\frac{1}{2}$ bolt (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

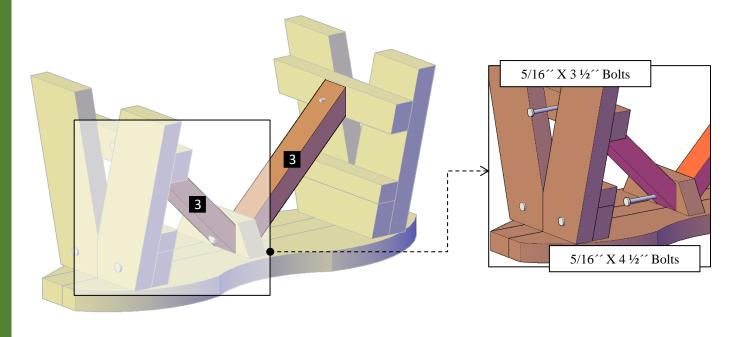

Large Benches

Attach the diagonal supports (3) to the legs and to the seat with 5/16 x $3\frac{1}{2}$ bolts (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

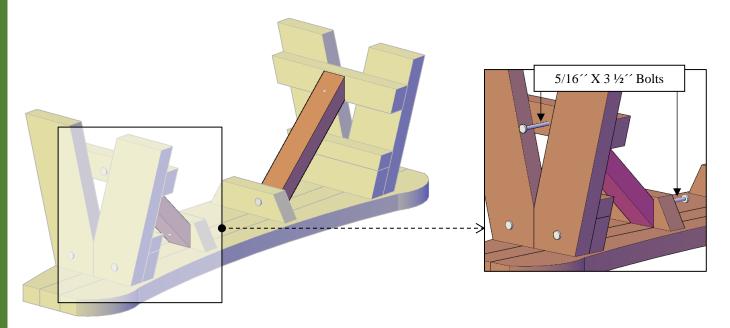

Step 3: Finally, turn the bench over its feet.



This completes the Bench assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.