



FOREVER REDWOOD

From the Forest, For the Forest since 1995

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE SEA RANCH PICNIC TABLE





CONTENT OF BOXES				
Qty.	Description	Drawing	No.	
2	Upper Long Supports		1	
6	In-Between Blocking		2	
4	Upper Short Supports		3	
2	Lower Long Supports		4	
4	Lower Short Supports		5	
4	Legs		6	
4	Sets		7	
Will Vary	Tabletop Boards		8	


Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.



HARDWARE LIST		
Description	Drawing	No.
3/8'' X 17'' Bolts (To attach the long supports to the in-between blocking).		A
3/8'' X 9 1/2'' Bolts (To attach the short supports to the in-between blocking. / To attach the legs to the supports).		B
3/8'' X 5'' Bolts (To attach the seats to the supports).		C
3/8'' X 7 1/2'' Bolts (To attach the seats to the supports).		D
3/8'' X 8 1/2'' Bolts (To attach the tabletop to the supports).		E
3/8'' X 7'' Bolts (To attach the tabletop to the supports).		F
3/8'' X 4 1/2'' Bolts (To attach the tabletop to the supports).		G

Note: Dimensions of your hardware will vary depending on size.




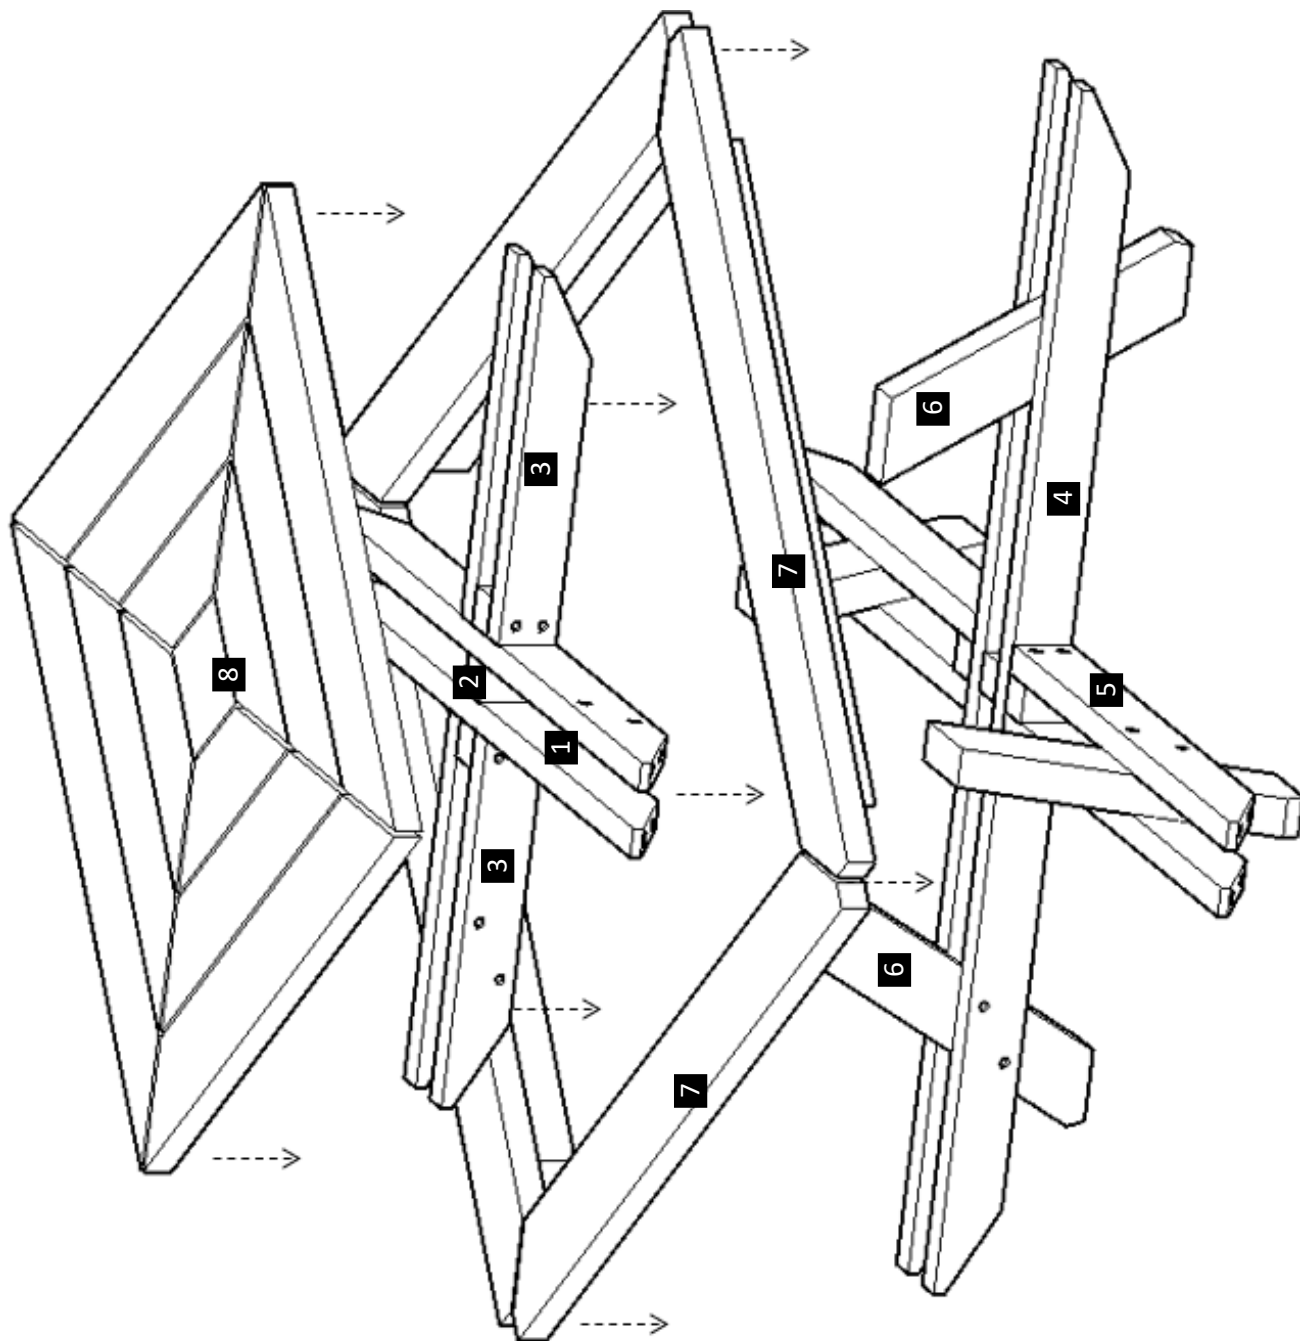


DESCRIPTION	No
Upper Long Supports	1
In-Between Blocking	2
Upper Short Supports	3
Lower Long Supports	4
Lower Short Supports	5
Legs	6
Sets	7
Tabletop Boards	8

Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.


Step 1: Attach the upper long supports (1) to the in-between blockings (2) with 3/8" X 17" bolts (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

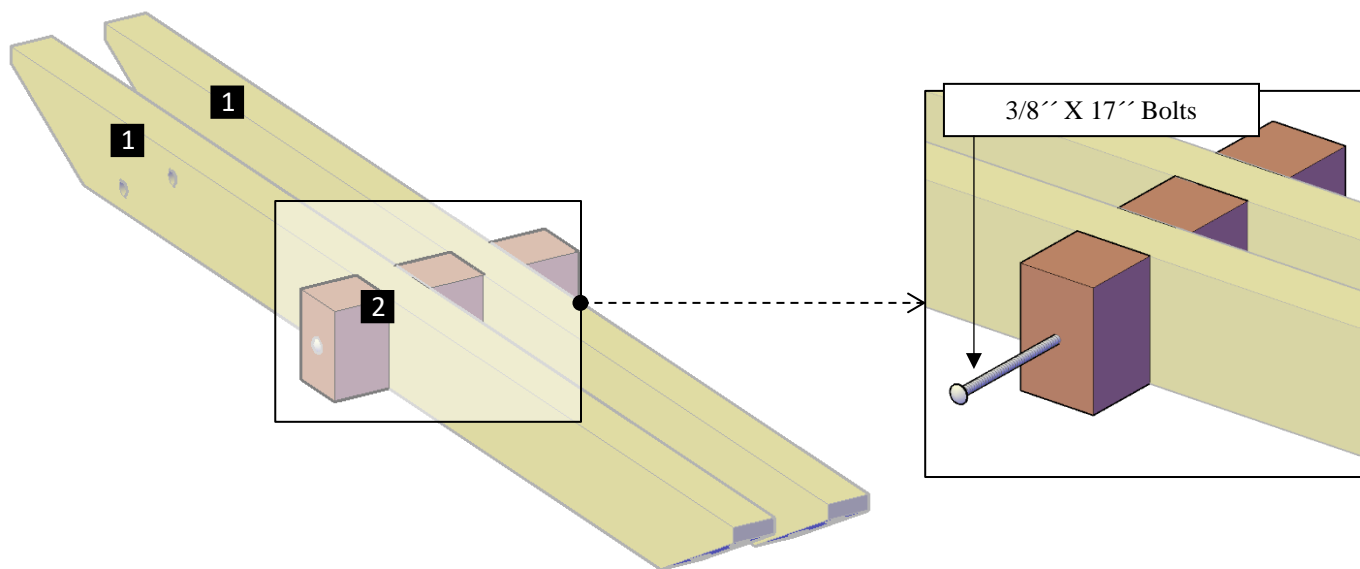


Step 2: Attach the upper short supports (3) to the in-between blockings (2) with 3/8" X 9 1/2" bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

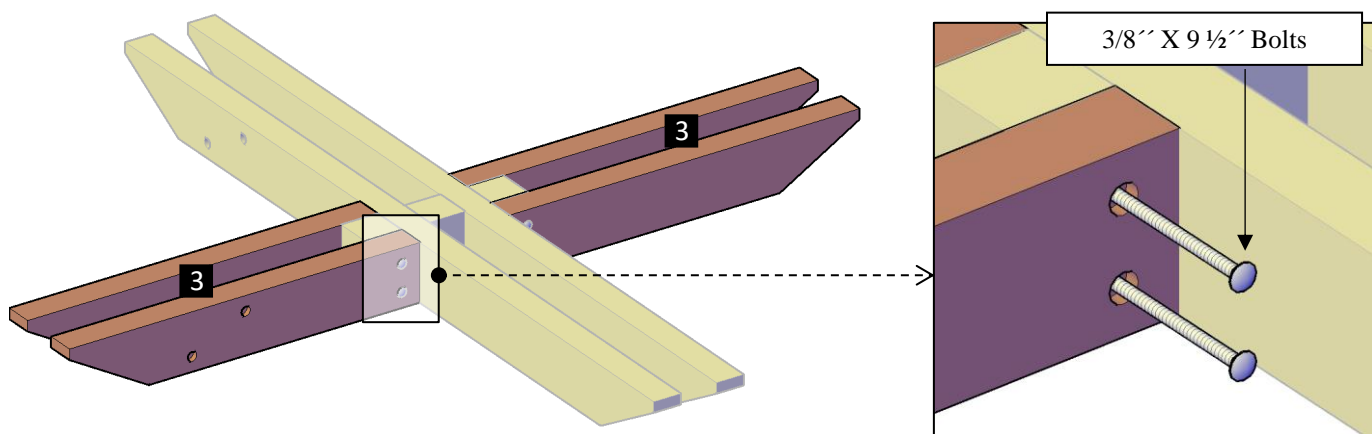


Step 3: To assemble the long and short lower supports (4,5), repeat the steps 1 and 2. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

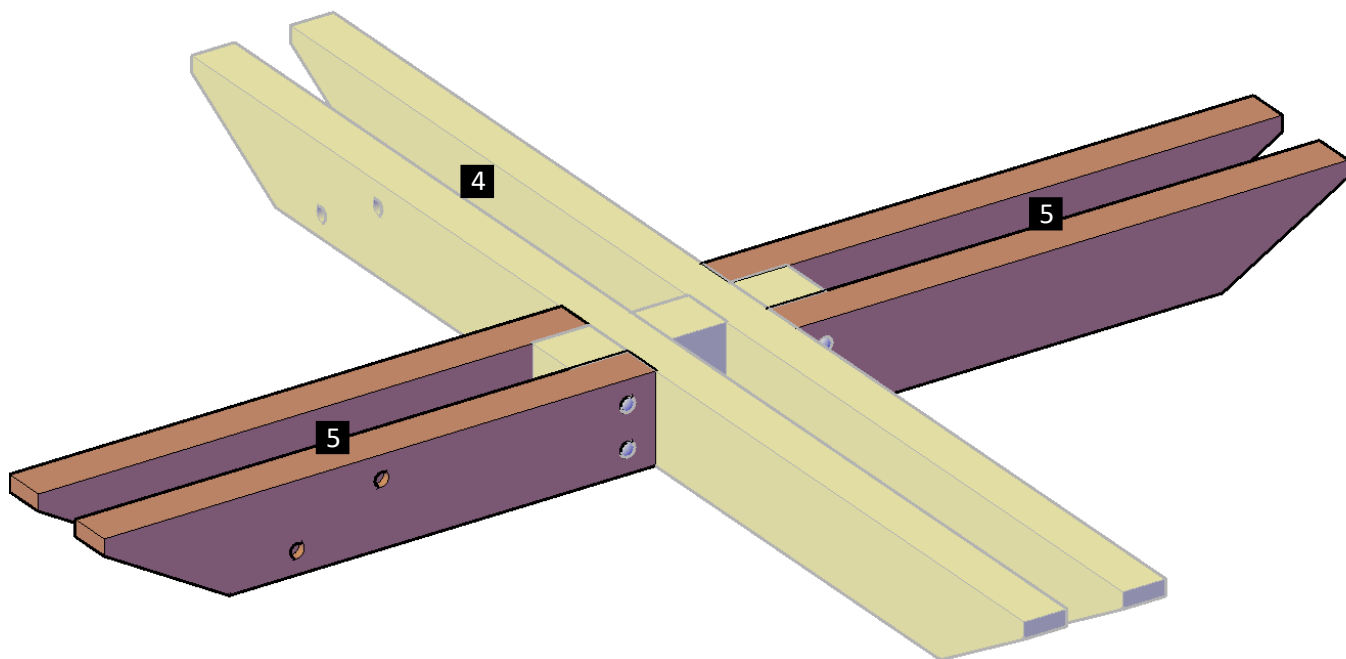


Step 4: Before attaching the legs to the supports make sure the long supports are not in the same direction. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

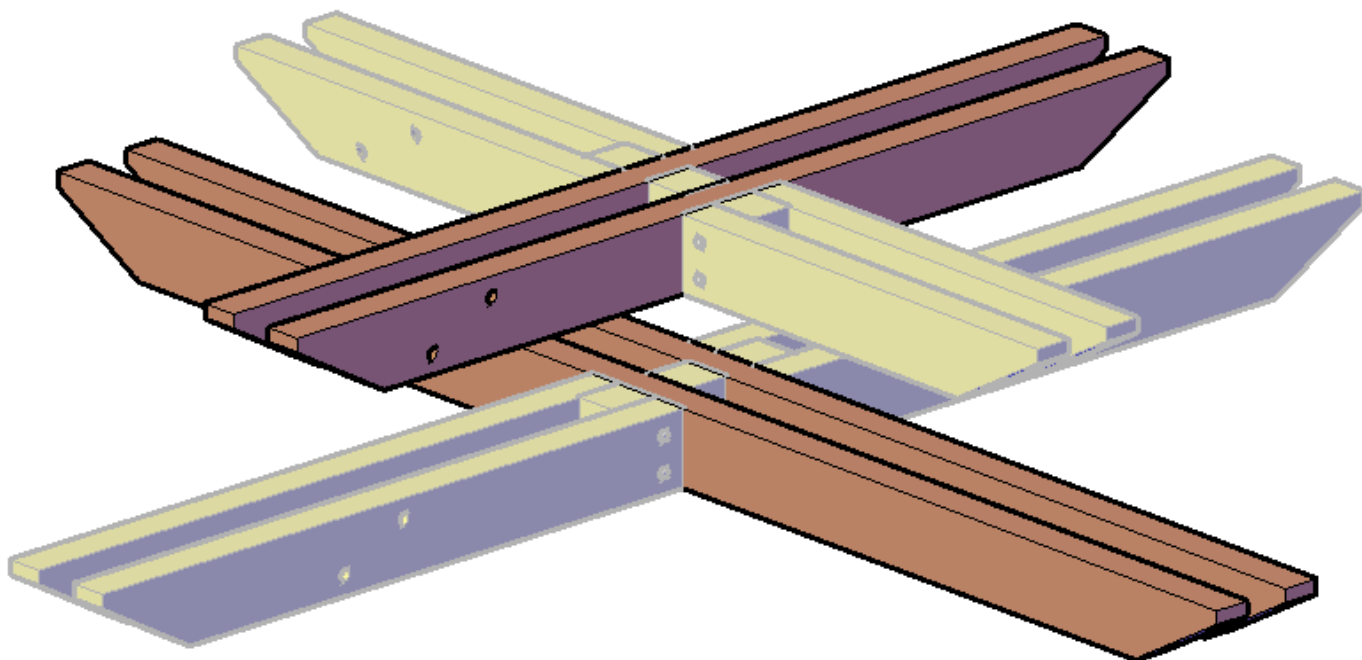


Step 5: Place the upper supports upside down. After that, attach the legs (6) to the upper supports with 3/8" X 9 1/2" bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

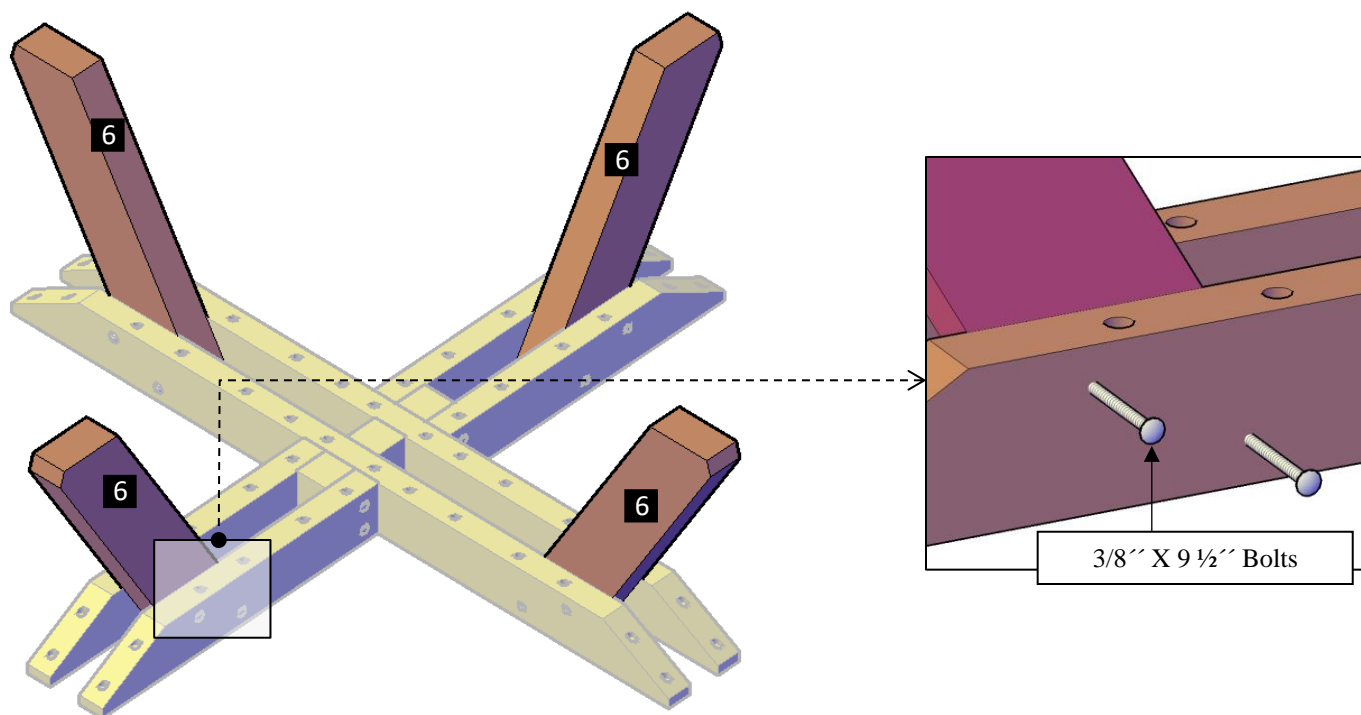


Step 6: Attach the lower supports (4,5) to the legs with 3/8" X 9 1/2" bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

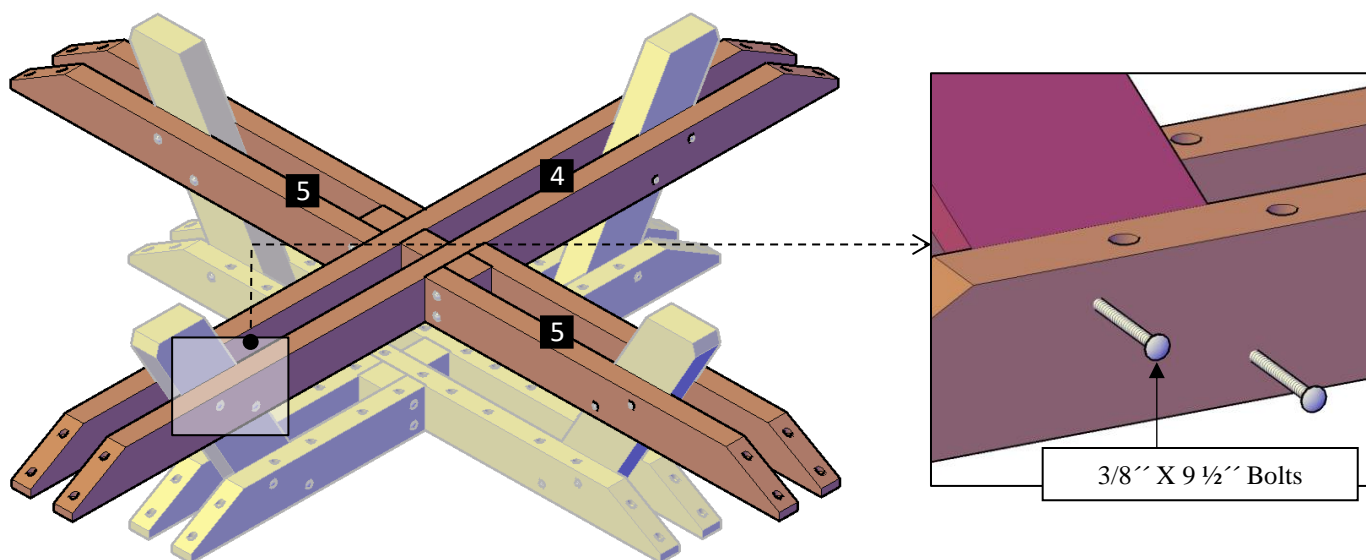

Step 7: Turn the legs and supports over its feet. After that, attach the seats (7) to the lower supports with 3/8" X 5" bolts (C) and 3/8" X 7 1/2" bolts (D). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

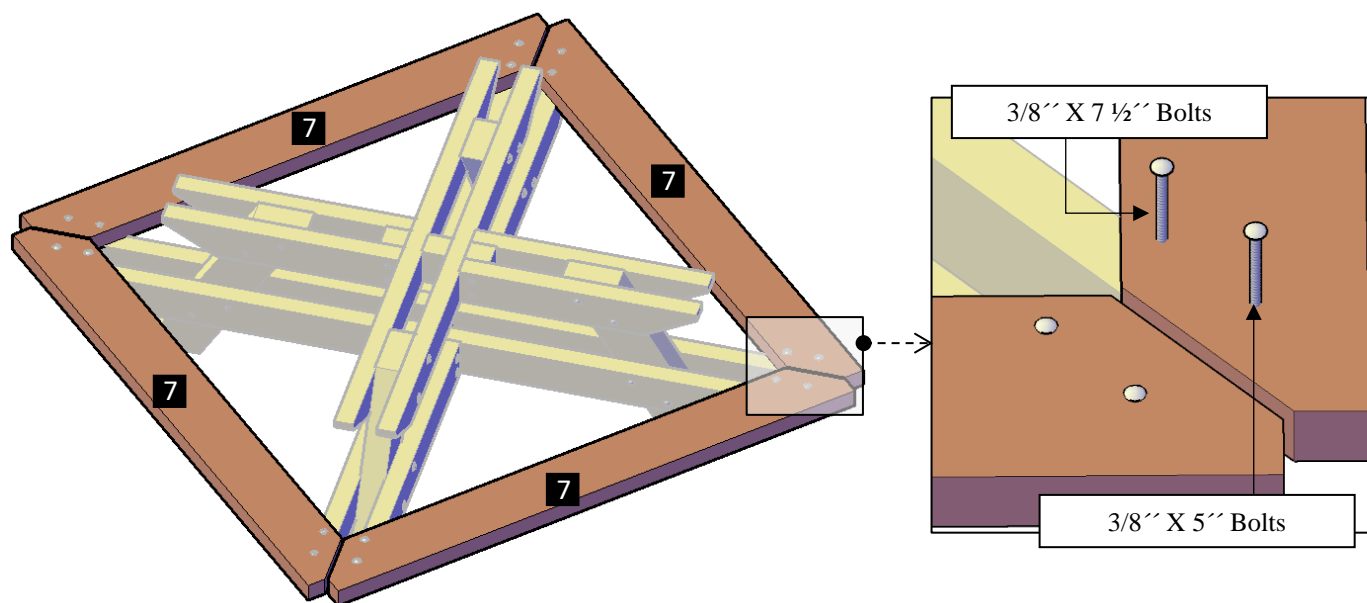

Step 8: Attach the tabletop boards (8) to the upper supports with 3/8" X 8 1/2" bolts (E). The perimeter tabletop boards will be attached to the upper supports with 3/8" X 7" bolts (F), and 3/8" X 4 1/2" bolts (G). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

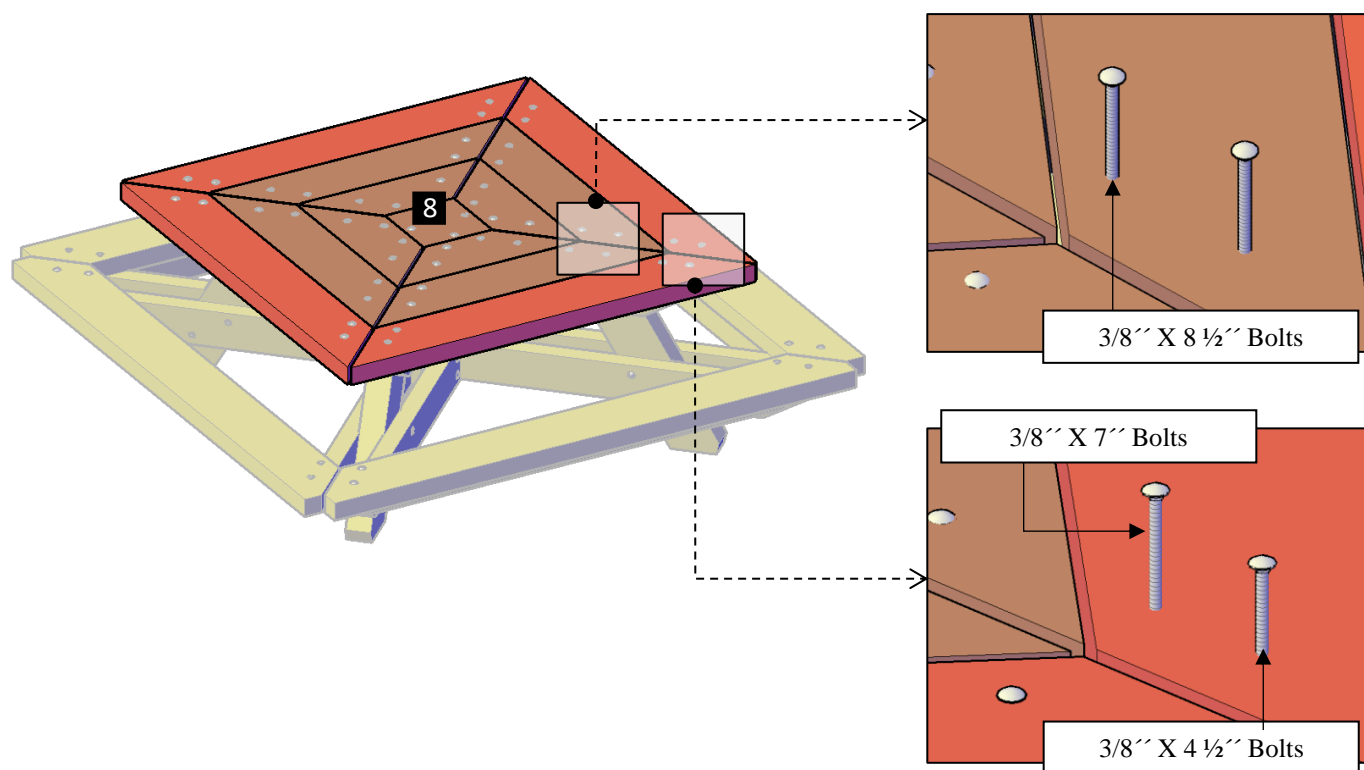



This completes the Picnic Table assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.