





Old-Growth Again
Restoring Logged Forests
One Tree At A Time

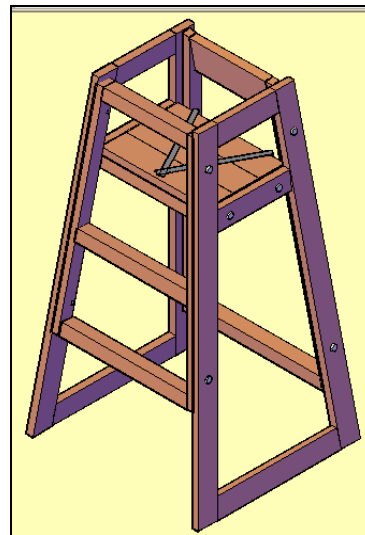

ASSEMBLY INSTRUCTIONS FOR: KIDS HIGH CHAIR (All Sizes)

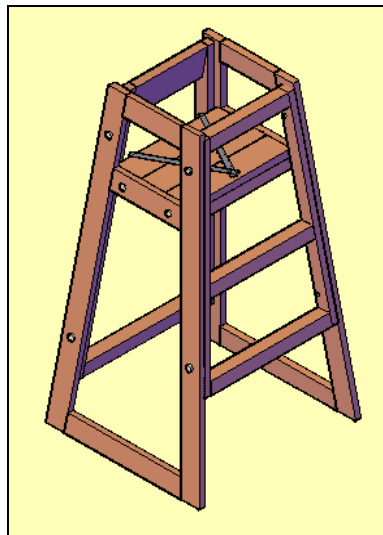





Old-Growth Again
Restoring Logged Forests
One Tree At A Time



KIDS HIGH CHAIR (All sizes)


Number of boxes: 1

Box 1 of 1:

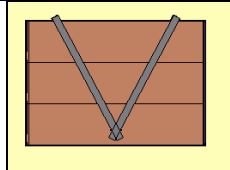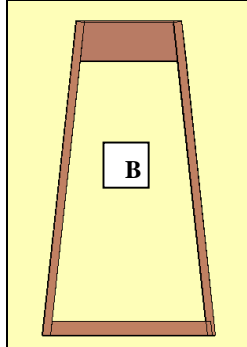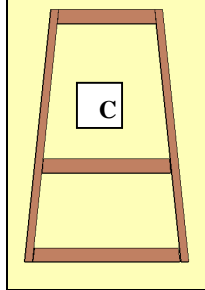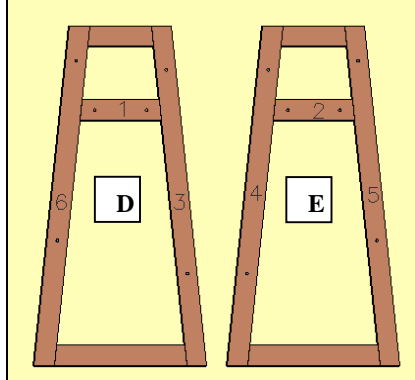Quantity	Description	Drawing
4	Carriage Bolts 2 1/2" x 5/16", Washers and Nuts	
8	Carriage Bolts 1 3/4" x 5/16, Washers and Nuts	
1	Seat (A)	 A
1	Backrest (B)	 B
1	Seat Support (C)	 C
2	Arm assemblies left (D) & right (E)	


ASSEMBLY INSTRUCTIONS

CONTENT OF THE BOXES

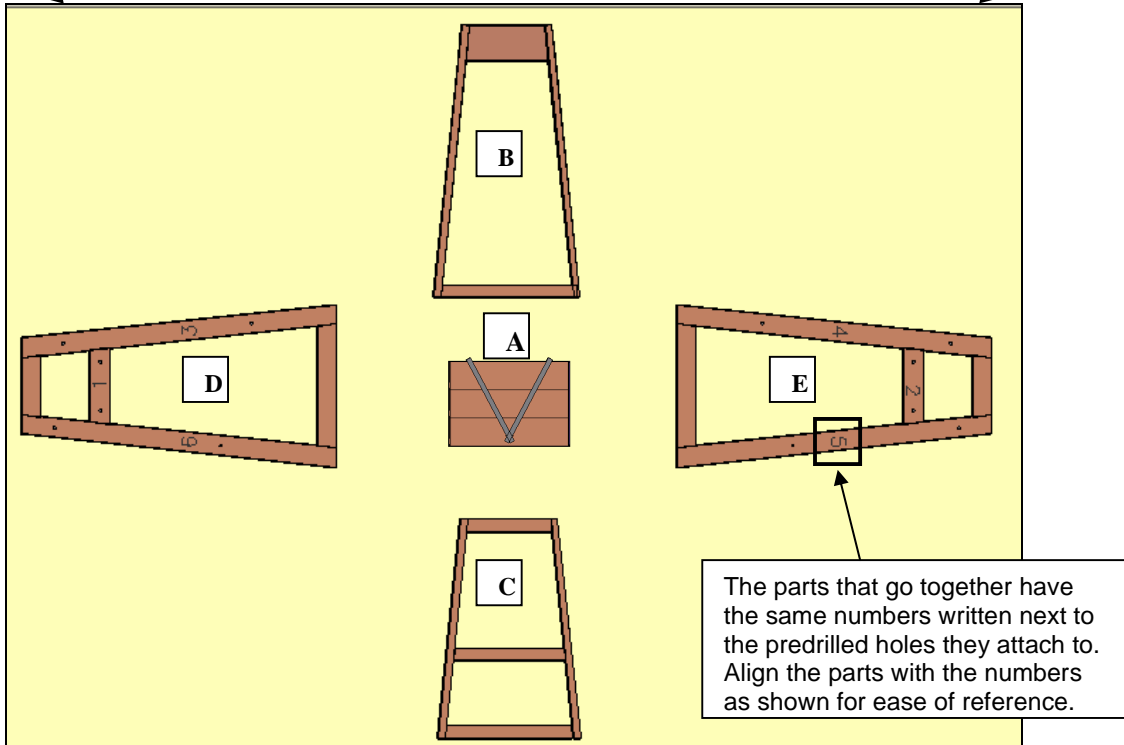


STEP 1:


Attach part D (arm assembly left) to part A (seat), with two bolts (2 ½" x 5/16"), washers & nuts (into two holes marked "1"). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

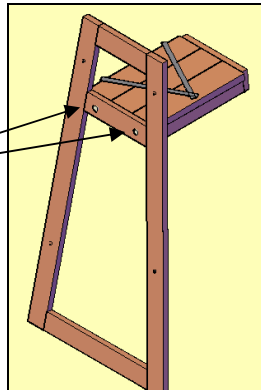

STEP 2:


Attach part E (arm assembly right) to part A (seat), with two bolts (2 ½" x 5/16"), washers & nuts (into two holes marked "2"). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

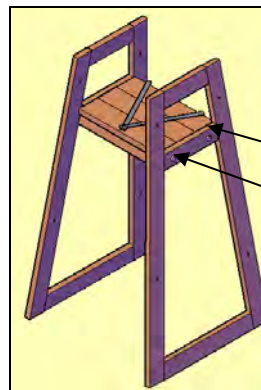

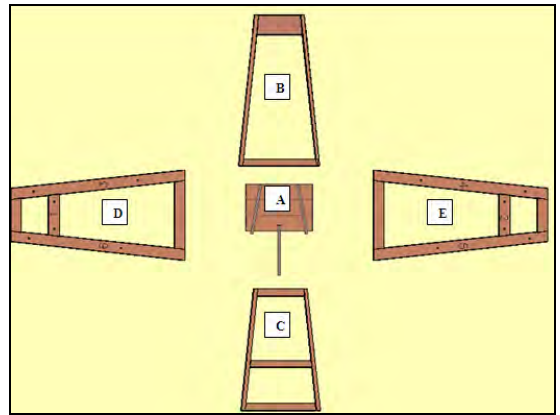


STEP 3:

Attach part D (arm assembly left) to part B (backrest), with two bolts (1 3/4" x 5/16"), washers & nuts (into two holes marked "3"). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

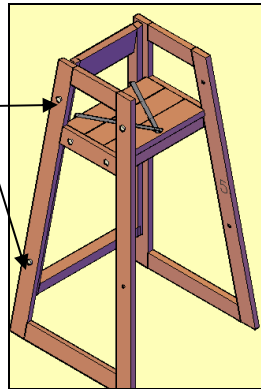


STEP 4:

Attach part E (arm assembly right) to part B (backrest), with two bolts (1 3/4" x 5/16"), washers & nuts (into two holes marked "4"). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

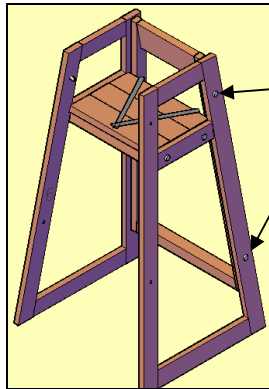

STEP 5:

Attach part E (arm assembly right) to part C (seat support), with two bolts (1 3/4" x 5/16"), washers & nuts (into two holes marked "5"). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

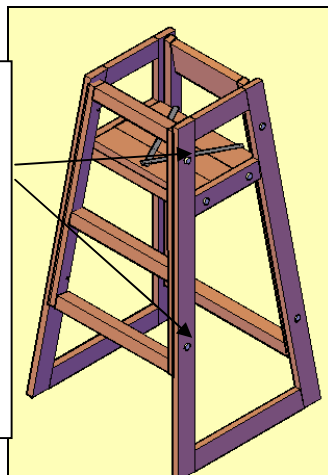

STEP 6:

Attach part D (arm assembly left) to part C (seat support), with two bolts (1 3/4" x 5/16"), washers & nuts (into two holes marked "6"). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

