




Old-Growth Again
Restoring Logged Forests
One Tree At A Time

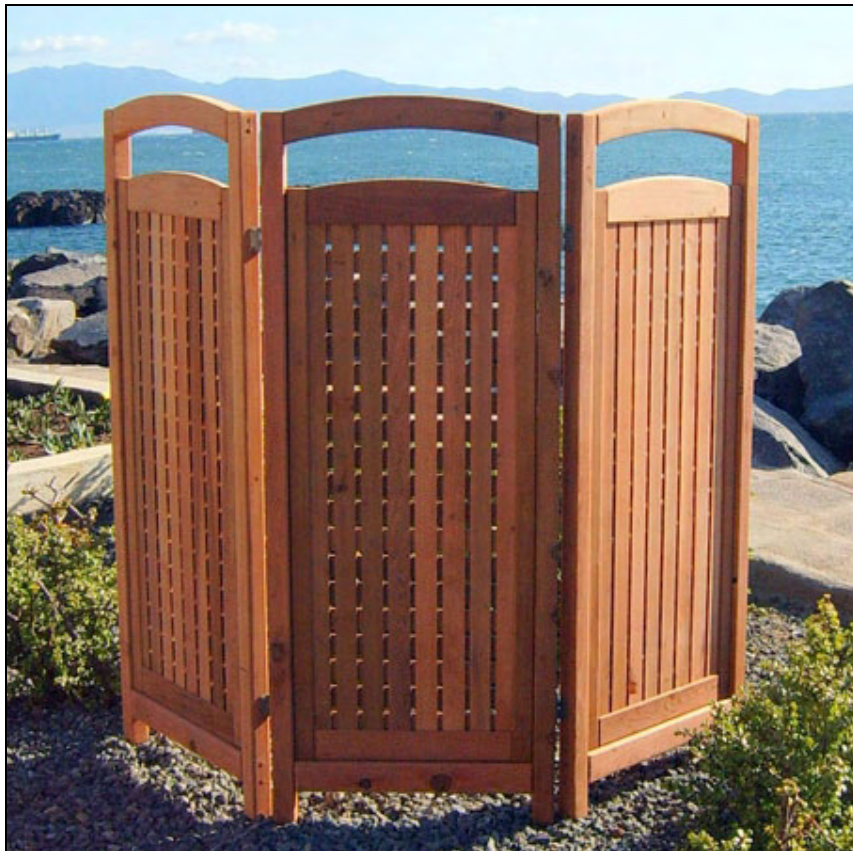

ASSEMBLY INSTRUCTIONS FOR: PANEL PRIVACY SCREEN (ALL SIZES)



33800 Annapolis Road, Annapolis, CA 95412
(866) 332-2403
www.foreverredwood.com

Old-Growth Again
Restoring Logged Forests
One Tree At A Time



PANEL PRIVACY SCREEN (All sizes)

Number of boxes: 2

Box 1 of 2:


Quantity	Description	Drawing
8	Carriage Bolts 5/16" x 3 1/2", washers and nuts (Only if you ordered Privacy Panel with boots)	
6	Hinges 2" x 2", Screws	
2	Panels Privacy Screen (A, B)	

Box 2 of 2:


Quantity	Description	Drawing
1	Panels Privacy Screen (C)	
4	Boots (D, E, F, G)	

ASSEMBLY INSTRUCTIONS

CONTENT OF THE BOXES

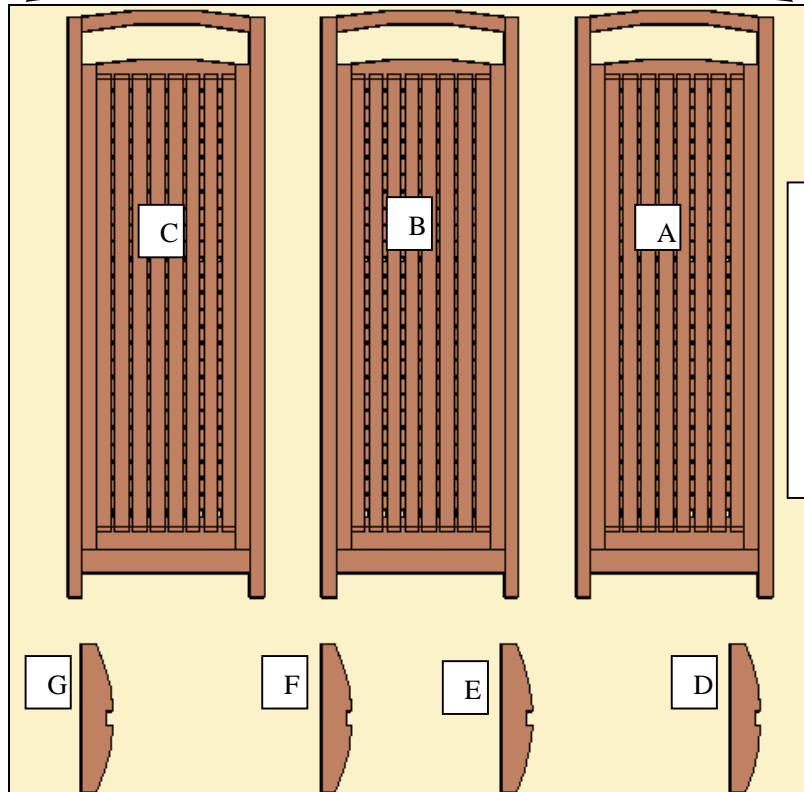

The parts that go together have the same numbers written next to the predrilled holes they attach to. Align the parts with the numbers as shown for ease of reference.

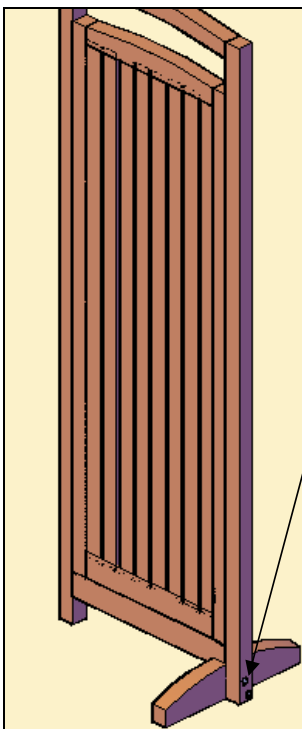


STEP 1:



Attach part D (boot) to part A (Panel privacy screen), with two bolts ($5/16"$ x $3\frac{1}{2}"$) washers & nuts (into two holes marked "1"). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

STEP 2:

Attach part G (boot) to part C (Panel privacy screen), with two bolts ($5/16"$ x $3\frac{1}{2}"$) washers & nuts (into two holes marked "2"). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

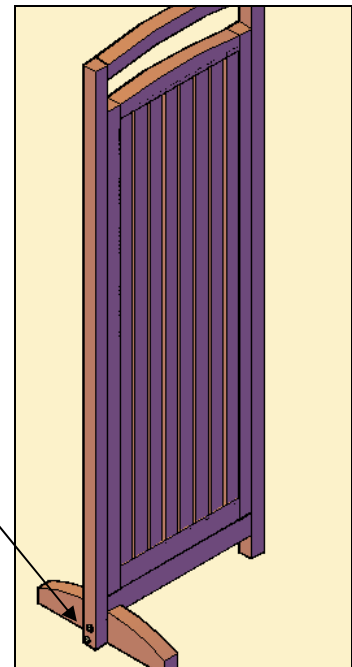

Panel Privacy Screen

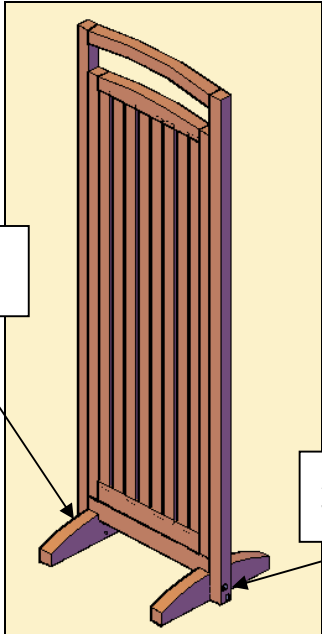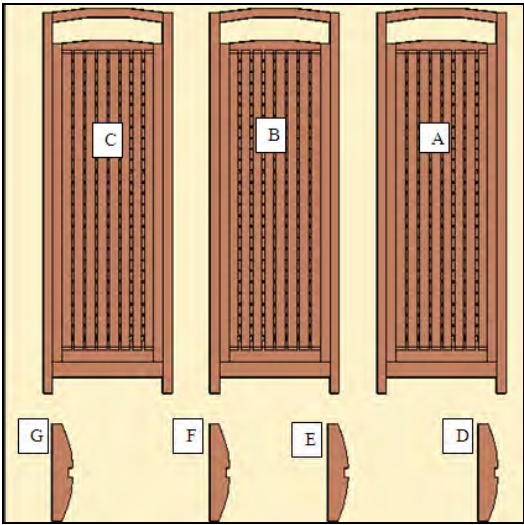


2 bolts (5/16" x 3 1/2") washers and nuts

2 bolts (5/16" x 3 1/2") washers and nuts

STEP 3:
 Attach part F and E (boots) to part B (Panel privacy screen), with four bolts (5/16" x 3 1/2") washers & nuts (into four holes marked "3" & "X"). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

STEP 4:
 Attach part A (Panel privacy screen) to part B (Panel privacy screen), with three Hinges (2" x 2") Screws (into holes marked "4" & "X").

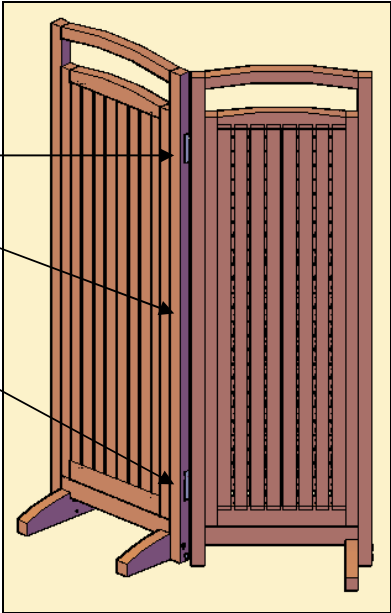

Repeat this step in the other panel