


866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday


## ASSEMBLY INSTRUCTIONS FOR THE ALAN'S ENGRAVED WOOD BENCH



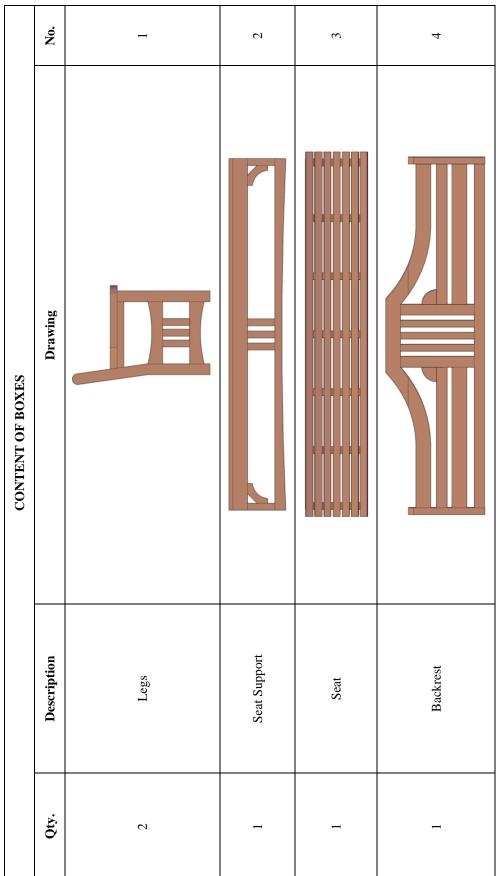


Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.

Note: Dimensions of your hardware will vary depending on size.

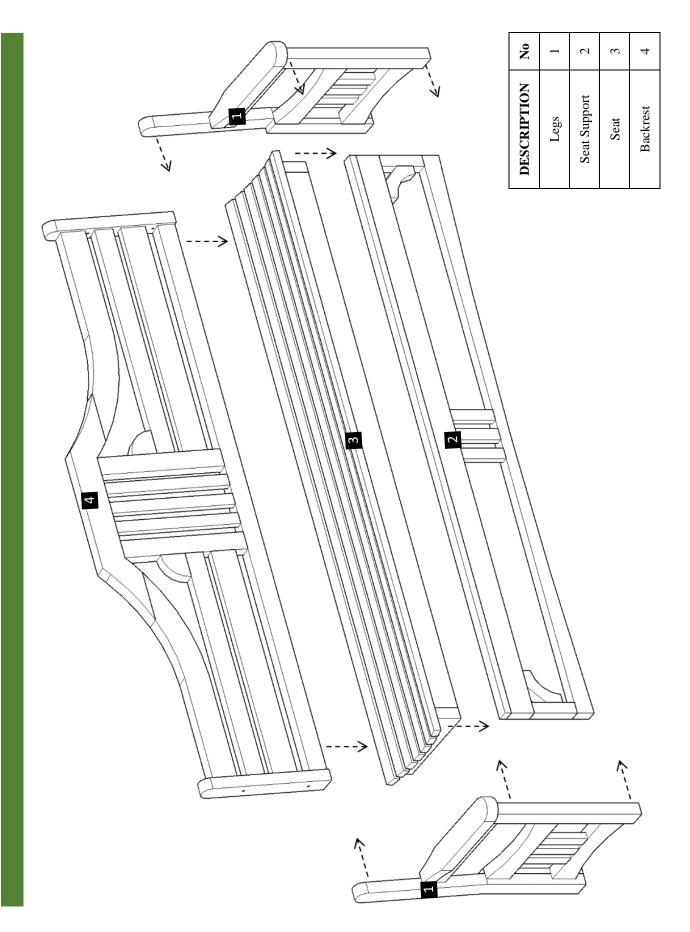


**Note:** Part numbers in the <u>Drawing</u> are for reference only. These do not match to the numbers marked on the parts sent.


**Step 1:** Use 5/16 'x  $3\frac{1}{2}$ ' bolts (A) to attach the seat support (2) to the legs (1). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

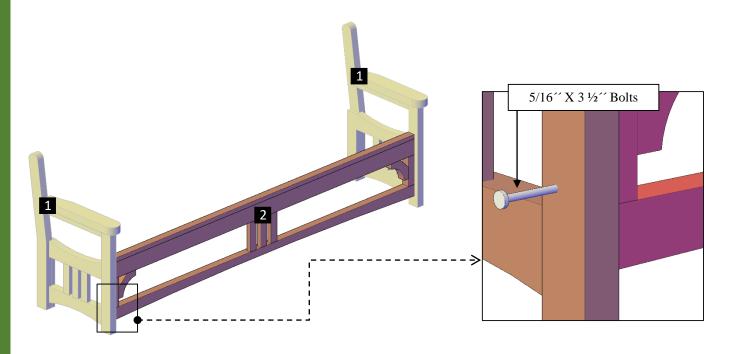


**Step 2:** Use 5/16" x  $3\frac{1}{2}$ " bolts (**A**) to attach the seat (**3**) to the legs. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

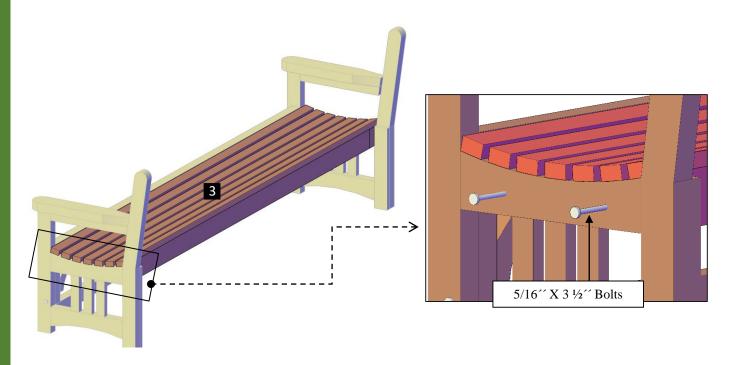

**Step 3:** Use  $5/16^{\prime\prime}$  x  $3\frac{1}{2}^{\prime\prime}$  bolts (**A**) to attach the seat (**3**) to the seat support. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

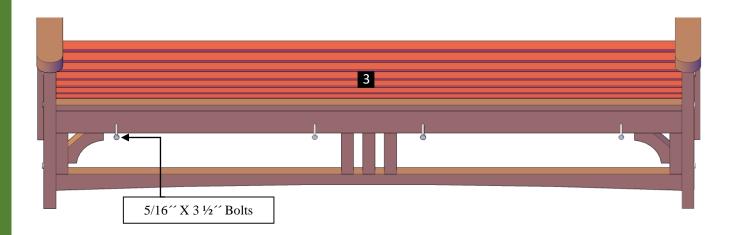

**Step 4:** Attach the backrest **(4)** to the legs with 5/16 x  $3\frac{1}{2}$  bolts **(A).** Each part has a series of numbers that indicate where to attach the part with the corresponding number.

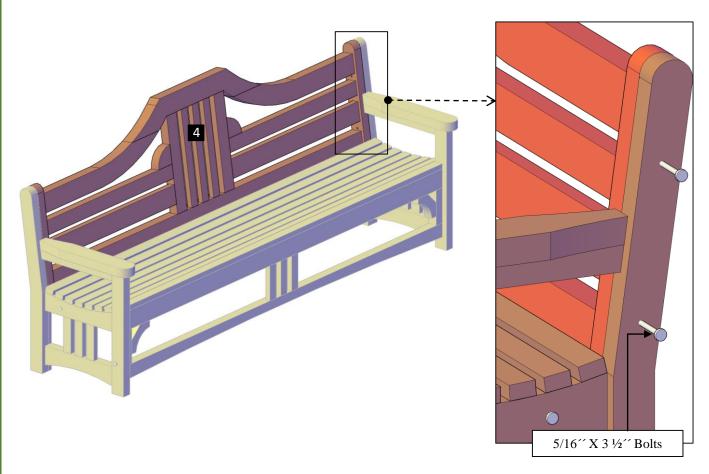



This completes the Bench assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.