

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE FULLBACK ARC WOOD PICNIC BENCH




	No.	1	2	33	4	S
CONTENT OF BOXES	Drawing					
	Description	Short Legs	Long Legs	Seat	Diagonal Supports	Backrest
	Qty.	2	2	1	2	1

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.

	HARDWARE LIST	
Description	Drawing	No.
5/16" X 5" Bolts (To attach the short legs to the long legs).		Ą
(To attach the seat to the legs. / To attach the diagonal supports to the short legs and to the seat. / To attach the backrest to the long legs).		В


Note: Dimensions of your hardware will vary depending on size.

DESCRIPTION	No
Short Legs	1
Long Legs	2
Seat	3
Diagonal Supports	4
Backrest	5

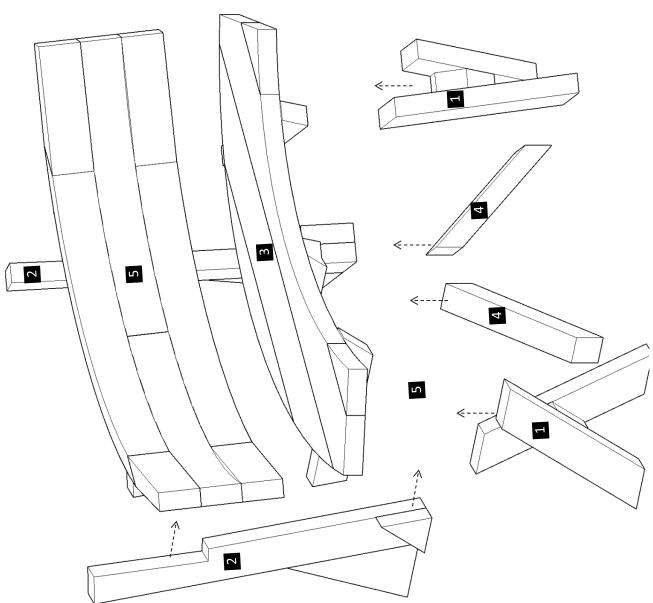


P| 3


Step 1: Use 5/16 'x 5' bolts (A) to attach the short legs (1) to the long legs (2). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

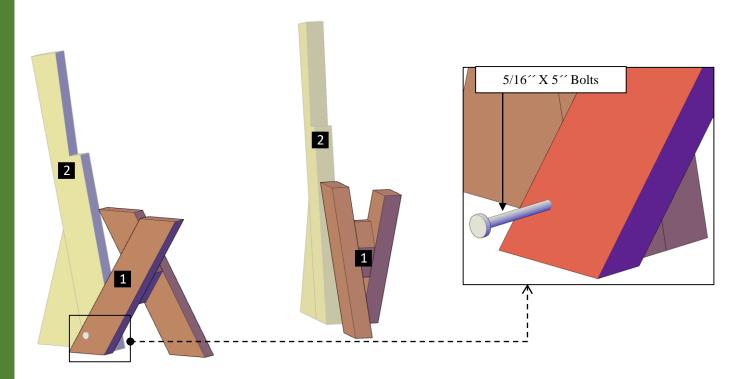


Step 2: Attach the seat (3) to the legs with 5/16 "x $3\frac{1}{2}$ " bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

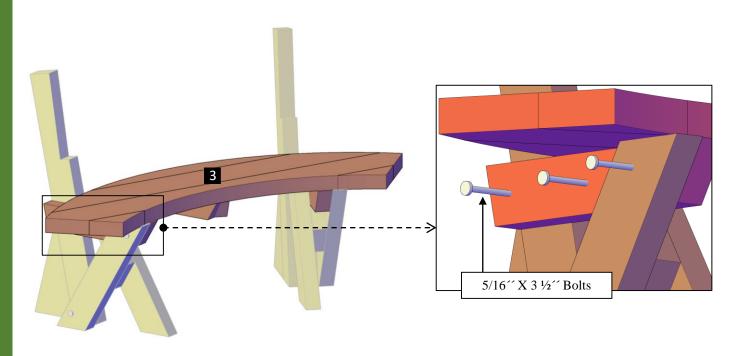

Step 3: Attach the diagonal supports (4) to the short legs and to the seat with 5/16" x 3 ½" bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

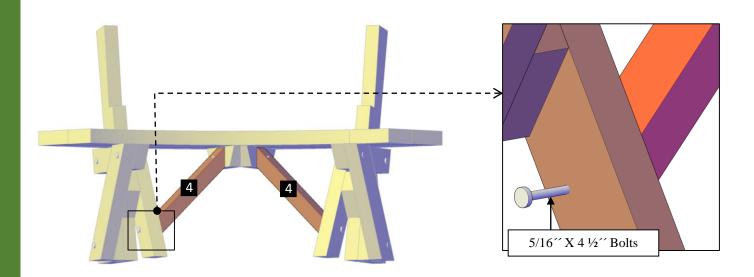

Step 4: Finally, use 5/16 ' x $3\frac{1}{2}$ bolts (**B**) to attach the backrest (**5**) to the long legs. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

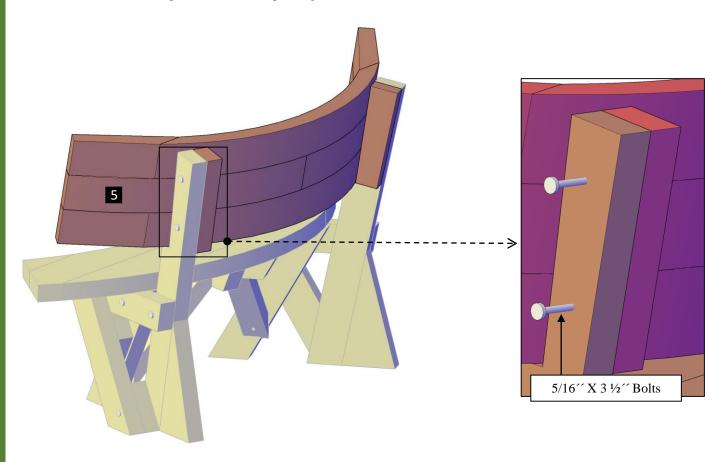



This completes the Bench assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.