







Assembly Instructions for: **MOONLIGHT BENCHES**



Thank you for purchasing Forever Redwood patio furniture. Forever Redwood is built by Old-Growth Again Restoration Forestry (OGA). OGA is dedicated to restoration forestry. Sales of patio furniture finance our restoration work in California redwood forestlands.


Tools required: ½-inch ratchet and a mallet or small hammer.

Content of boxes:

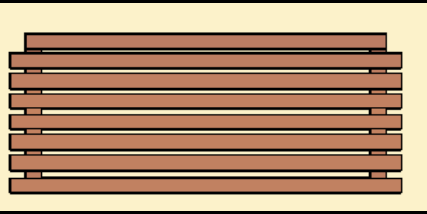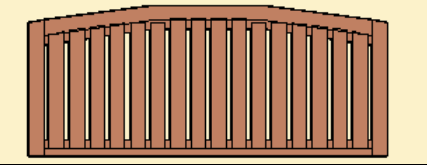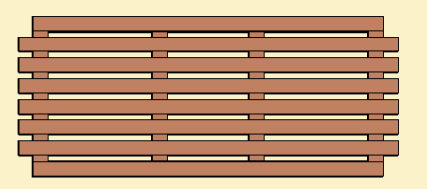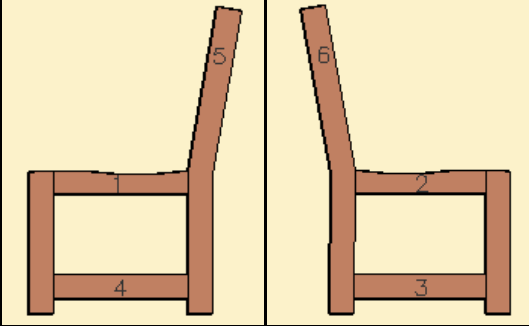
| Quantity | Description | Drawing | |
|--------------|---|--|--|
| 1 | Seat |  | |
| 1 | Backrest |  | |
| 1 | Front Brace |  | |
| 1 | Storage Shelf (Optional) |  | |
| 2 | Sides |  | |
| 2 | Diagonal Supports |  | |
| 10 | Carriage bolts 3 ½" x 5/16", Washers and Nuts | | |
| 4 (Optional) | Carriage bolts 3 ½" x 5/16", Washers and Nuts (To Attach Shelf) | | |
| 4 | Carriage bolts 4 ½" x 5/16", Washers and Nuts | | |

Your furniture was fully assembled in the shop prior to being dismantled for shipping. All the parts fit. The parts that go together have the same numbers written next to the predrilled holes they attach to. Please take the time to align the parts with the numbers. If you are forcing a bolt in, the part may be turned around or not aligned properly. Tap the bolt all the way into the wood to set it, then add a washer and lightly tighten. Don't over tighten or you will crush the redwood.


Step 1: Attach sides to seat, with two carriage bolts (3 1/2" x 5/16"), washers & nuts per side. Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

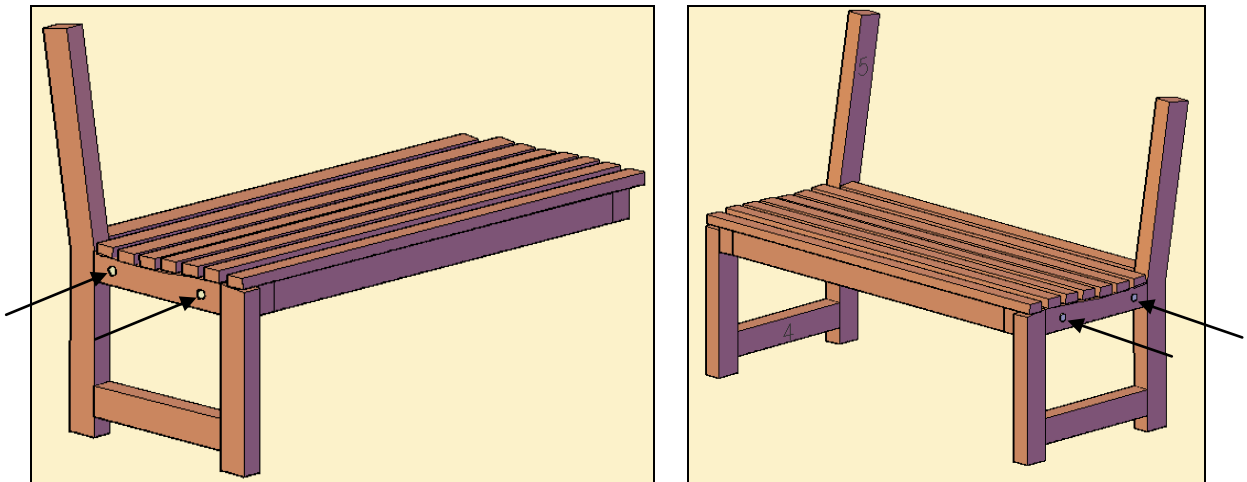


Step 2: If you purchased a shelf for your bench, then proceed to attach the storage shelf to sides with two carriage bolts (3 1/2" x 5/16"), washers & nuts per side. If not, go to step 3.

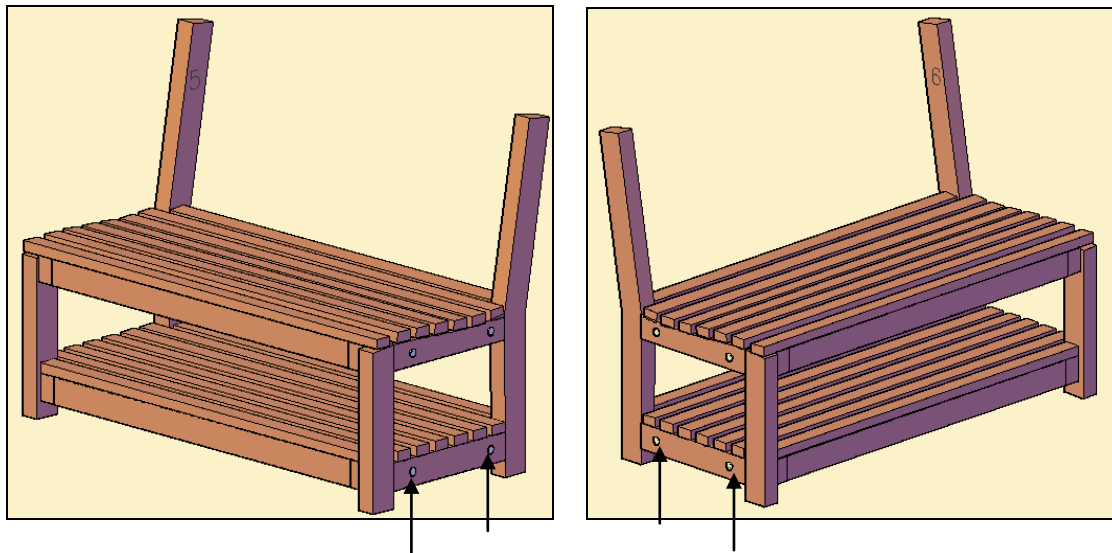


Step 3: Attach backrest to sides, with two bolts (3 1/2" x 5/16"), washers & nuts. Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

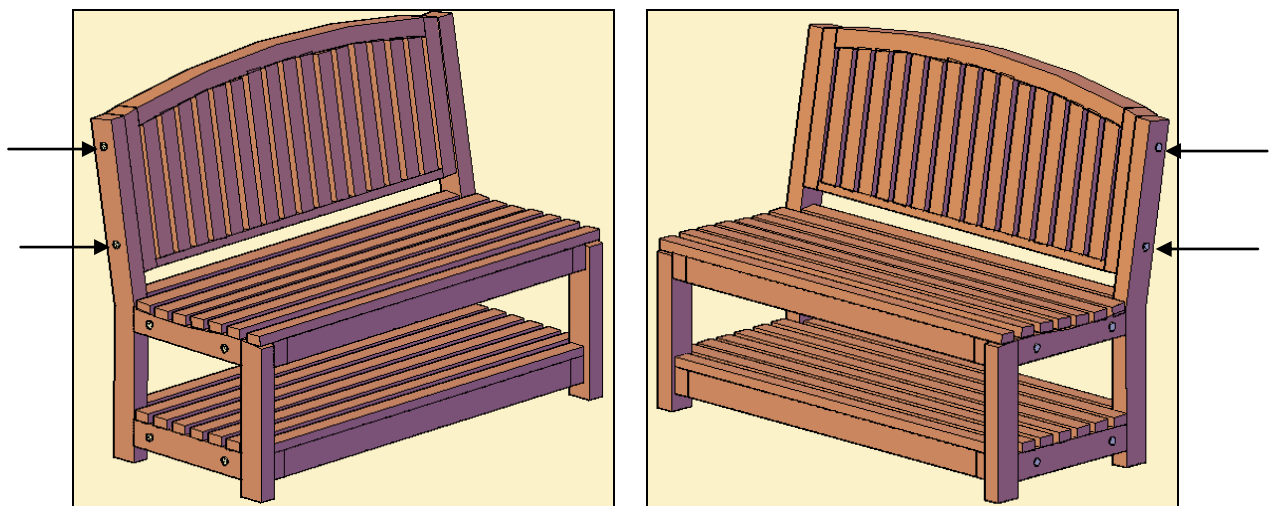

Step 4: Attach diagonal supports to seat & sides, with two carriage bolts, washers & nuts each. Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

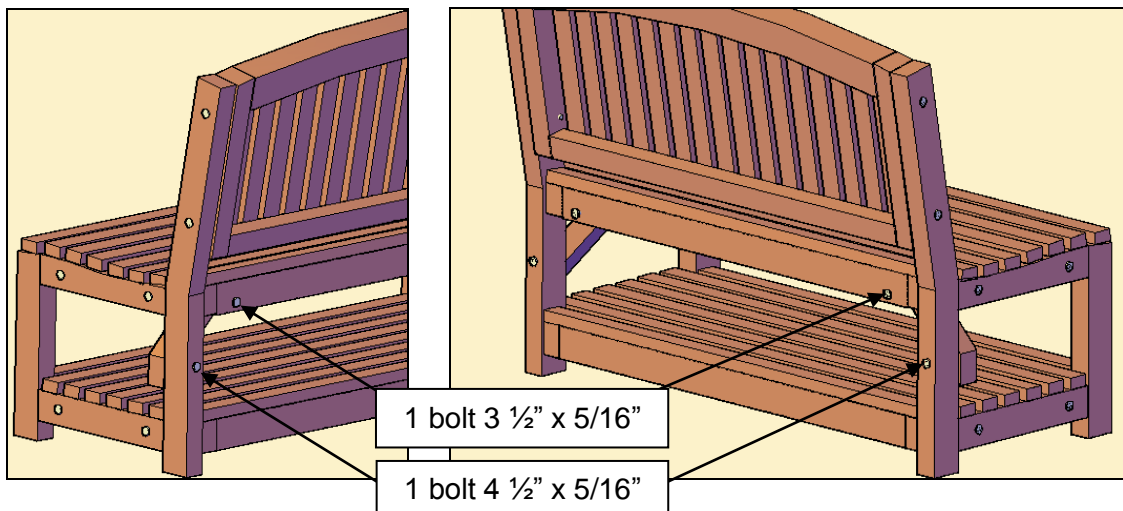

Step 5: Attach front brace to sides, with one bolt (4 1/2" x 5/16"), washer & nut per side. Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

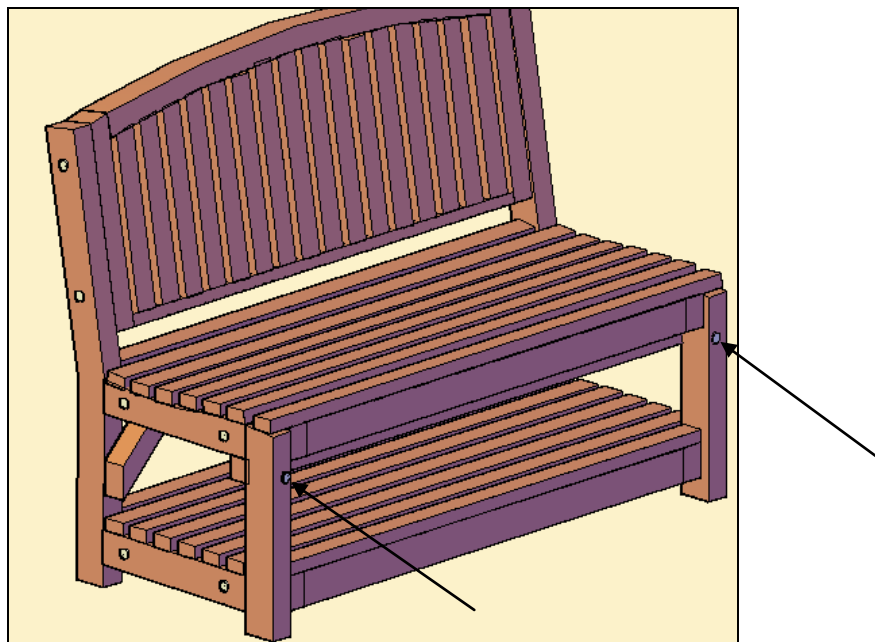

Thank you. If you have any questions, please call or email us.