



FOREVER REDWOOD








From the Forest, For the Forest since 1995

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE SUMMARBREEZE SWING SETS








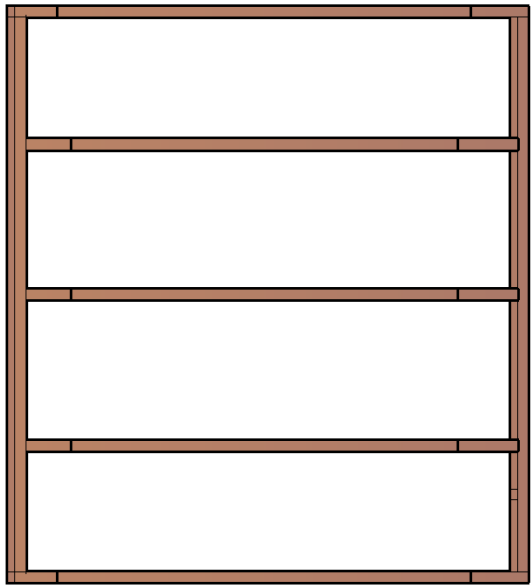

CONTENT OF BOXES			
Qty.	Description	Drawing	No.
2	Legs-A		1
2	Legs-B		2
2	Bottom Single Supports		3
2	Bottom Supports with In-Between Blocking		4
4	Top Supports		5
1	Hanger Support		6
1	Roof Panel		7









Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.



CONTENT OF BOXES			
Qty.	Description	Drawing	No.
2	Diagonal Supports		8
Will Vary	Roof Boards		9
1	Seat		10
2	Armrests		11
1	Backrest		12

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.










HARDWARE LIST		
Description	Drawing	No.
5/16'' x 3 1/2'' Bolts (To attach the Legs together. / To attach the seat and the backrest to the armrests).		A
3/8'' x 7'' Bolts (To attach the bottom and top supports to the legs. / To attach the bottom supports together).		B
3/8'' x 9 1/2'' Bolts (To attach the hanger support to the legs-A).		C
5/16'' x 4'' Bolts (To attach the roof panel to the legs).		D
5/16'' x 4 1/2'' Bolts (To attach the diagonal supports to the roof panel).		E
5/16'' x 6'' Bolts (To attach the diagonal supports to the legs).		F
1 5/8'' Deck Screws (To attach the roof boards to the roof panel).		G
2'' Deck Screws (To attach the roof boards to the roof panel).		H

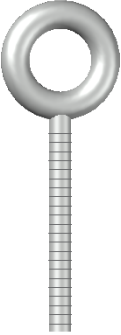
Note: Dimensions of your hardware will vary depending on size.





HARDWARE LIST		
Description	Drawing	No.
3/8'' x 3 1/2'' Eyebolts (To attach the backrest to the armrests).		I
5/16'' Nuts		J
3/8'' Nuts		K
3/8'' x 7/8'' Washers		L
Quick Links		M
Springs		N
Chains		O


Note: Dimensions of your hardware will vary depending on size.

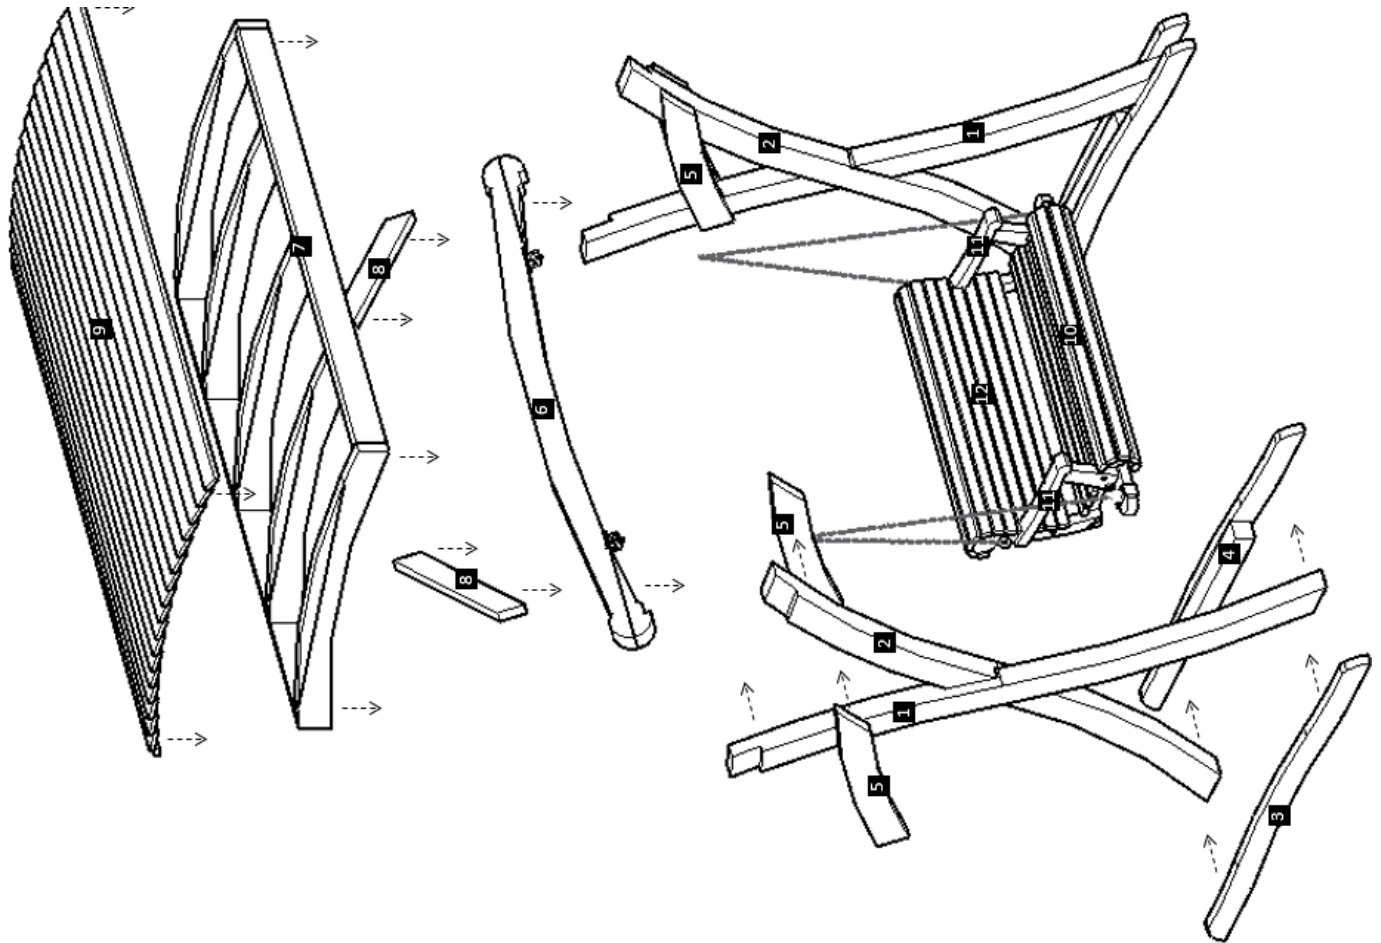


DESCRIPTION	No
Legs-A	1
Legs-B	2
Bottom Single Supports	3
Bottom Supports with In-Between Blocking	4
Top Supports	5
Hanger Support	6
Roof Panel	7
Diagonal Supports	8
Roof Boards	9
Seat	10
Armrests	11
Backrest	12

Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.


Step 1: Use 5/16" x 3 1/2" Bolts (A) to attach the legs A&B (1,2) together. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

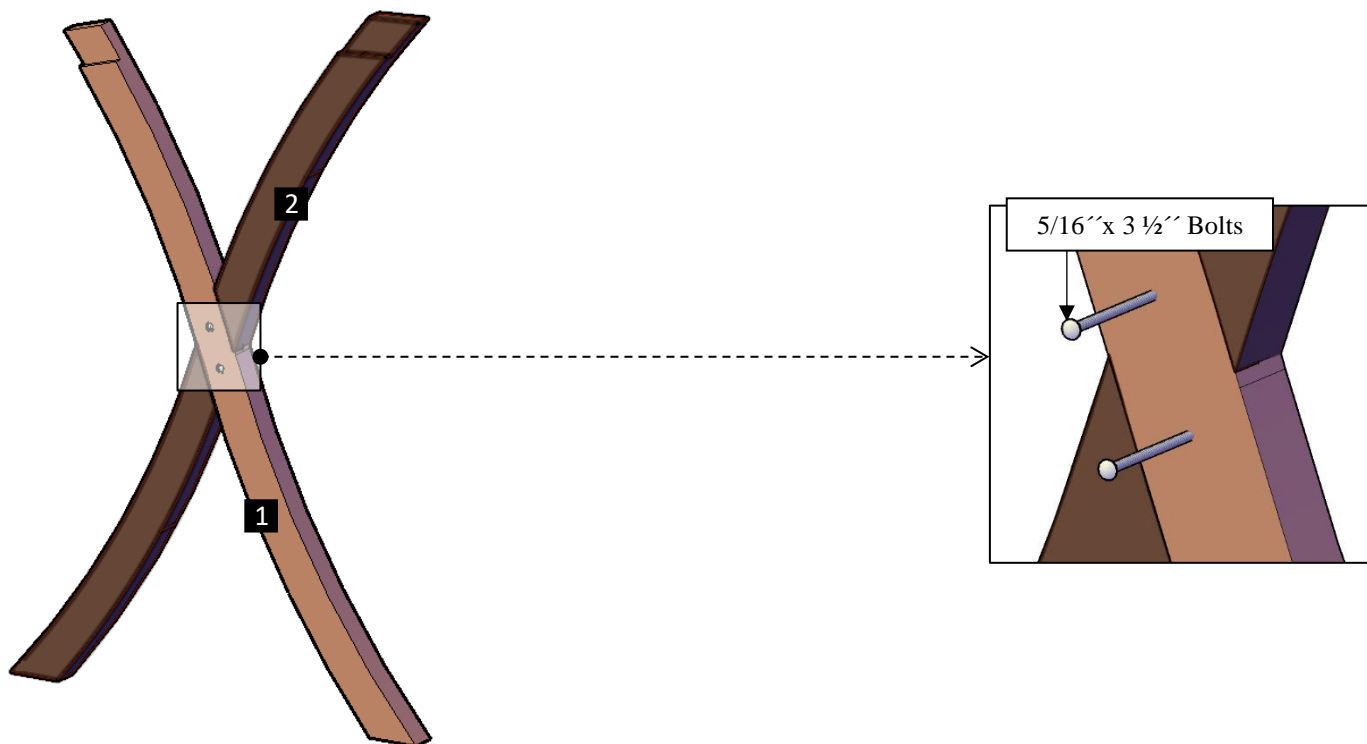


Step 2: Attach each bottom single support (3) to the legs with 3/8" x 7" bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

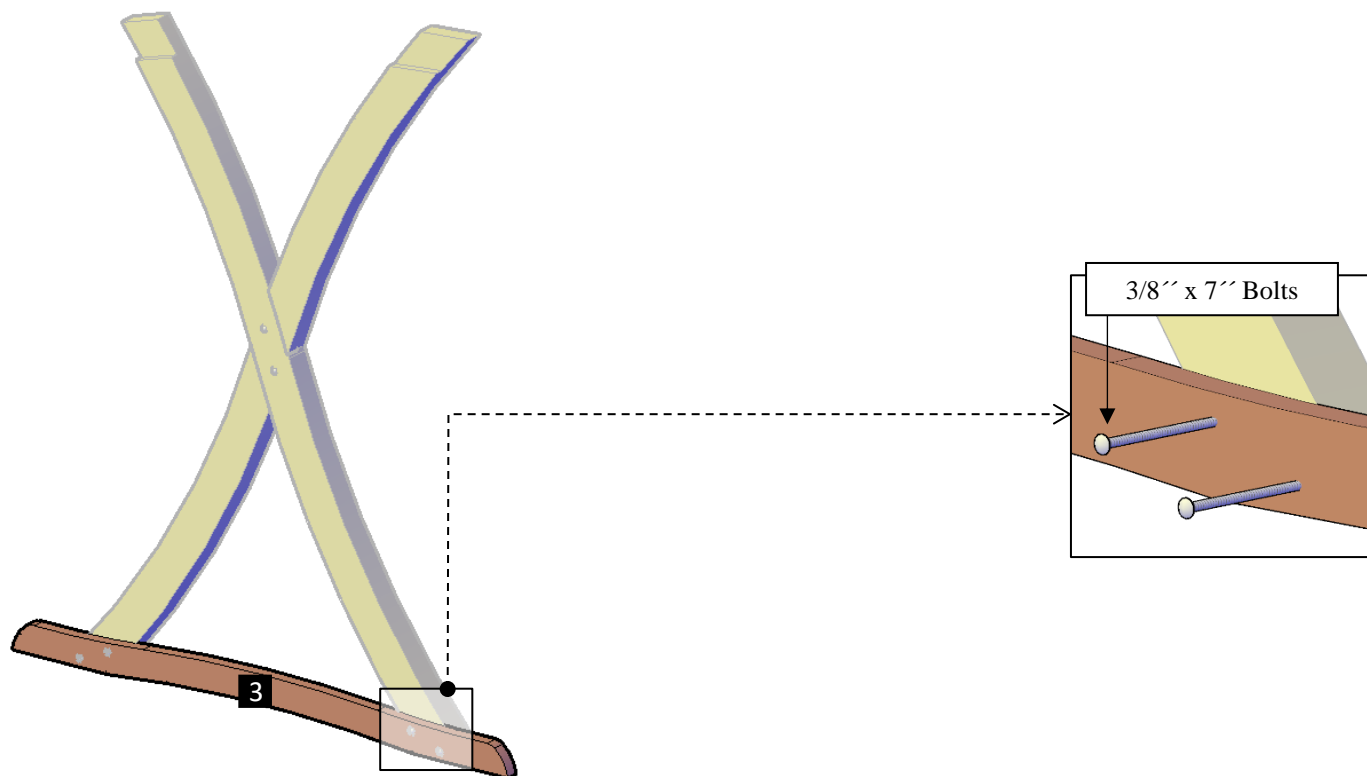


Step 3: Attach each bottom support with in-between blocking (4) to the legs with 3/8" x 7" bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

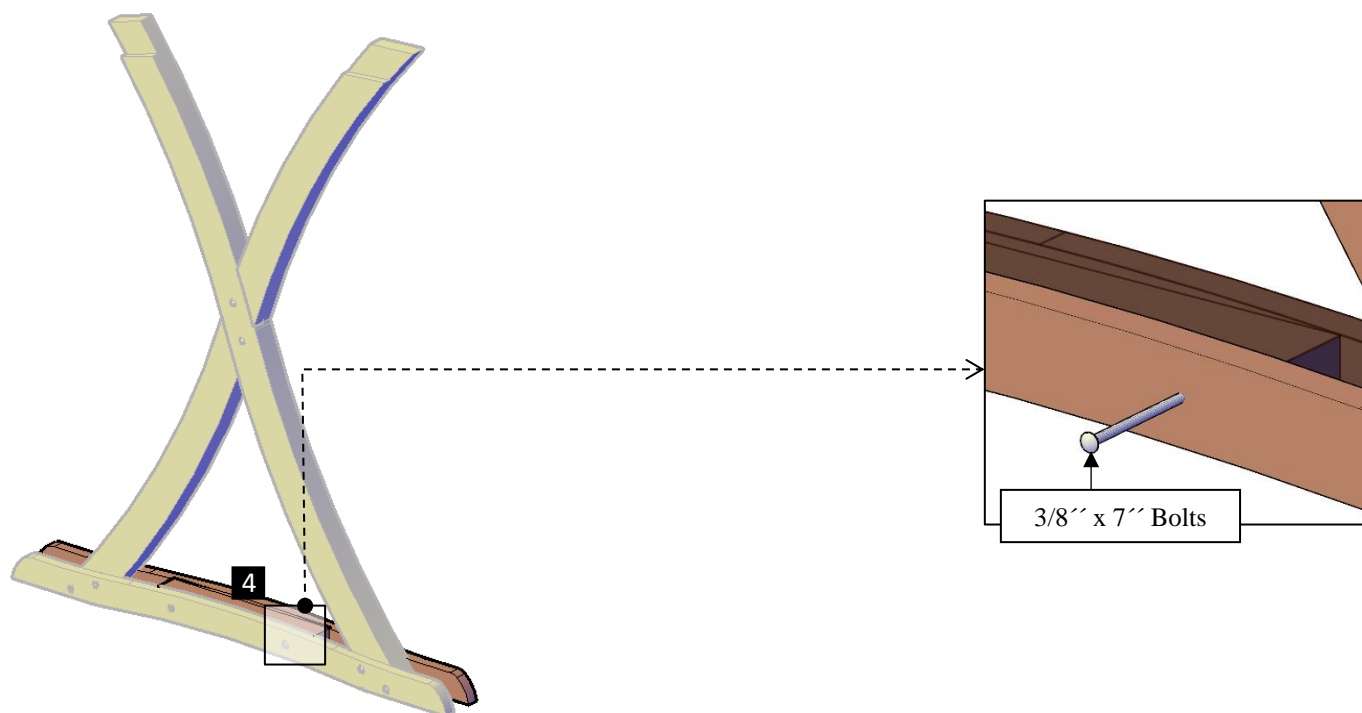


Step 4: Attach the top supports (5) to the legs with 3/8" x 7" bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

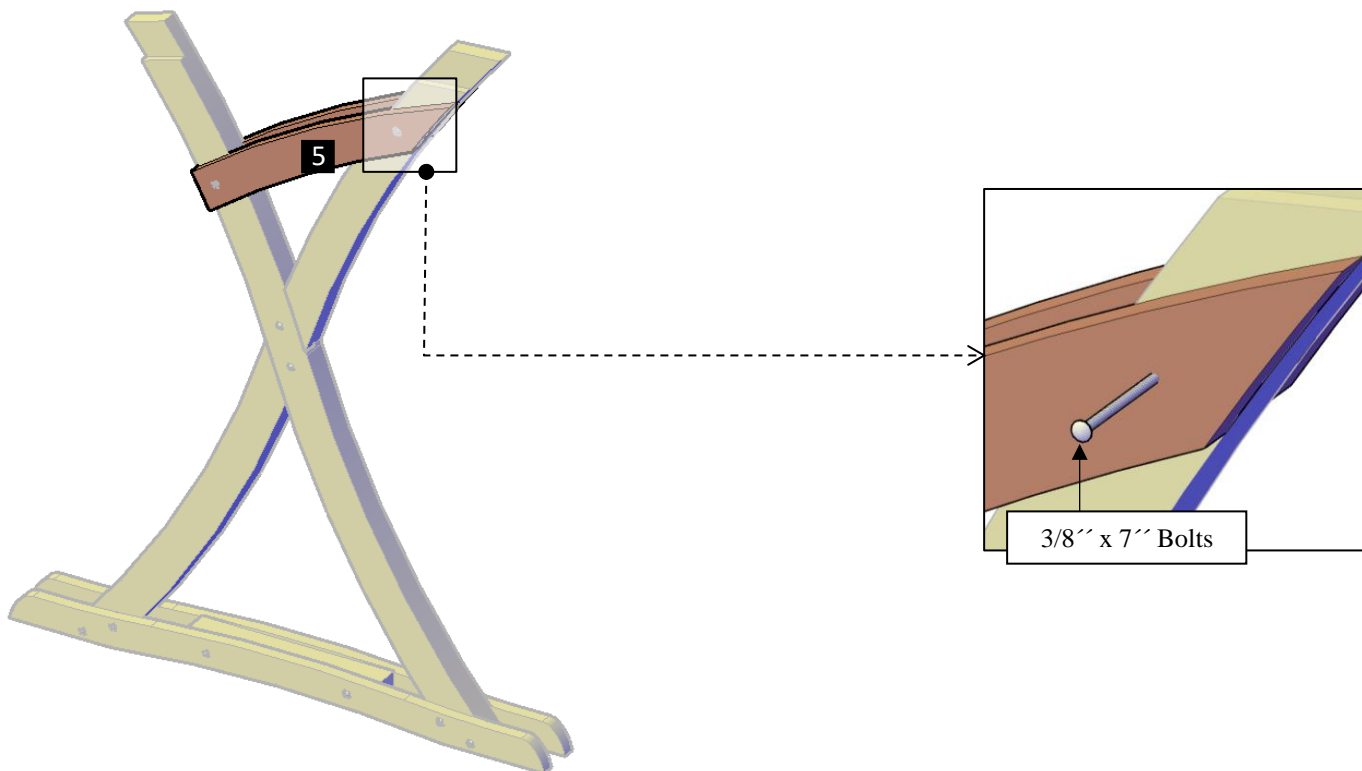


Step 5: Put the Quick Links (M) and the Springs (N) in the hanger support (6). After that, put the chains (O). Take a few minutes to adjust the chain height to your preference.

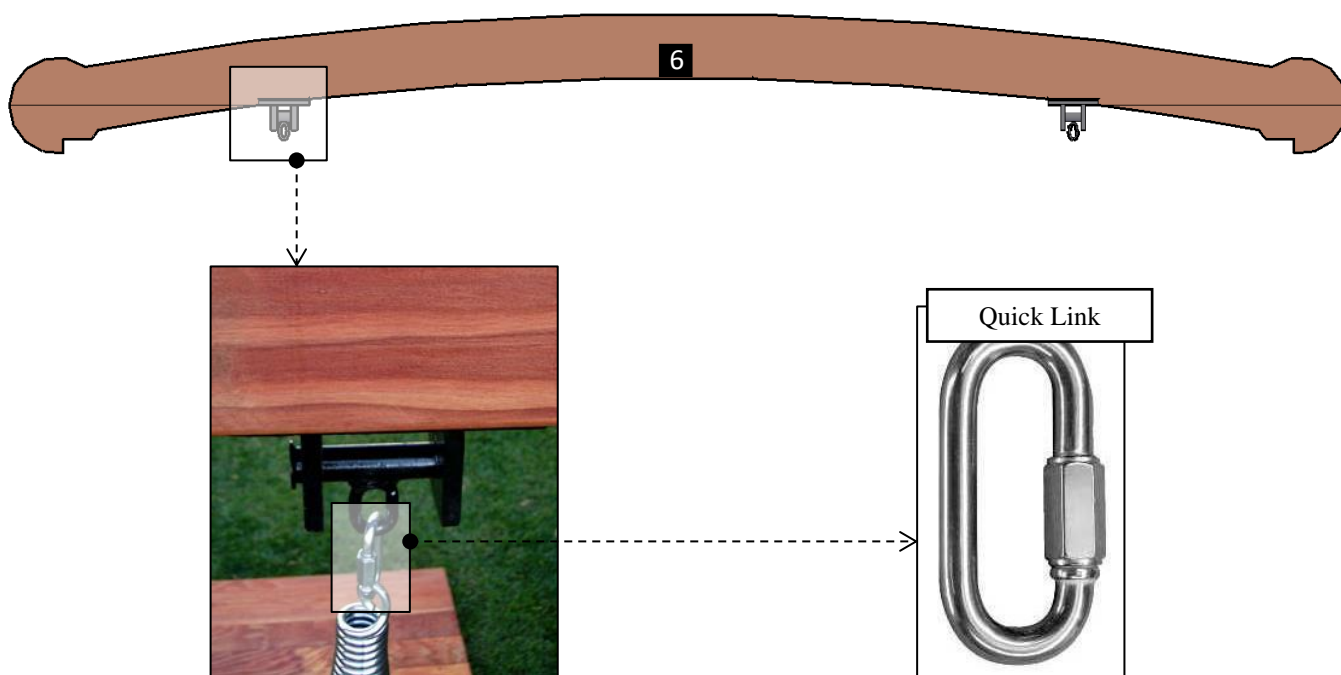


Step 6: Use 3/8" x 9 1/2" bolts (C) to attach the hanger support (6) to the legs-A. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

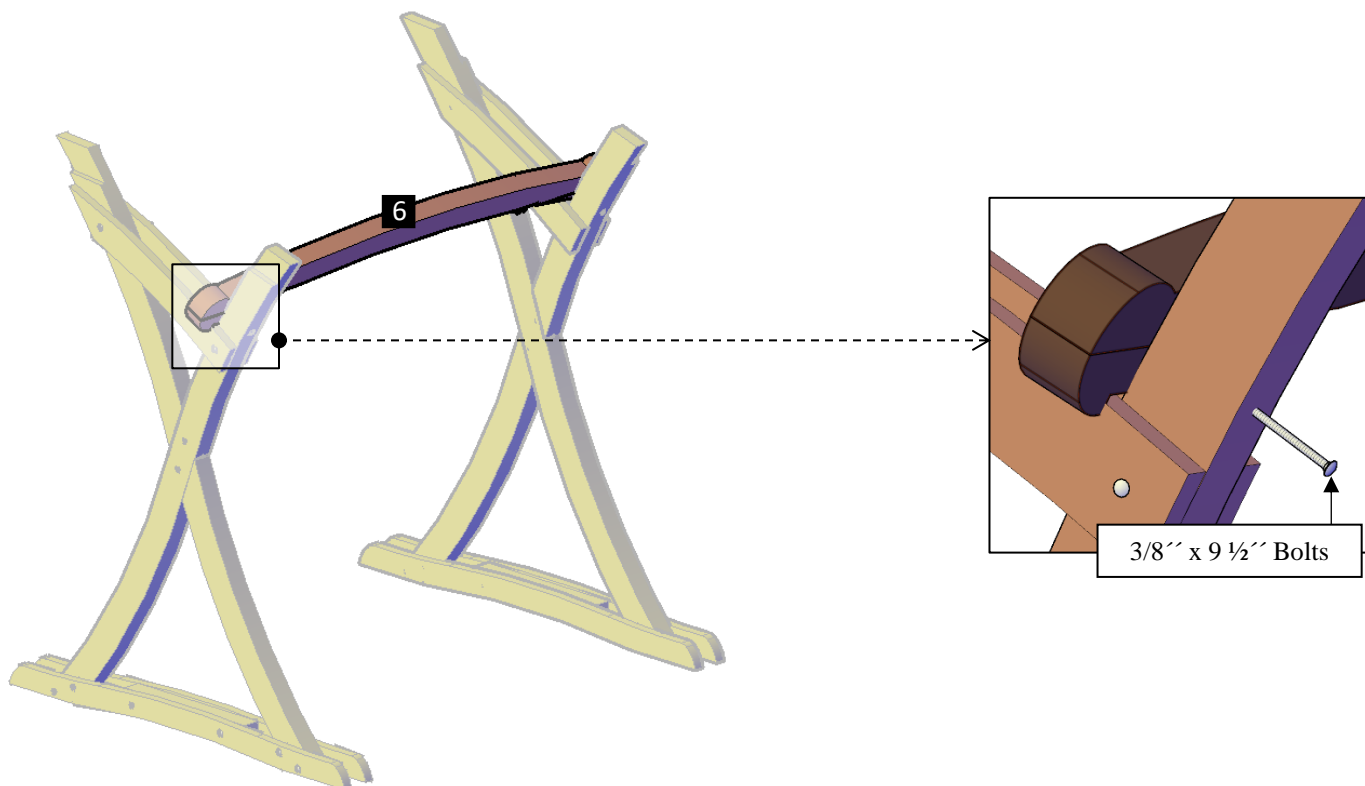


Step 7: Attach the roof panel (7) to the legs with 5/16" x 4" Bolts (D). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

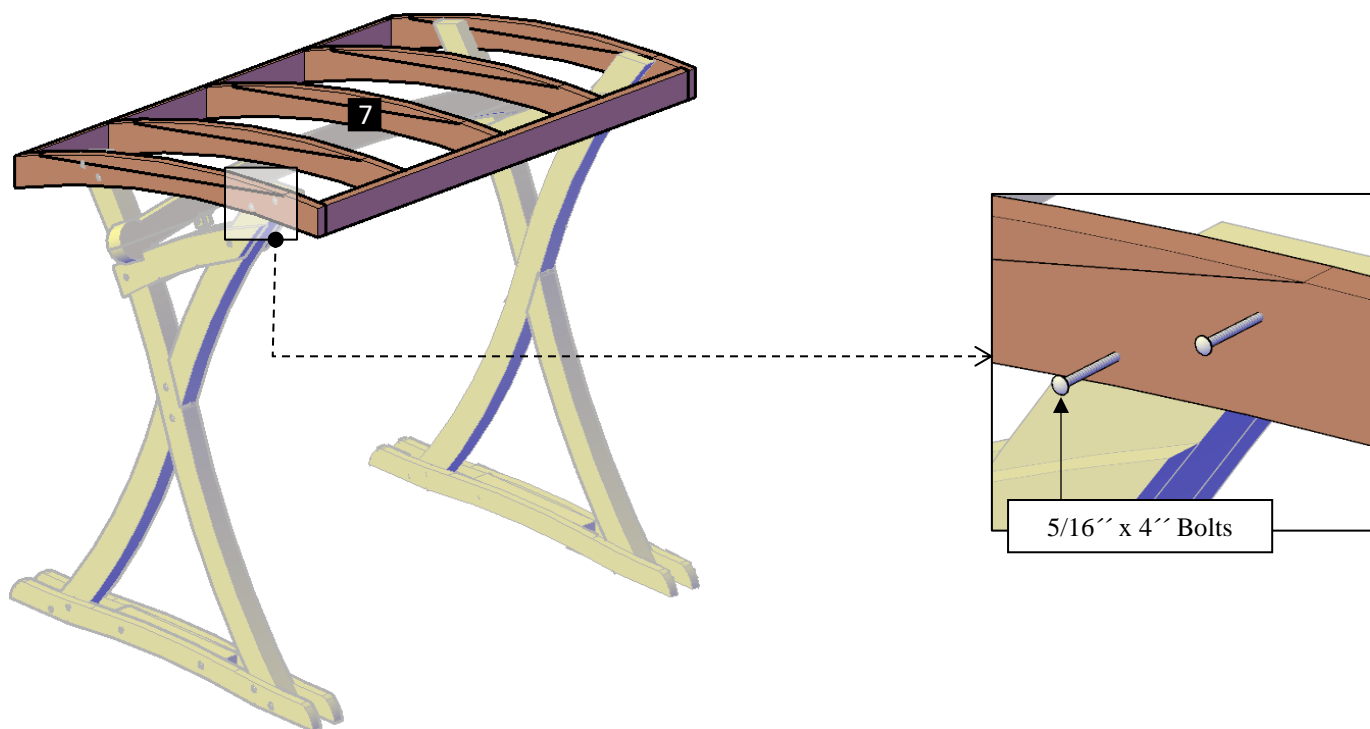


Step 8: Use 5/16" x 4 1/2" bolts (E) to attach the diagonal supports (8) to the roof panel and 5/16" x 6" bolts (F) to attach to the legs. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

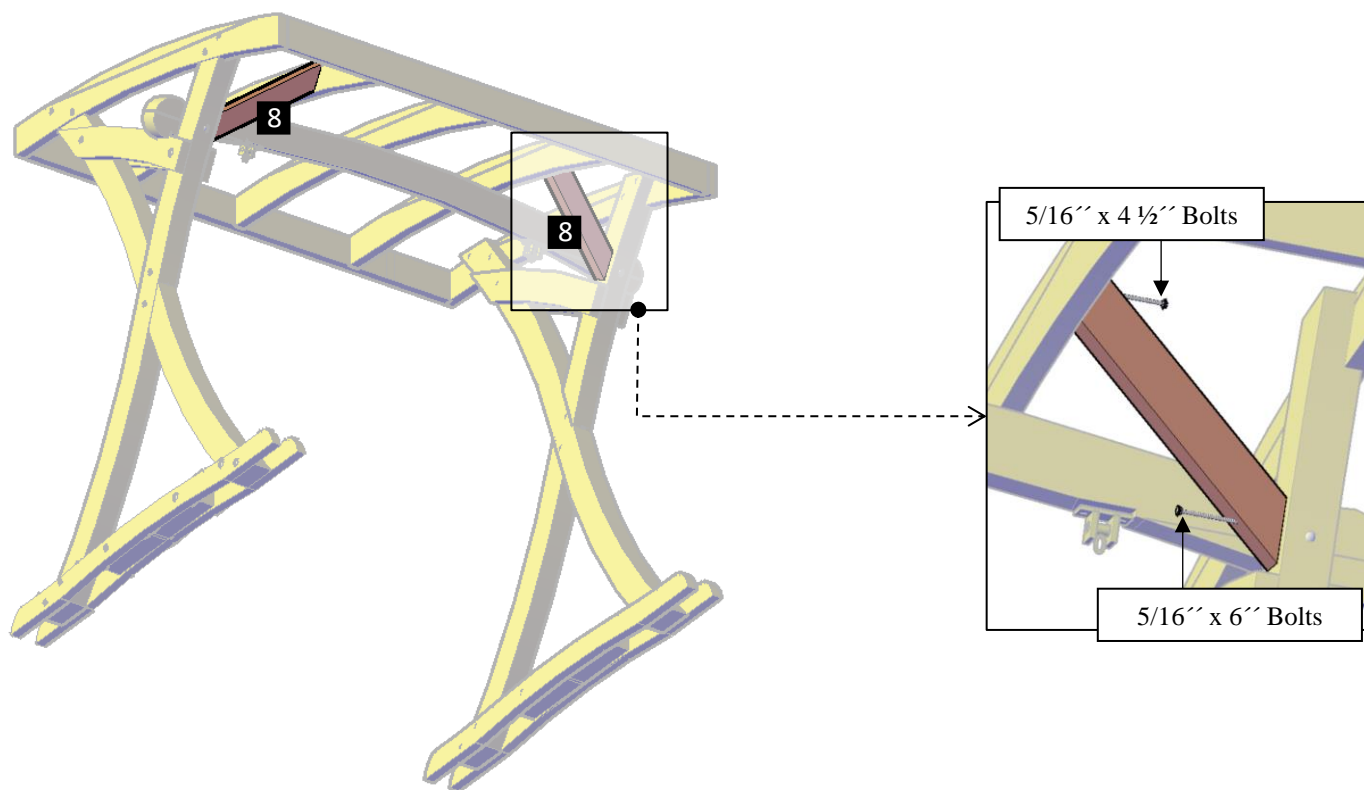


Step 9: Use 1 5/8" deck screws (G) to attach the first and the last roof boards (9) to the roof panels, the rest of roof boards will be attached with 2" deck screws (H). Put the boards from the bottom to the top, the overlapping between these boards will be of 3/4". Each part has a series of numbers that indicate where to attach the part with the corresponding number.

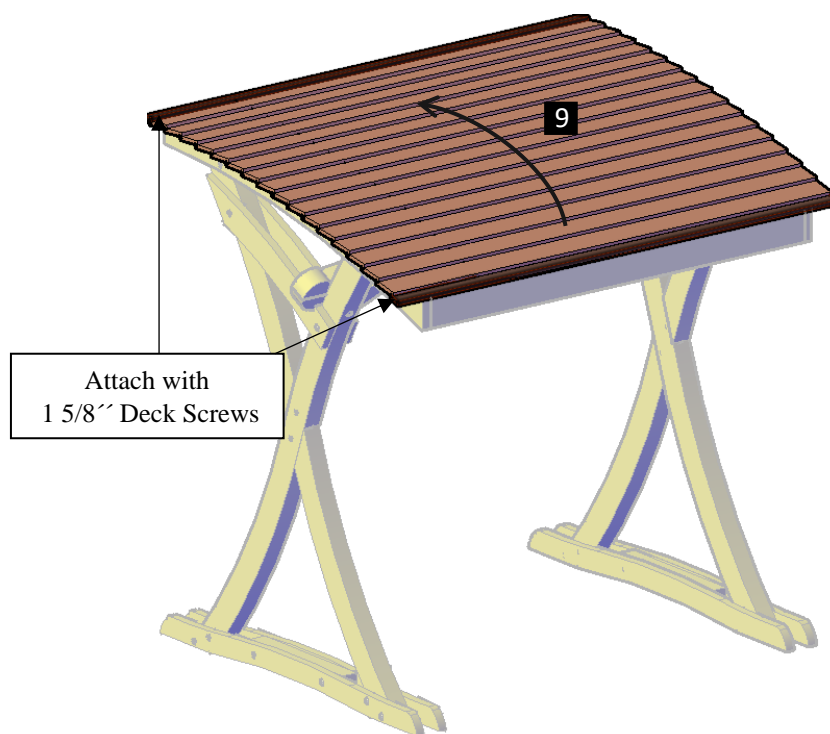

Step 10: Attach the seat (10) to the armrests (11) with 5/16" x 3 1/2" bolts (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

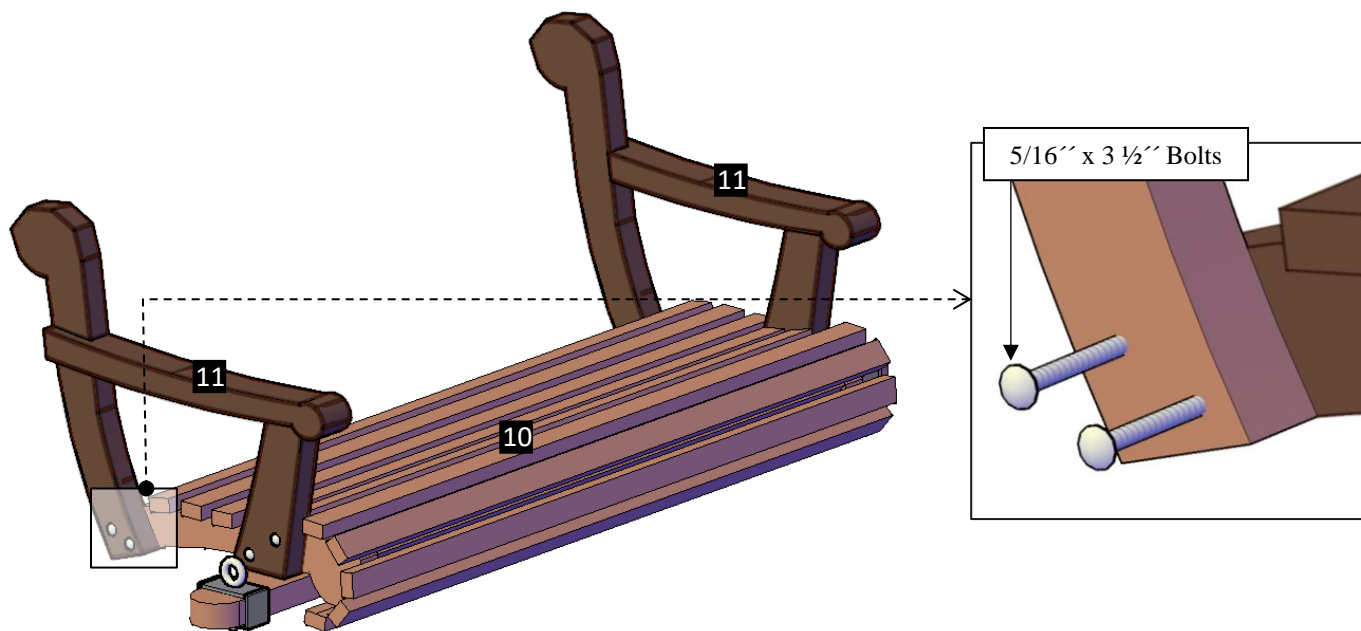

Step 11: Attach the backrest (12) to the armrests with 5/16" x 3 1/2" bolts (A) and 3/8" x 3 1/2" eyebolts (I). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

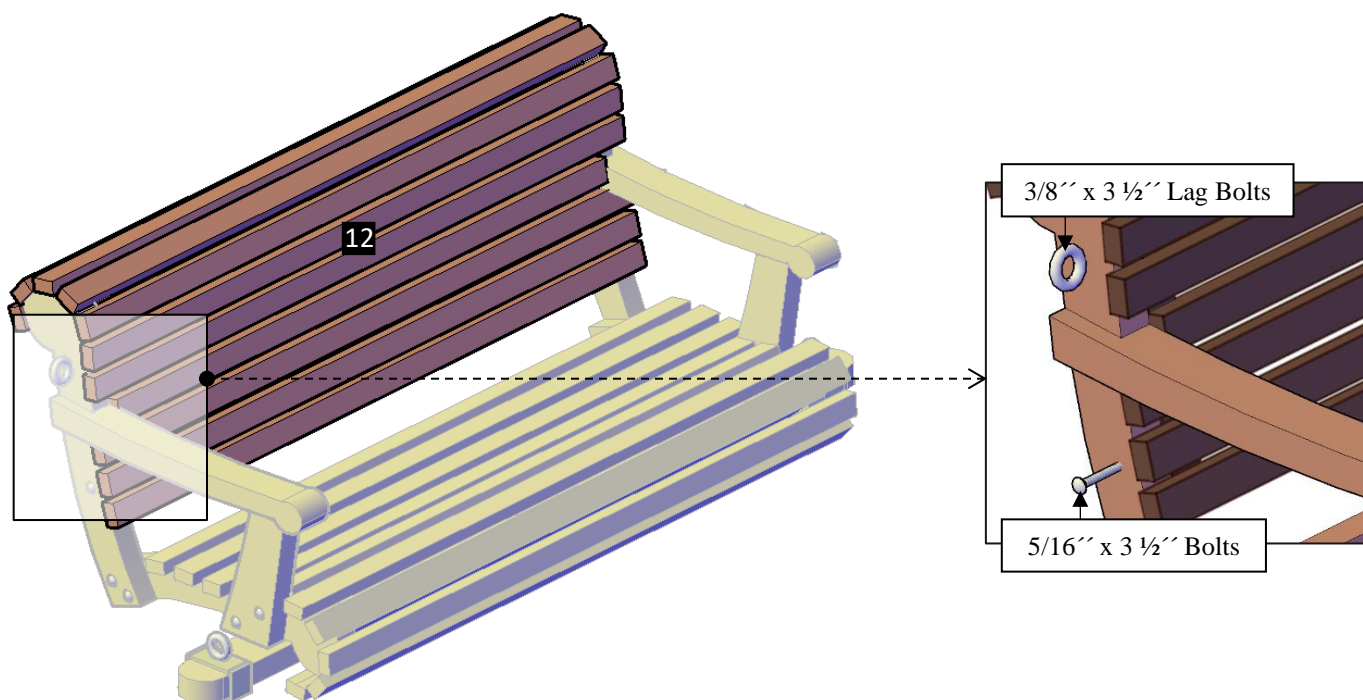

Step 12: Finally, use quick links (M) to join the chair swing to the chains (O).





This completes the Swing Assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.