
FOREVER REDWOOD

From the Forest, For the Forest since 1995


866.332.2403 (TOLL FREE) (707) 640.29.05 (Option 4) Direct Line for the Design Department; 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE

CUSTOM BENCH

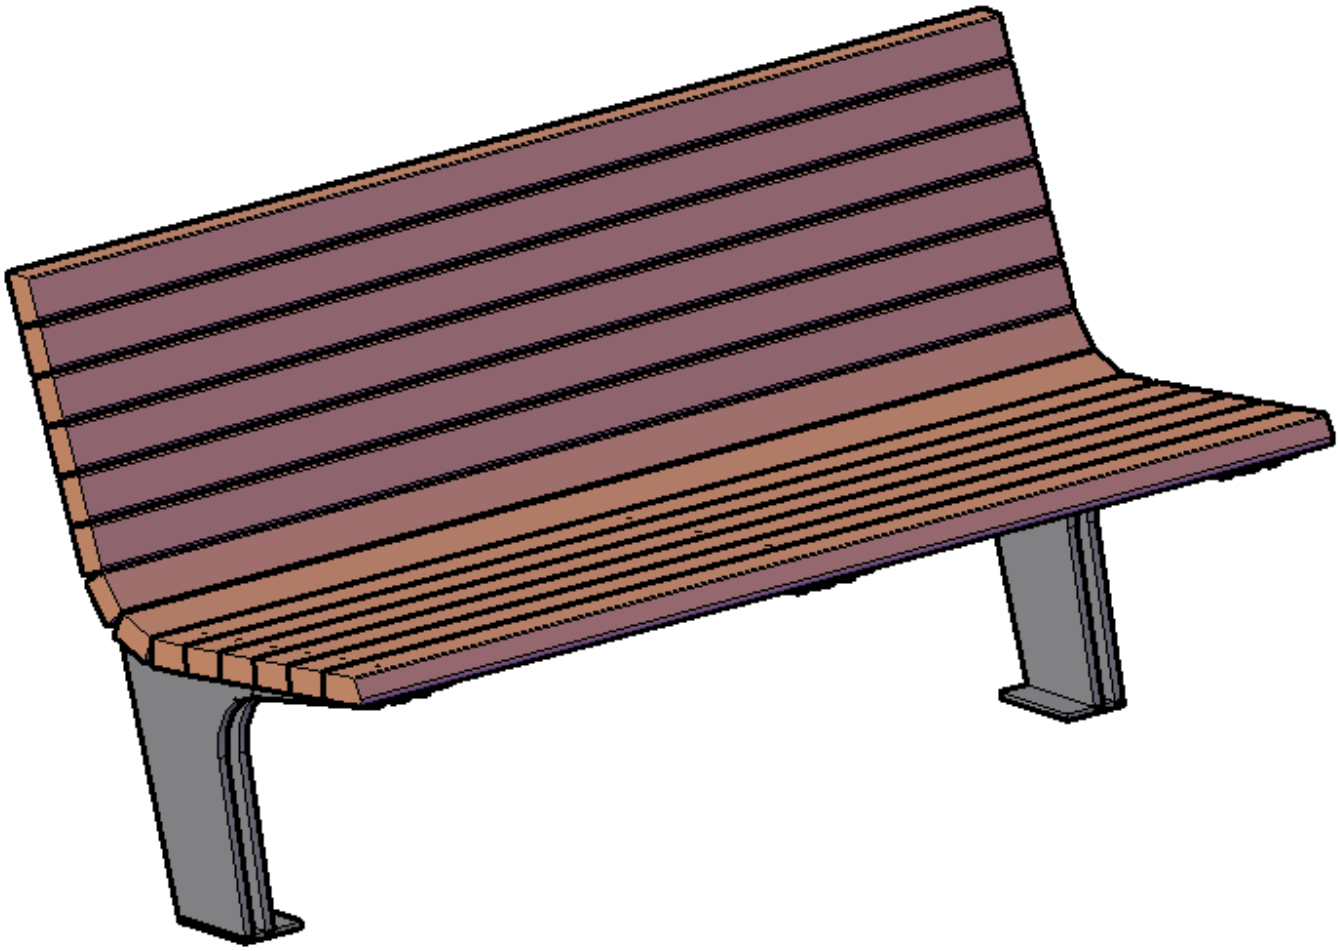


NOTE: Assembly is best done by two people. To assemble your product, you need a Hammer, a Ratch, a Drill, and an impact drill.

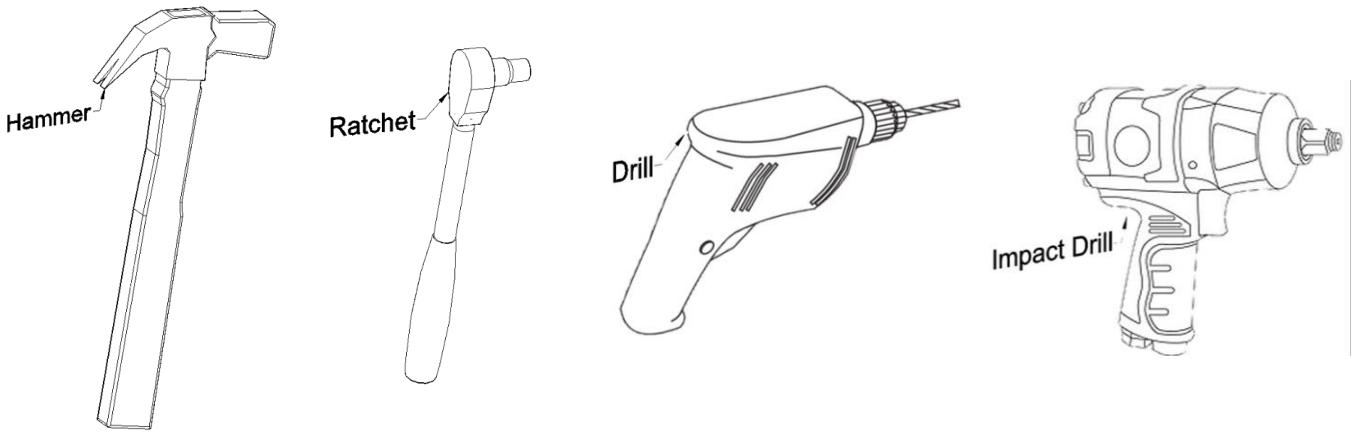


Required Tools (Are not included in your hardware packing).


PROCESS TO INSTALL THE HARDWARE PROVIDED.

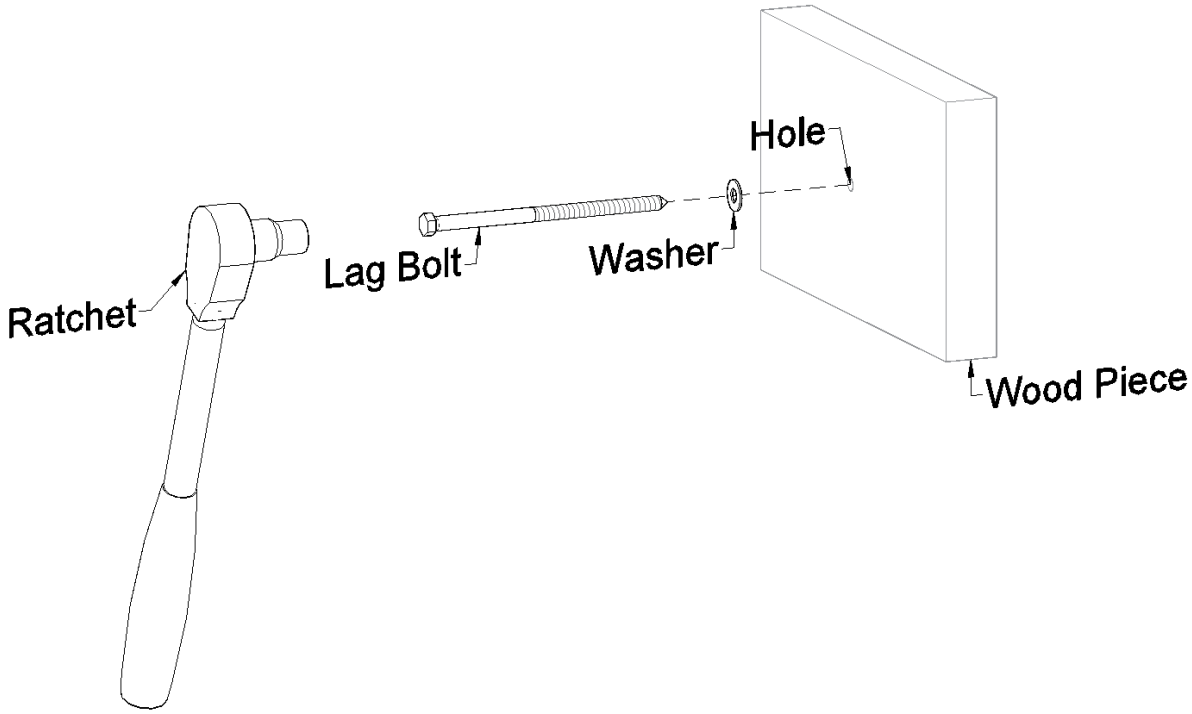


To install the lag bolts.
Place the washers in their lag bolts. After that, insert the lag bolts into the holes and carefully tighten it using a ratch with the necessary socket.
Use the washers only for the Wood Pieces.

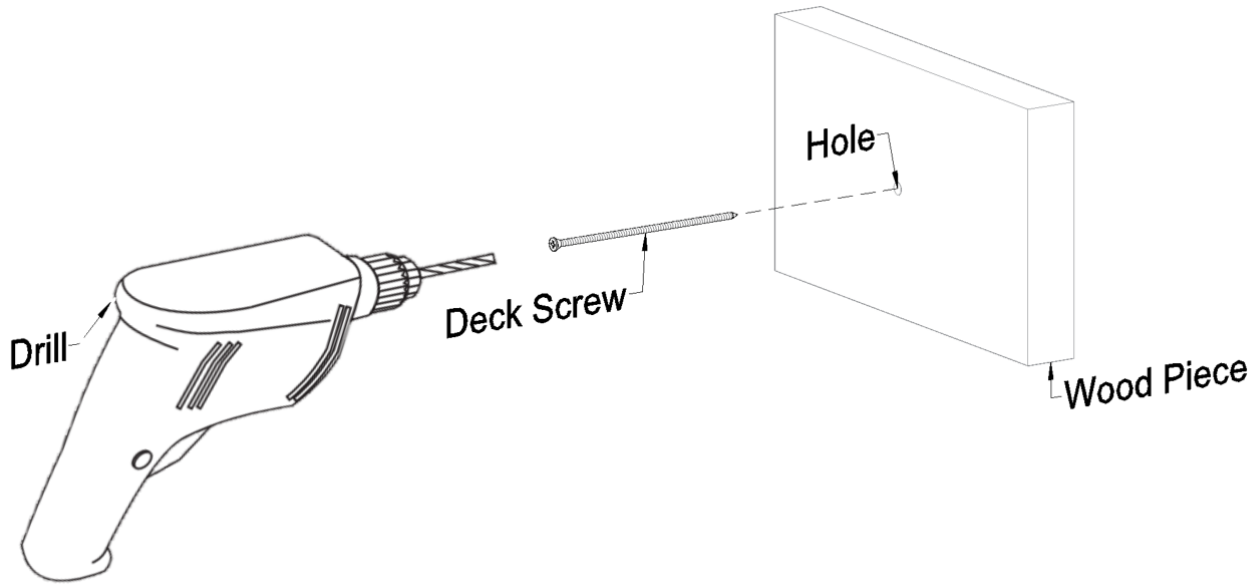


To install the deck screws.
Insert the deck screws into the holes and carefully tighten it using a drill.

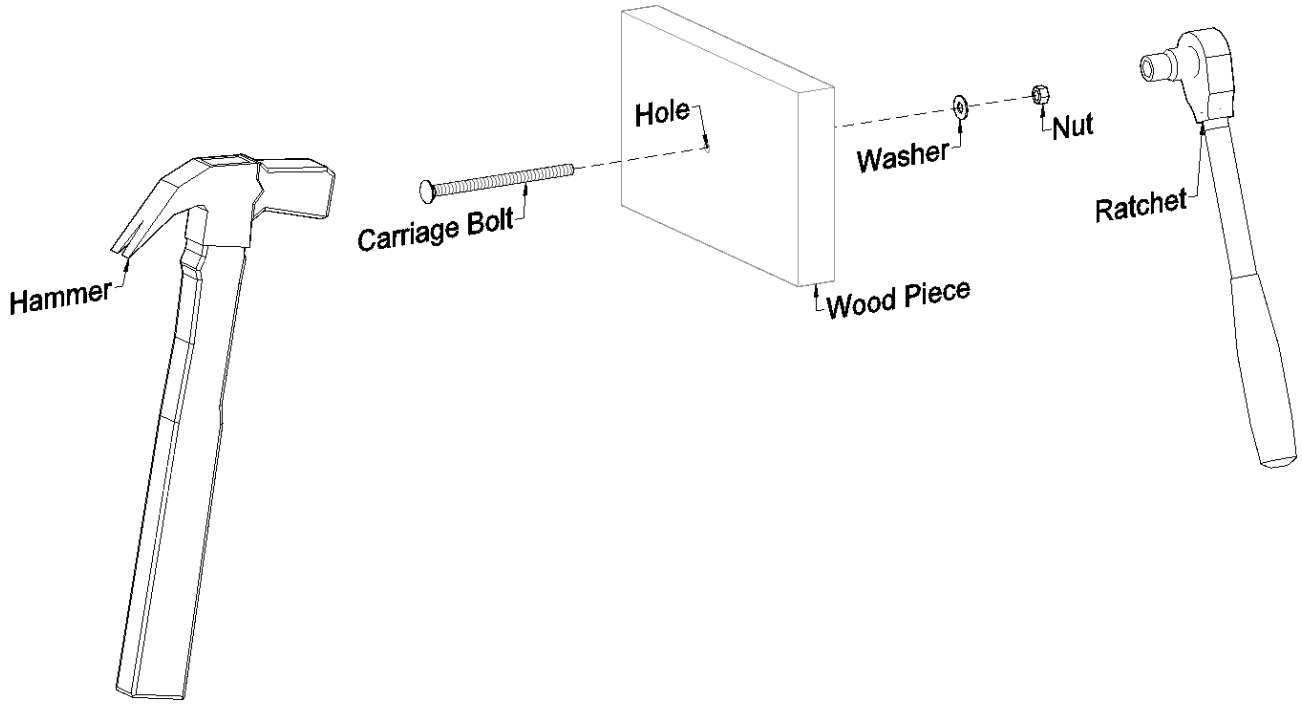


To install the bolts.
Insert the carriage bolts into the holes and lightly tap with a hammer until the square neck fit in the wood piece and the bolt head must flush with the wood piece. Finally, place the washer and the nut and carefully tighten it using a ratch with the necessary socket or a wrench.

CONTENT OF BOXES			
Qty.	**Description**	**Drawings**	**No.**
2	Metal Legs		1
1	Metal Support		2
1	Central Support		3
14	Slats		4

Note: *Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.*


HARDWARE LIST			
Qty.	**Description**	**Drawing**	**No.**
4	5/16” x 1 ½” Anchor Bolts		AB1
8	5/16” x 1 ½” Bolts		BL1
42	¼” x 1 ½” Lag Bolts		LB1
8	5/16” Washers		WA1
8	5/16” Hex Nuts		HN1


DESCRIPTION	No.
Metal Legs	1
Metal Support	2
Central Support	3
Slats	4

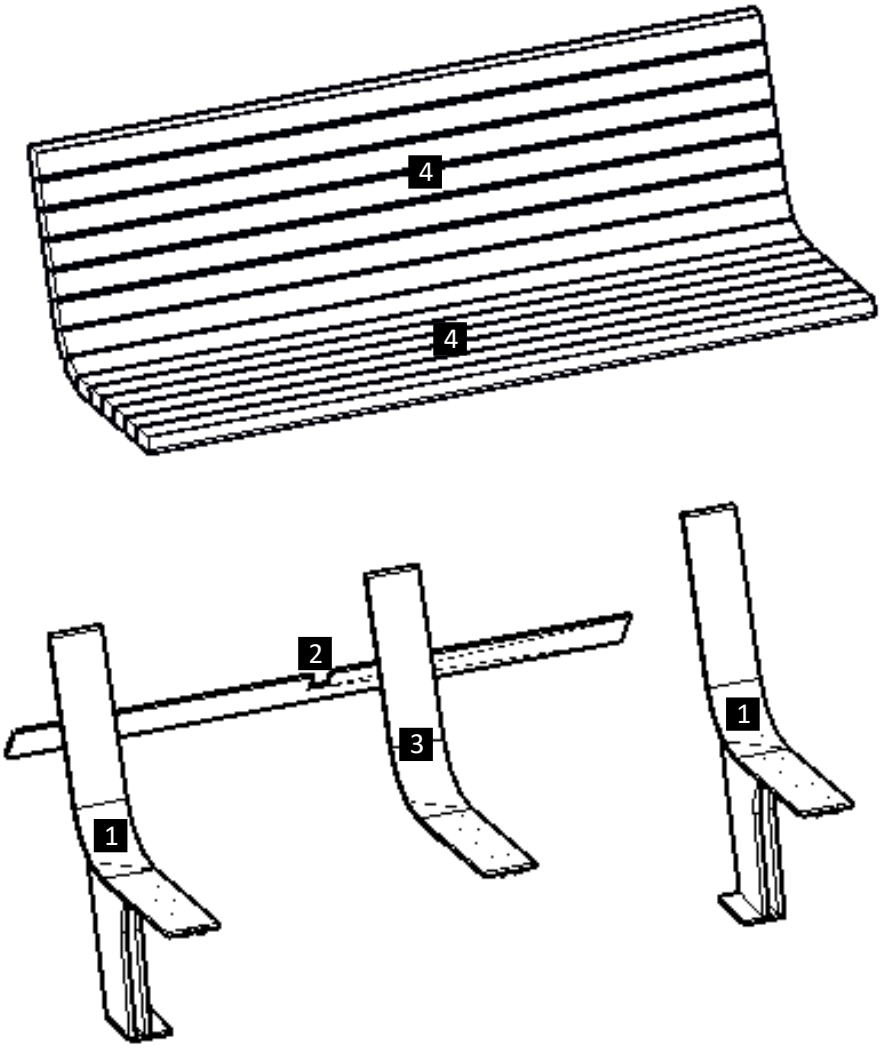


Note: *Part numbers in the <u>Drawing</u> are for reference only. These do not match to the numbers marked on the parts sent.*

Step 1: Install the metal leg **(1)** to the concrete base with 3/8" x 4" anchor bolts **(AB1).** After that use 5/16" x 1 ½" bolts **(BL1)** with washers **(WS)** & nuts **(HN)** to the metal support **(2)**. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

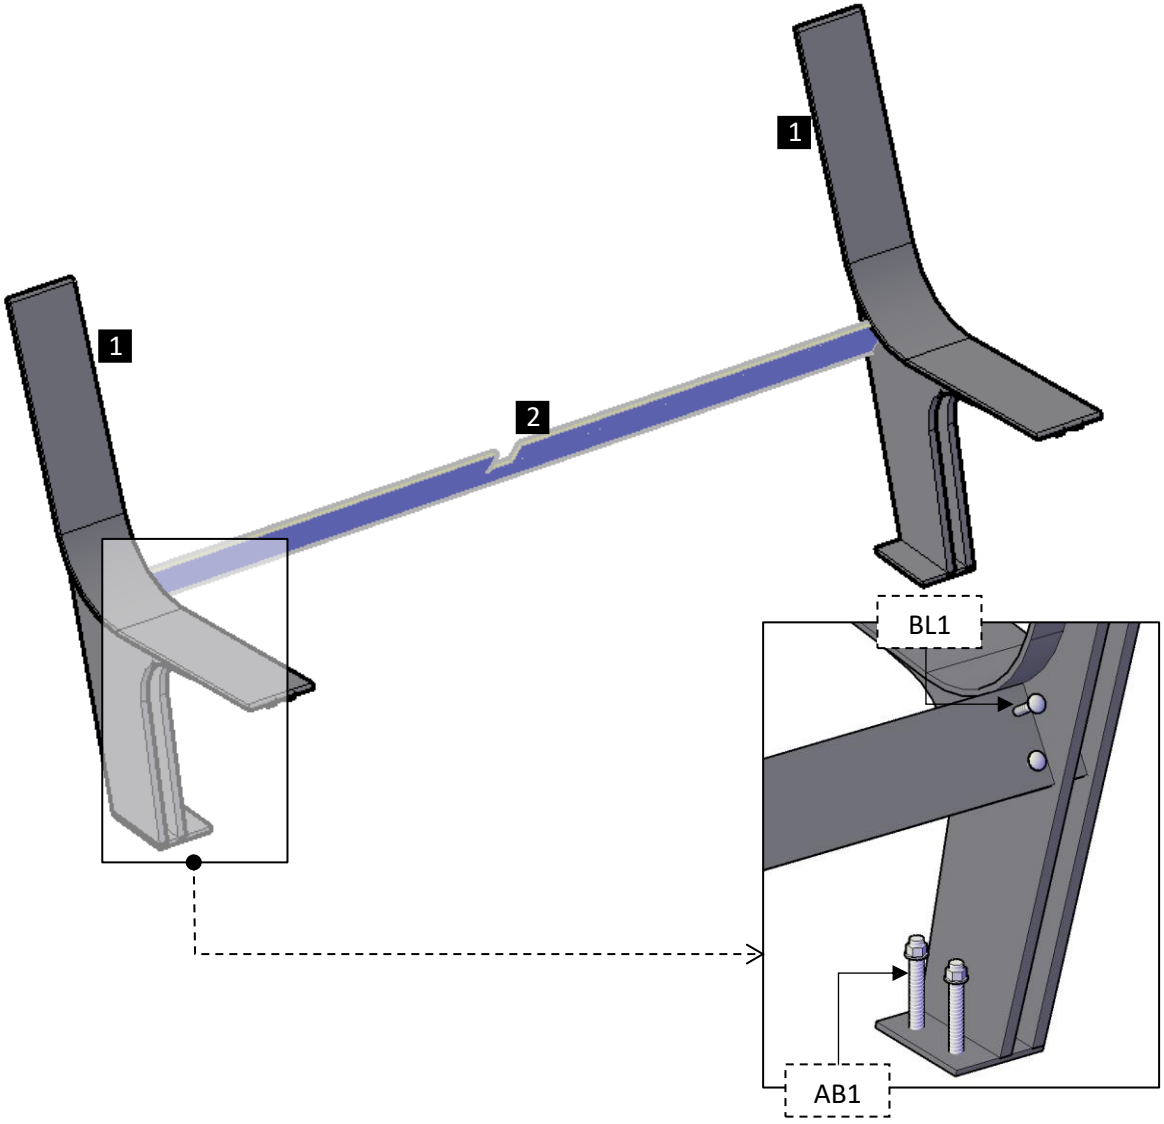


REQUIRED HARDWARE			
Qty.	**Description**	**Drawing**	**No.**
4	5/16" x 3 ½" Anchor Bolts		AB1
4	5/16" x 1 ½" Bolts		BL1
4	5/16" Washers		WS
4	5/16" Hex Nuts		NS


Step 2: Attach the central support **(3)** to the metal support **(2)** with 5/16” x 1 ½” bolts **(BL1),** washers **(WS)** and nuts **(HN)**. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

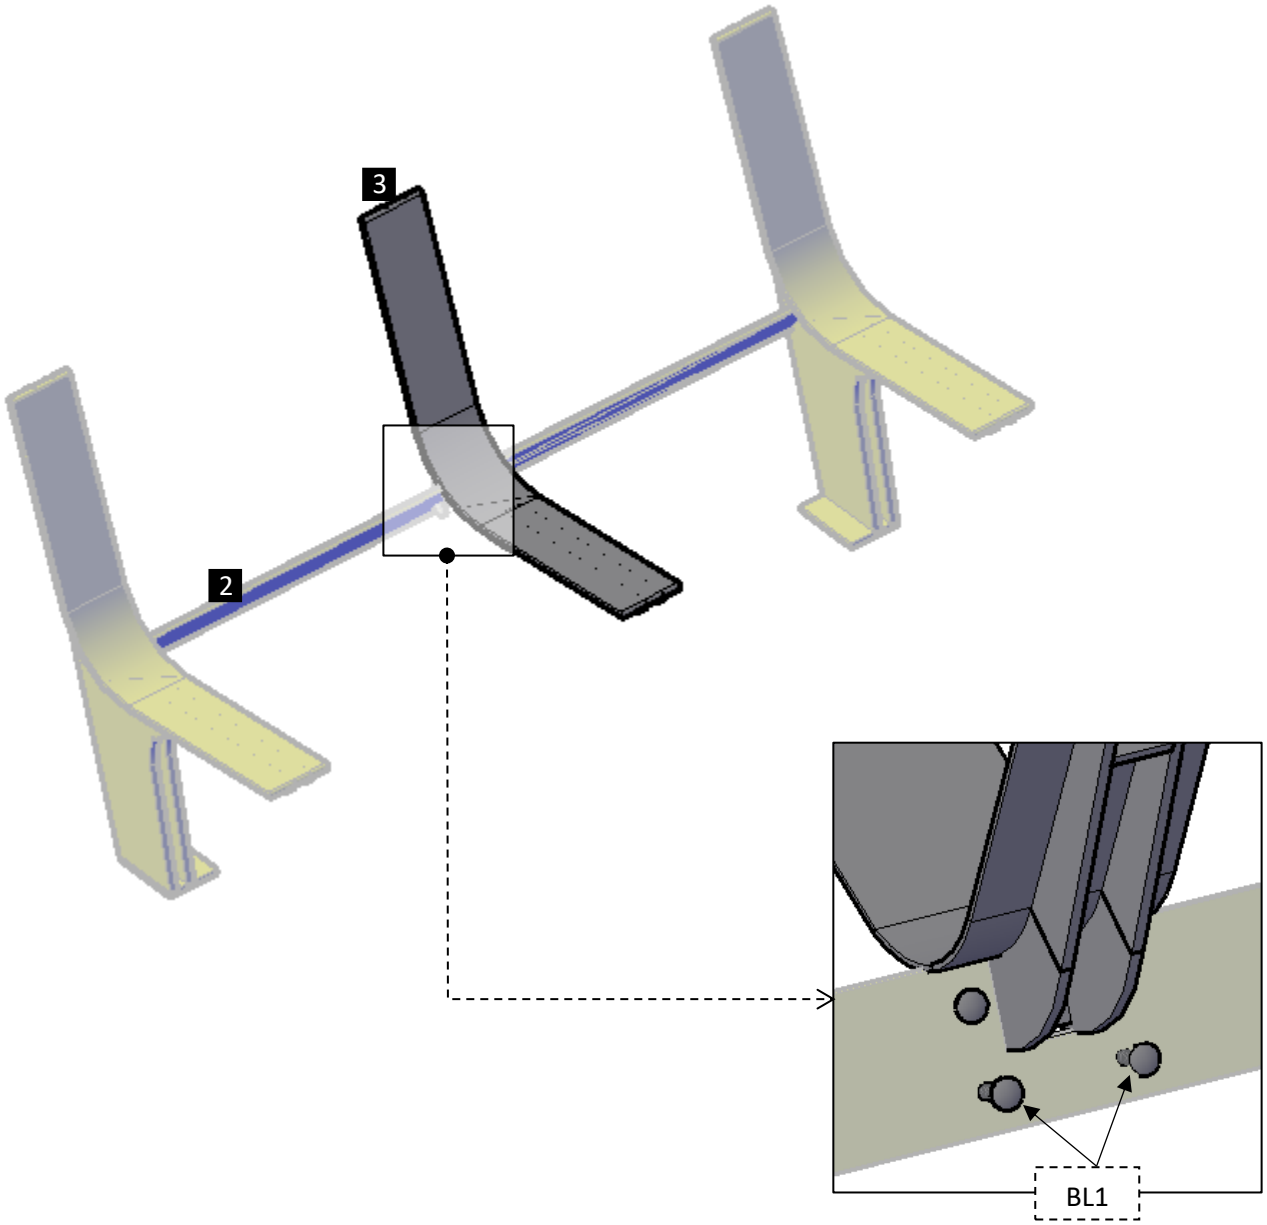


REQUIRED HARDWARE			
Qty.	**Description**	**Drawing**	**No.**
4	5/16” x 1 ½” Bolts		BL1
4	5/16” Washers		WS
4	5/16” Hex Nuts		NS

Step 3: Finally, attach the slat **(4)** to the metal legs **(1)** and to the central support **(2)** with 1 ½" deck screws **(DS1)**. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

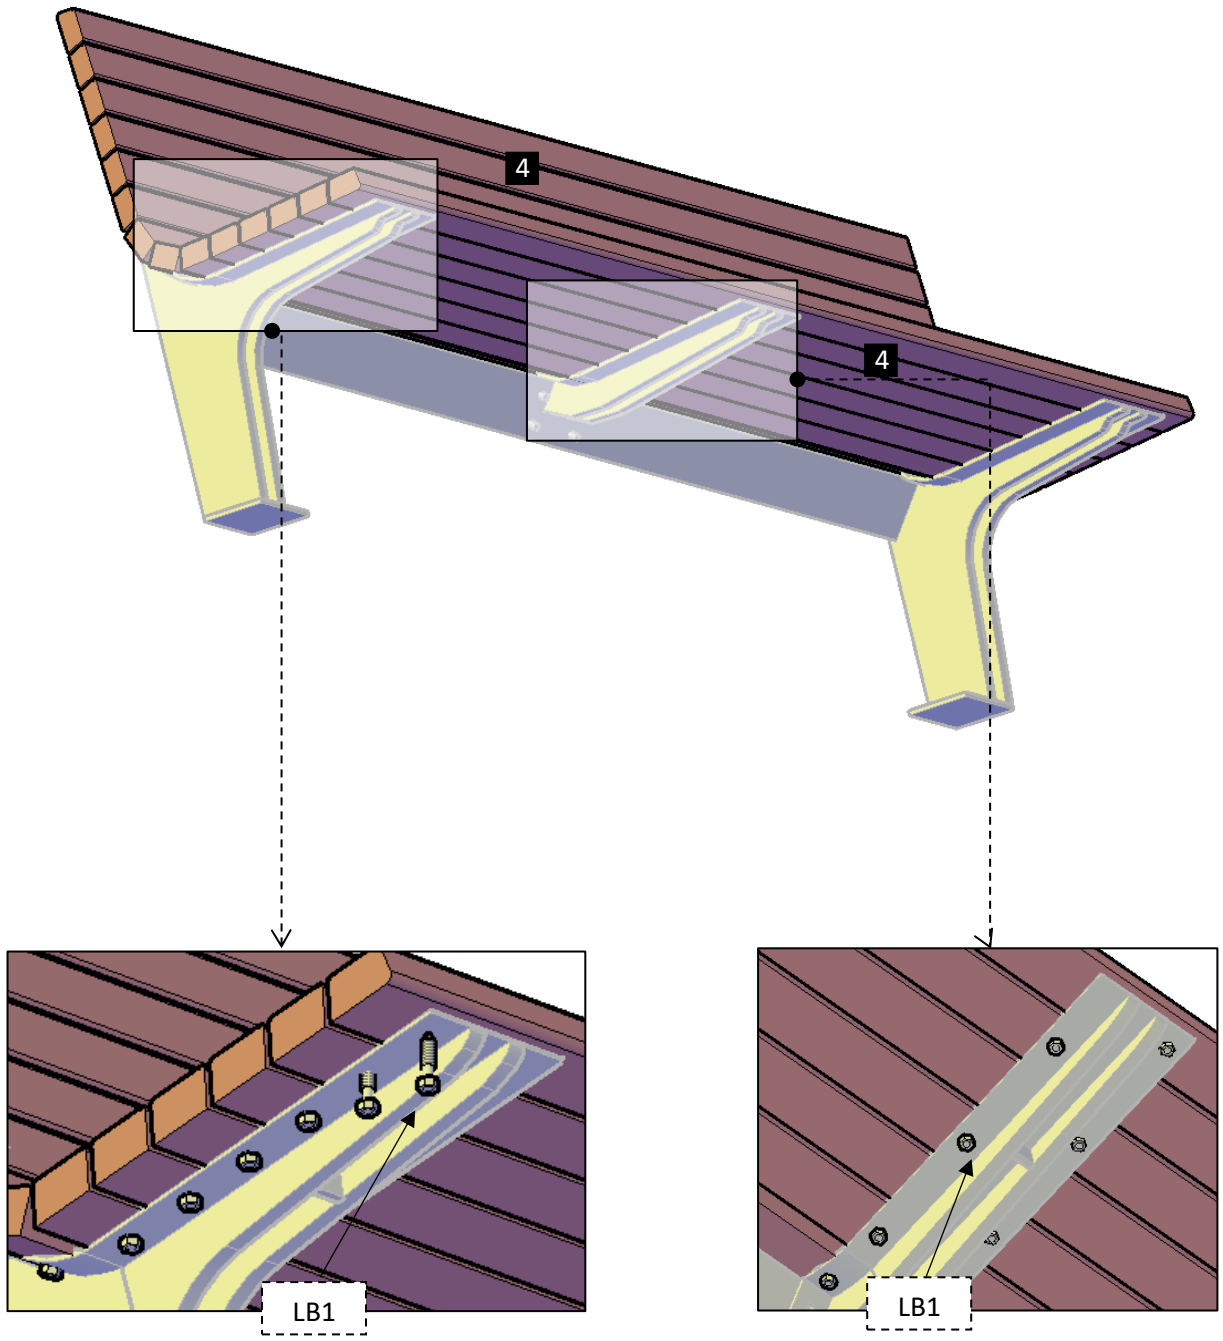

REQUIRED HARDWARE			
Qty.	**Description**	**Drawing**	**No.**
42	¼" x 1 ½" Lag Bolts		LB1

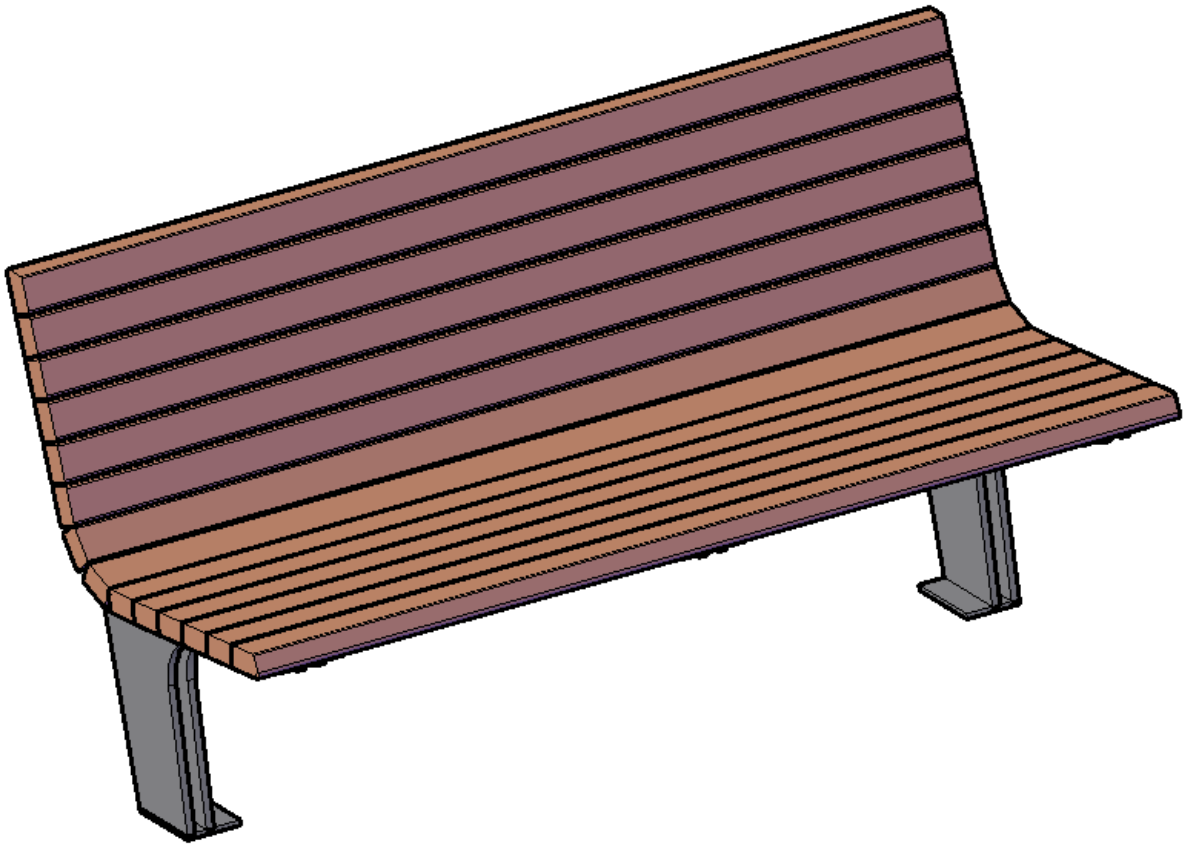

This completes the Bench assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.