

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE ADIRONDACK WOODEN LOVESEAT




	No.	-	7	co.
CONTENT OF BOXES	Drawing			
	Description	Seat	Legs	Backrest
	Qty.		2	

Note: Dimensions of your hardware will vary depending on size.

HARDWARE LIST	n Drawing No.	Bolts backrest to the
	Description	5/16′ X 3 ½′ Bolts (To attach the seat and the backrest to the legs).

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.

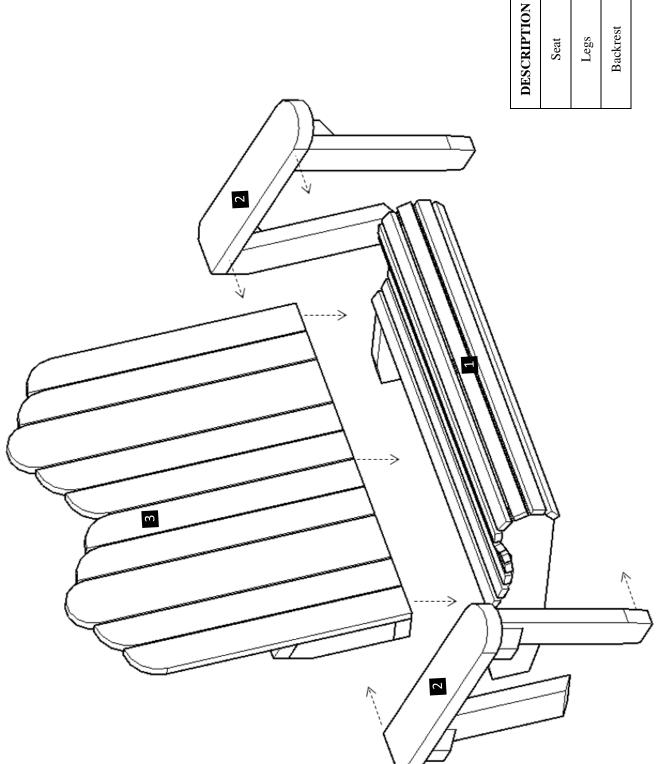


Note: Part numbers in the <u>Drawing</u> are for reference only. These do not match to the numbers marked on the parts sent.


Š

 \mathfrak{C}

Step 1: Use 5/16" x 3 1/2" bolts (**A**) to attach the legs (**2**) to the seat (**1**). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

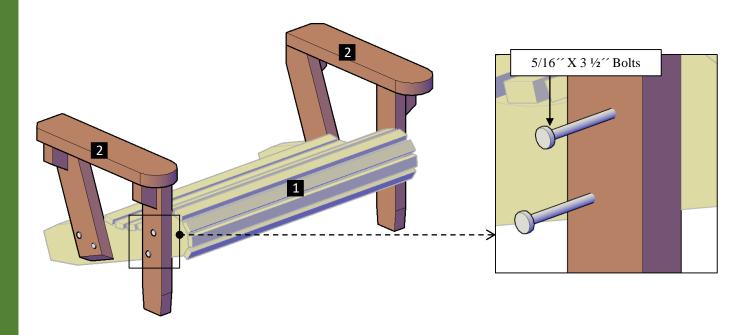

Step 2: Finally, attach the backrest (3) to the legs with 5/16" x 3 ½" bolts (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

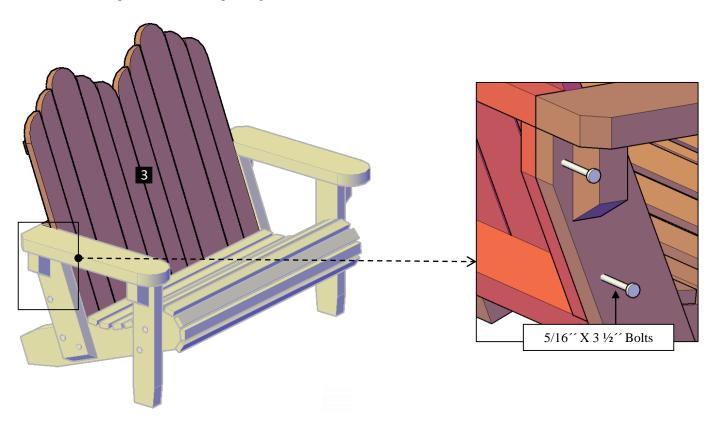



This completes the Chair assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.