

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE ADIRONDACK WOODEN ROCKING CHAIR



	No.		2	8		
CONTENT OF BOXES	Drawing					
	Description	Seat	Armrests	Backrest		
	Qty.	-1	2 -			

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.


	HARDWARE LIST	
Description	Drawing	No.
5/16" X 3 ½" Bolts (To attach the armrest to the sear. / To attach the backrest to the armrest).		A
5/16″ Washers		В
5/16″ Nuts		C

Note: Dimensions of your hardware will vary depending on size.


No	1	2	3	
DESCRIPTION	Seat	Armrests	Backrest	
		5	2	

Note: Part numbers in the <u>Drawing</u> are for reference only. These do not match to the numbers marked on the parts sent.

Step 1: Use 5/16" x 3 ½" bolts (**A**) with washers (**B**) & nuts (**C**) to attach the armrest (**2**) to the seat (**1**). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

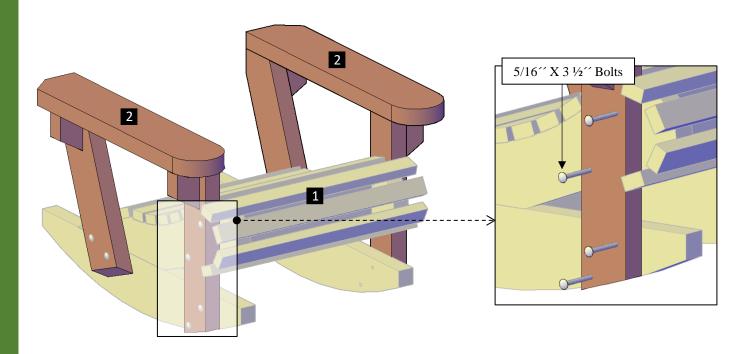

Step 2: Finally, attach the backrest (3) to the armrests, use 5/16 'x $3\frac{1}{2}$ 'bolts (A) with washers (B) & nuts (C). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

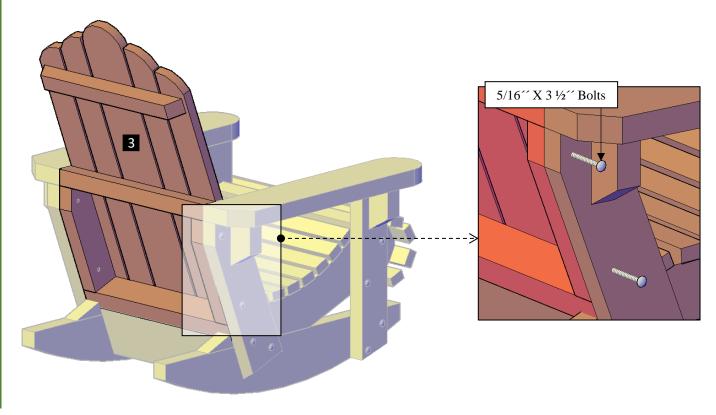



This completes the Chair Assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.