



FOREVER REDWOOD







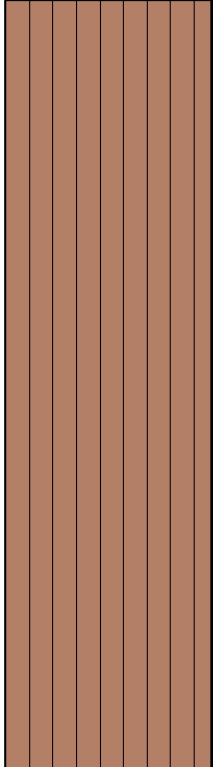





From the Forest, For the Forest since 1995

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE ATTACHED PAVILION KIT









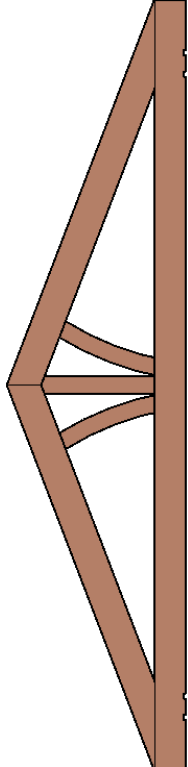


















CONTENT OF BOXES – DEL NORTE TYPE			
Qty.	Description	Drawing	No.
2	Posts		1
2	Single Supports		2
2	Supports with In-Between Blocking		3
Qty. Will Vary	Triangles		4
2	Main Knee Braces		5
2	Secondary Knee Braces		6
Qty. Will Vary	Roof Panels		7
4	Roof Fascia's		8
2	Boots		9
2	Standard, Gale Wind or Hurricane Anchors Bases. If ordered.		10
			
2	Wall Mounted Anchors		11

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.



CONTENT OF BOXES – BACKYARD TYPE				
Qty.	Description	Drawing		No.
2	Posts			1
2	Single Supports			2
2	Supports with In-Between Blocking			3
Qty. Will Vary	Arched Rafters			4
2	Main Knee Braces			5
2	Secondary Knee Braces			6
Qty. Will Vary	Roof Boards			7
2	Boots			8
2	Standard, Gale Wind or Hurricane Anchors Bases. If ordered.			9
				
2	Wall Mounted Anchors			10




HARDWARE LIST		
Description	Drawing	No.
$\frac{1}{2}$ " X 3 $\frac{1}{2}$ " Lag Bolts (To attach the anchor bases to the ground).		A
$\frac{5}{16}$ " X 3 $\frac{1}{2}$ " Lag Bolts (To attach the post to the anchor bases).		B
$\frac{1}{2}$ " X 4 " lag bolts (To attach the wall mounted anchors to the wall).		C
$\frac{3}{8}$ " X 6 $\frac{1}{2}$ " Bolts (To attach the supports, the triangle or the arched rafter to the posts. / To attach the supports together. / To attach the main knee braces to the supports. / To attach the secondary knee braces to the triangle or to the arched rafter).		D
$\frac{3}{8}$ " X 3 " Lag Bolts (To attach the supports to the wall mounted anchors).		E
2 $\frac{1}{4}$ " Deck screws (To attach the roof panels to the triangles. / To attach the roof fascia's to the roof panels).		F
$\frac{3}{8}$ " X 10 " Bolts (To attach the knee braces to the posts).		G
$\frac{3}{8}$ " X 8 " Bolts (To attach the roof panels to the tringles).		H
$\frac{5}{16}$ " X 3 " Bolts (To attach the roof panels together).		I
3 " Deck Screws (To attach the triangles or the arched rafters to the supports. / To attach the boots to the posts).		J
1 $\frac{5}{8}$ " Deck Screws (To attach the roof boards to the arched rafters)		K

Note: Dimensions of your hardware will vary depending on size.




NOTE: In order to know where the post needs to be placed, check the numbers on them. If the post is not marked, then place the single Supports on the ground to locate the markings for each post position and clearly set your bearings. (“Don’t attach yet, only place them on the ground to begin with”).


Step 1: Install the anchor bases (**9 or 10**) with $\frac{1}{2}$ " X $3\frac{1}{2}$ " lag bolts (**A**). Please see the “How to anchor your pergola document” for all details. Set your post (**1**) in the saddle of the anchor bases. Drill a $\phi\frac{1}{4}$ " hole in the post prior to anchoring to facilitate the ratcheting of the hardware. After that, use a $\frac{5}{16}$ " X $3\frac{1}{2}$ " lag bolts (**B**) to attach each post to its respective anchor base.

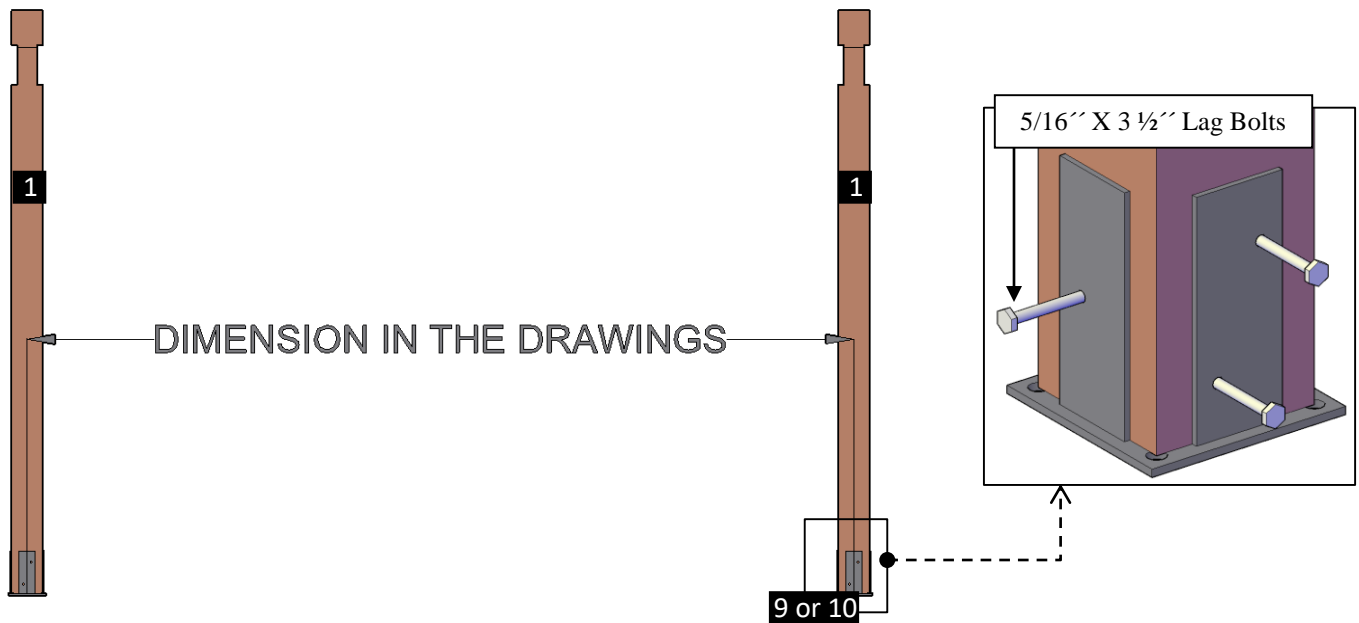

Step 2: Attach the wall mounted anchors (**10 or 11**) to the wall with $\frac{1}{2}$ " X 4" lag bolts (**C**).

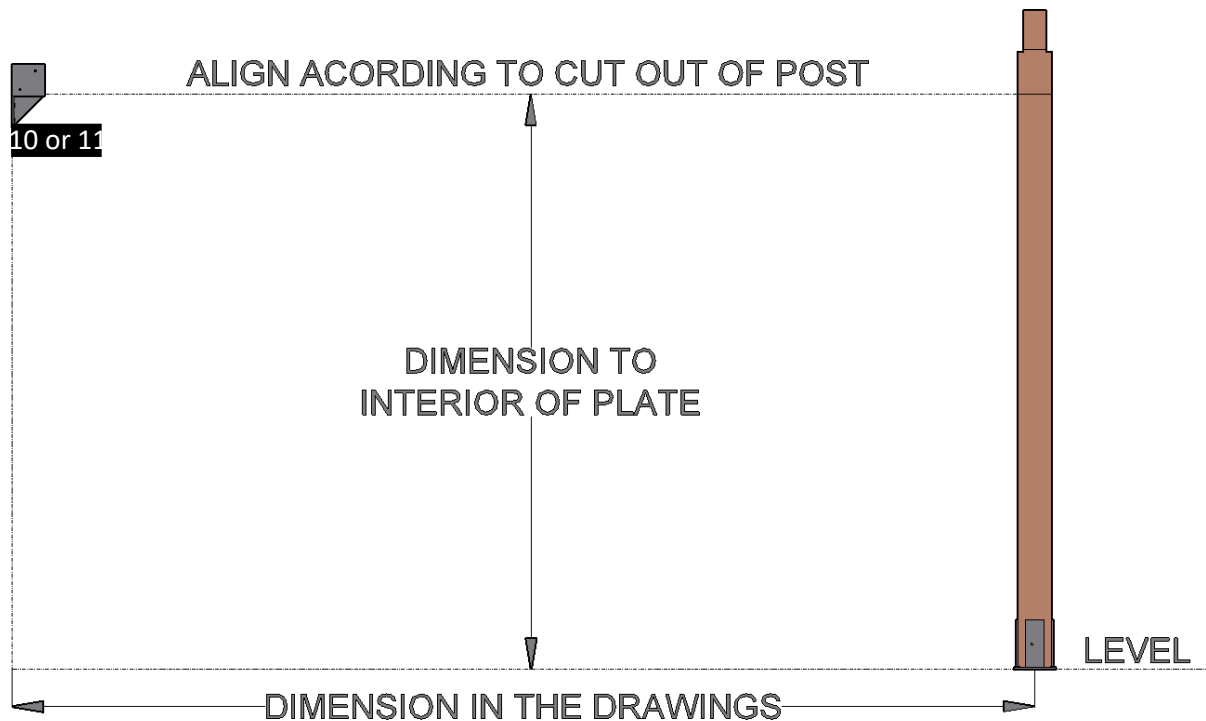


Step 3: Attach the single supports (2) to the posts with 3/8" x 6 1/2" bolts (D). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

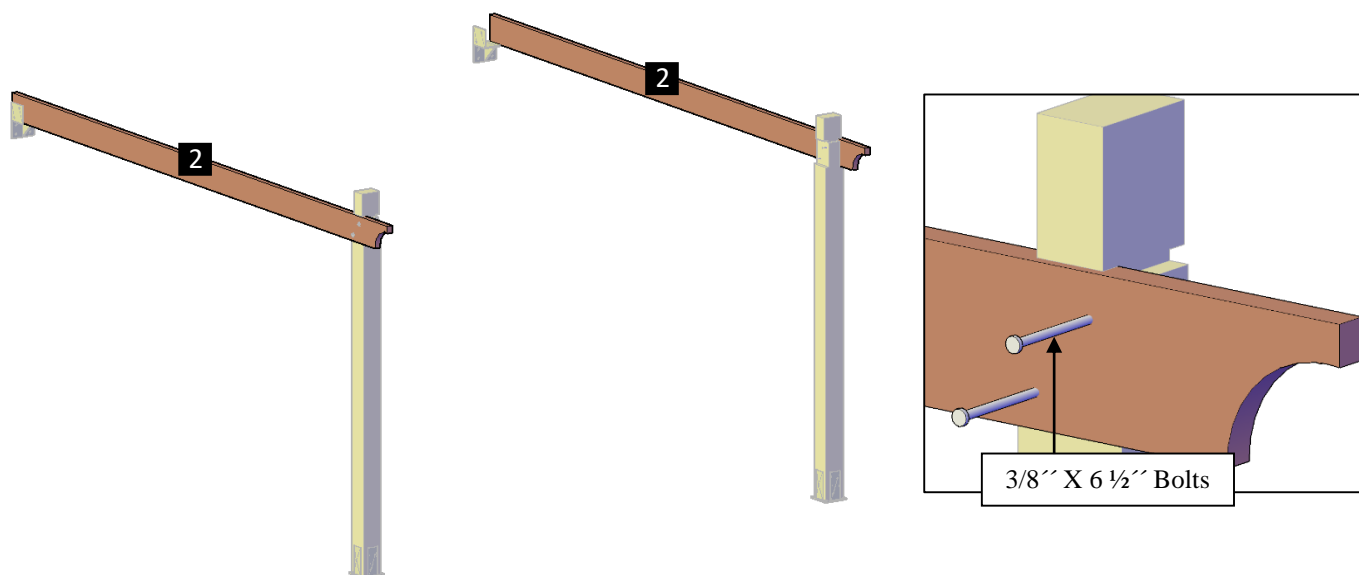


Step 4: Put up the supports with in-between blocking (3), into the post notches as shown and attach to the posts with the single support bolts. Each part has a series of numbers that indicate where to attach the part with the corresponding number.



Step 5: Attach the single supports to the supports with in-between blocking, use 3/8" X 6 1/2" bolts (**D**). The quantity of bolts depends on the length of the supports.

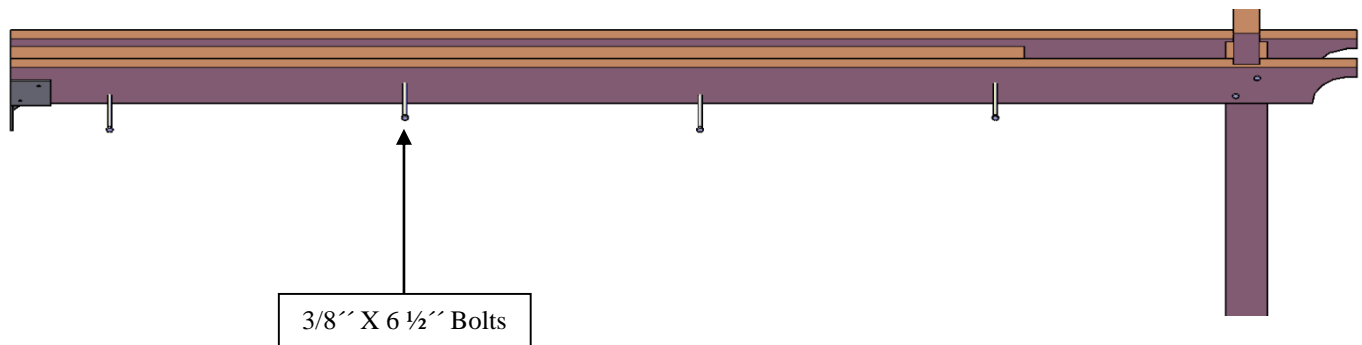


Step 6: Use 3/8" x 3" lag bolts (**E**) to attach the wall mounted anchors to the supports.

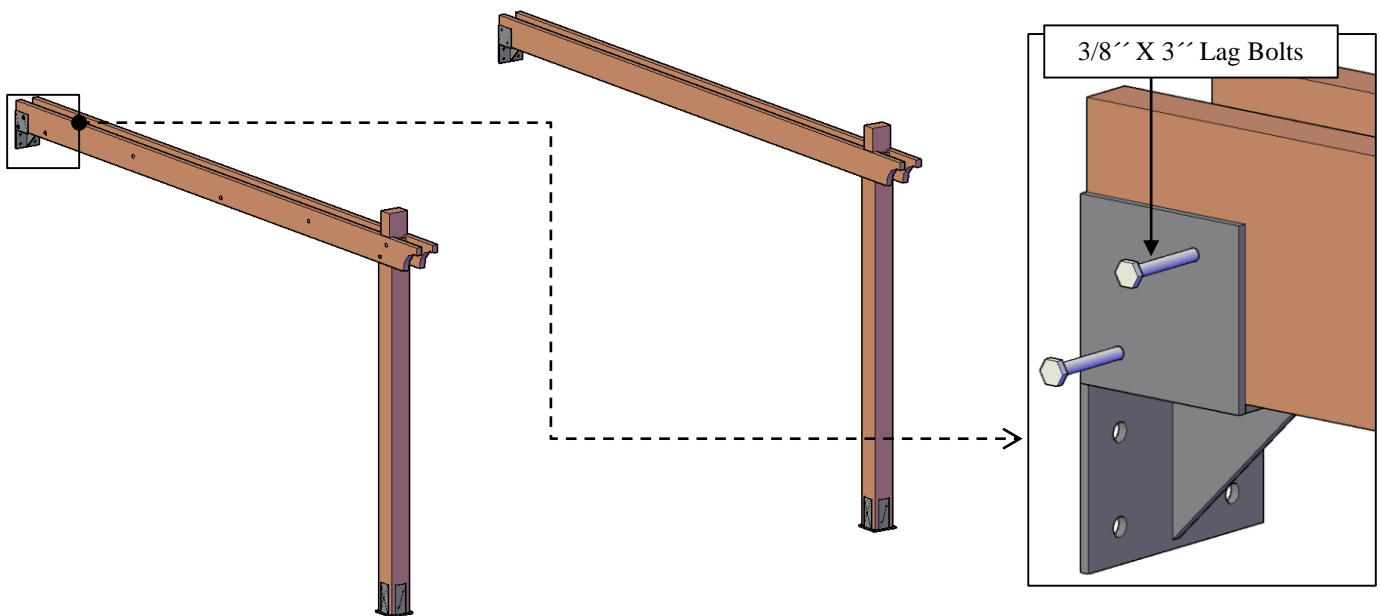


Step 7: Attach the perimeter triangle (4) or the perimeter arched rafter (4) to the posts with 3/8" x 6 1/2" bolts (D) and to the supports with 3" deck screws (J). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

Del Norte Type:

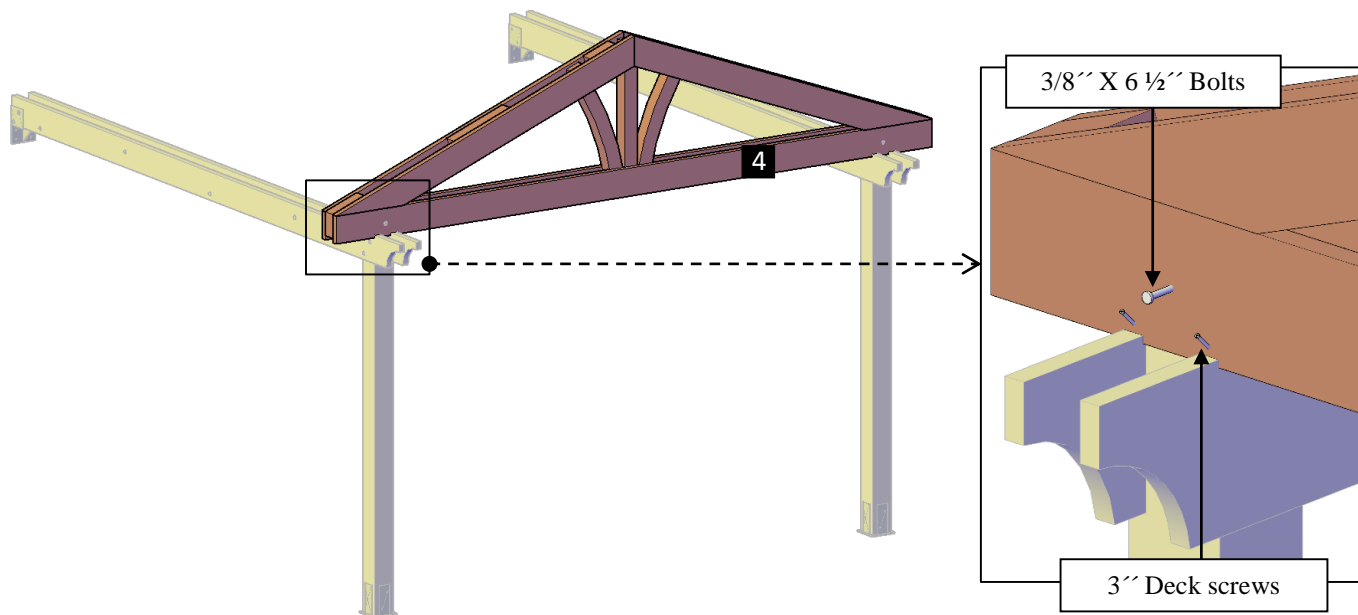


Backyard Type:

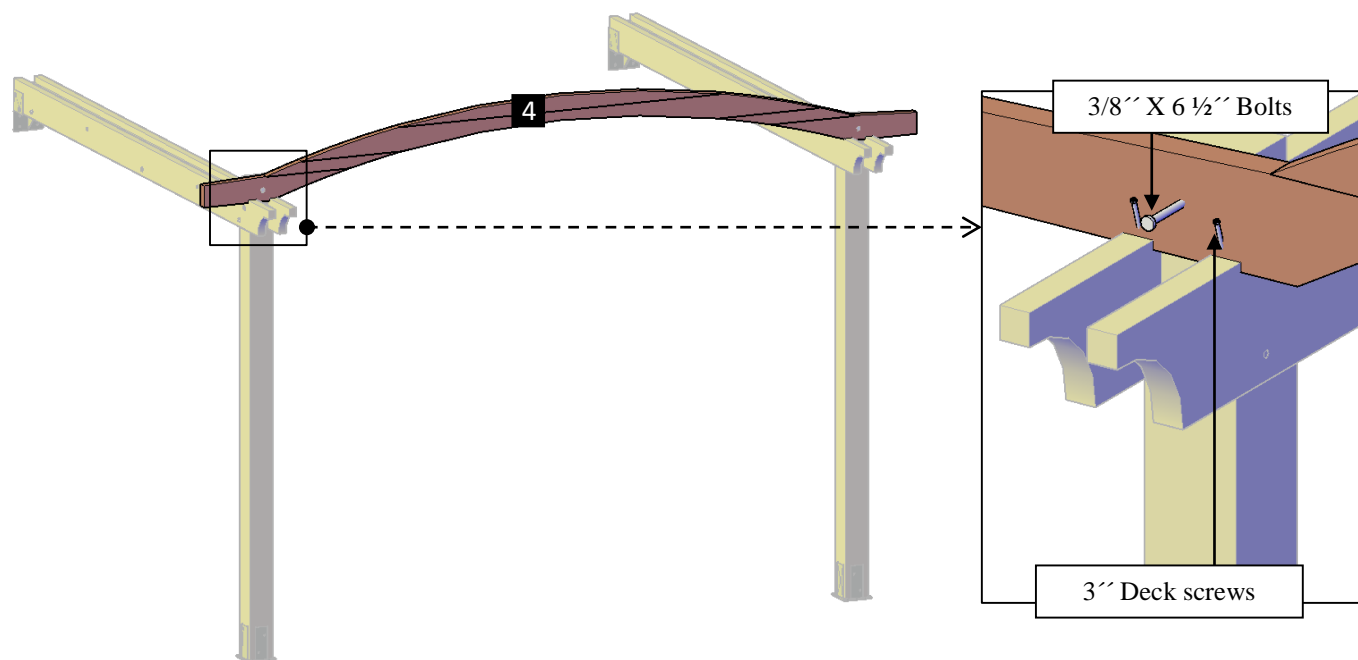


Step 8: Attach the main knee braces (5) to the posts with 3/8" x 10" bolts (G) and to the supports with 3/8" x 6 1/2" Bolts (D). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

Del Norte Type:

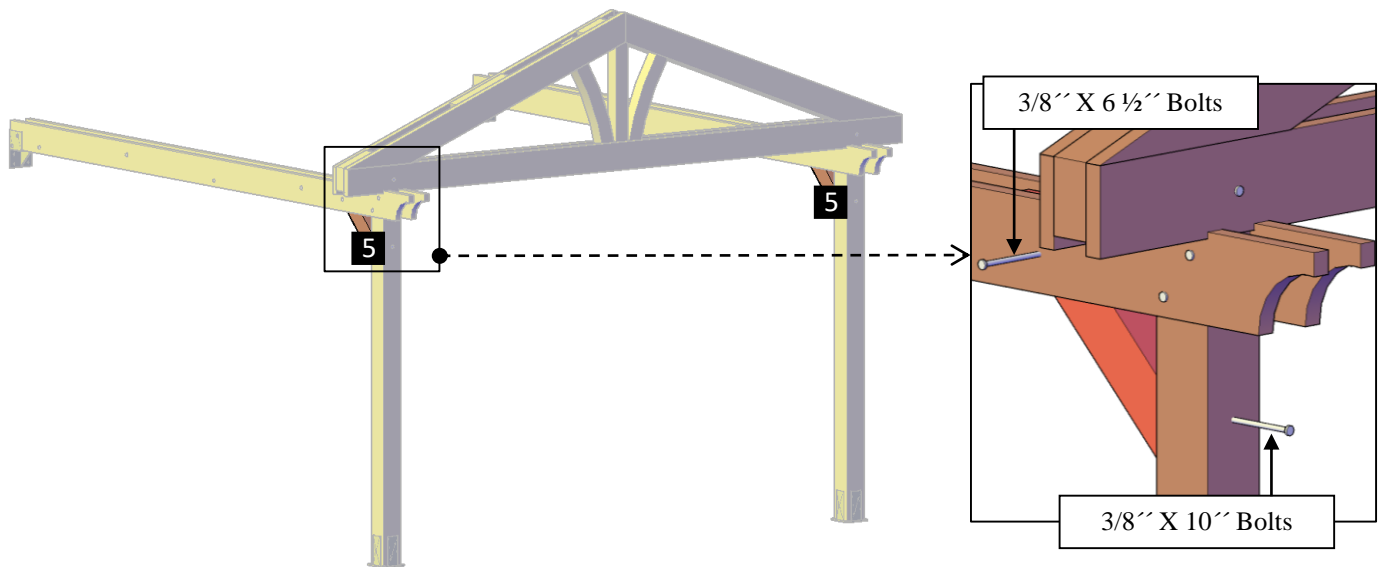


Backyard Type:

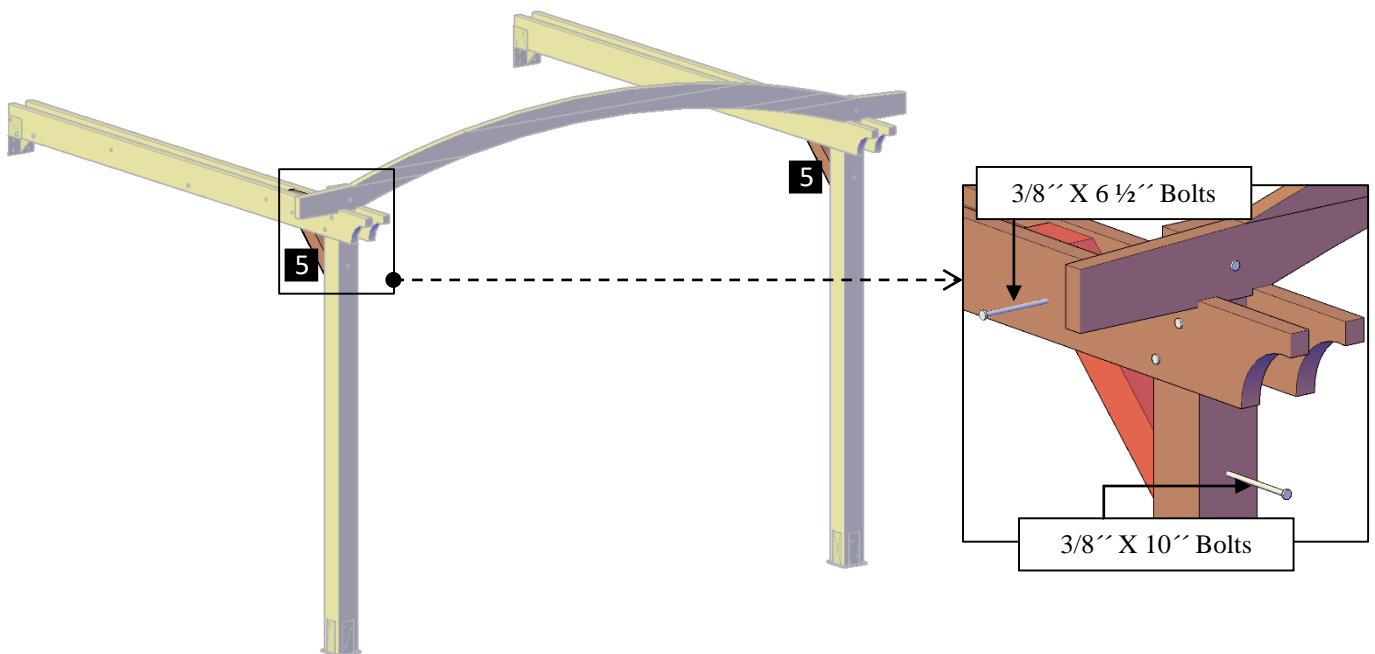


Step 9: Attach the secondary knee braces (6) to the posts with 3/8" x 10" bolts (G) and to the triangle or the arched rafter with 3/8" x 6 1/2" Bolts (D). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

Del Norte Type:

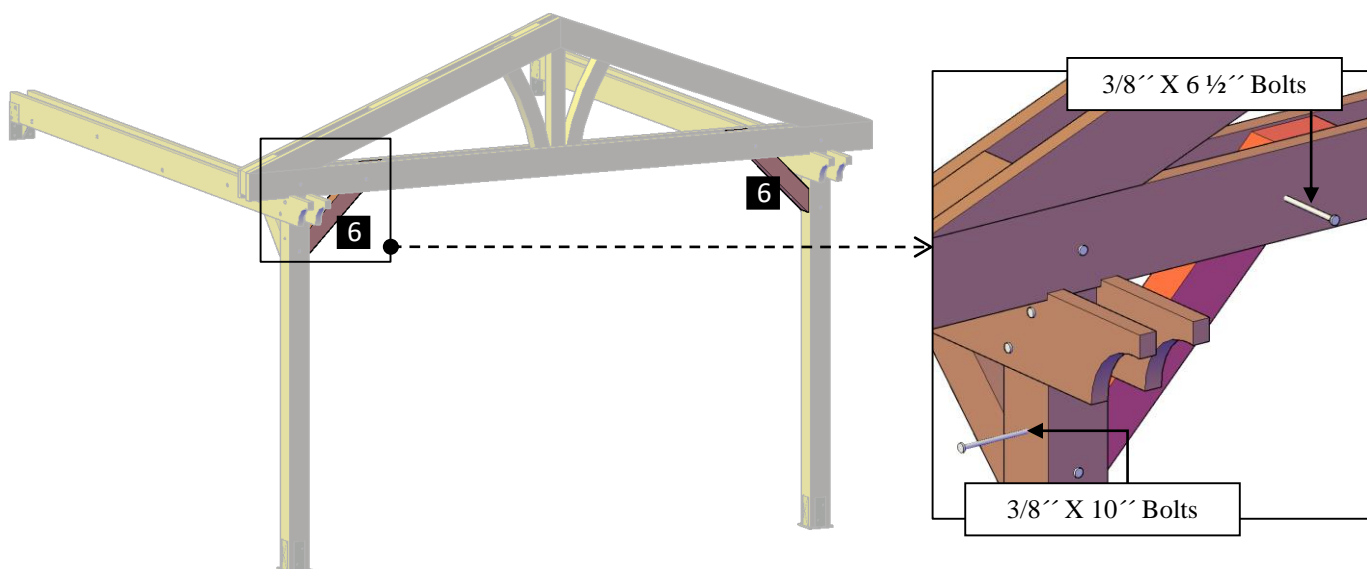


Backyard Type:

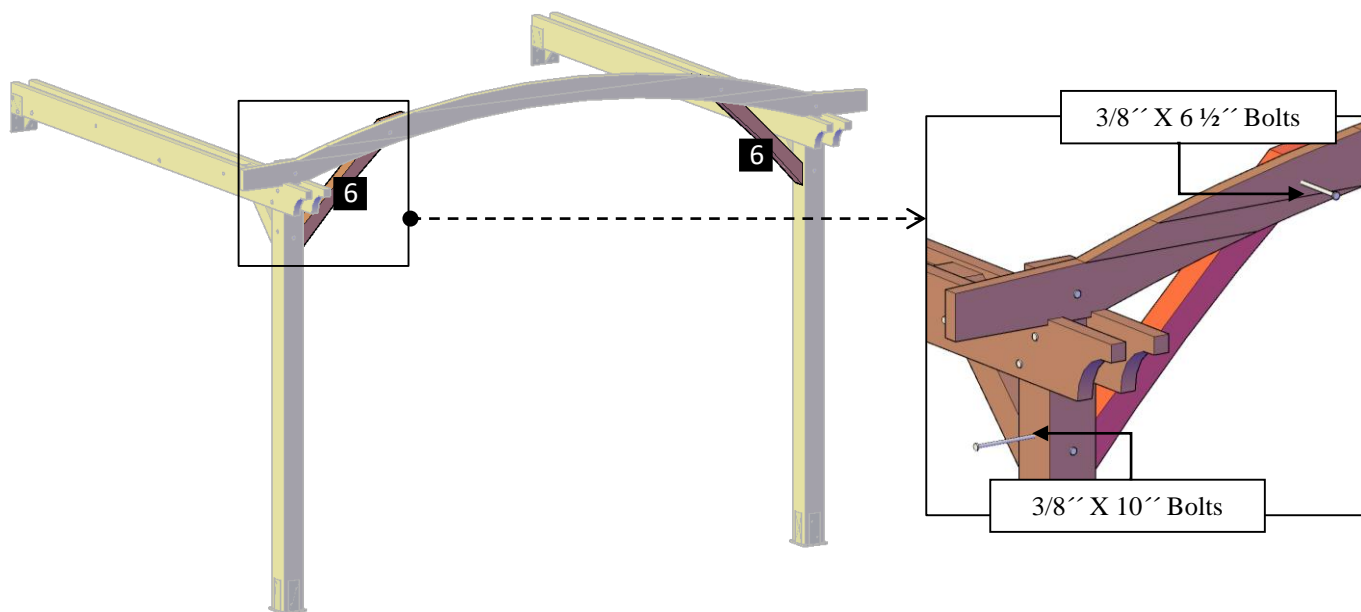


Step 10: Use 3" deck screws () to attach the rest of triangles (4) or arched rafters (4) to the supports. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

Del Norte Type:

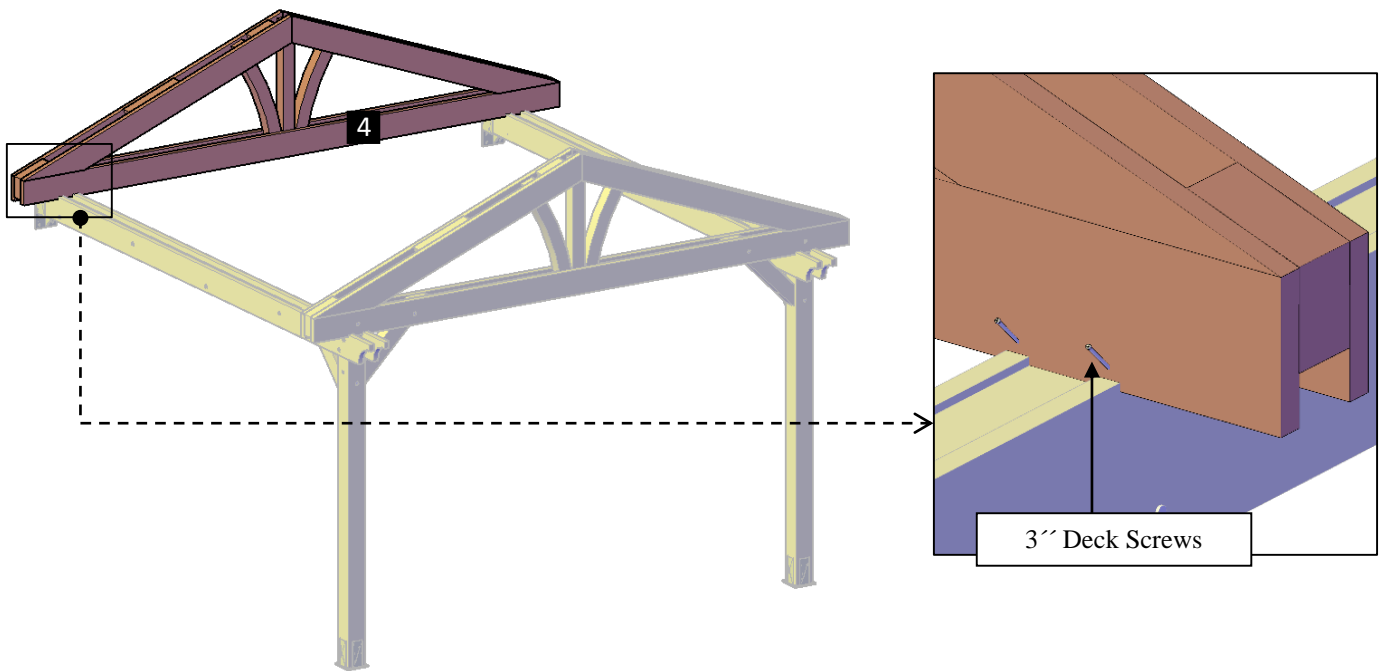


Backyard Type:

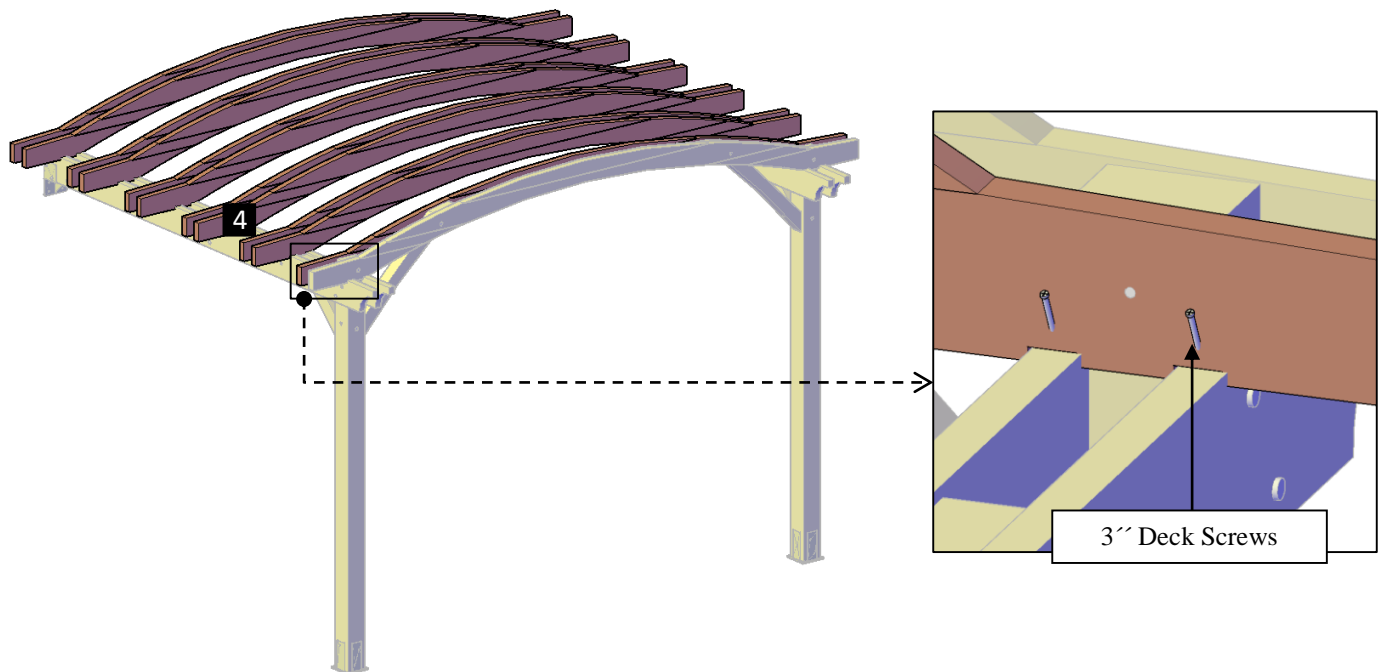


Backyard Type:

Step 11: Use 1 5/8" deck screws (**K**) to attach the roof boards (**7**) to the arched rafters. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

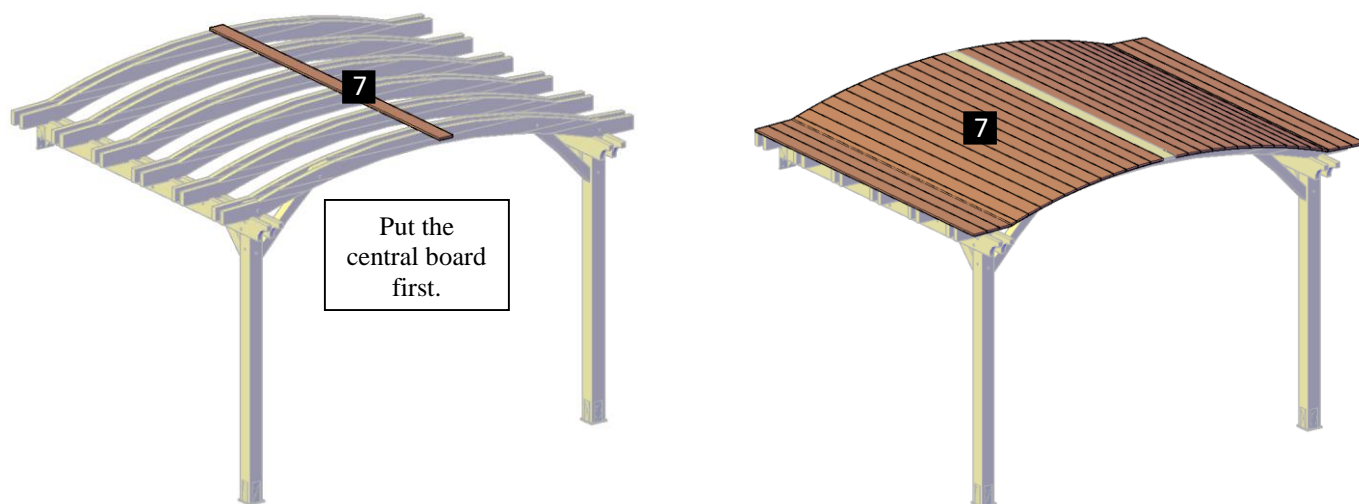


Del Norte Type:


Step 11: Use 3/8" x 8" bolts (**H**) to attach the perimeter roof panels (**7**) to the triangles. The roof panels will be attached together with 5/16" x 3" bolts (**I**). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

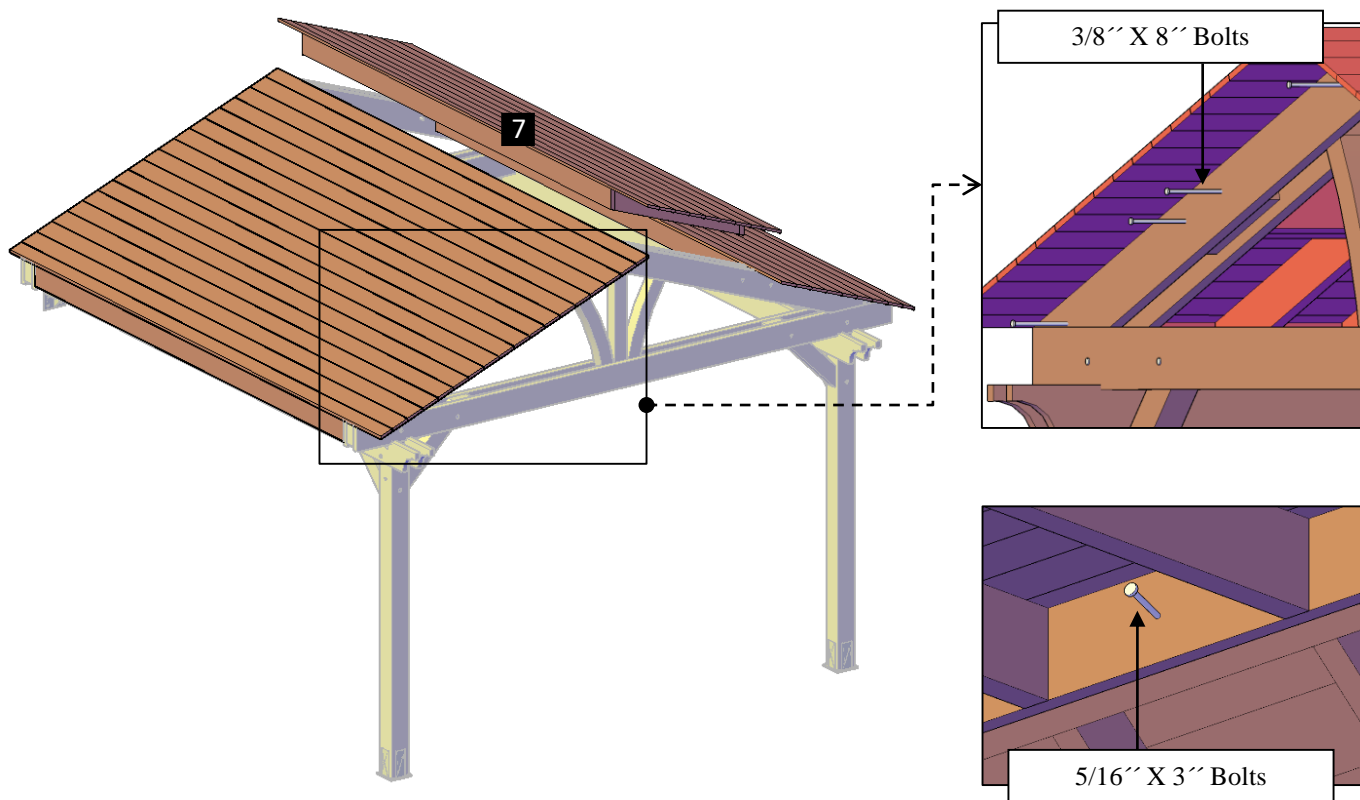

Step 12: Attach the roof panels (7) to the triangles with 2 1/4" deck screws (F).

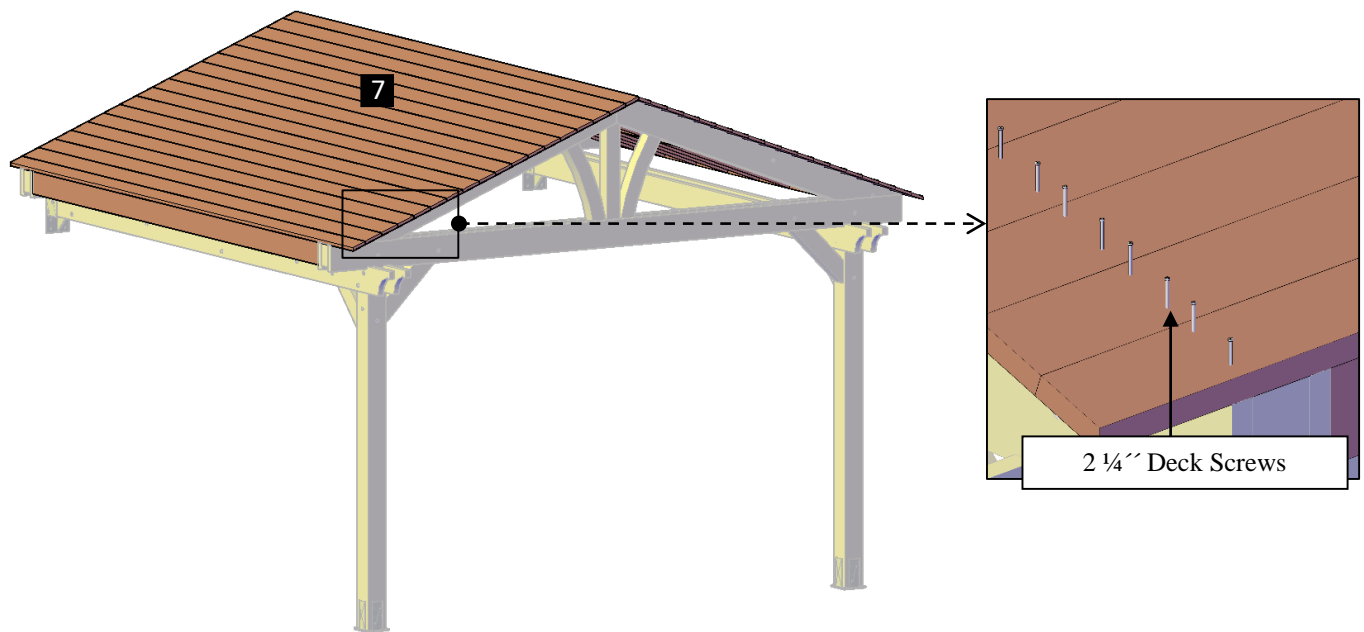


Step 13: Attach the roof fascia's (8) to the roof panels with 2 1/4" deck screws (F). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

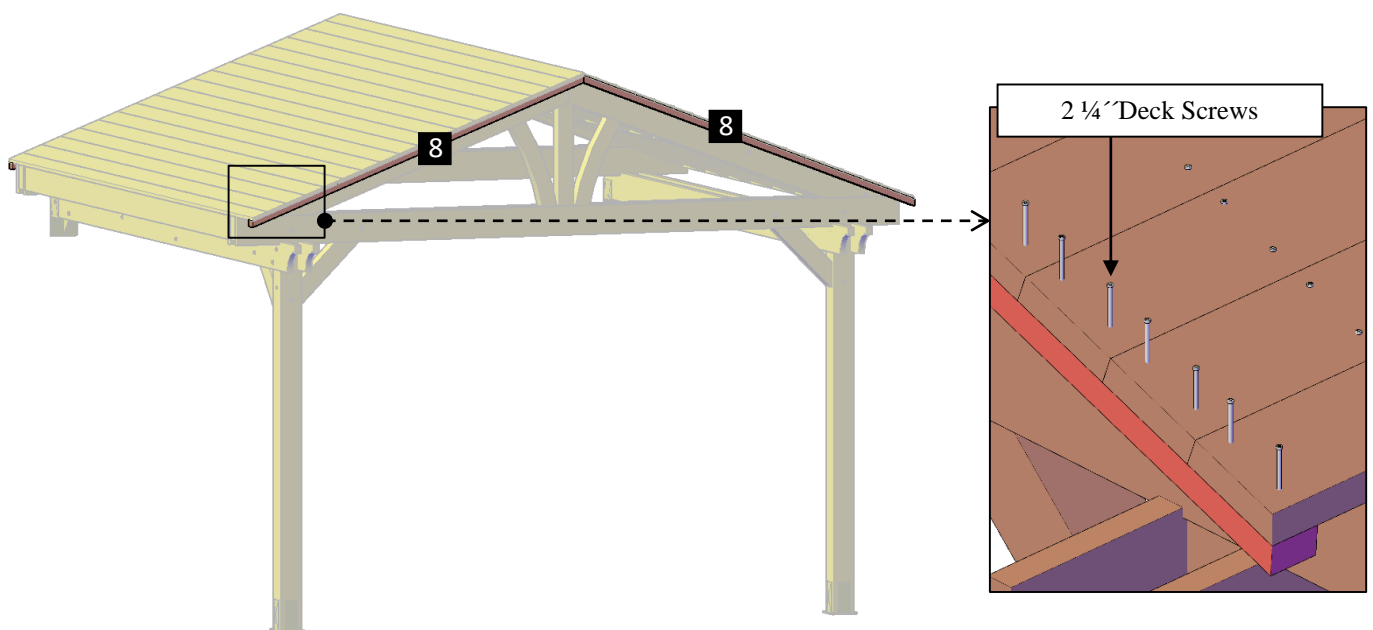


Step 14: Finally, attach the boots (8 or 9) to each post with 3'' deck screws (J).


Del Norte Type:

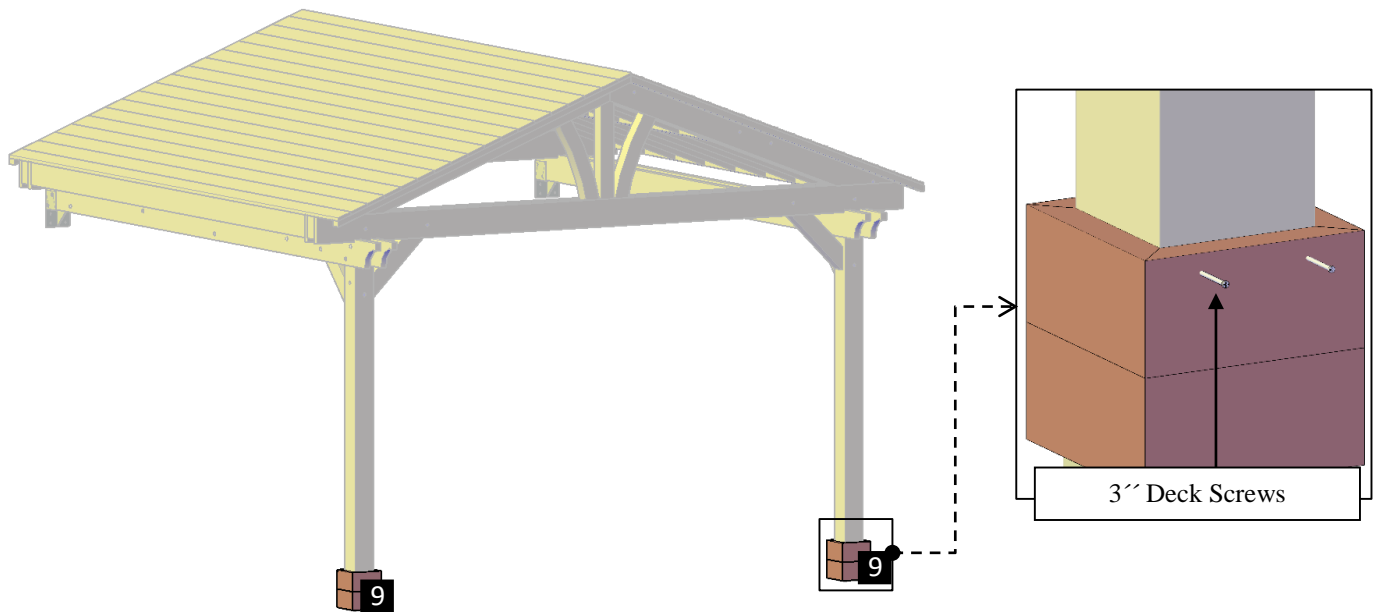

Backyard Type:

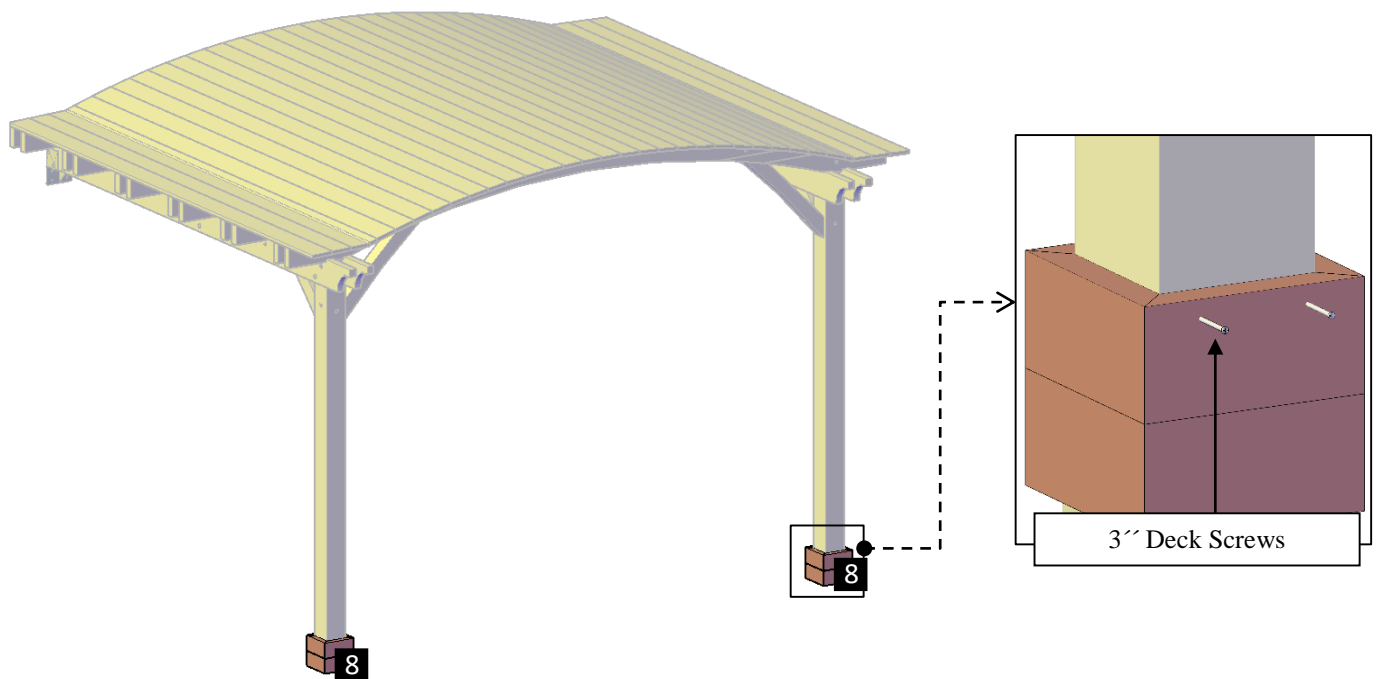

Del Norte Type:

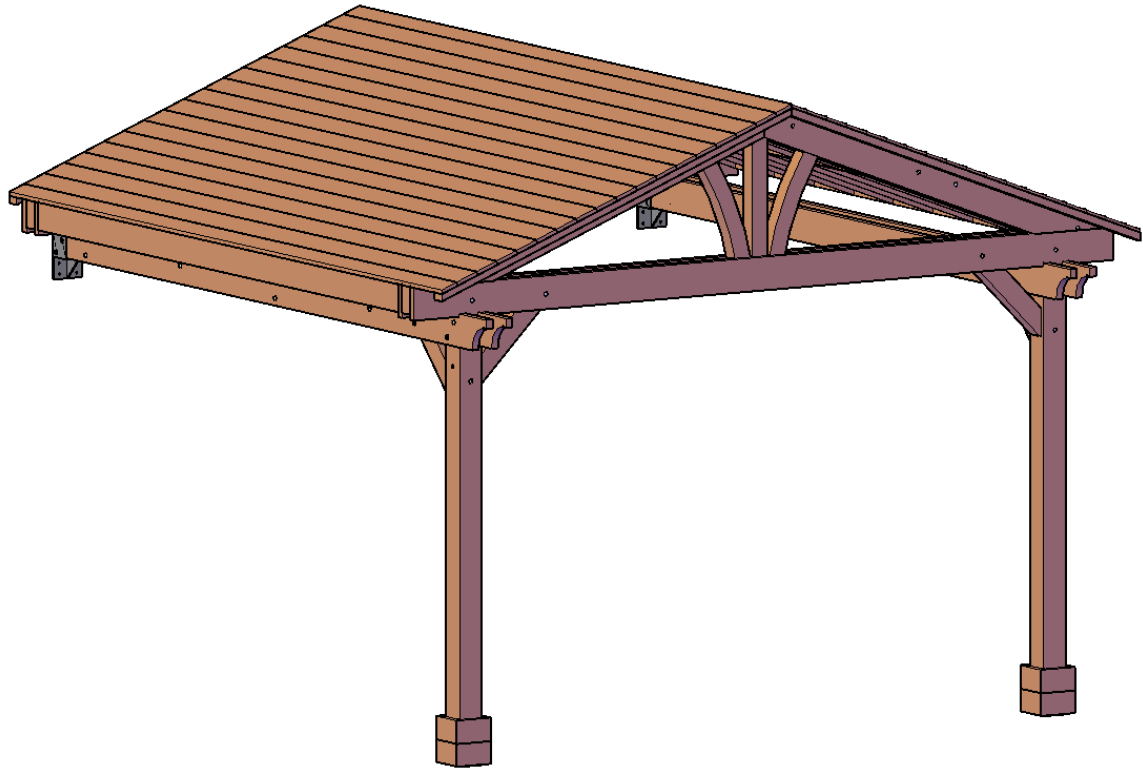

Backyard Type:





This completes the Pavilion assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.