


866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE BACKLESS WOOD BAR STOOL



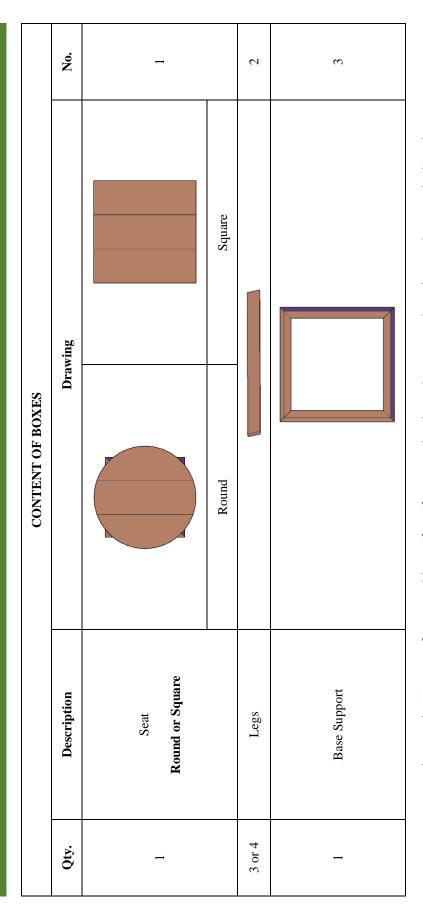


Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.


	HARDWARE LIST	
Description	Drawing	No.
5/16" X 3 1/2" Bolts (To attach the legs to the seat).		Ą
5/16" X 3" Bolts (To attach the legs).		В

Note: Dimensions of your hardware will vary depending on size.


$ m N_0$	1	7	3
DESCRIPTION	Seat	Legs	Base Support

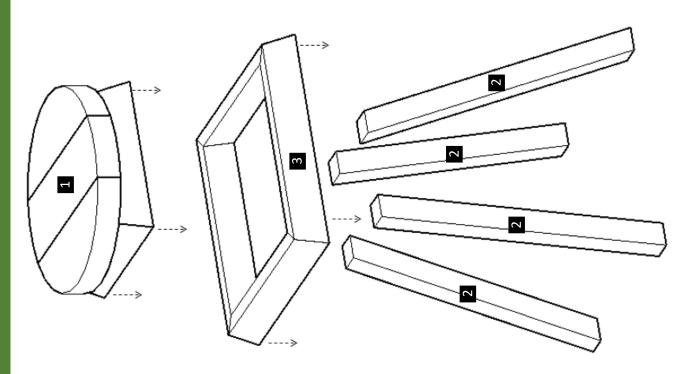

Step 1: Place the seat upside down. After that, use $5/16^{\prime\prime}$ x $3\frac{1}{2}^{\prime\prime}$ bolts (A) to attach the legs (2) to the seat (1). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

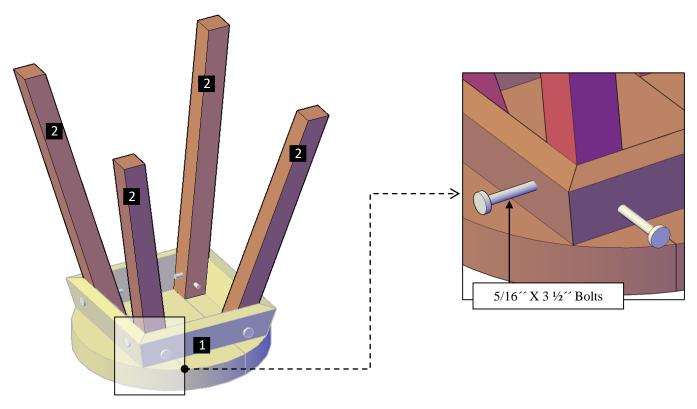

Step 2: Attach the base support (3) to the legs with $5/16^{"}$ x $3^{"}$ bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

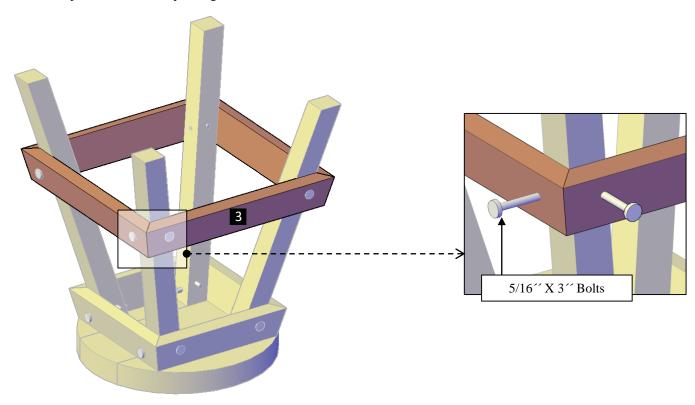

Step 3: Finally, turn the bar stool over its feet.



This completes the Bar Stool assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.