



FOREVER REDWOOD



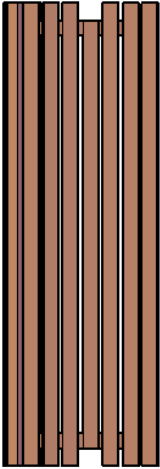
From the Forest, For the Forest since 1995

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE BENCH SWINS (SEATS ONLY)






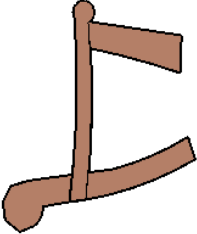



CONTENT OF BOXES				
Qty.	Description	Drawing	No.	
2	Armrest		1	
1	Seat		2	
1	Backrest		3	


Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.



HARDWARE LIST		
Description	Drawing	No.
5/16'' x 3 1/2'' Bolts (To attach the seat and the backrest to the armrest).		A
4'' x 3/8'' Eyebolts (To attach the backrest to the armrest).		B
Quick Links		C
Springs		D
Chains		E

Note: Dimensions of your hardware will vary depending on size.




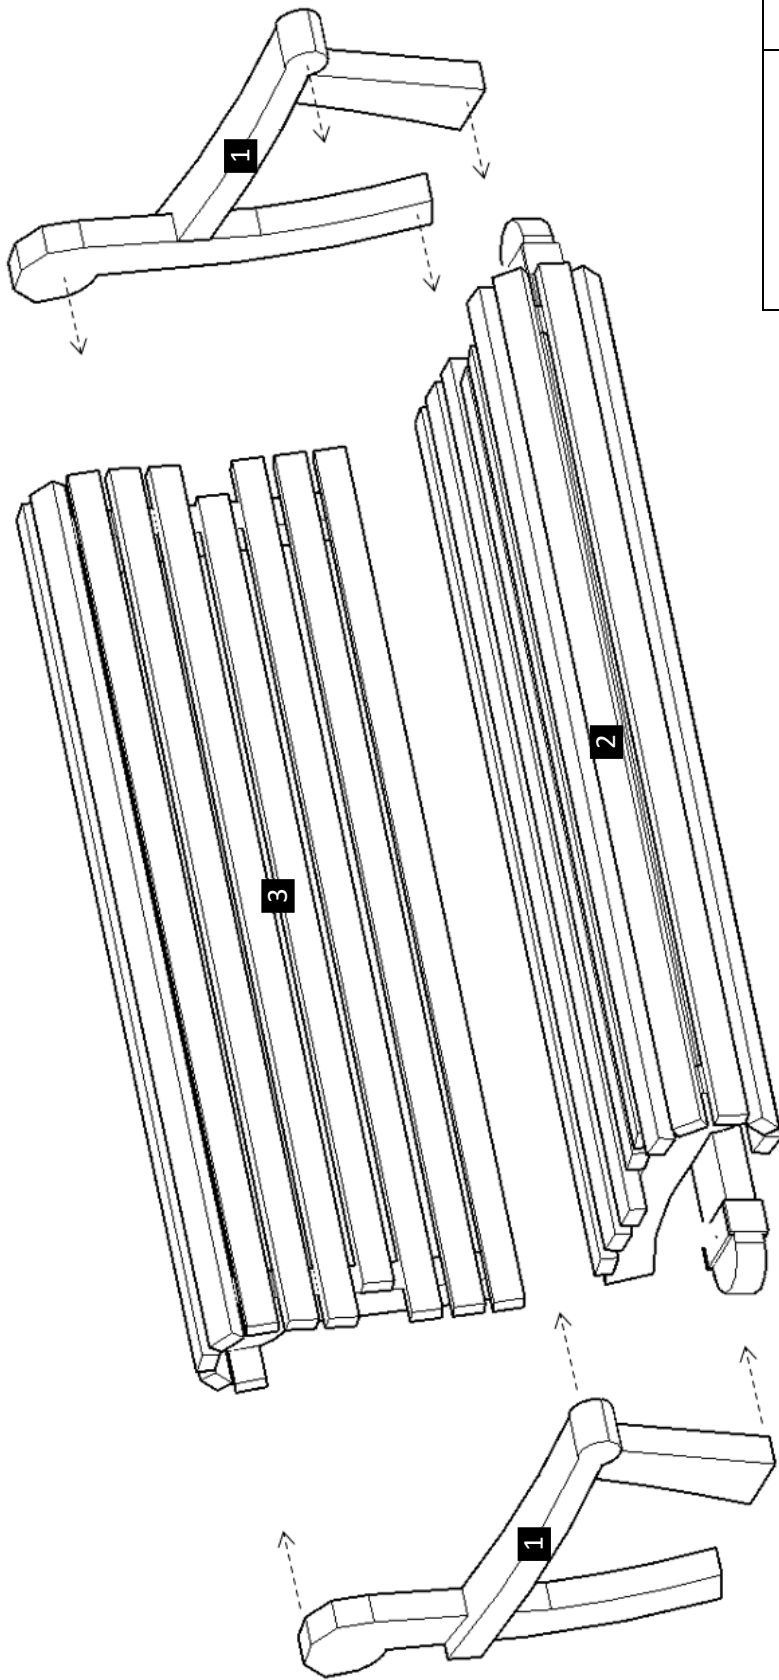


DESCRIPTION	No
Armrest	1
Seat	2
Backrest	3

Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.

Step 1: Attach the seat (2) to the armrests (1) with 5/16" x 3 1/2" bolts (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

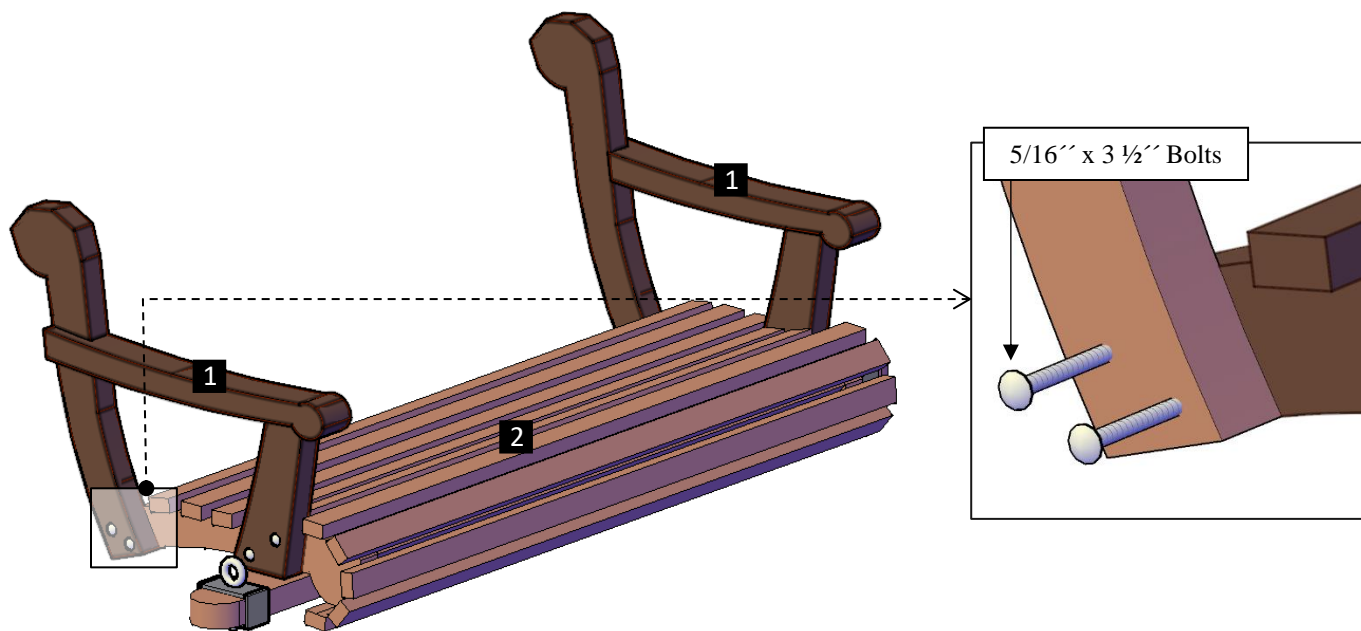

Step 2: Attach the backrest (3) to the armrests with 5/16" x 3 1/2" bolts (A) and 4" x 3/8" eyebolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

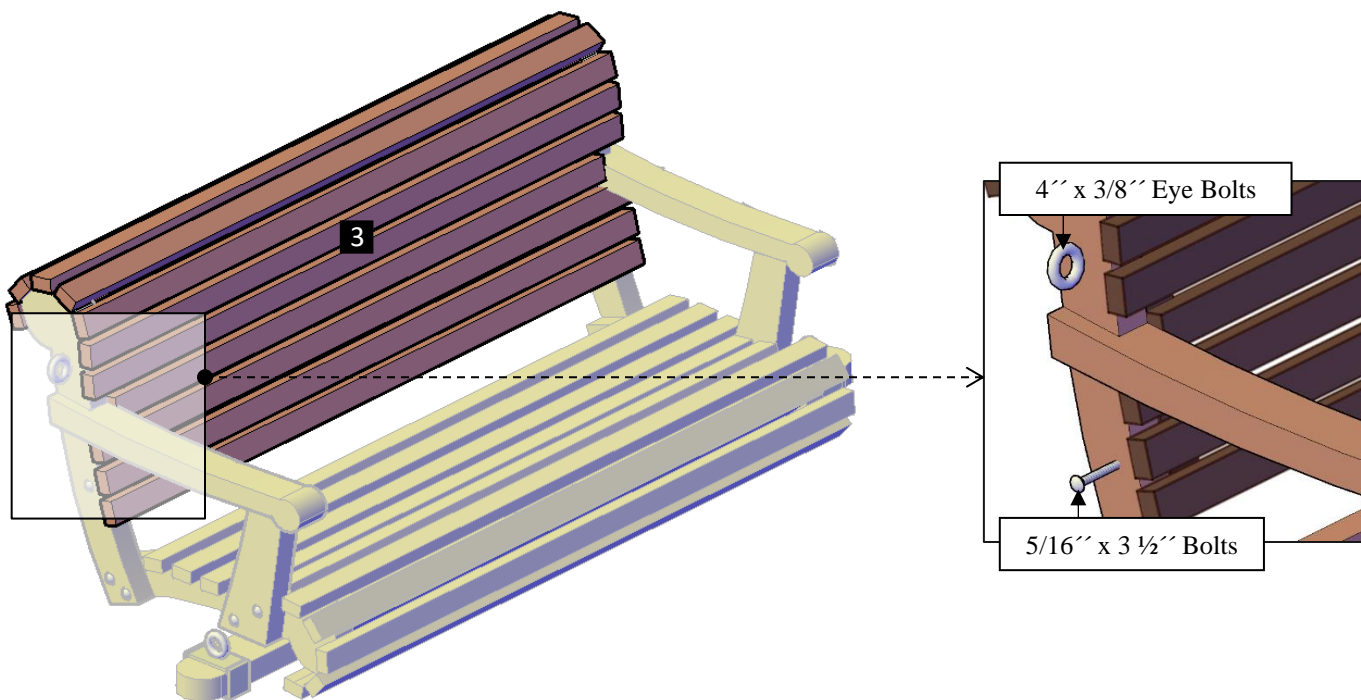

Step 3: Finally, put the quick links (C) and the springs (D) in the hanger support. After that put the chains (E). Take a few minutes to adjust the chain height to your preference.



This completes the Bench Swing assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.