

866.332.2403 (Toll Free); 8am-5pm Pacific Time, Monday-Friday

## Assembly instructions for: CAPTAIN'S REDWOOD BAR STOOLS



## **CONTENT OF BOXES**

QUANTITY	DESCRIPTION	DRAWING
1	Seat	
4	Legs	
1	Base	
4	3" x 5/16 Bolts	Bolts, washers and nuts
8	1 ¾" x 5/16 xBolts	Bolts, washers and nuts


## **ASSEMBLY INSTRUCTIONS**

Thank you for purchasing Forever Redwood patio furniture. Forever Redwood is built by Old Growth Again Restoration Forestry (OGA). OGA is dedicated to restoration forestry. Sales of patio furniture finance our restoration work in California redwood forestlands. Tools required: ½-inch ratchet and a mallet or small hammer.


Unpack your bench and make sure you have all the parts. The parts that go together have the same numbers written next to the predrilled holes they attach to. Align the parts with the numbers as shown for ease of reference.

**Step 1.** Attach leg to seat with 2 carriage bolts (1 ¾" x 5/16), washers and nuts. On the edges of the legs you'll find a number written next to a set of predrilled holes. Match this number to the number written next to the predrilled holes on the interior edge of the center member of the side of the stool. Tap in the carriage bolts from the outside edge into the holes to attach the legs. Tap the bolts in all the way, then insert the washer and nut and tighten with a ½- inch ratchet. The bolts should tap into their holes. If you have to force a bolt, the piece is probably on the wrong side or is turned around. Do not over tighten or you'll crush the redwood and weaken the stool structure.


Repeat this step to attach the other legs

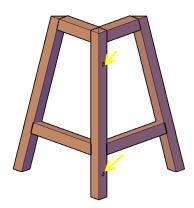

**Step 2.** : Attach base to legs with 4 carriage bolts (3"  $\times$  5/16), washers and nuts. On the edges of the base and legs you'll find a number written next to a set of predrilled holes. Match this number to the number written next to the pre-drilled holes on the interior edge of the center member of the stool.

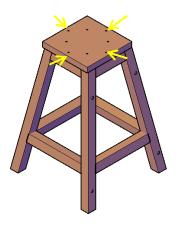

**Step 3.** : Attach the seat to the base with 4 carriage bolts (2  $\frac{1}{2}$ " x 1/4) (they bolts are attached to the seat base), washers and nuts. Tap the bolts in all the way, then insert the washer and nut and tighten with a  $\frac{1}{2}$ - inch ratchet.

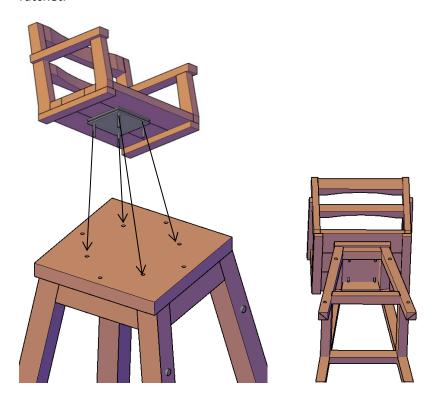

Thank you. If you have any questions, please call or email us.