



# FOREVER REDWOOD

*From the Forest, For the Forest since 1995*






---

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

## ASSEMBLY INSTRUCTIONS FOR THE **DON'S HEXAGONAL GAZEBO KIT**











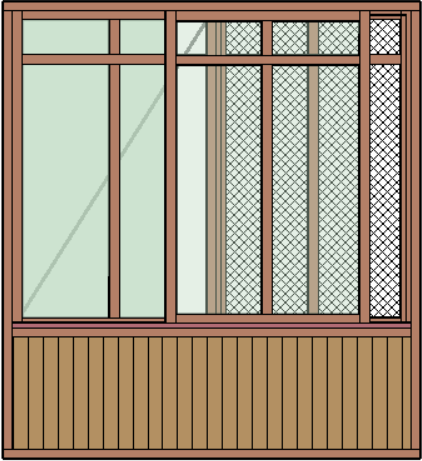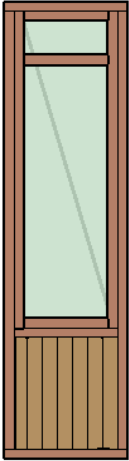CONTENT OF BOXES				
Qty.	Description	Drawing	No.	
6	Corner Wall Panels		1	
6	Wall Panels		2	
2	Front Wall Panels		3	
1	Door Frame		4	
1	Door Rail		5	

*Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.*






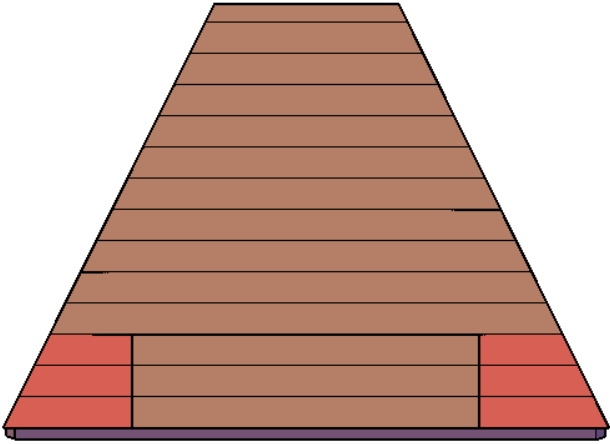




CONTENT OF BOXES				
Qty.	Description	Drawing	No.	
2	Door		6	
2	Door		7	
6	Supports		8	
6	Roof Panels		9	
1	Roof Frame		10	
1	Roof Windows		11	

*Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.*

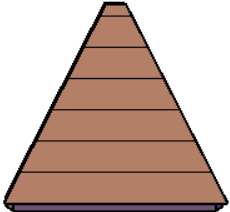










CONTENT OF BOXES			
Qty.	Description	Drawing	No.
6	Ridge Cap		12
1	Central Roof frame		13
Will Vary	Shingles		14
Will Vary	Corner Shingles		15
2	Doors Guide		16
6	Metal Plaques		17

*Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.*






HARDWARE LIST		
Description	Drawing	No.
3'' Deck screws (To attach the wall panels together. / To attach the door frame to the wall panels. / To attach the door rail to the door frame. / To attach the roof panels together).		A
5'' Deck screws (To attach the support to the wall panels. / To attach the second roof panels to the central roof frame).		B
5/16'' X 5 1/2'' Bolts (To attach the supports together).		C
5/16'' X 3'' Lag Bolts (To attach the metal plaques to the support).		D
5/16'' X 4 1/2'' Bolts (To attach the roof panel to the metal plaques).		E
5/16'' X 3 1/2'' Bolts (To attach the roof panels to the roof frame).		F
3 1/2'' Deck screws (To attach the roof windows to the roof frame. / To attach the second roof panels to the roof windows).		G

*Note: Dimensions of your hardware will vary depending on size.*



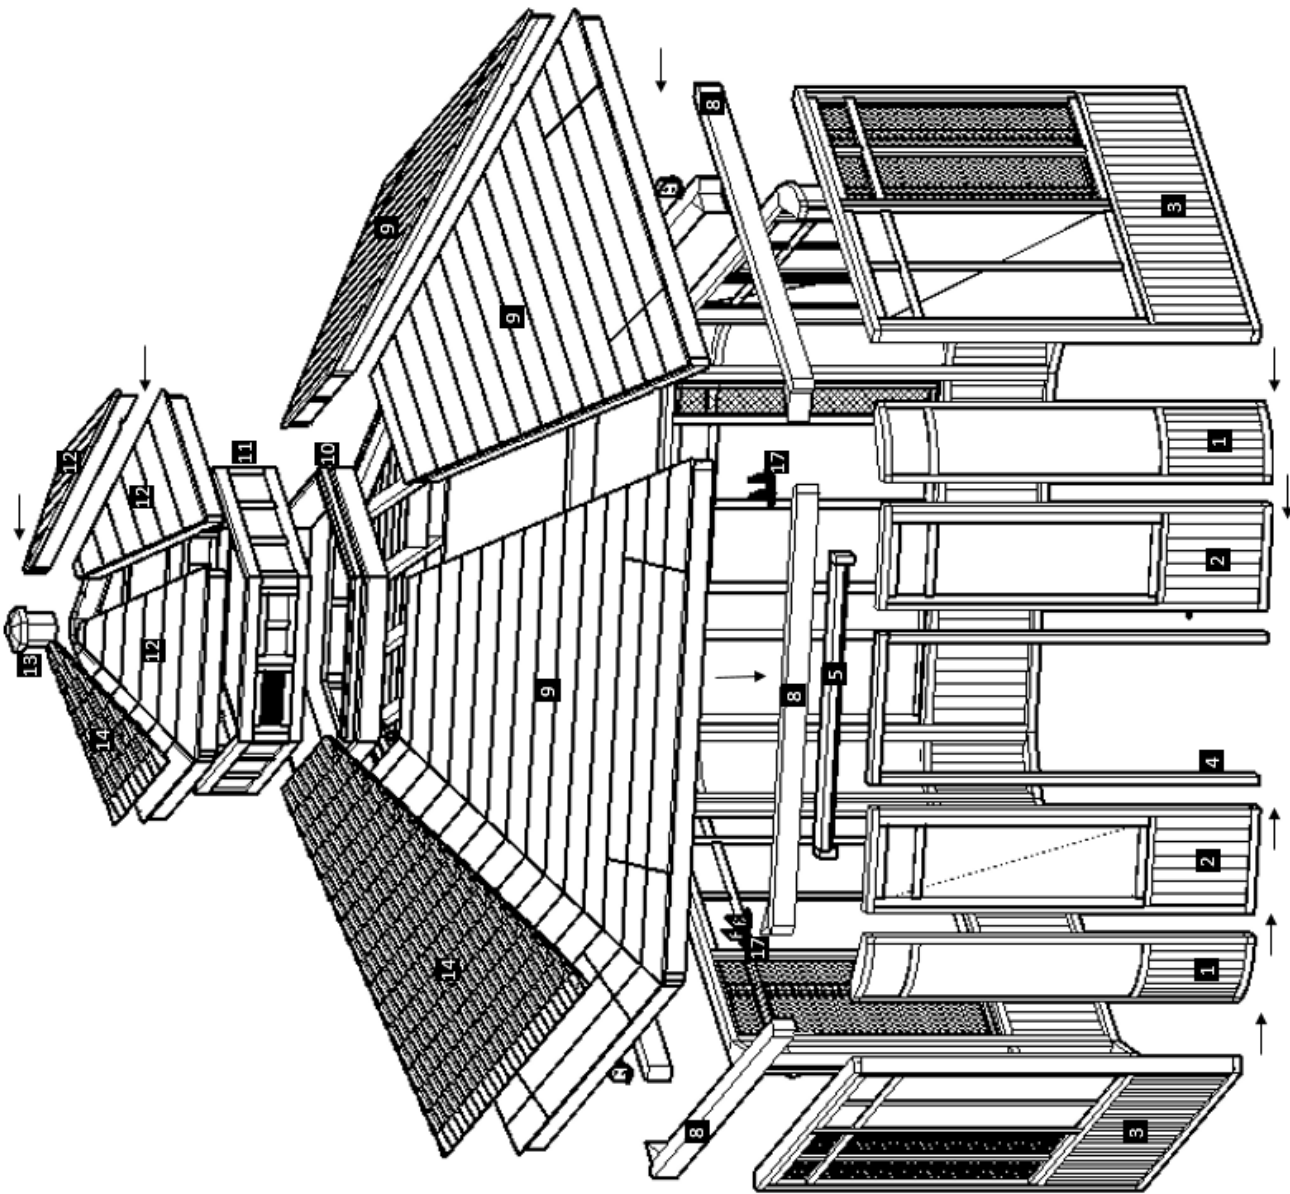


DESCRIPTION	No.
Corner Wall Panels	1
Wall Panels	2
Front Wall Panels	3
Door Frame	4
Door Rail	5
Door	6
Door	7
Supports	8
Roof Panels	9
Roof Frame	10
Roof Windows	11
Ridge Cap	12
Central Roof frame	13
Shingles	14
Corner Shingles	15
Doors Guide	16
Metal Plaques	17

*Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.*






**Step 1:** Place the corner wall panels. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

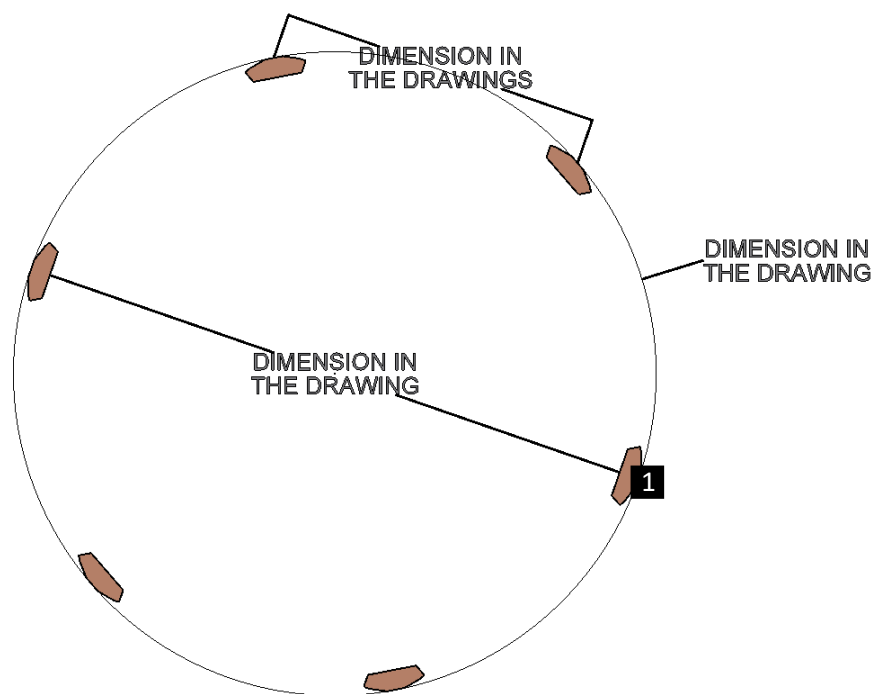


**Step 2:** Attach the wall panels (1,2,3) together with 3'' deck screws (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

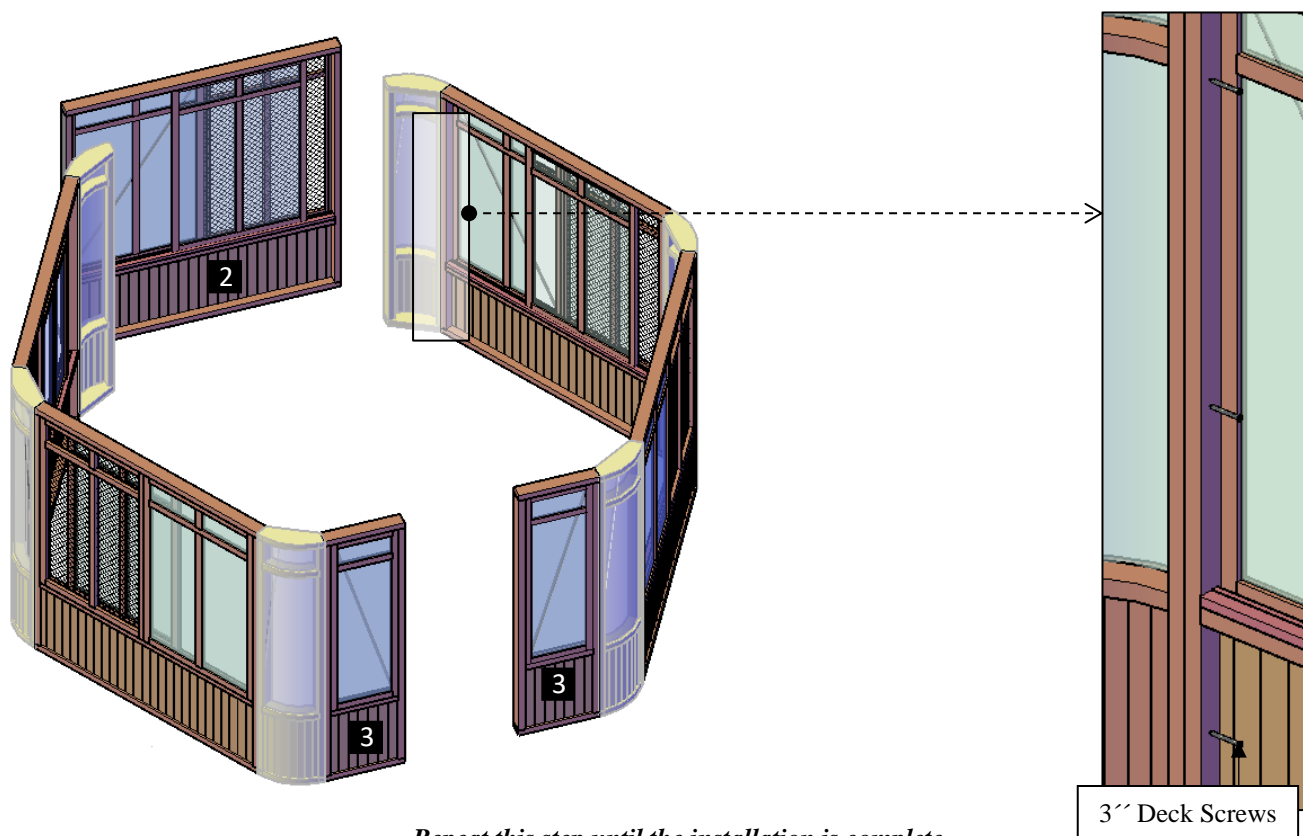


*Repeat this step until the installation is complete.*

**Step 3:** Attach the door frame (4) to the wall panels with 3" deck screws (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

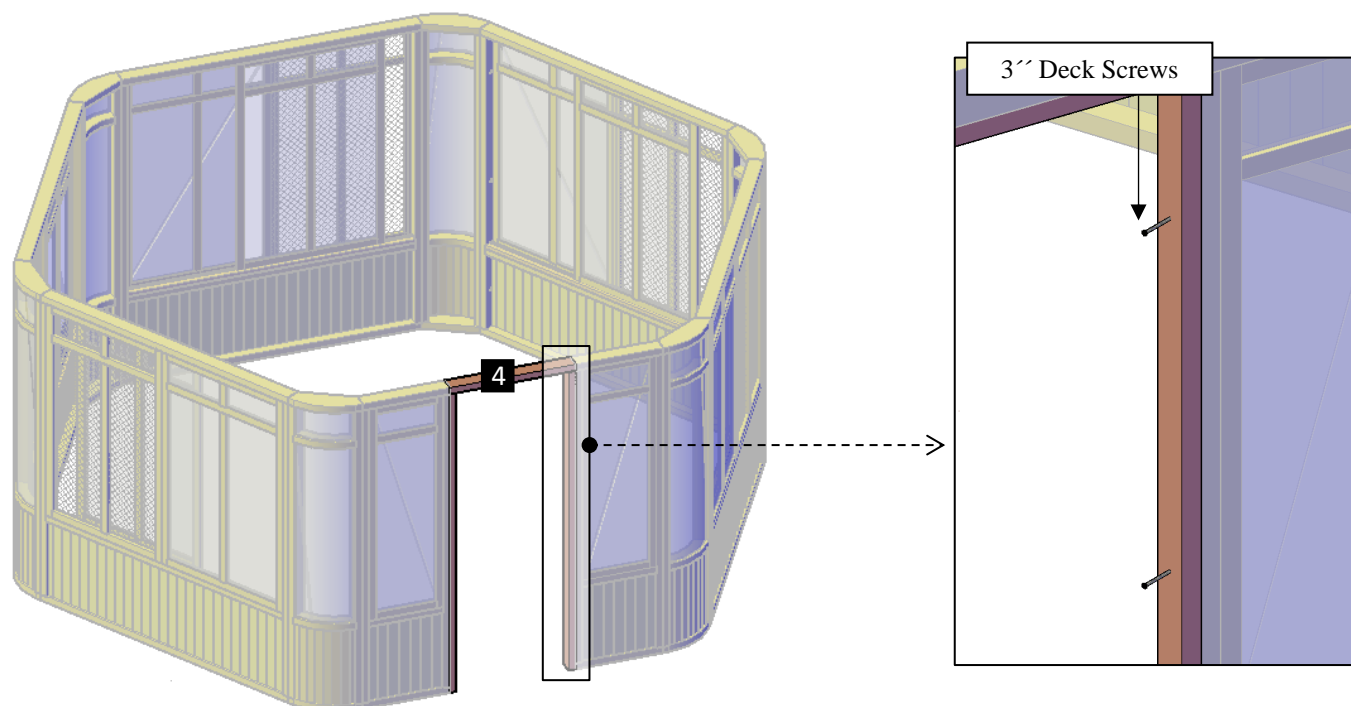


**Step 4:** Attach the supports (8) to the wall panels with 5" deck screws (B). The supports will be attached together with 5/16" x 5 1/2" Bolts (C). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

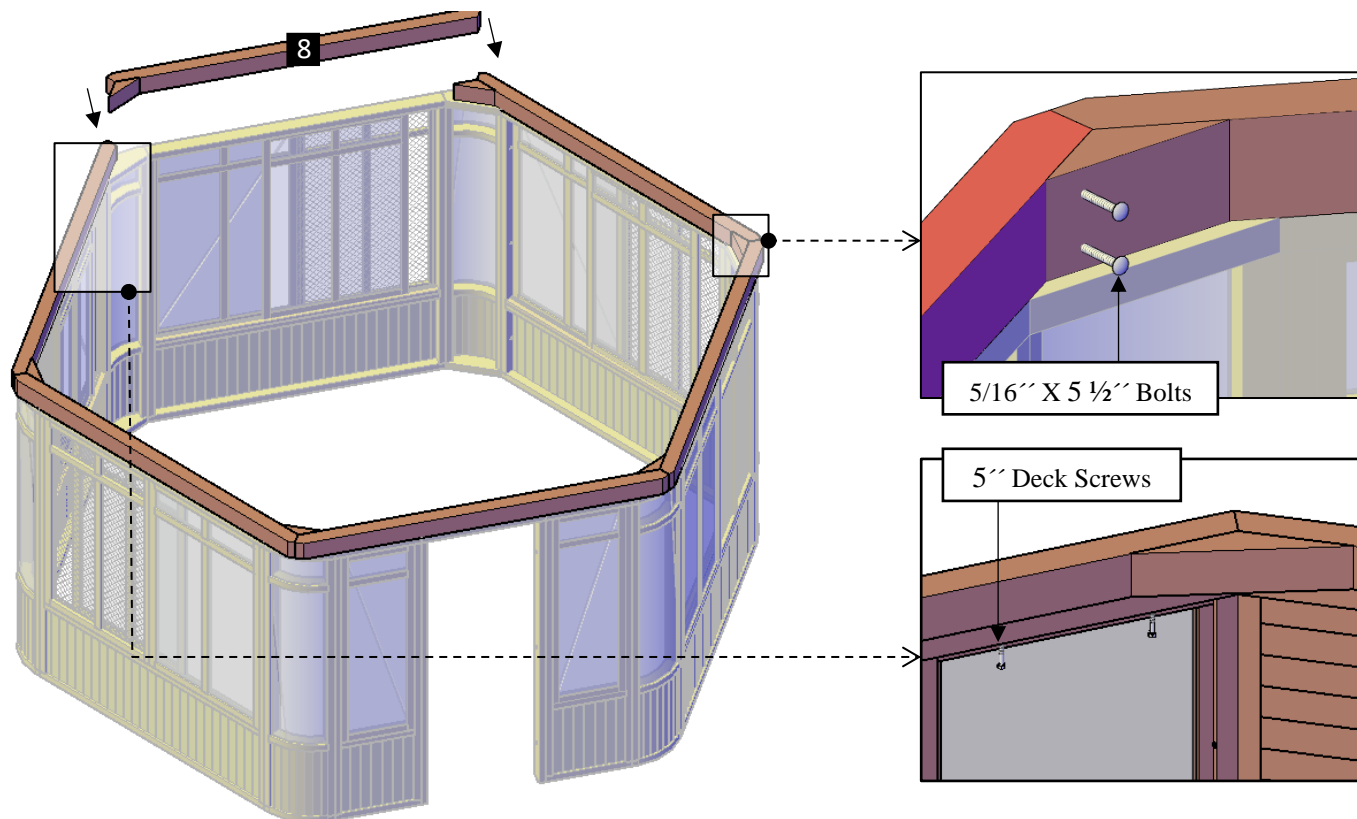





**Step 5:** Use 5/16" X 3" lag bolts (D) to attach the metal plaques (17) to the supports. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

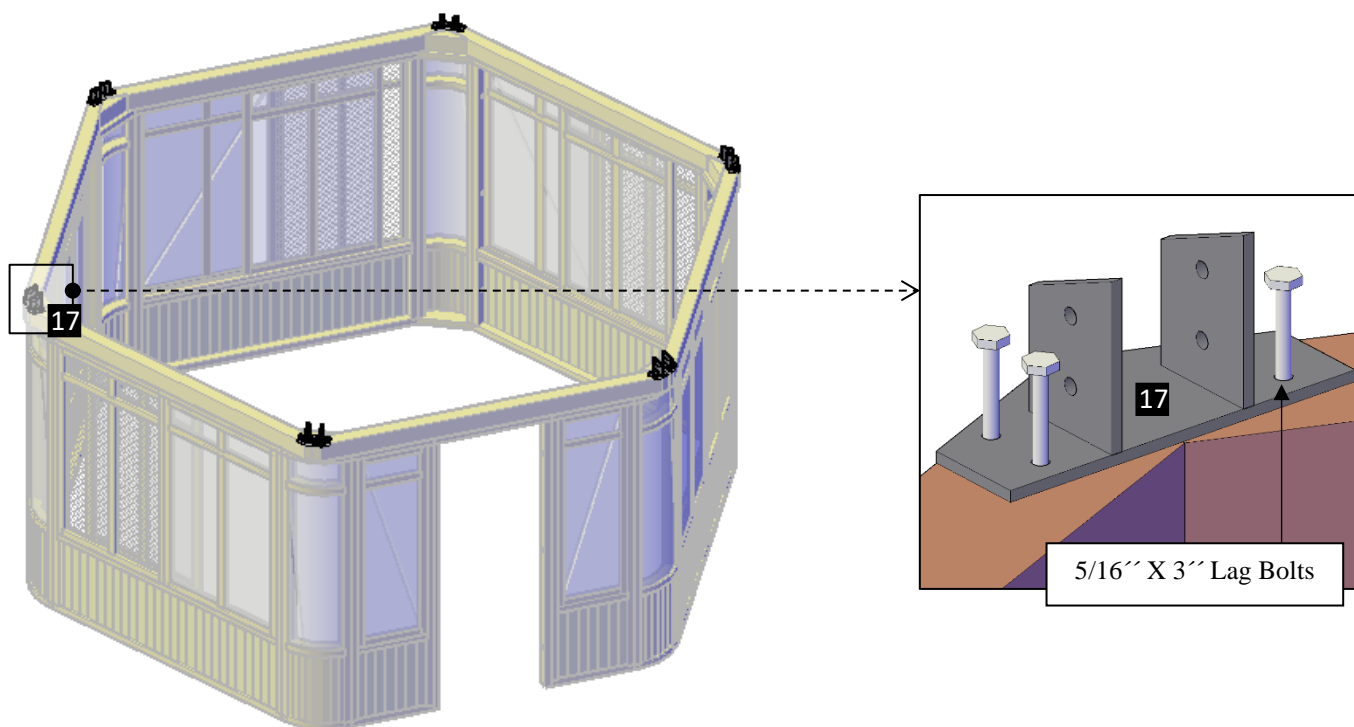


**Step 6:** Attach the door rail (5) to the support notches. After that use 3" deck screws (A) to attach the door rail (5) to the supports. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

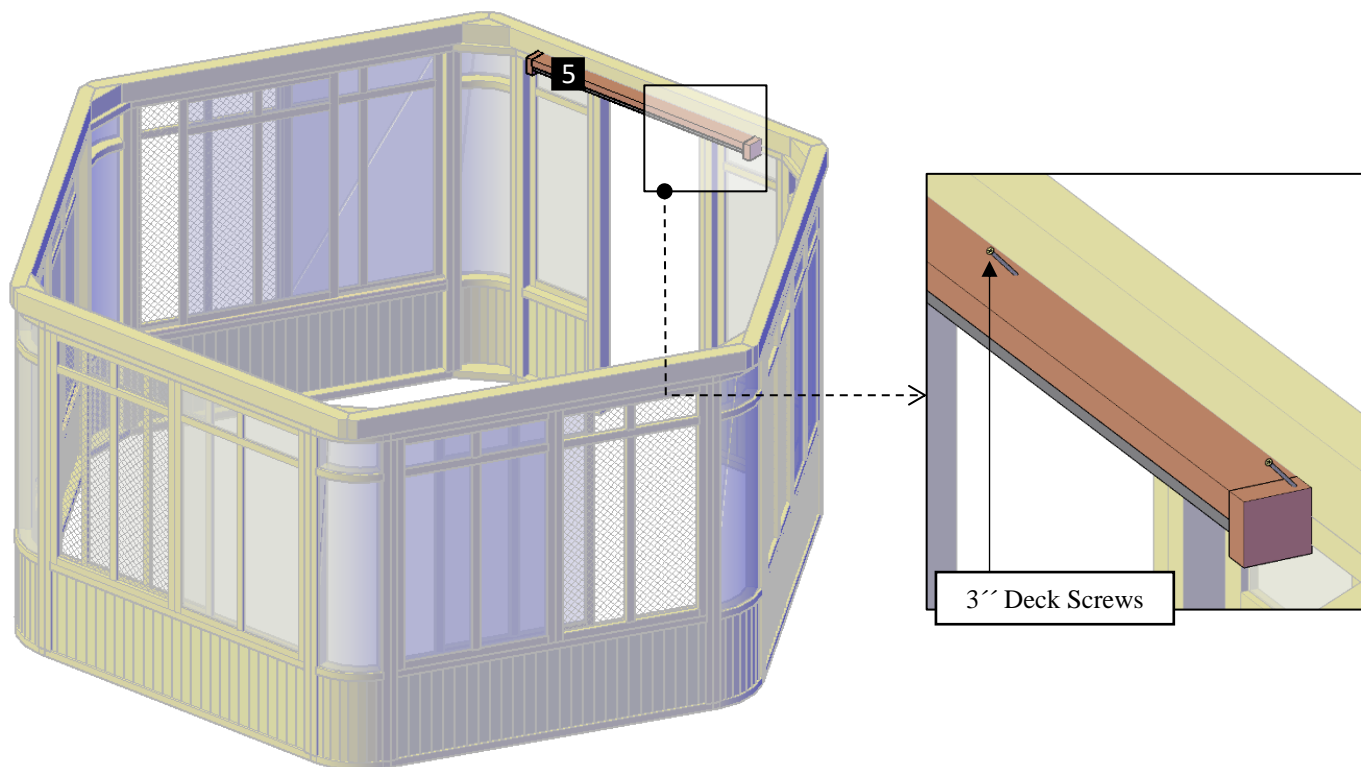

**Step 7:** Remove the lower tables from the roof panels (9), as shown below. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

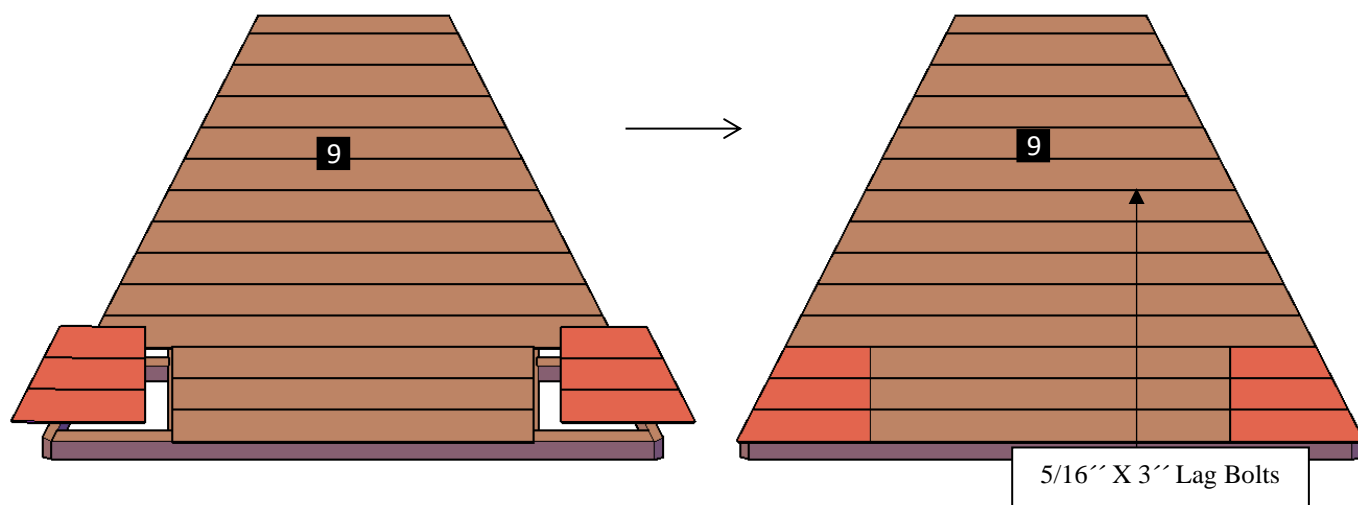


**Step 8:** First Attach four roof panels (9) to the metal plaques with 5/16" x 4 1/2" bolts (E). Then, attach the roof panels (9) to the roof frame (10) with 5/16" x 3 1/2" bolts (D). Finally, use 3" deck screws (B) to attach the roof panels together. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

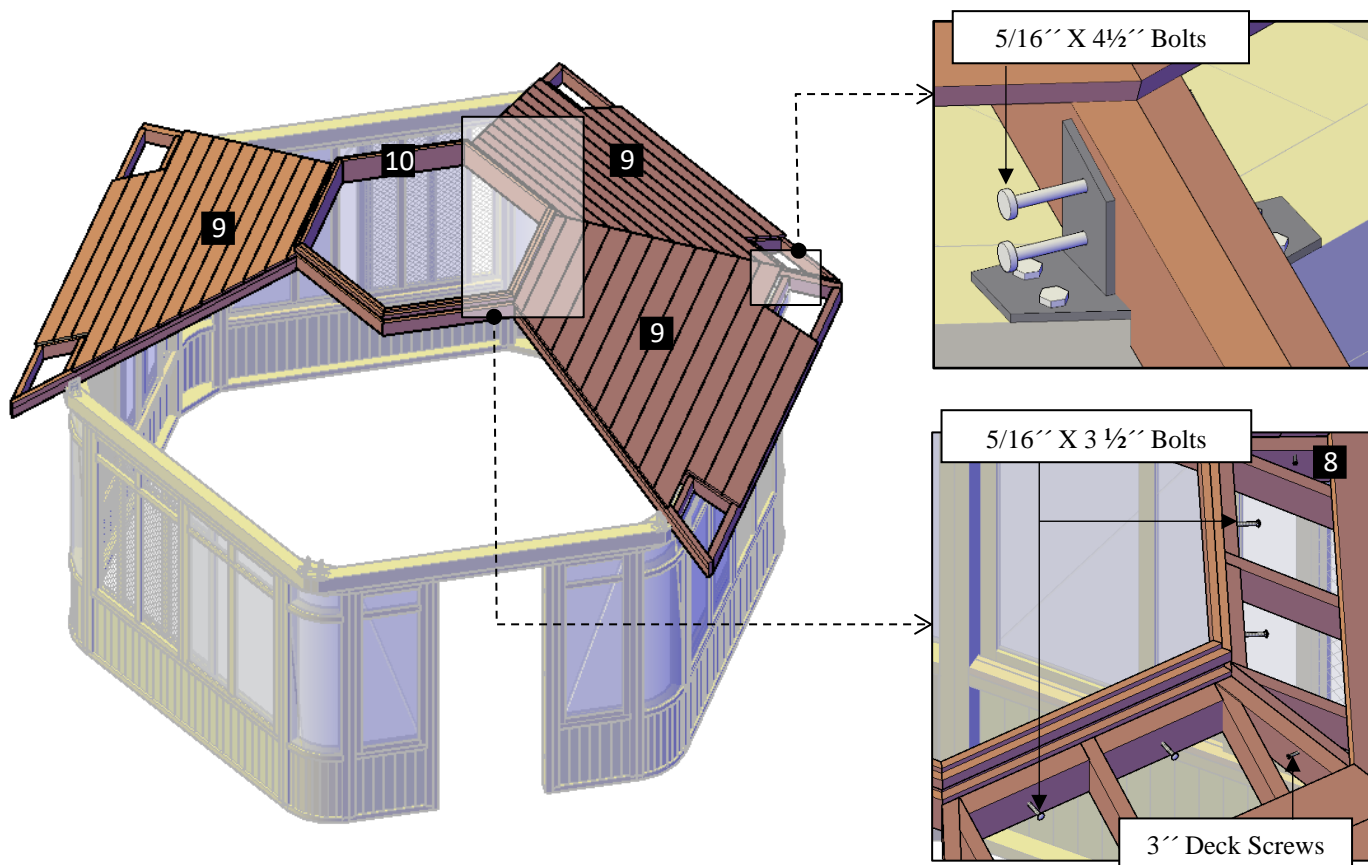


*Repeat this step until the installation is complete.*

**Step 9:** Place the roof windows (11) to the roof frame with 3 ½" deck screws (G). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

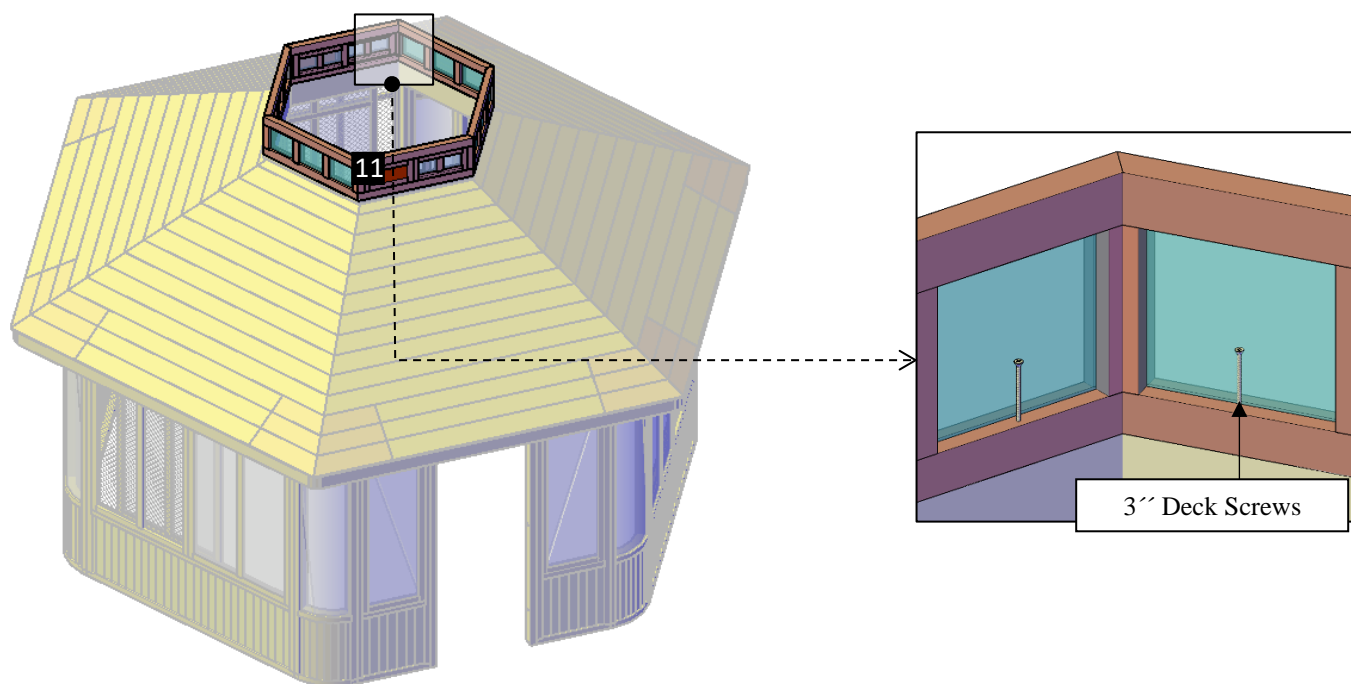


**Step 10:** Place the second roof panels (12) and attach to the central roof frame (13) with 5" deck screws (B). After that, use 3 ½" deck screws (G) to attach to the roof windows. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

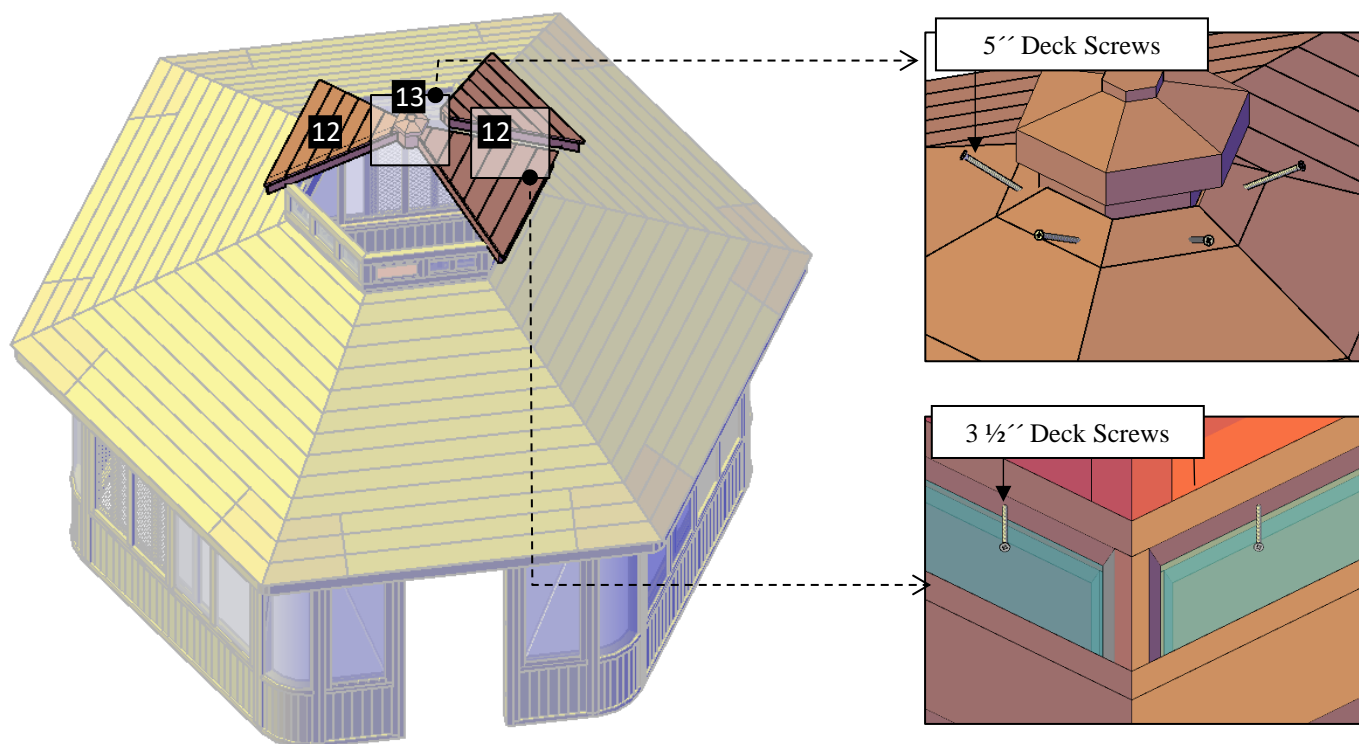



*Repeat this step until the installation is complete.*

**Step 11:** The second roof panels will be attached together with 3'' deck screws (**B**). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

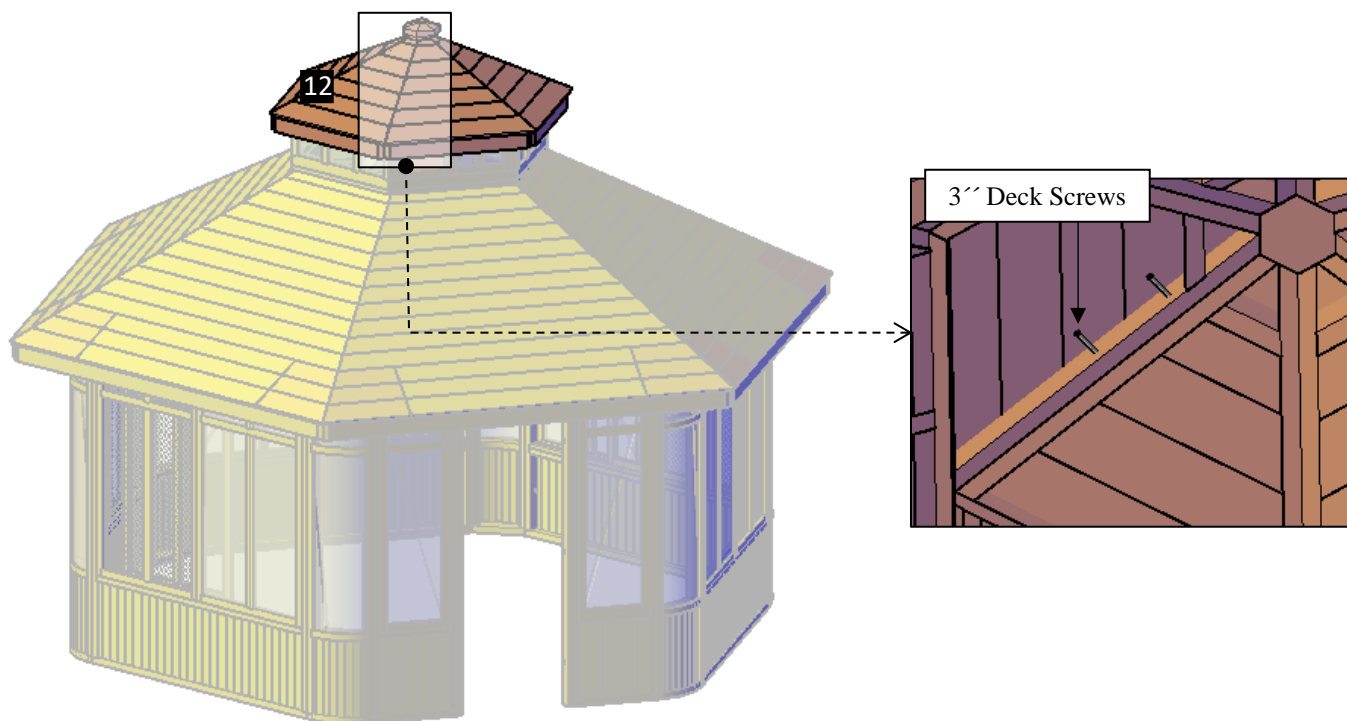


**Step 12:** Place the tables that were removed from the roof panels. After that, put Exterior Clear Silicone on the roof panels joints.

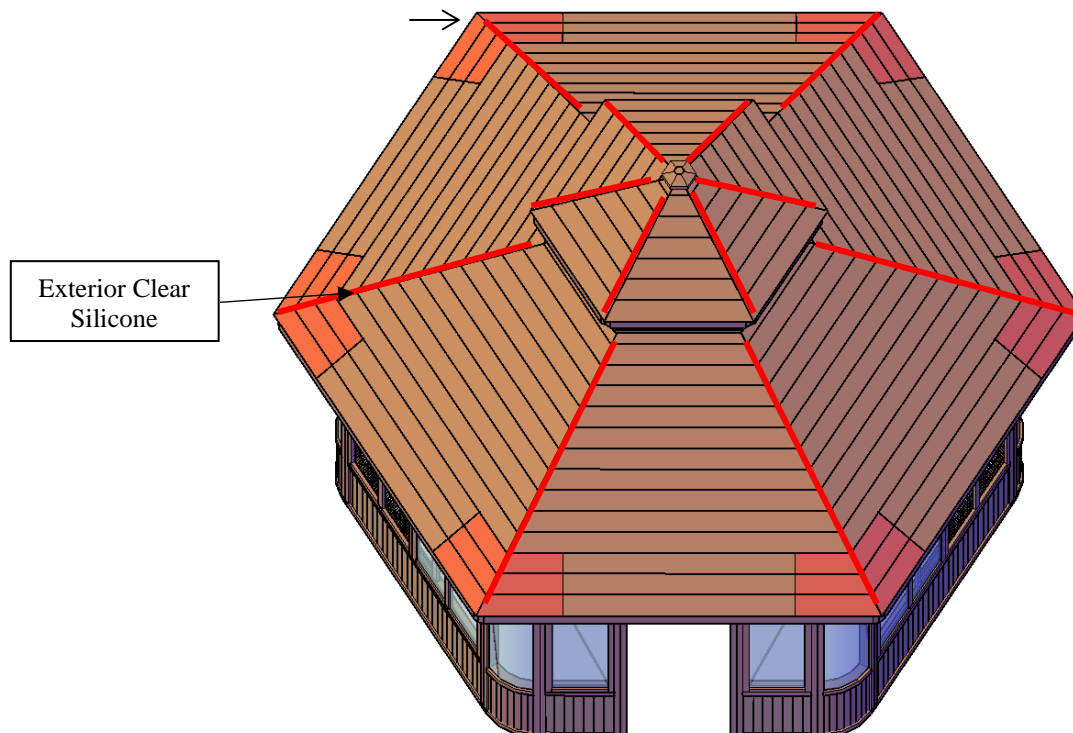

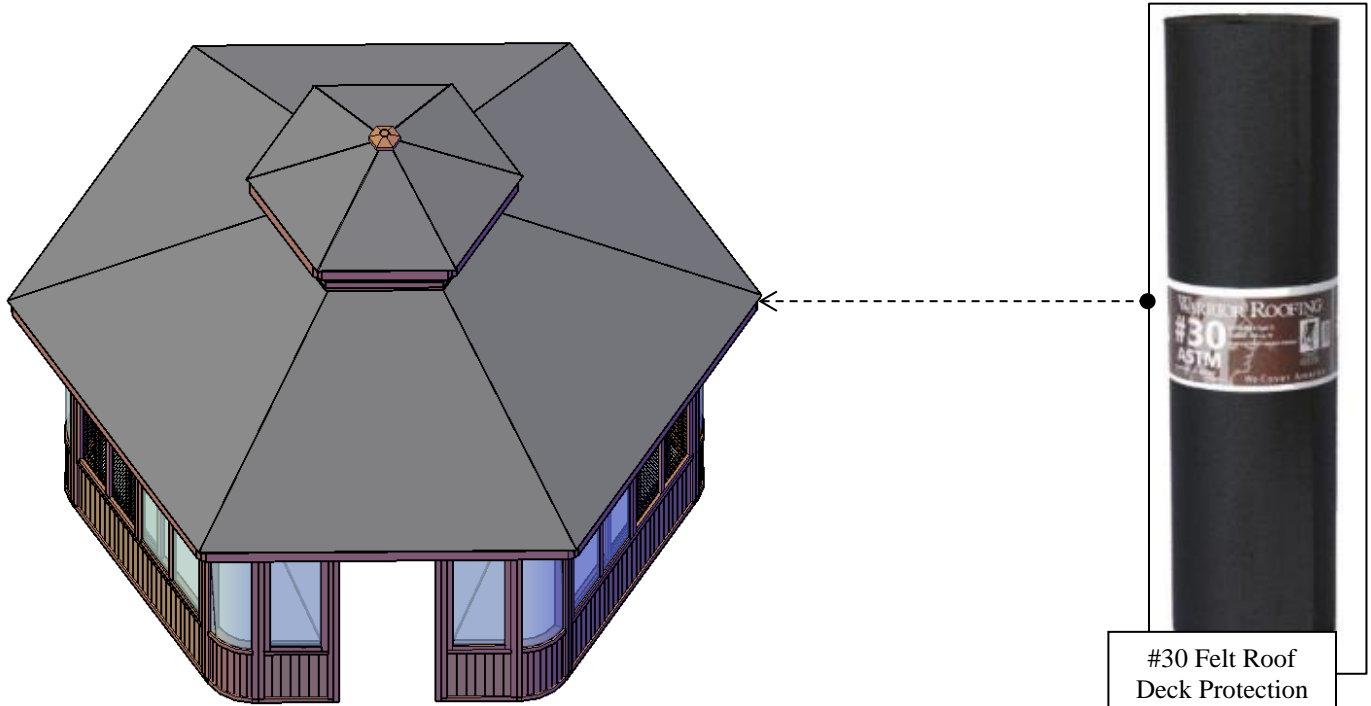


**Note:** The starter shingles are the shorts pieces.

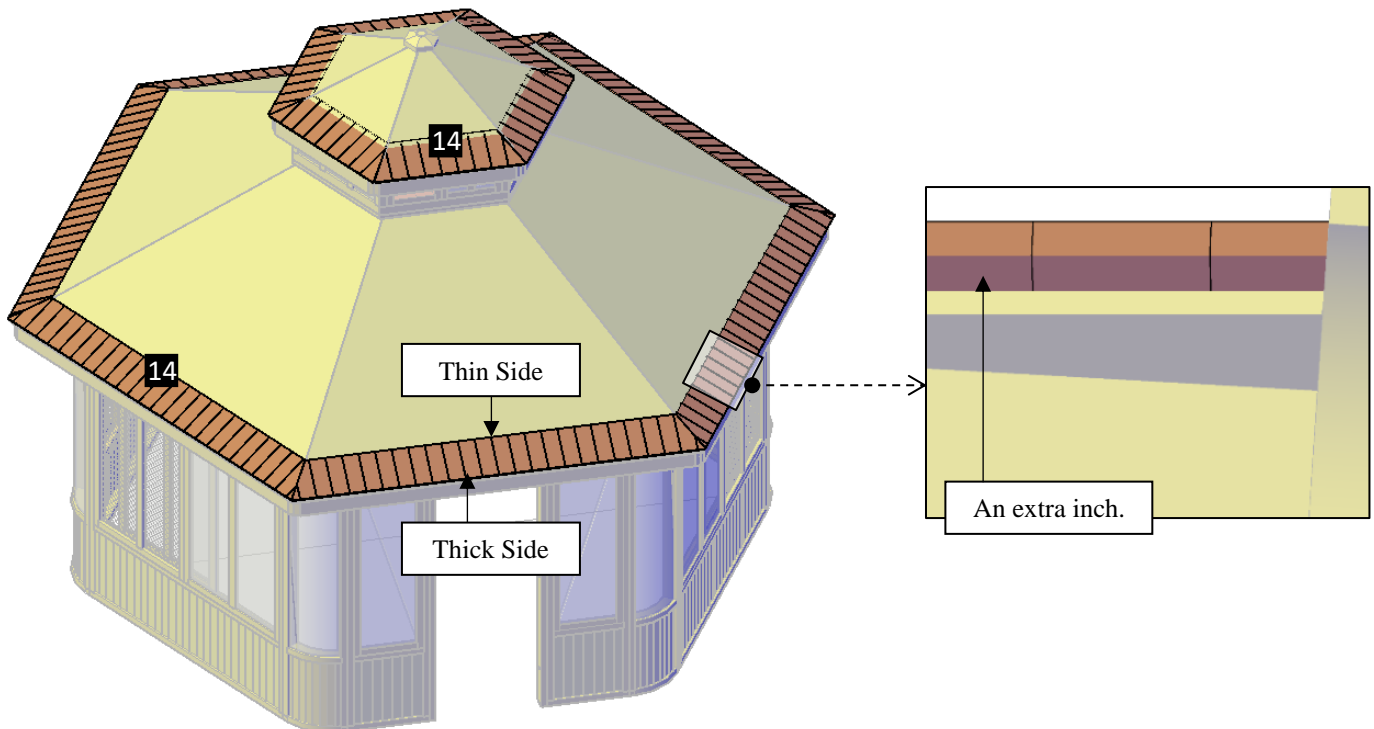




**Step 15:** Put the rest rows of shingles (14) from the bottom to the top and attach with 1 1/4" staples. The overlapping will be at the middle of the shingles. After that, put exterior clear silicone on joints.

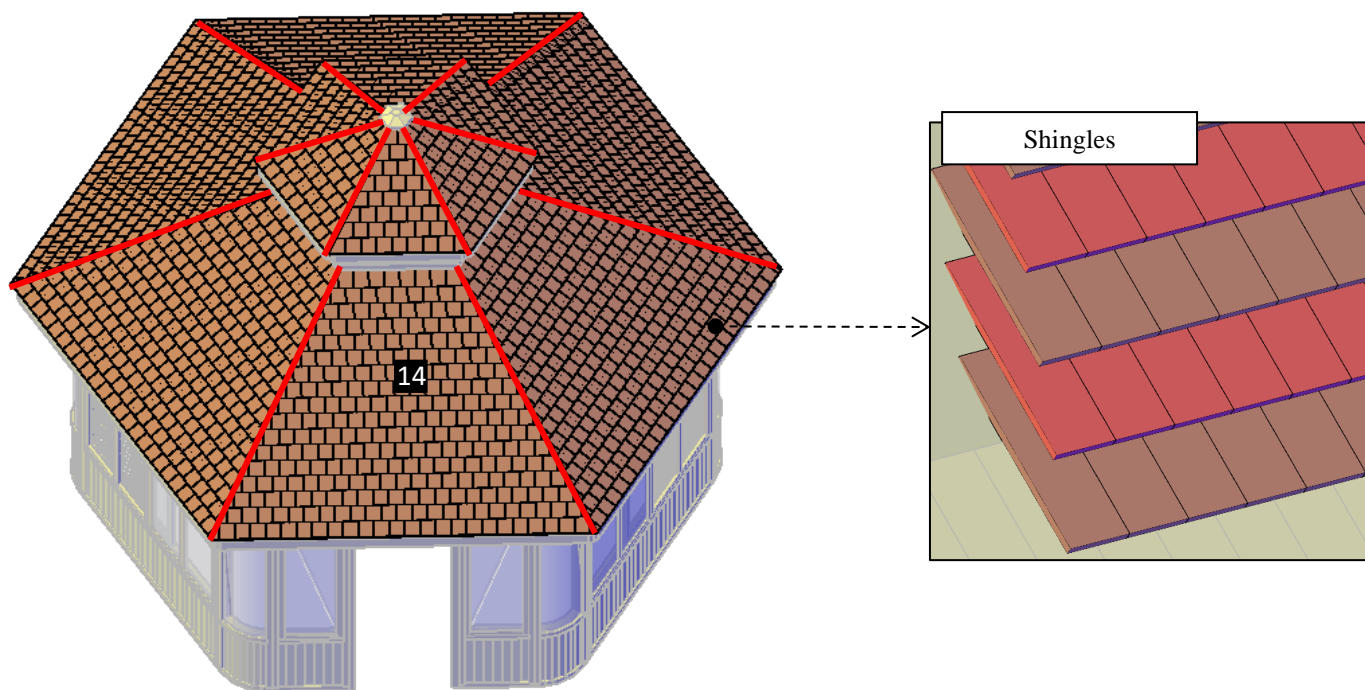

**Step 16:** Finally, use 1 1/4" staples to attach the cap shingles (15) and place the doors into the door rail. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

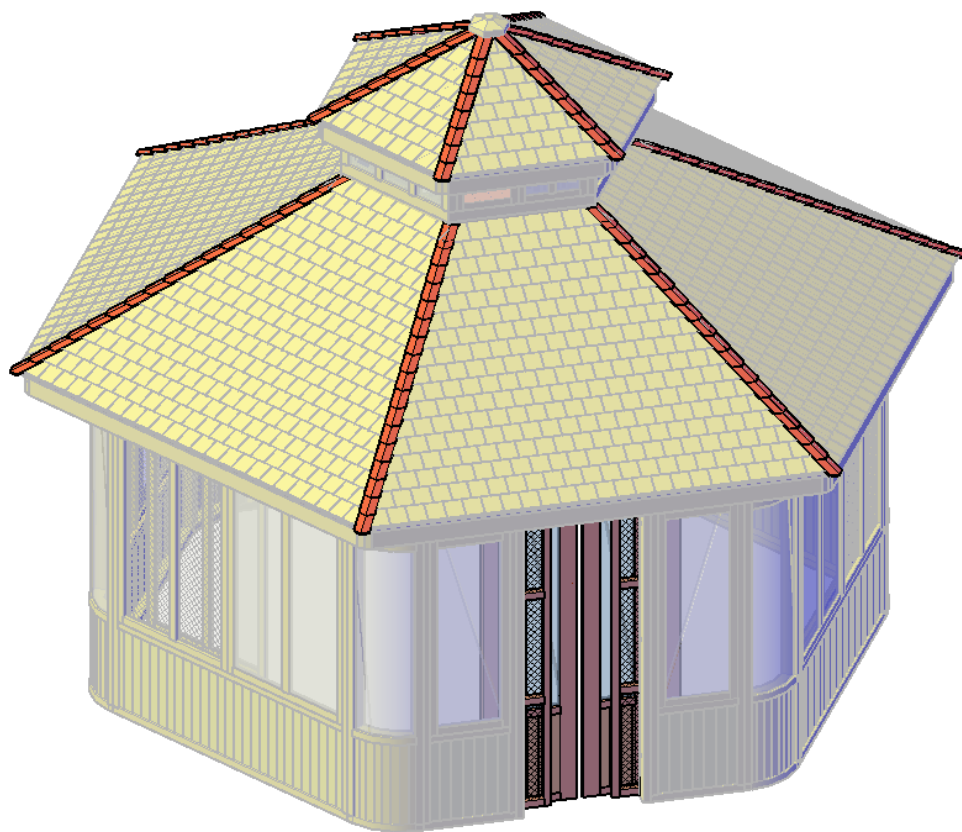





*This completes the Gazebo Assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.*