



FOREVER REDWOOD












From the Forest, For the Forest since 1995

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE FAN SHAPED PERGOLA KIT





CONTENT OF BOXES				
Qty.	Description	Drawing		No.
Will Vary	Posts			1
	Supports			2
	In-Between Blockings			3
	Rafters			4
	Main Knee Braces			5
	Secondary Knee Braces			6
	Slats			7
	Boots			8
	Standard, Gale Wind or Hurricane Anchors Bases. If ordered.		Standard	9
		 	Gale Wind Hurricane	


Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.



HARDWARE LIST		
Description	Drawing	No.
$\frac{1}{2}$ " X 3 $\frac{1}{2}$ " Anchor Bolts (To attach the anchor bases to the ground).		A
5/16" X 3" Lag Bolts (To attach the anchor bases to the posts).		B
3/8" X 9 $\frac{1}{2}$ " Bolts (To attach the supports to the posts. / To attach the in-between blockings and the main knee braces to the supports).		C
3/8" X 7 $\frac{1}{2}$ " Bolts (To attach the supports together. / To attach the perimeter rafters to the posts).		D
3/8" X 11" Bolts (To attach the main knee braces to the corner posts).		E
3/8" X 14" Bolts (To attach the main knee braces to the center posts).		F
3/8" X 10" Bolts (To attach the secondary knee braces to the posts).		G
3/8" X 5" Bolts (To attach the secondary knee braces to the rafters).		H
3" Deck Screws (To attach rafters to the supports. / To attach the slats to the rafters. / To attach the boots to the posts).		I
Washers		J
Nuts		K

Note: Dimensions of your hardware will vary depending on size.



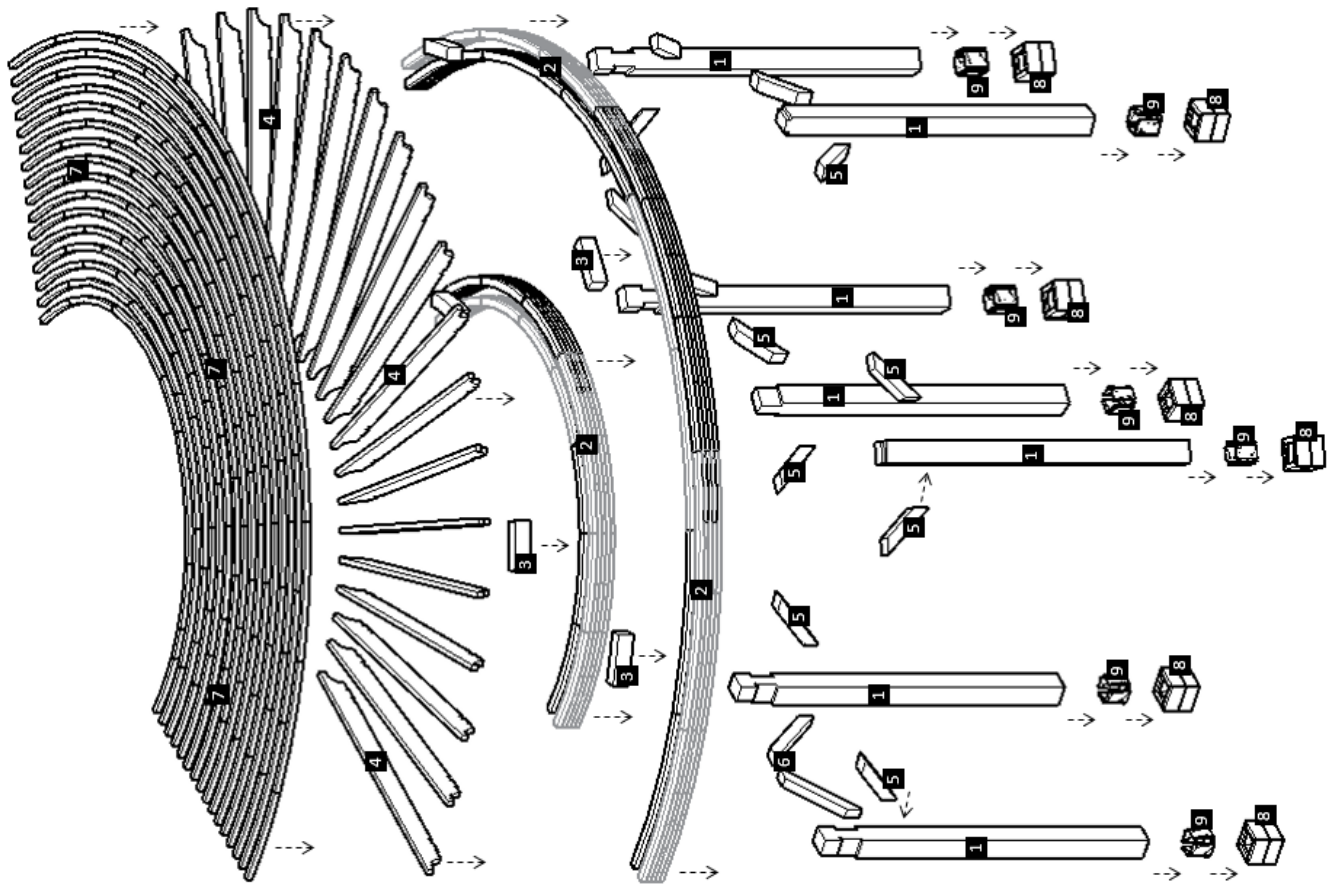


DESCRIPTION	No.
Posts	1
Supports	2
In-Between Blockings	3
Rafters	4
Main Knee Braces	5
Secondary Knee Braces	6
Slats	7
Boots	8
Anchor Bases	9


Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.

NOTE: In order to know where the post needs to be placed, check the numbers on them. If the post is not marked, then place the single Supports on the ground to locate the markings for each post position and clearly set your bearings. (“Don’t attach yet, only place them on the ground to begin with”).

Step 1: Install the anchor bases (9) with $\frac{1}{2}$ " X 3 $\frac{1}{2}$ " anchor bolts (A). Please see the “How to anchor your pergola document” for all details.

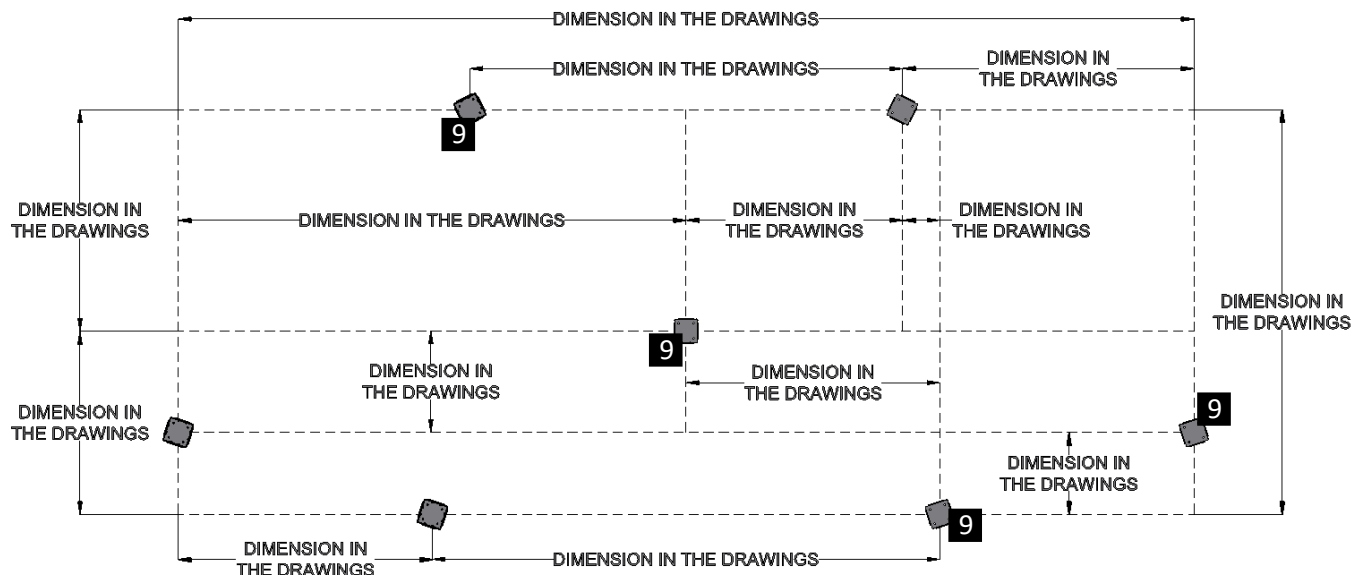


Step 2: Set your post (1) in the saddle of the anchor bases. Drill a $\phi \frac{1}{4}$ " hole in the post prior to anchoring to facilitate the ratcheting of the hardware. After that, use $\frac{5}{16}$ " X 3" lag bolts (B) to attach each post to its respective anchor base.

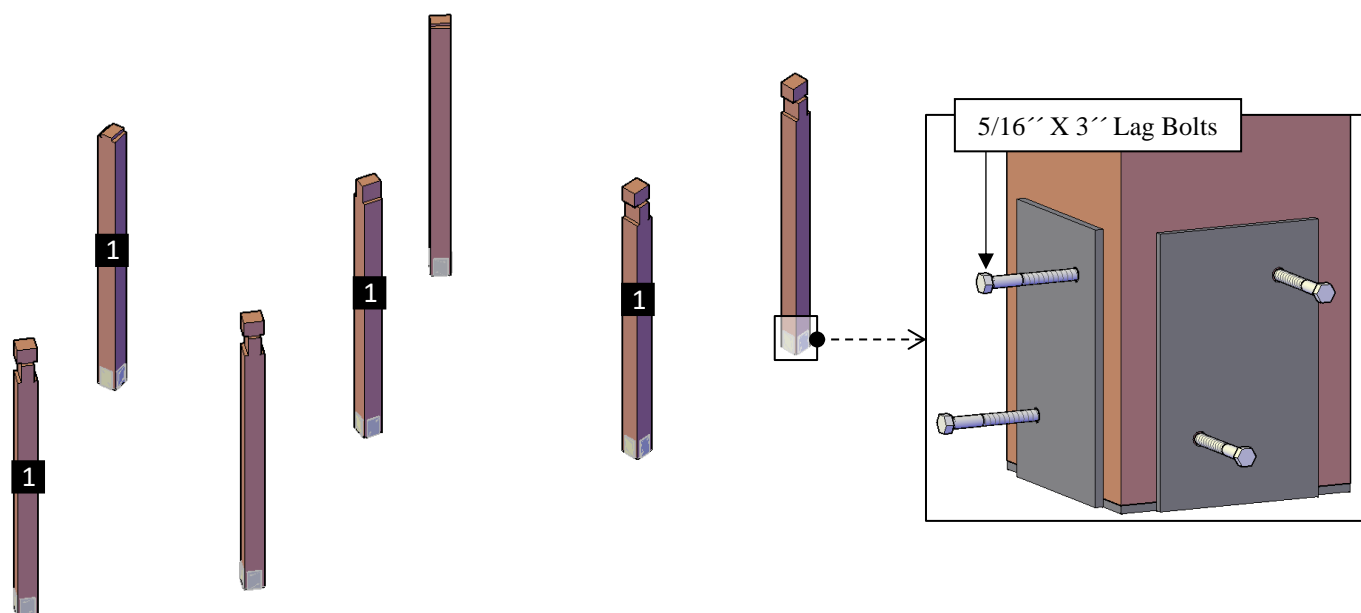


All options of posts (No posts decorative trim, vertical posts decorative trim and horizontal posts decorative trim) will be installed in the same way.


Step 3: Attach the supports (2) to the posts with 3/8" X 9 1/2" bolts (C). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

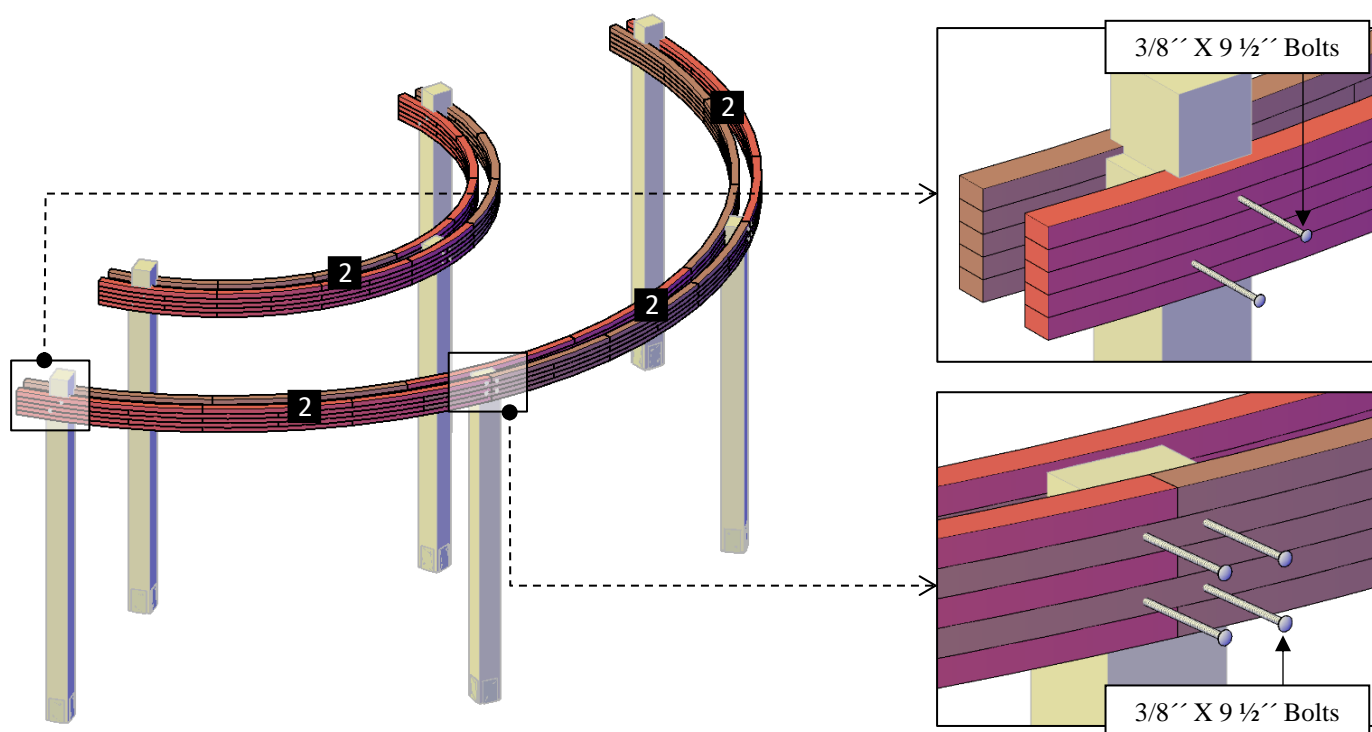


Step 4: Use 3/8" x 7 1/2" bolts (D) to attach the supports (2) together. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

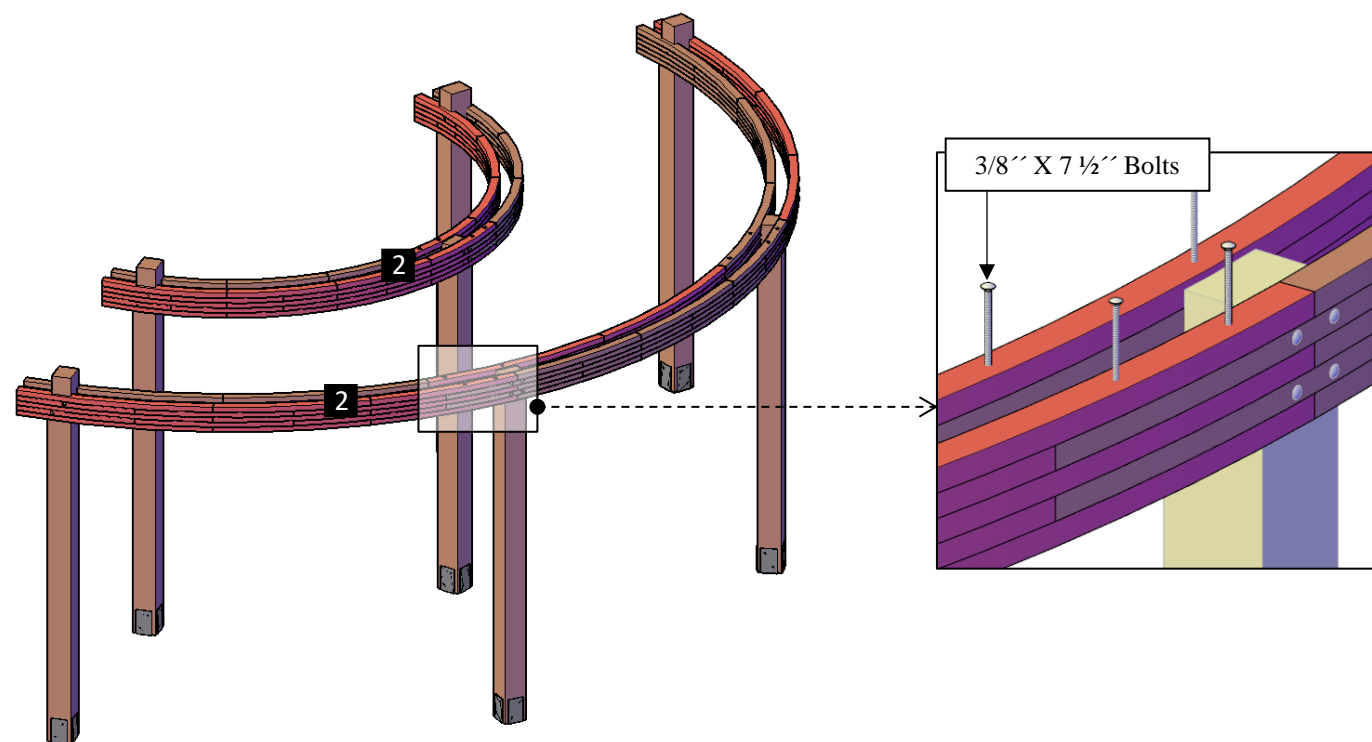


Step 5: Attach the in-between blockings (3) to the supports with 3/8" X 9 1/2" bolts (C). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

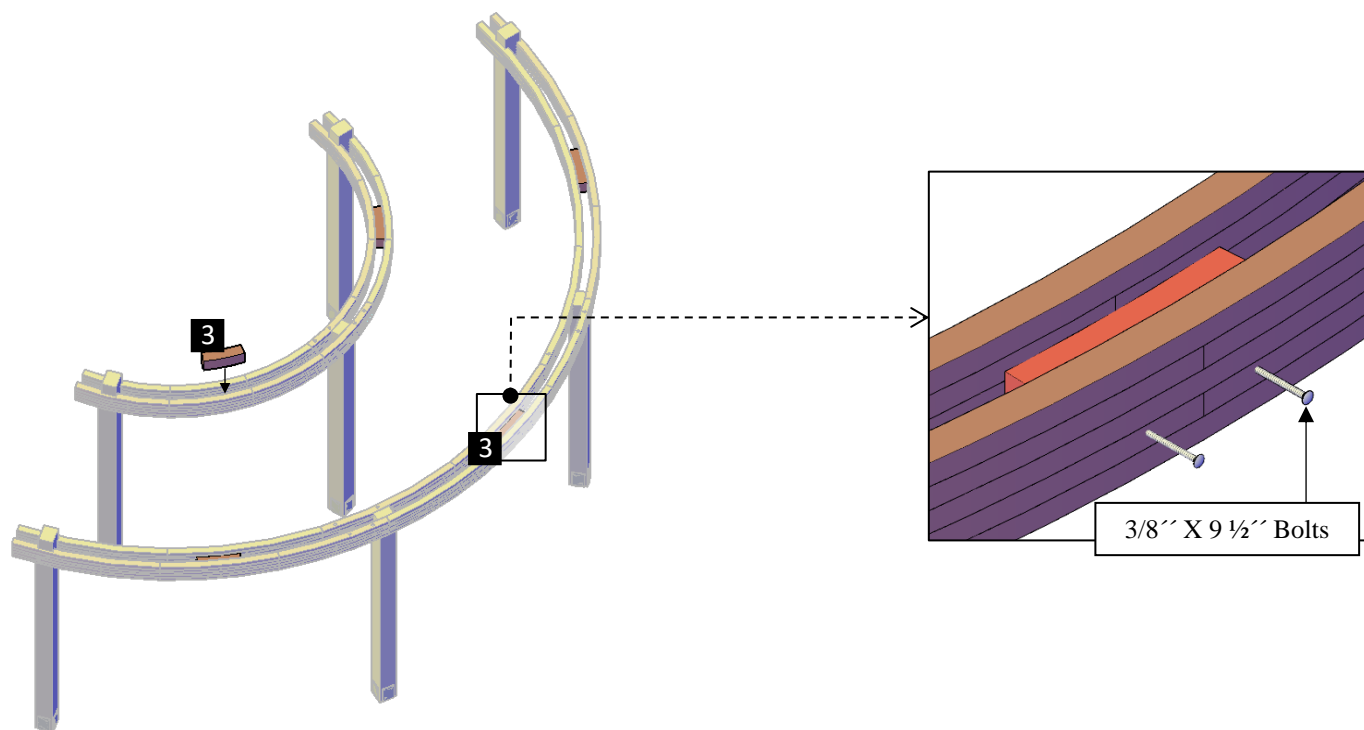


Step 6: Use 3/8" X 7 1/2" bolts (D) to attach the perimeter rafters (4) to the posts. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

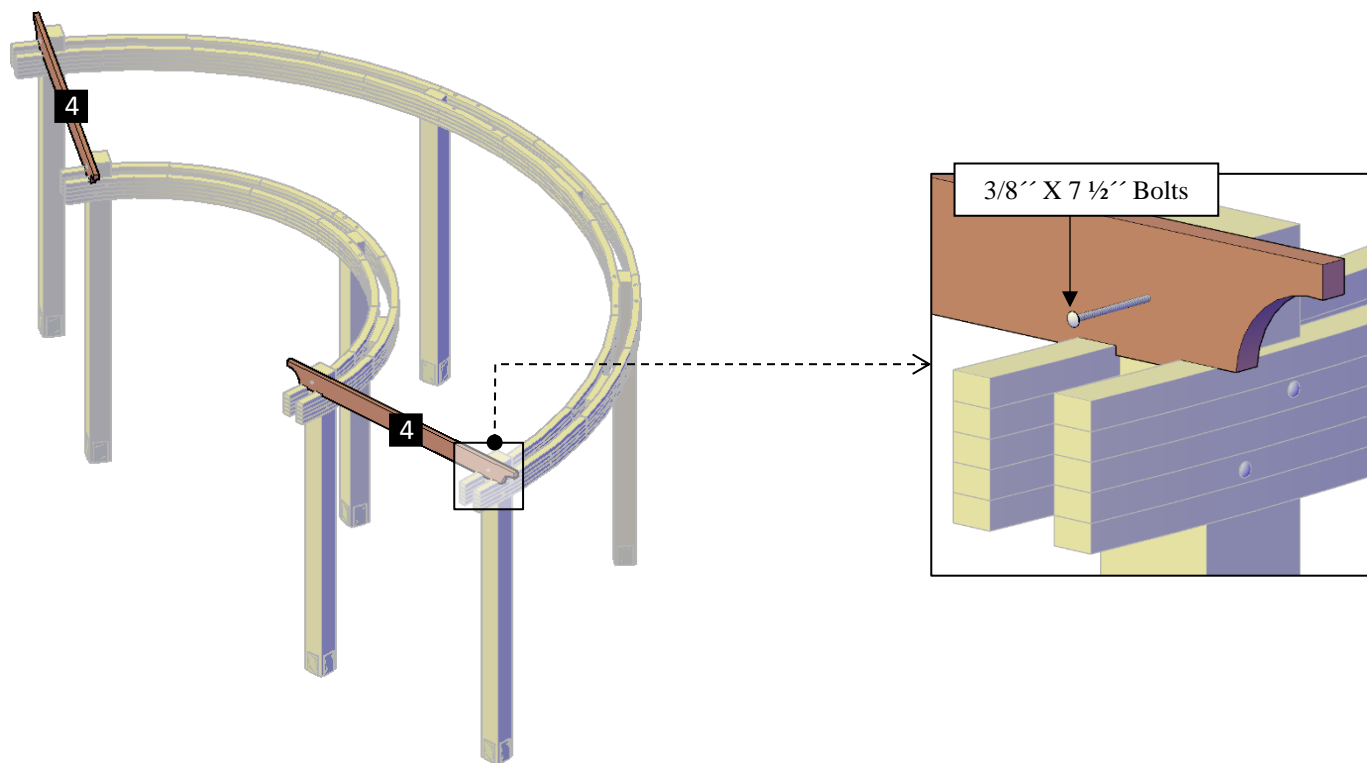


Step 7: Attach the main knee braces (5) to the supports with 3/8" x 9 1/2" bolts (C). After that, attach the main knee braces to the center posts with 3/8" x 14" bolts (F) and to the corner posts with 3/8" x 11" bolts (E). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

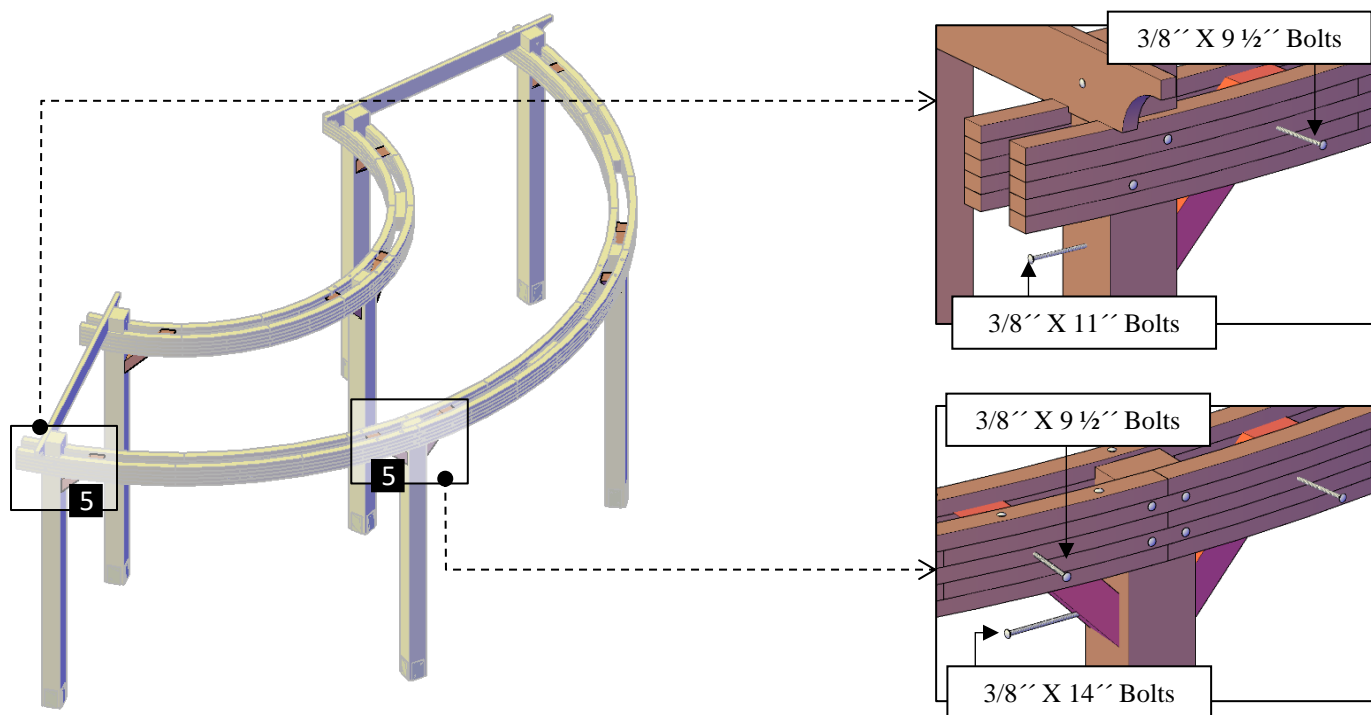


Step 8: Use 3/8" x 5" bolts (H) to attach the secondary knee braces (6) to the perimeter rafters and 3/8" x 10" bolts (G) to attach to the posts. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

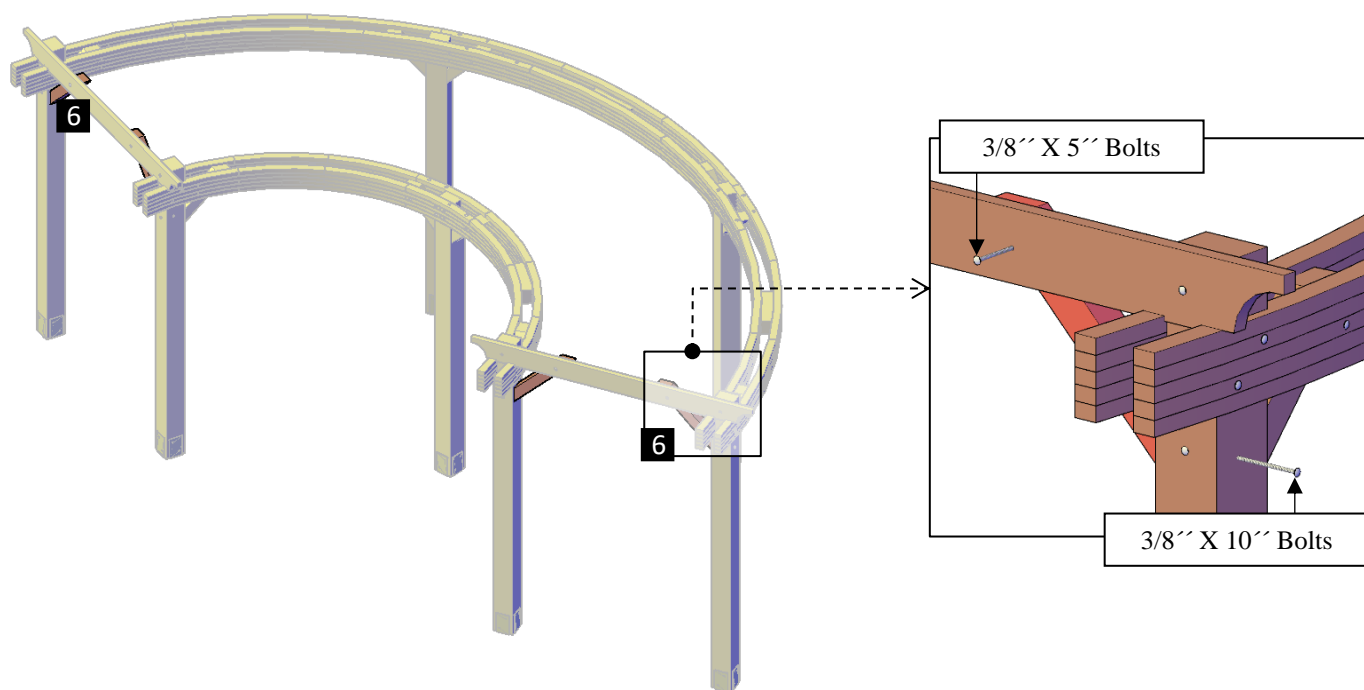


Step 9: Attach the rafters (4) to the supports with 3" deck screws (I). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

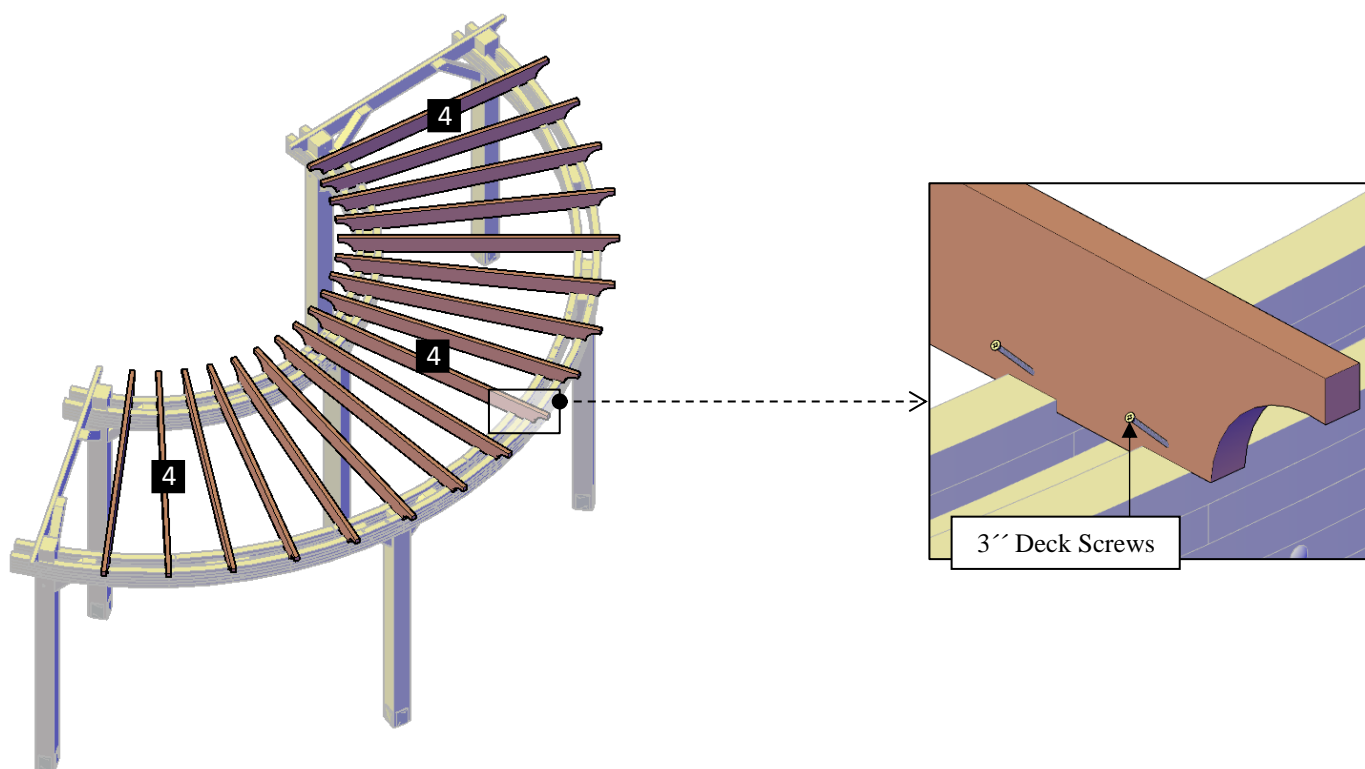

Step 10: Use 3" deck screws (I) to attach the Slats (7) to the rafters. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

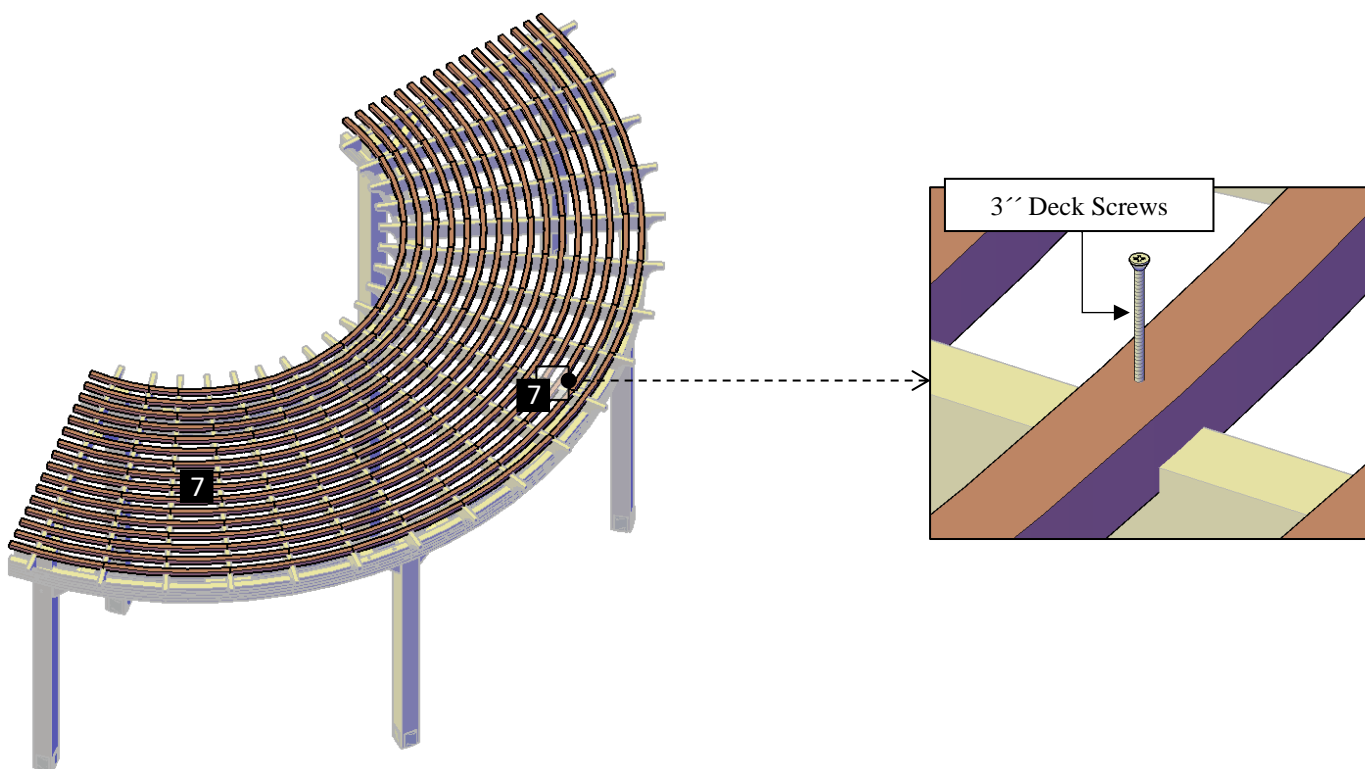

Step 11: Finally, attach the boots (8) to the posts with 3" deck screws (I). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

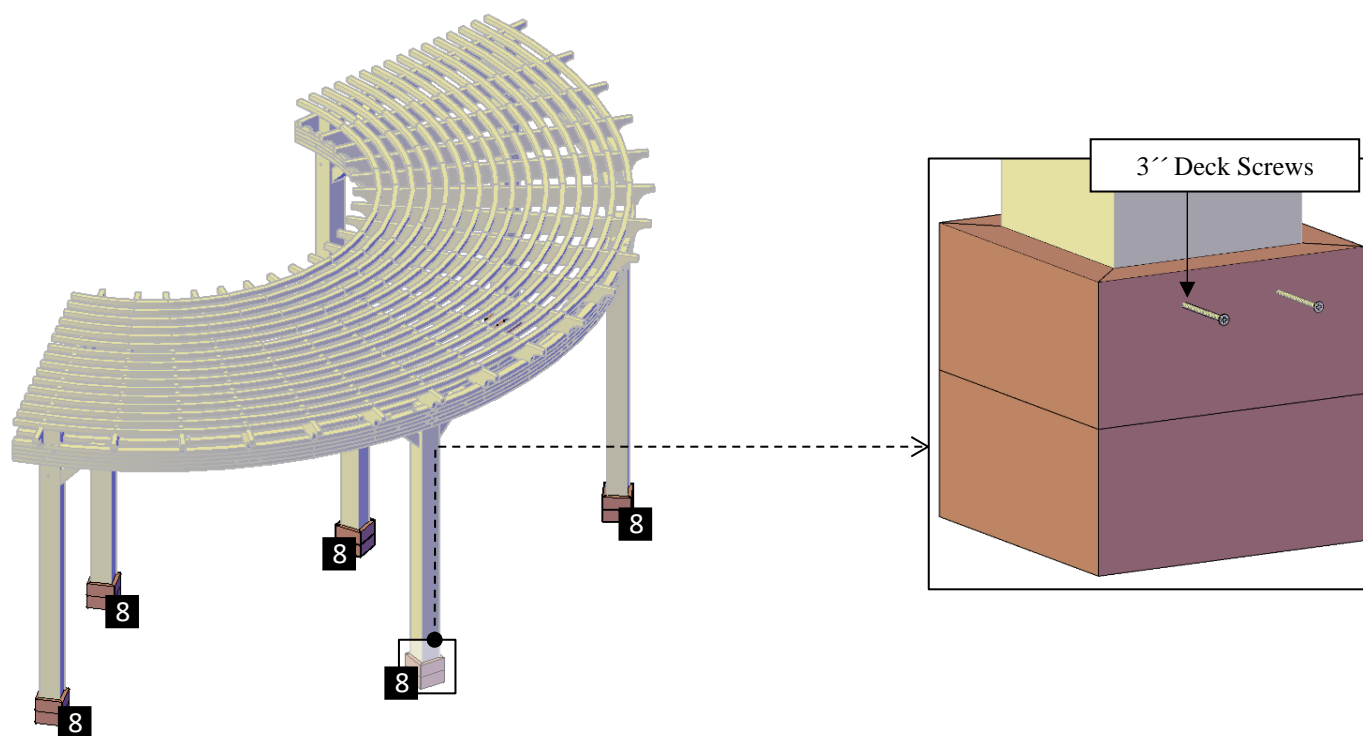



This completes the Pergola assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.