





866.332.2403 (Toll Free); 8am-5pm Pacific Time, Monday-Friday

Assembly Instructions for: **FULLBACK ARC WOOD PICNIC BENCH**



CONTENT OF BOXES

Quantity	Description	Images
2	Short Legs	
1	Seat	
1	Backrest	
2	Diagonal Supports	
2	Long Legs	
14	Carriage bolts 3 1/2" x 5/16", Washers and Nuts	
2	Carriage bolts 5 1/2" x 5/16", Washers and Nuts	

ASSEMBLY INSTRUCTIONS


Thank you for purchasing Forever Redwood patio furniture. Forever Redwood is built by Old-Growth Again Restoration Forestry (OGA). OGA is dedicated to restoration forestry. Sales of patio furniture finance our restoration work in California redwood forestlands.

Tools required: ½-inch ratchet and a mallet or small hammer.


Unpack your bench and make sure you have all the parts.

Your furniture was fully assembled in the shop prior to being dismantled for shipping. All the parts fit. The parts that go together have the same numbers written next to the predrilled holes they attach to. Please take the time to align the parts with the numbers.

Step 1: Place the seat in the floor upside down. Attach short leg to seat. Match the numbers written next to the predrilled holes and attach with two carriage (3 ½" x 5/16), washer and nuts. Align the predrilled holes; lightly tap the 2 bolts in. The bolts should tap into their holes. If you have to force a bolt, the leg is probably not oriented properly, is in the wrong hole or it is turned around. Make sure the bolts are tapped all the way into the wood, then add washers and nuts and tighten with a ½-inch ratchet. Do not over tighten or you'll crush the redwood and weaken the bench structure. Repeat this step to attach the other short leg.

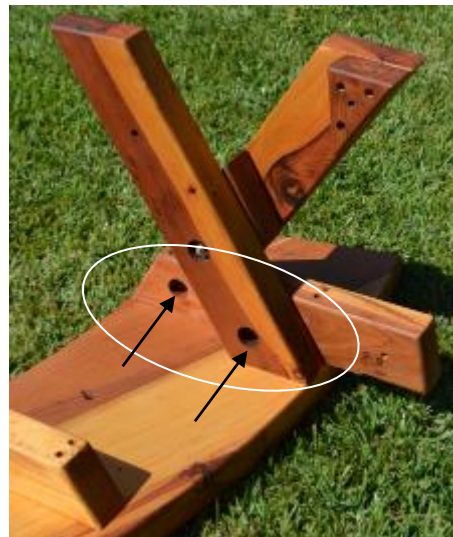

Step 2: Turn the seat upside up and attach long leg to seat and short leg with one carriage bolt each. Align the predrilled holes; lightly tap the 2 bolts in. The bolts should tap into their holes. If you have to force a bolt, the leg is probably not oriented properly, is in the wrong hole or it is turned around. Make sure the bolts are tapped all the way into the wood, then add washers and nuts and tighten with a ½-inch ratchet.

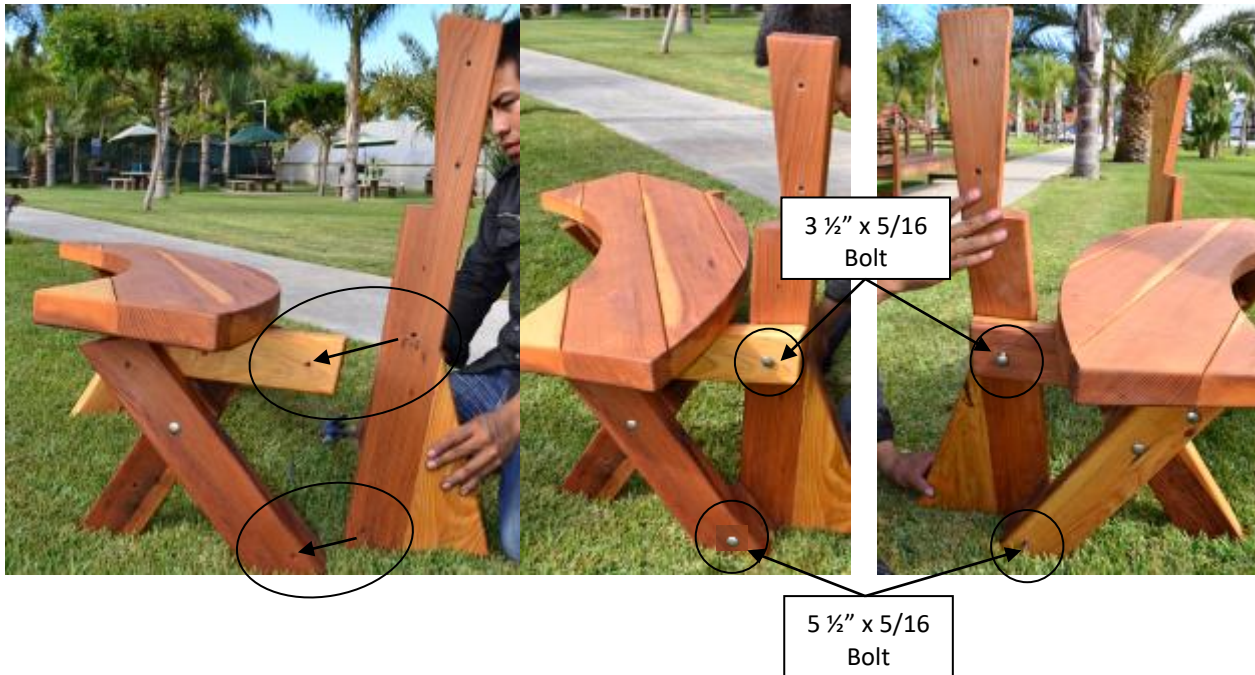

Step 3: Attach backrest to long legs with two carriage bolts (3 ½" x 5/16), washer and nuts per side. Align the predrilled holes; lightly tap the 2 bolts in. The bolts should tap into their holes. If you have to force a bolt, the leg is probably not oriented properly, is in the wrong hole or it is turned around. Make sure the bolts are tapped all the way into the wood, then add washers and nuts and tighten with a ½-inch ratchet.



Step 4: Attach diagonal supports to the front of short leg and the bottom of seat with two carriage bolts (3 ½" x 5/16), washer and nuts per side. Align the predrilled holes; lightly tap the 2 bolts in. The bolts should tap into their holes. Make sure the bolts are tapped all the way into the wood, then add washers and nuts and tighten with a ½-inch ratchet.



Thank you. If you have any questions, please call or email us.