



# FOREVER REDWOOD

*From the Forest, For the Forest since 1995*








---

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

## ASSEMBLY INSTRUCTIONS FOR THE GARDEN ARBOR BENCH






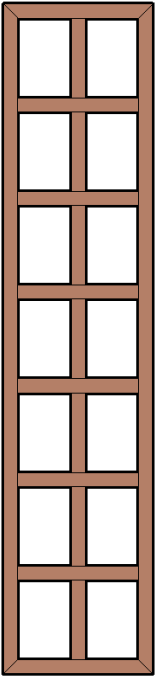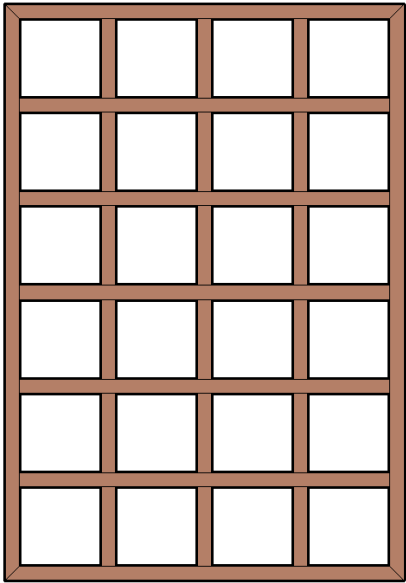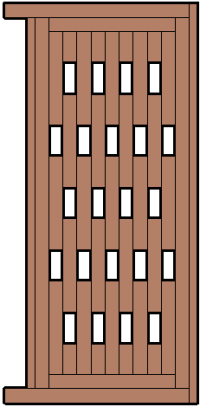


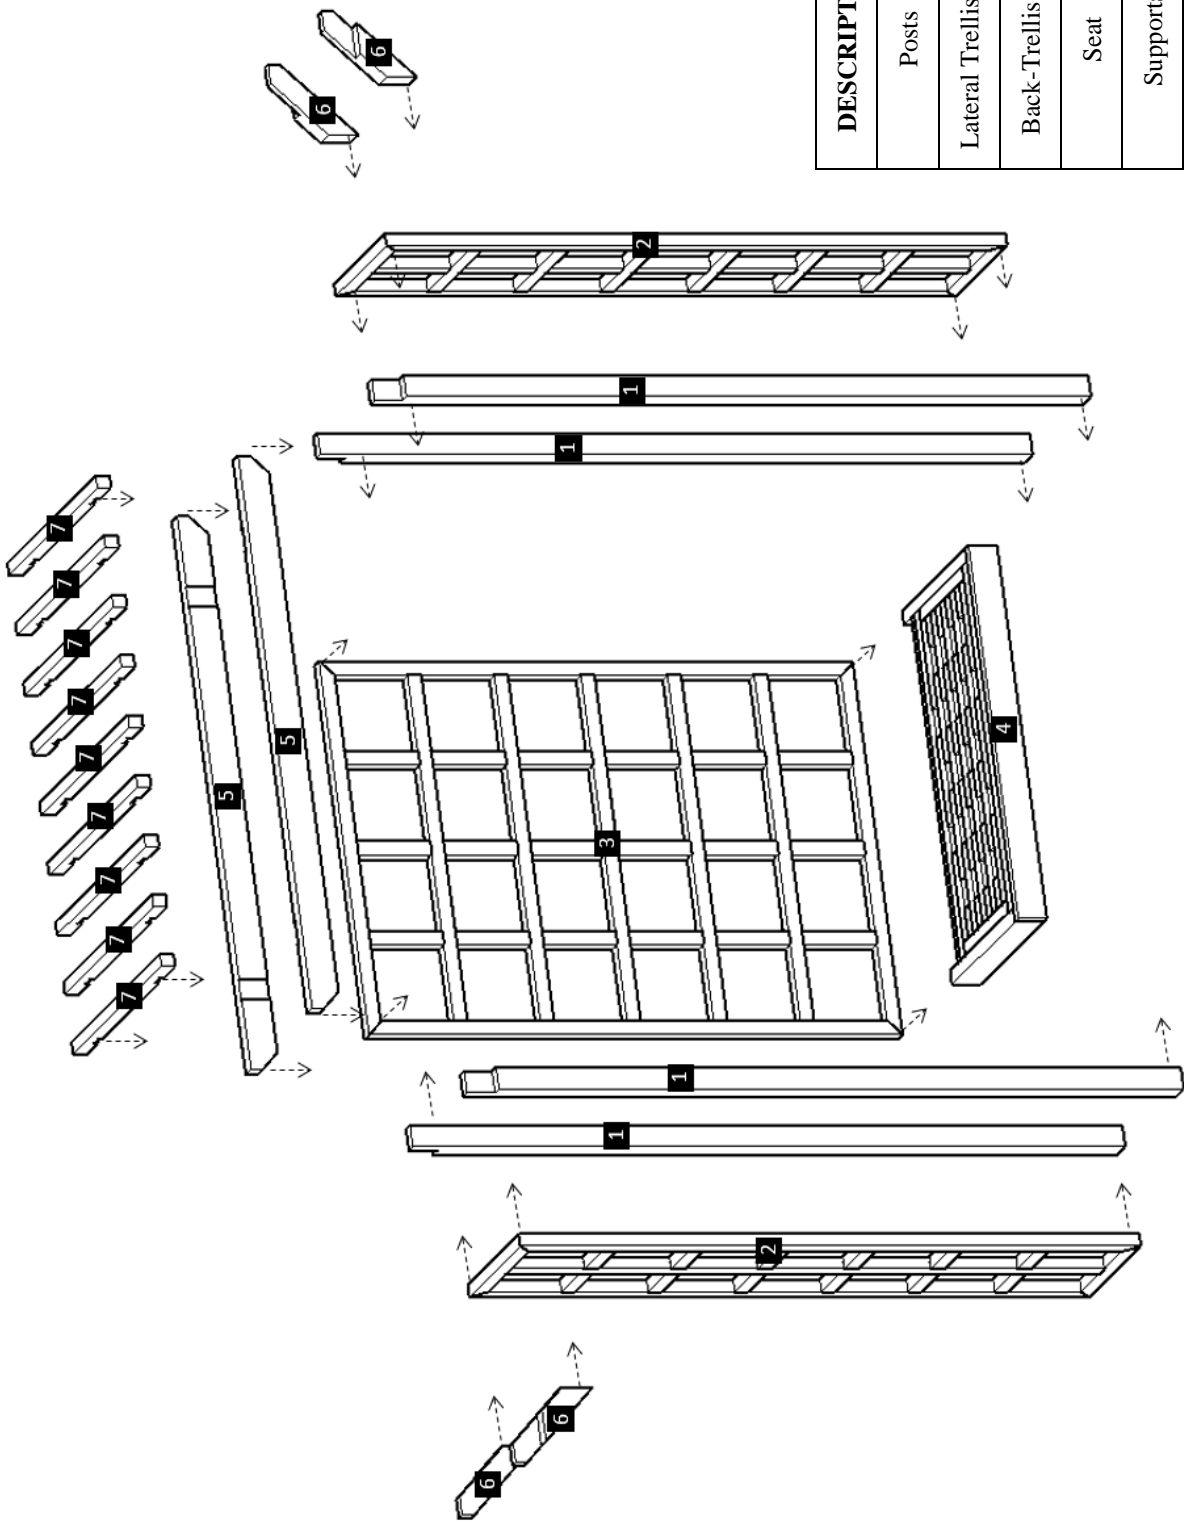
CONTENT OF BOXES			
Qty.	Description	Drawing	No.
4	Posts		1
2	Lateral Trellis Walls		2
1	Back-Trellis Wall		3
1	Seat		4
2	Supports		5
4	Knee Braces		6
Will Vary	Slats		7

*Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.*



HARDWARE LIST		
Description	Drawing	No.
5/16'' X 4 1/2'' Bolts (To attach the trellis walls to the posts. / To attach the seat to the posts. / To attach the front-knee braces to the posts).		A
3/8'' X 6 1/2'' Bolts (To attach the seat to the posts. / To attach the back-knee braces to the posts).		B
5/16'' X 3'' Bolts (To attach the supports to the posts. / To attach the knee braces to the supports).		C
8'' X 3'' Deck Screws (To attach the slats to the supports).		D


*Note: Dimensions of your hardware will vary depending on size.*




DESCRIPTION	No.
Posts	1
Lateral Trellis Walls	2
Back-Trellis Wall	3
Seat	4
Supports	5
Knee Braces	6
Slats	7

*Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.*


**Step 1:** Attach the lateral trellis walls (2) to the posts (1) with 5/16" X 4 1/2" bolts (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

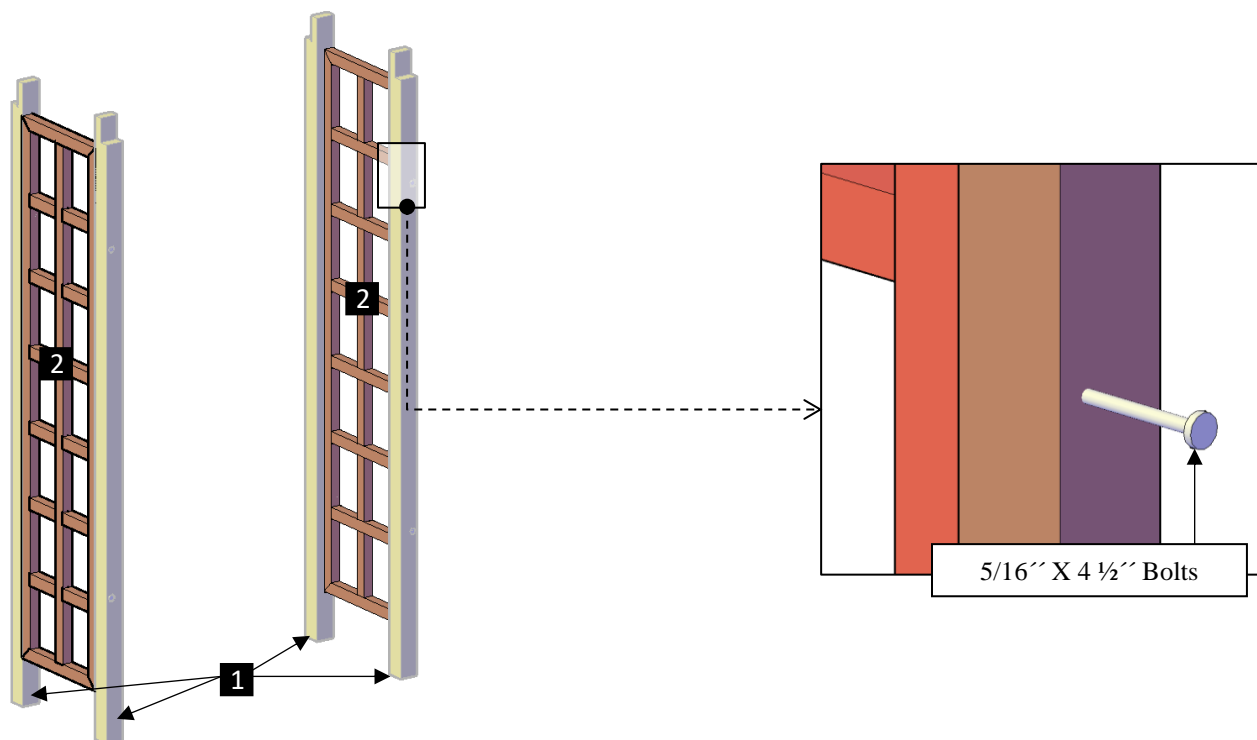


**Step 2:** Use 5/16" X 4 1/2" bolts (A) to attach the back-trellis wall (3) to the posts. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

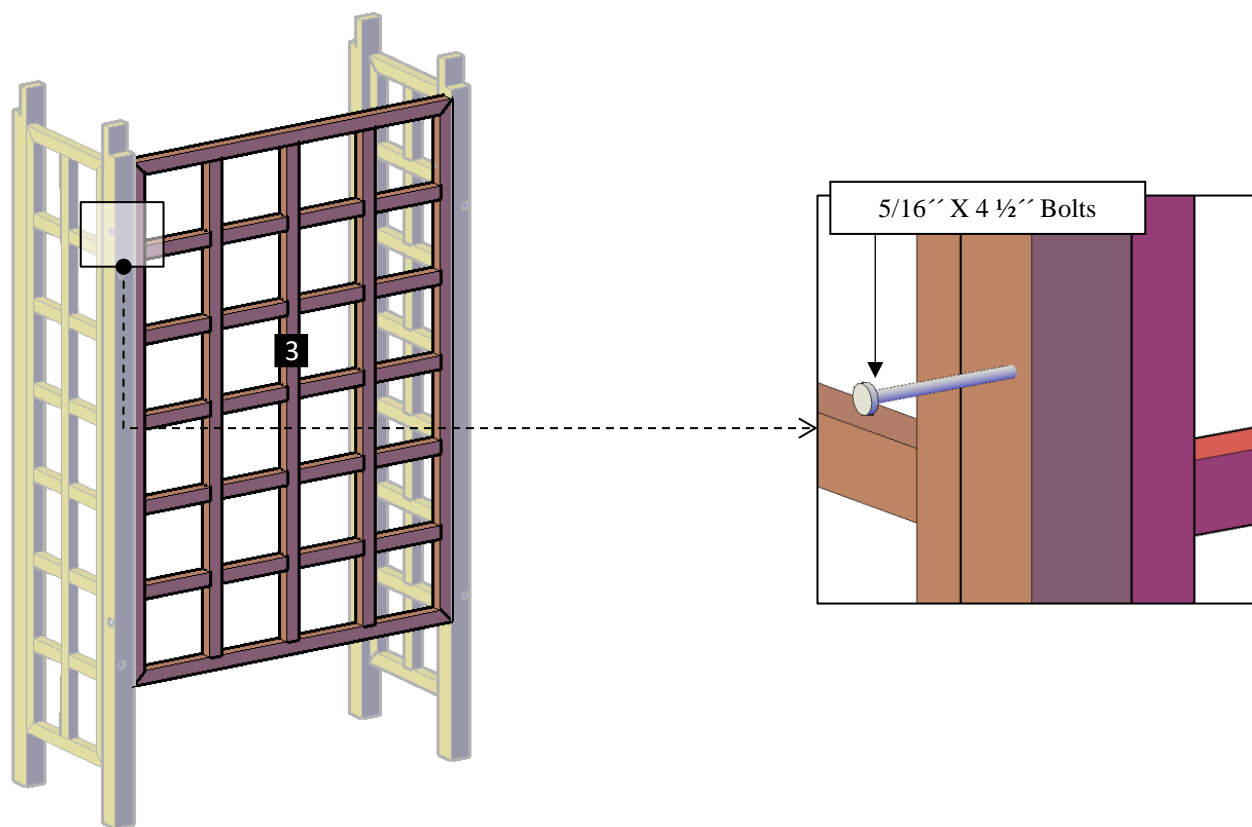

**Step 3:** Attach the seat (4) to the posts with 5/16" X 4 1/2" bolts (A) and 3/8" X 6 1/2" bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

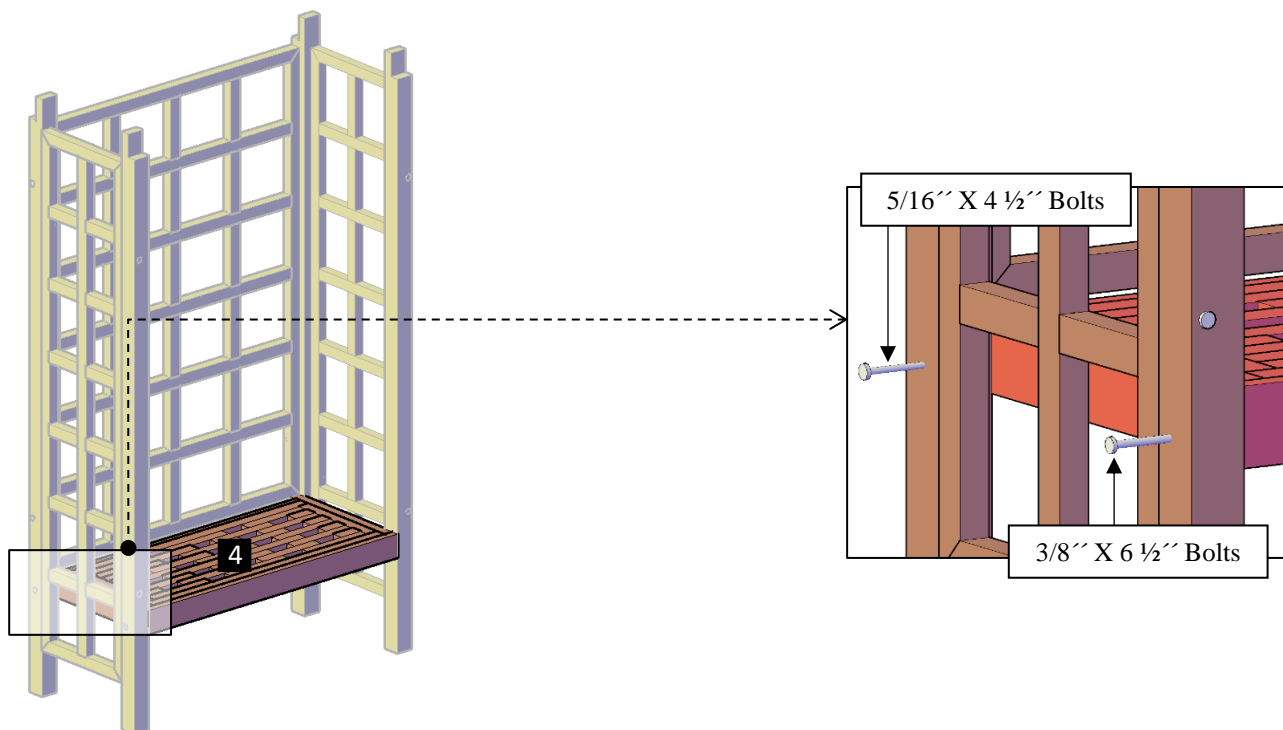


**Step 4:** Use 5/16" X 3" bolts (C) to attach the supports (5) to the posts. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

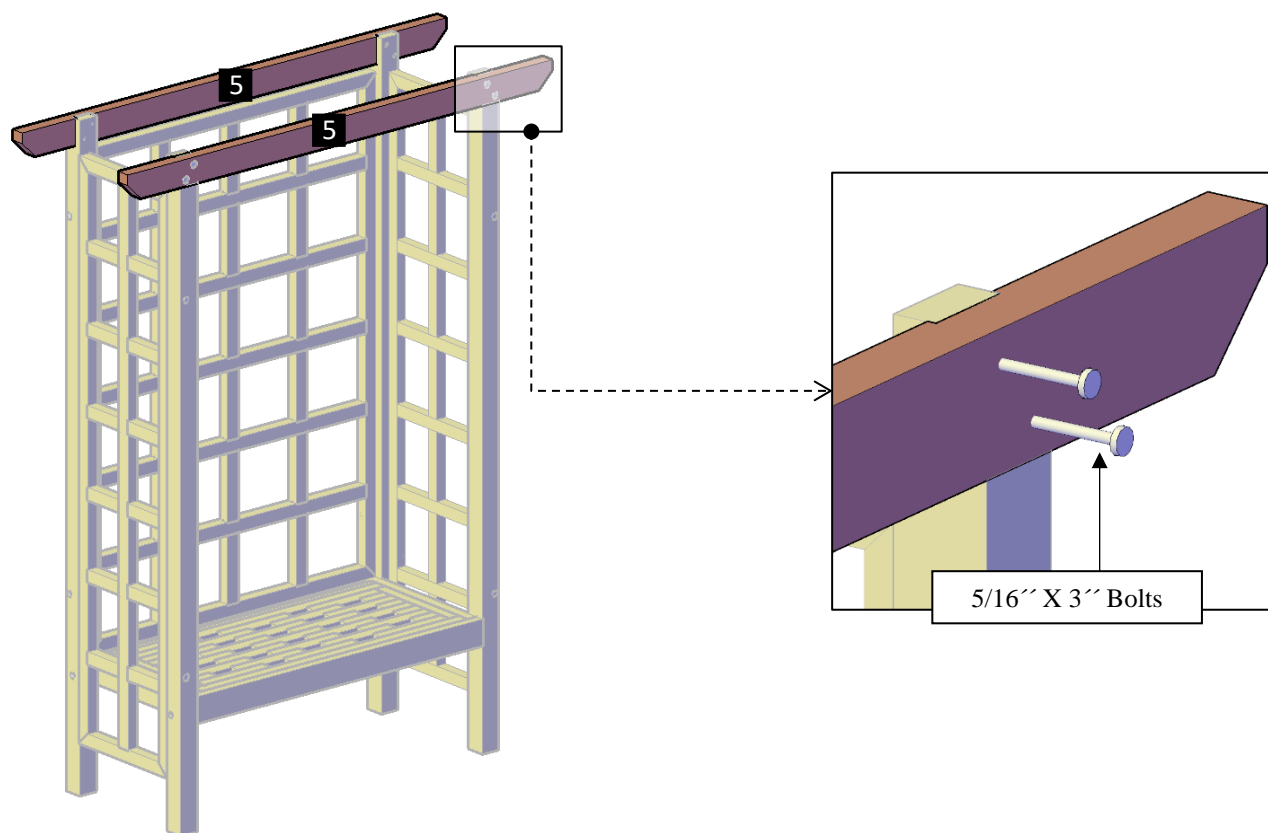






**Step 5:** Attach the back-knee braces (6) to the support with 5/16" x 3" bolts (C) and to the posts with 3/8" x 6 1/2" bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

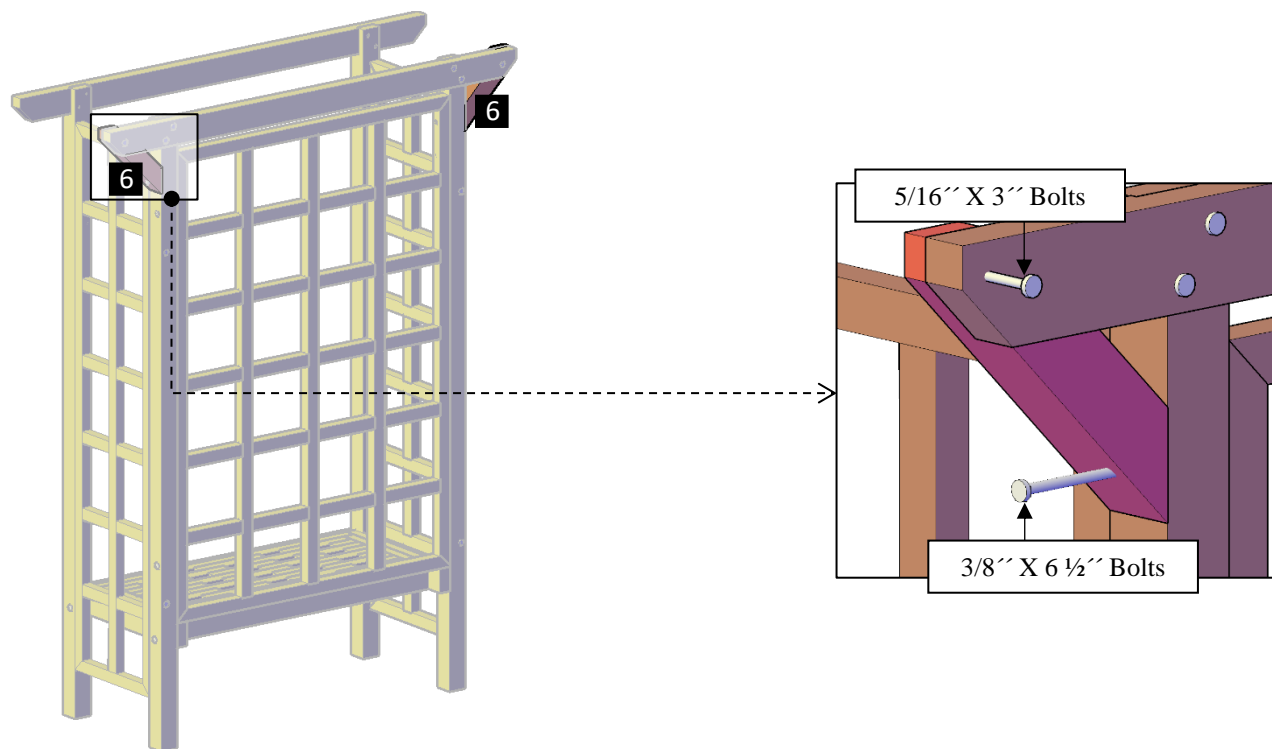

**Step 6:** Attach the front-knee braces (6) to the support with 5/16" x 3" bolts (C) and to the posts with 5/16" x 4 1/2" bolts (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

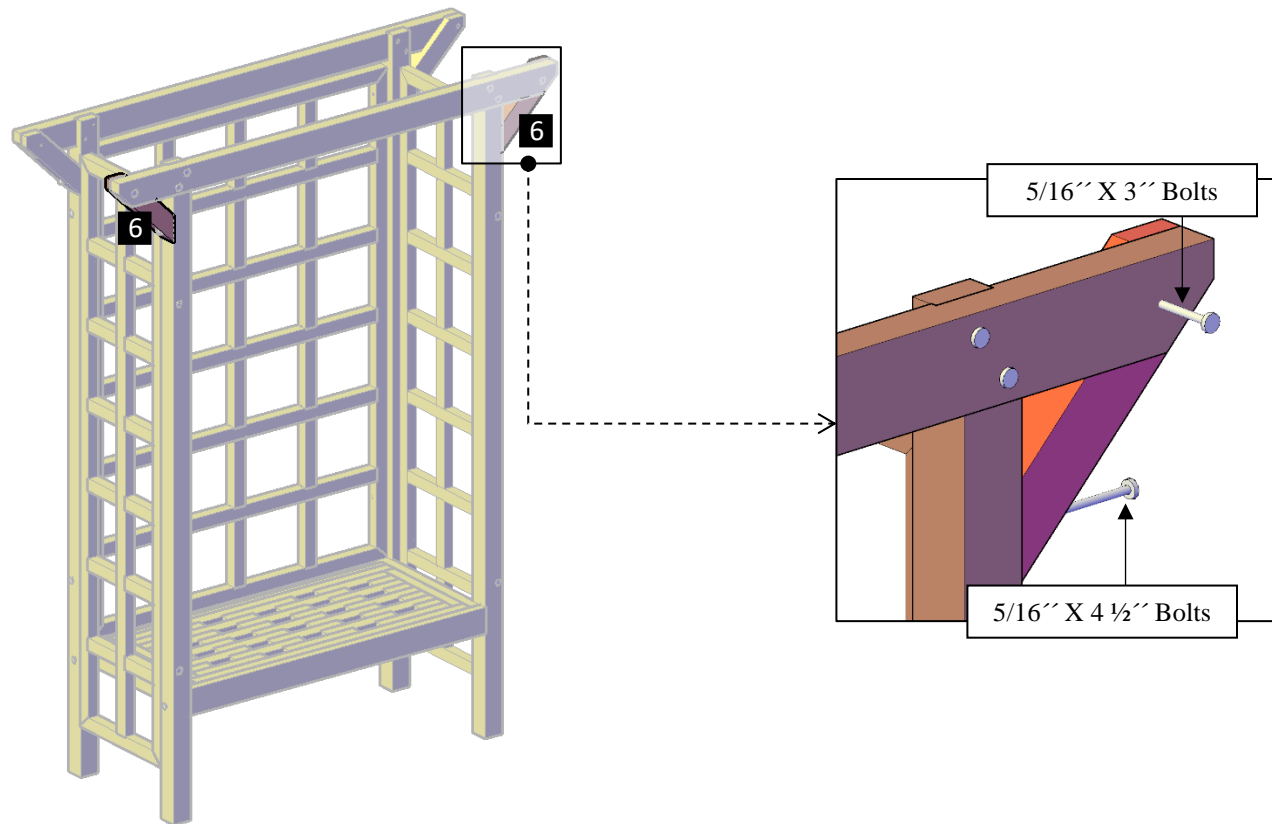

**Step 7:** Finally, use 8'' x 3'' deck screws (**D**) to attach each slat (**7**) to the supports. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

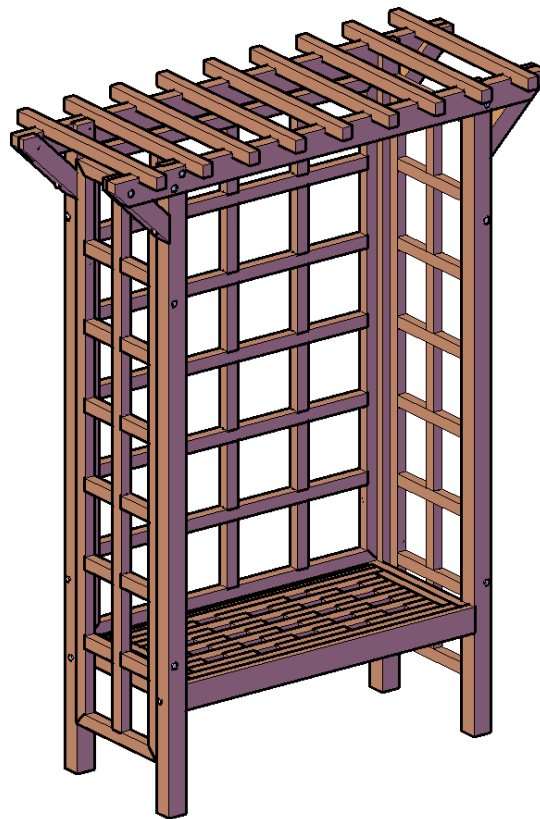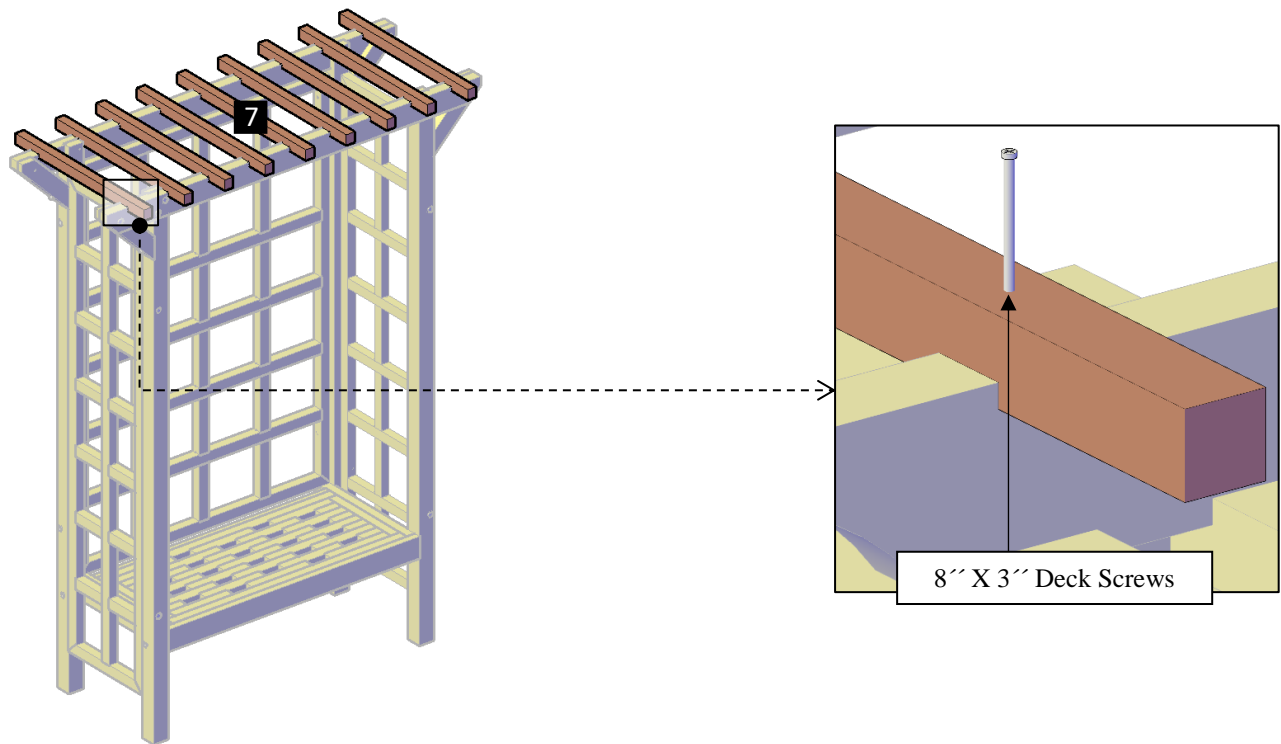





*This completes the Arbor Bench assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.*