



FOREVER REDWOOD





From the Forest, For the Forest since 1995

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE HEART REDWOOD BENCH



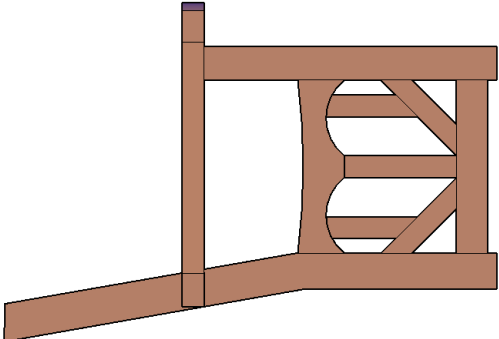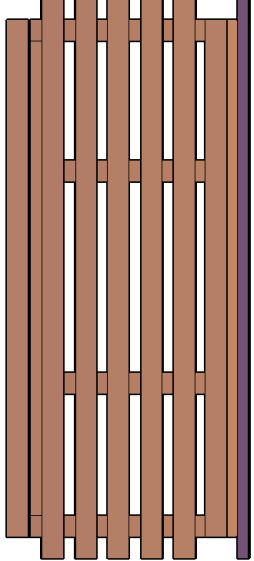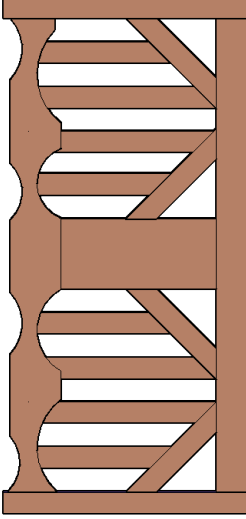


| CONTENT OF BOXES | | | |
|------------------|-------------------|--|-----|
| Qty. | Description | Drawing | No. |
| 2 | Legs |  | 1 |
| 1 | Seat |  | 2 |
| 1 | Backrest |  | 3 |
| 2 | Diagonal Supports |  | 4 |

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.






| HARDWARE LIST | | |
|---|---|-----|
| Description | Drawing | No. |
| 5/16" X 3 1/2" Bolts (To attach the seat and the backrest to the legs. / To attach the knee braces to the seat and to the legs). |  | A |

Note: Dimensions of your hardware will vary depending on size.




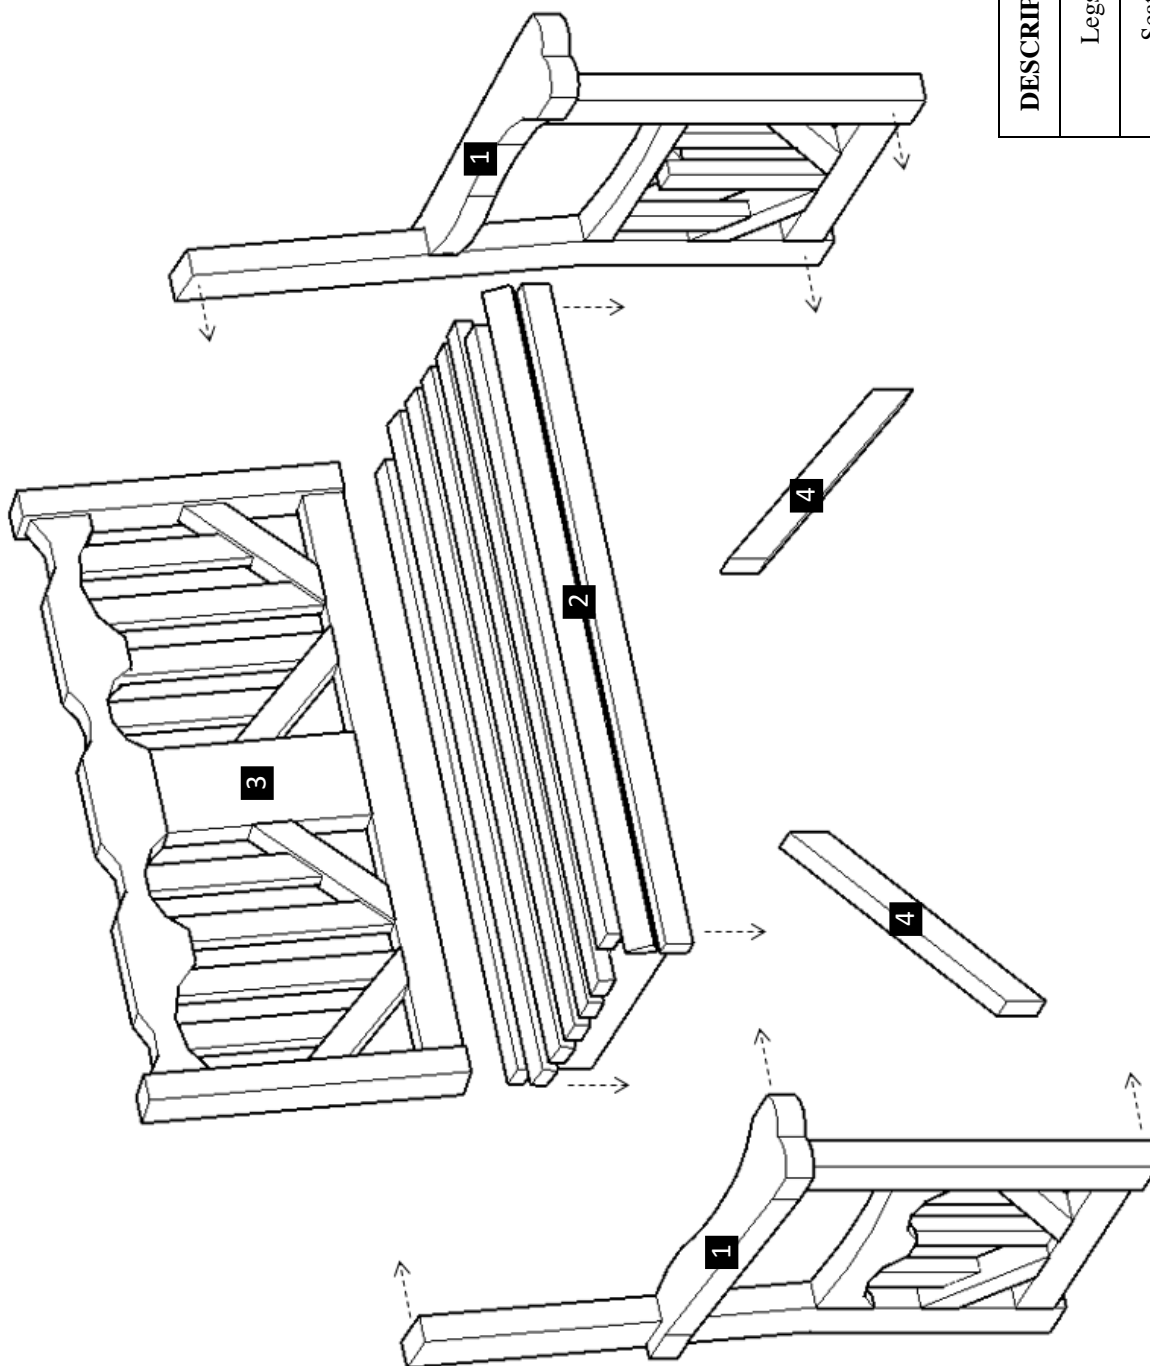


| DESCRIPTION | No |
|-------------------|----|
| Legs | 1 |
| Seat | 2 |
| Backrest | 3 |
| Diagonal Supports | 4 |

Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.



Step 1: Use 5/16" x 3 1/2" bolts (A) to attach the legs (1) to the seat (2). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

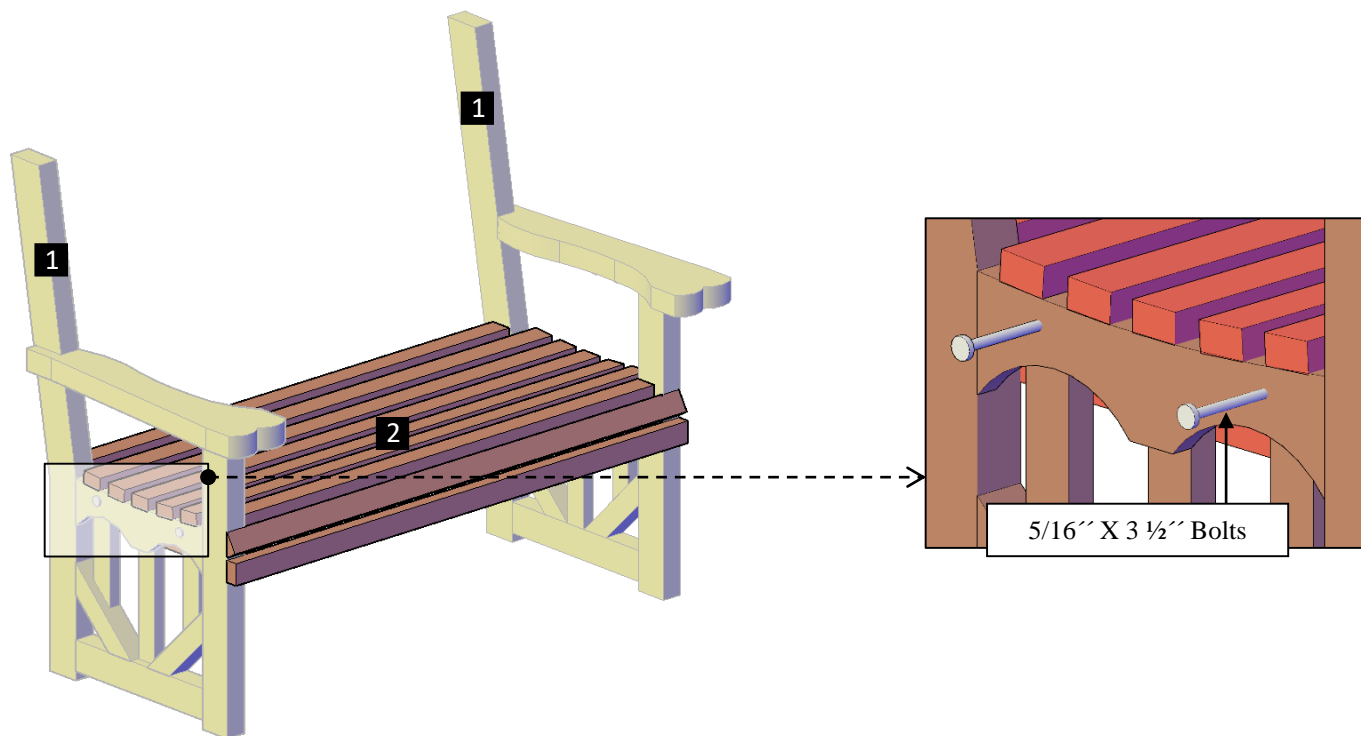

Step 2: Attach the backrest (3) to the legs with 5/16" x 3 1/2" bolts (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

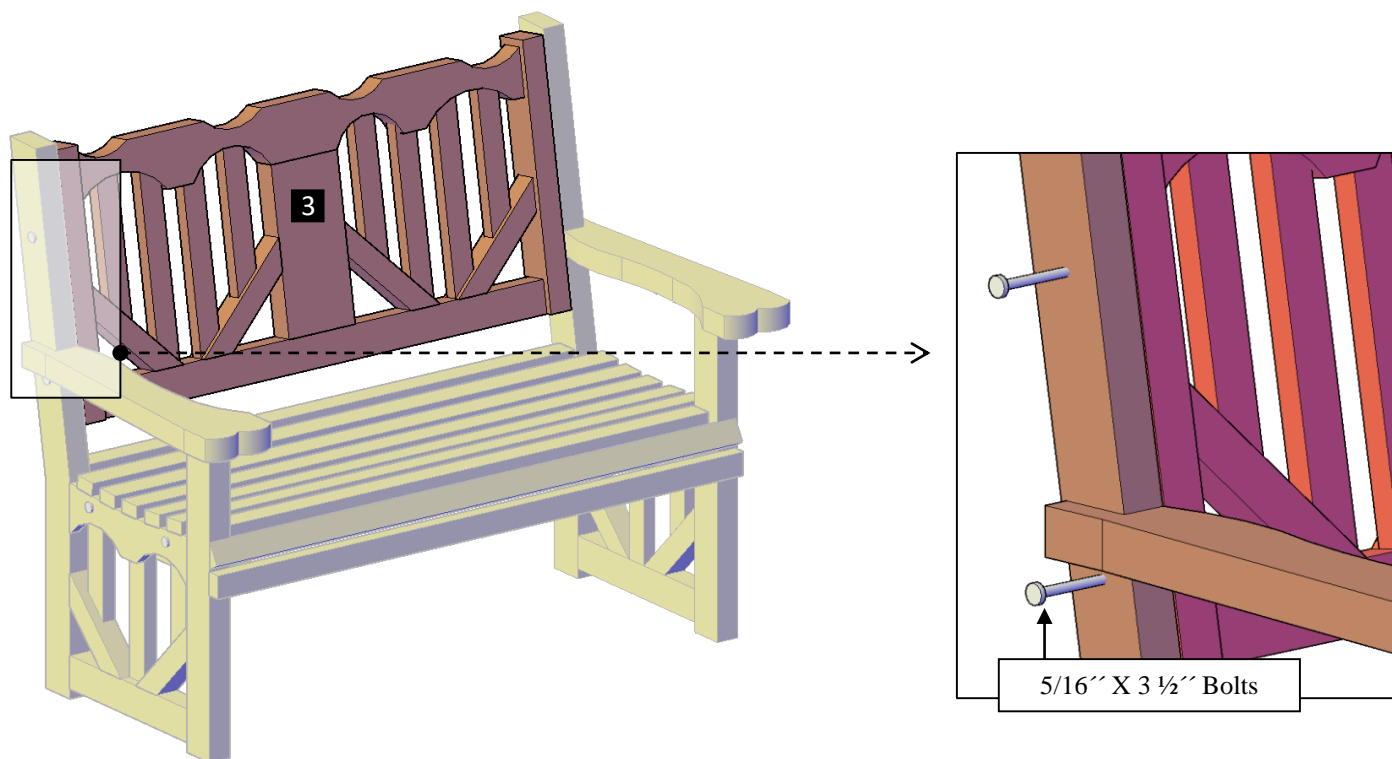

Step 3: Finally, attach the diagonal supports (4) to the legs and to the seat with 5/16" x 3 1/2" bolts (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

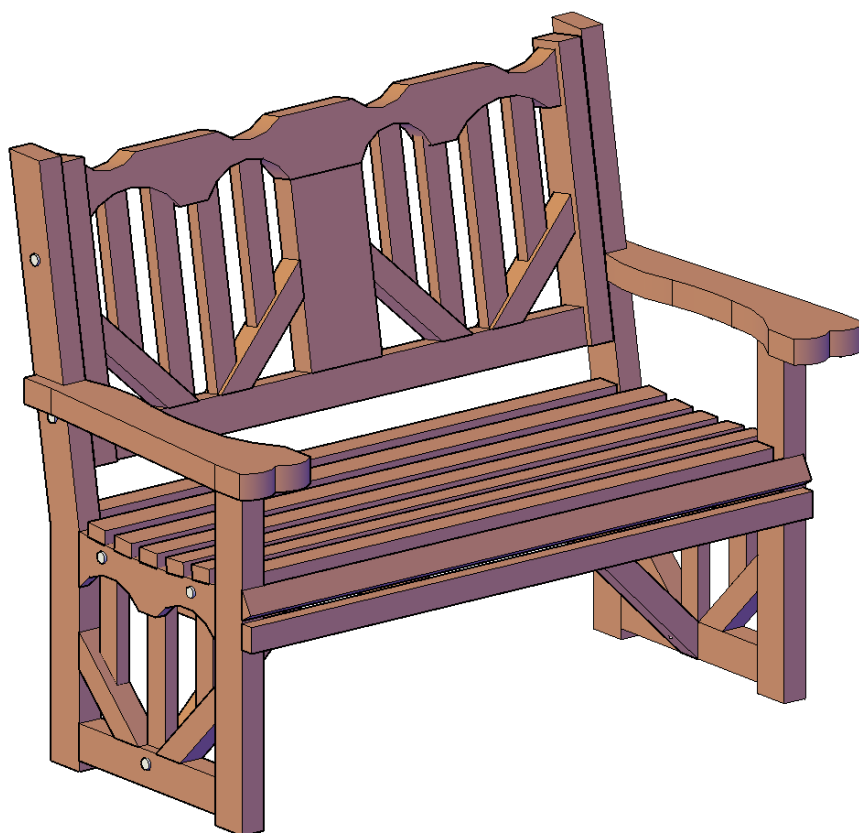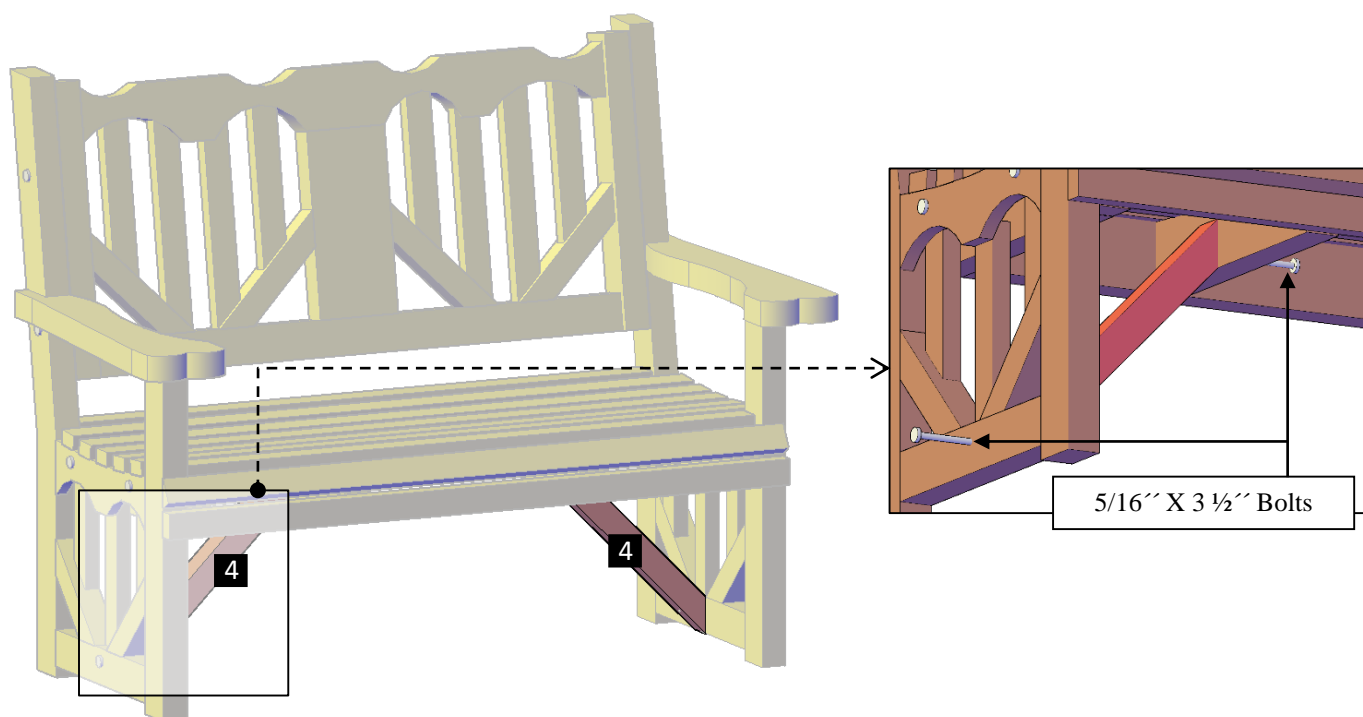



This completes the Bench assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.