




866.332.2403 (Toll Free); 8am-5pm Pacific Time, Monday-Friday

Assembly Instructions for: **JANE'S KEY WEST SEMI-CIRCLE CHAIR**



CONTENT OF BOXES

Quantity	Description	Images
1	Backrest	
1	Seat	
2	Sides	
1	Front Brace	
8	3 ½" Carriage Bolts, Washer & Nuts	
2	4 ½" Carriage Bolts, Washer & Nuts	

ASSEMBLY INSTRUCTIONS

Thank you for purchasing Forever Redwood patio furniture. Forever Redwood is built by Old-Growth Again Restoration Forestry (OGA). OGA is dedicated to restoration forestry. Sales of patio furniture finance our restoration work in California redwood forestlands.


Tools required: ½-inch ratchet and a mallet or small hammer.

The parts that go together have the same numbers written next to the predrilled holes they attach to. Align the parts with the numbers as shown for ease of reference


Step 1: Attach sides to seat with one carriage bolt per side. On sides of the seat you'll find a number written next to the holes. Match this number to the number written next to the holes on the interior edge of the center number of the side of the chair. Tap in the 3 ½ inch carriage bolts from the outside edge into the 2 holes to attach the seat and sides. Tap the bolts in all the way, then insert the washer and nut and tighten with a ½- inch ratchet.



Step 2: Attach the backrest to the sides and seat with 6 carriage bolts as shown. Match the numbers to the predrilled holes on every piece. Tap in the 3 ½-inch carriage bolts to attach the backrest. Tap the bolts in all the way, then insert the washer and nut and tighten with a ½-inch ratchet. Do not over tighten or you'll crush the redwood and weaken the armchair structure.

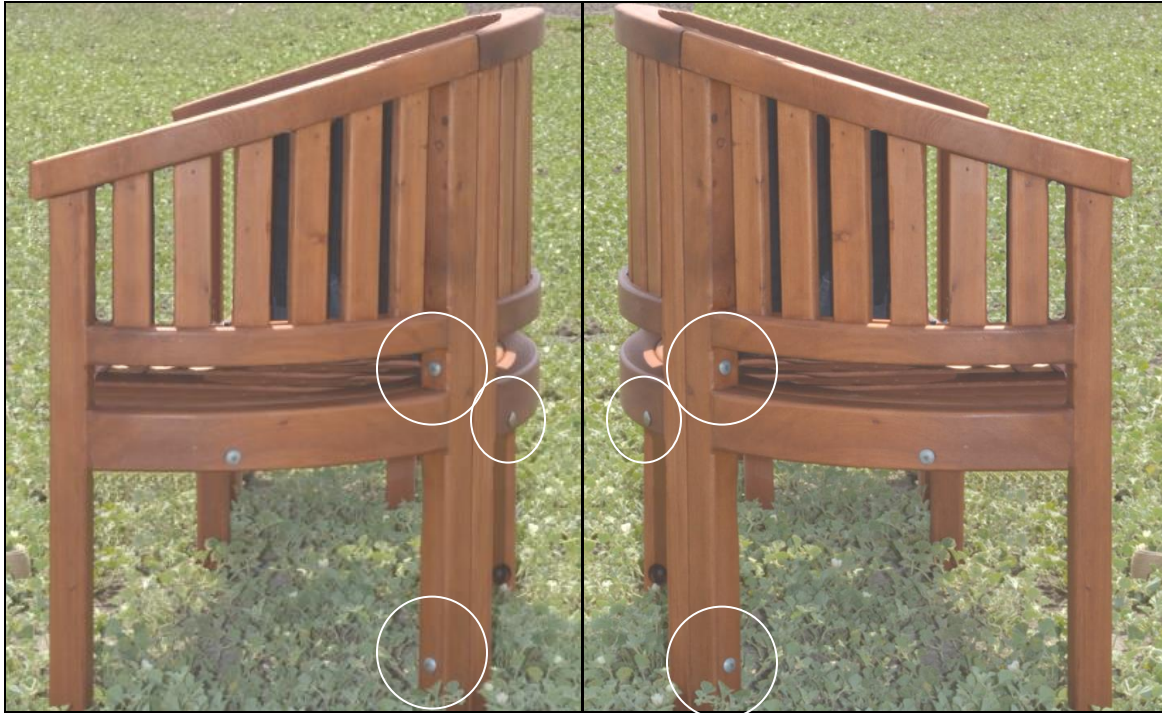

Step 3: Attach the front brace to sides. The predrilled holes have numbers written on them on the interior side. Match these numbers to the numbers written next to the holes on the front brace piece. Tap the 4 ½-inch carriage bolt from the outside in. Tap the bolt in all the way, then add washers, nuts and tighten with ½-inch ratchet. Do not over-tighten.

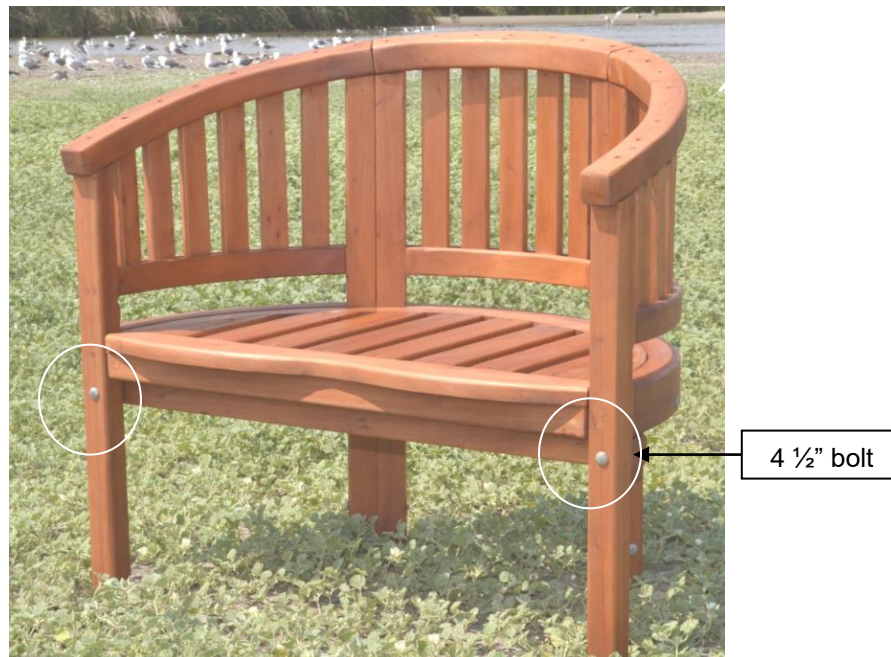

You are finished. Enjoy!