



# FOREVER REDWOOD









*From the Forest, For the Forest since 1995*

---









866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

## ASSEMBLY INSTRUCTIONS FOR THE JEAN'S ULTIMATE SWING SETS









CONTENT OF BOXES			
Qty.	Description	Drawing	No.
2	Frame Legs		1
2	Lower Main Support		2
2	Top Main Support		3
1	Roof Frame		4
1	Main Structural Timber		5
2	Small Support		6
4	Connector Timbers		7
2	Knee Braces		8

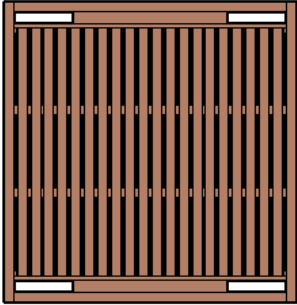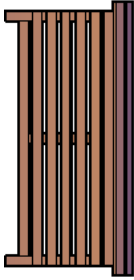*Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.*

CONTENT OF BOXES			
Qty.	Description	Drawing	No.
4	Straps		9
1	Kid's Platform <b>If Ordered</b>		10
2	Bench Seats		11
4	Long Bench Legs		12
4	Short Bench Legs		13
2	Bench Backrests		14
4	Bench Armrests		15
2	Swing Seats		16

*Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.*

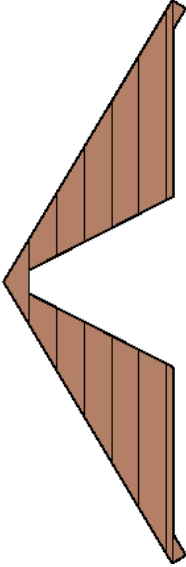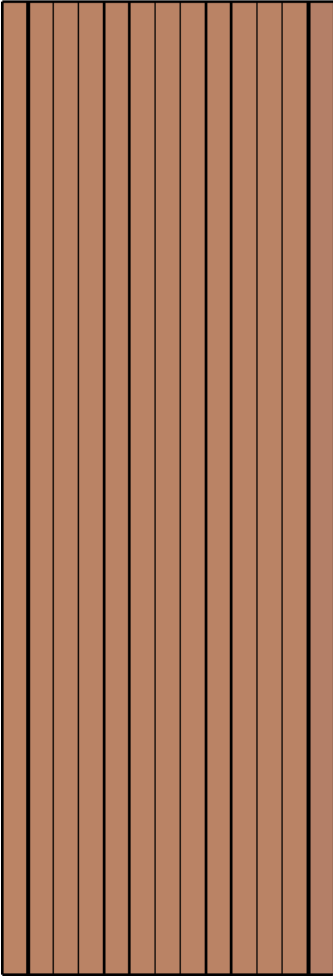

CONTENT OF BOXES			
Qty.	Description	Drawing	No.
2	Roof Covers		17
2	Roof Panels		18
1	Roof Board		19
4	Boots If ordered		20
4	Anchor Bases If ordered		21
1	Metal Base		22

*Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.*










HARDWARE LIST		
Description	Drawing	No.
3/8'' x 10'' Bolts (To assemble the frame legs. / To attach the supports to the frame legs. / To attach the knee braces to the main structural timber).		A
3/8'' x 5 1/2'' Bolts (To assemble the frame legs).		B
1/2'' x 3 1/2'' Anchor Bolts (To attach the anchor bases to the anchor bolts).		C
5/16'' x 3'' Bolts (To attach the anchor bases to the frame legs).		D
3/8'' x 7'' Bolts (To attach the roof frame, the connector timbers and the knee braces to the frame legs).		E
5/16'' x 4 1/2'' Bolts (To attach the metal base to the main structural timber).		F
3/8'' x 12'' Bolts (To attach the main structural timber to the frame legs).		G
5/16'' x 5'' Bolts (To attach the metal base to the roof frame).		H
3/8'' x 6 1/2'' Bolts (To attach the straps to the roof frames and to the floor)		I

*Note: Dimensions of your hardware will vary depending on size.*






HARDWARE LIST		
Description	Drawing	No.
5/16'' x 3 1/2'' Bolts (To attach the long bench legs to the bench seats. / To attach the bench seats to the straps. / To attach the short bench legs to the benches and to the straps. / To attach the bench backrests to the long bench legs. / To attach the bench armrests to the straps and to the long bench legs).		J
3/8'' x 6'' Bolts (To attach the roof covers to the roof frames).		K
3/8'' x 8 1/2'' Bolts (To attach the roof panels to the roof covers).		L
2'' Deck Screws (To attach the roof board to the roof panels).		M
3'' Deck Screws (To attach the boots to the frame legs).		N
Chains		O
Quick Links		P

*Note: Dimensions of your hardware will vary depending on size.*




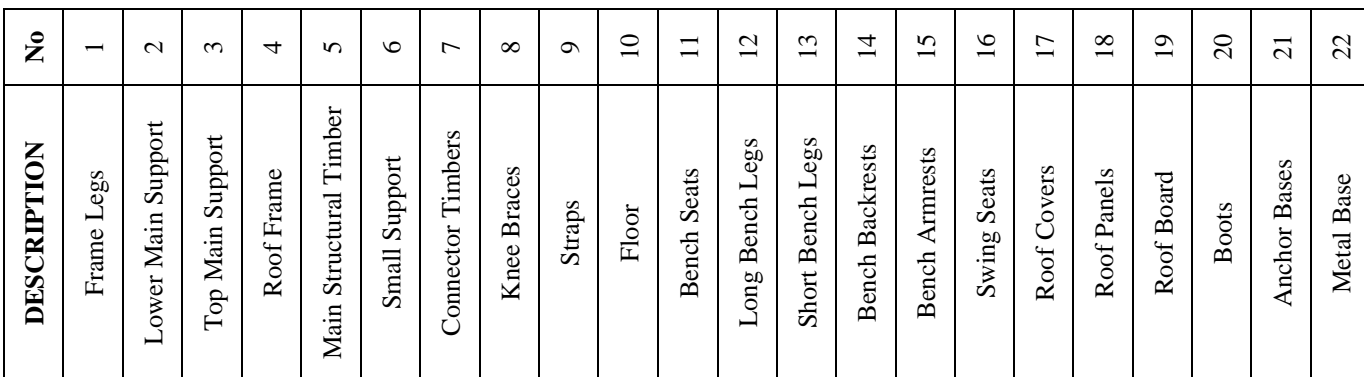

**Note:** The structure must be assembled on its side, as shown.




**Step 1:** Open the frame legs (1) as shown.

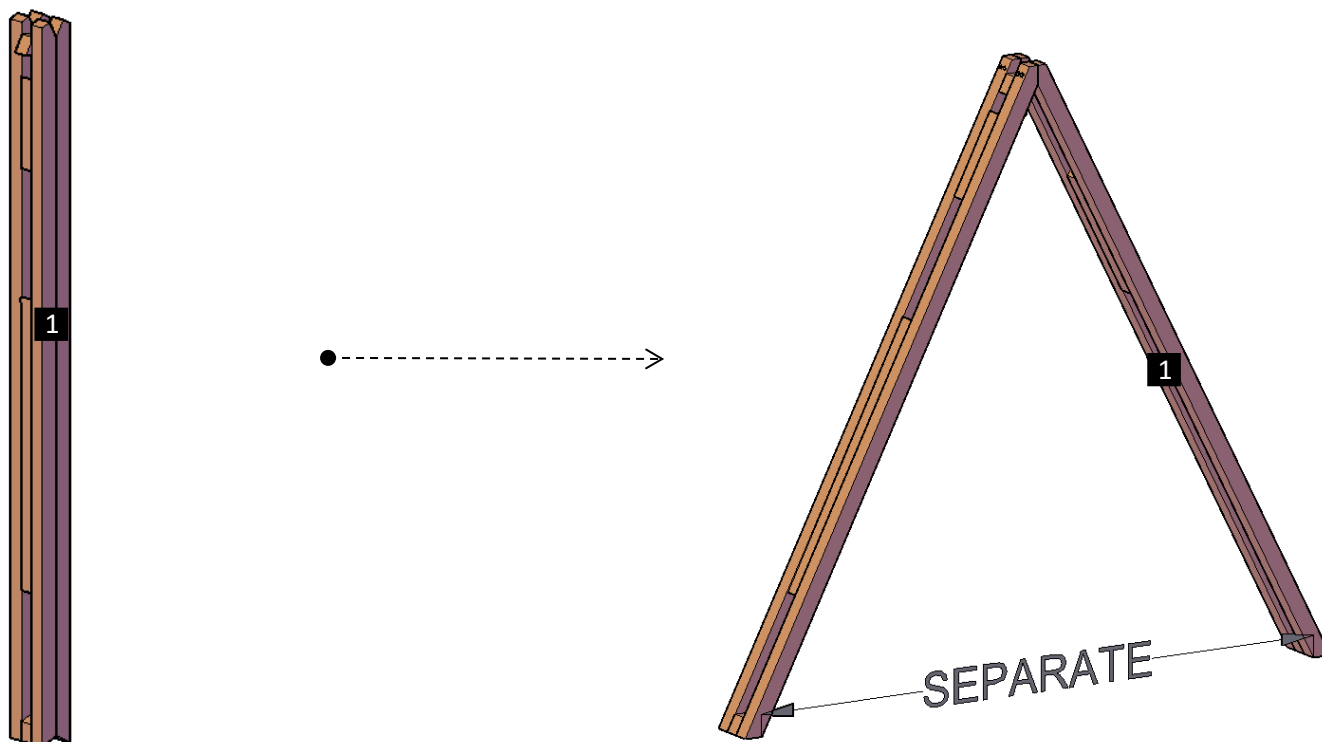





**Step 2:** Pull out the cross supports and line up to match the predrilled hole. After that, use 3/8" X 10" Bolts (A) with washer and nut to secure in place.

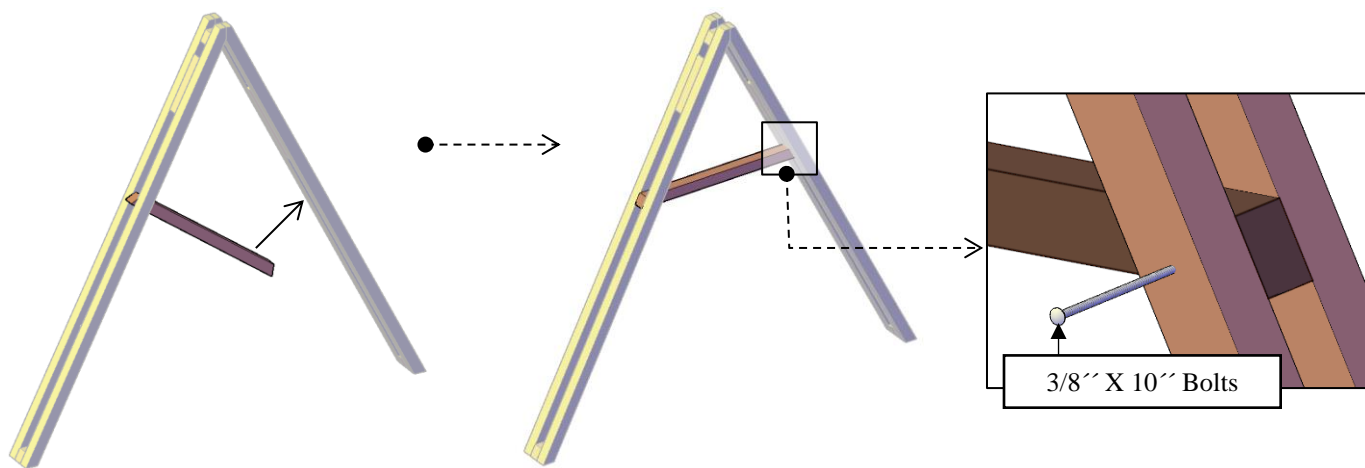

**Step 3:** Use 3/8" X 10" Bolts (A) with washer and nut to attach the lower main support (2) to the frame legs. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

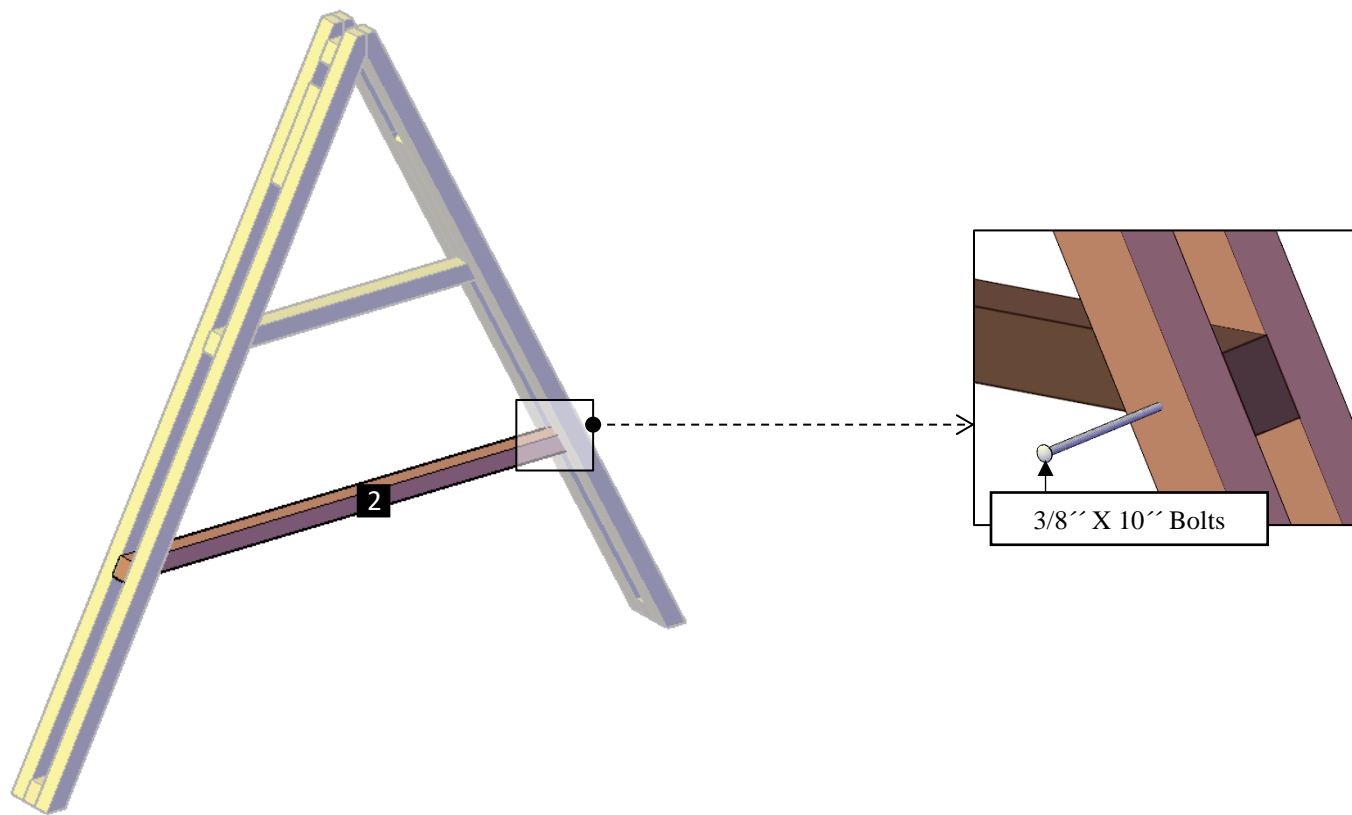


**Step 4:** Put the 3/8" x 5 1/2" bolts (B) with washer and nut as shown.

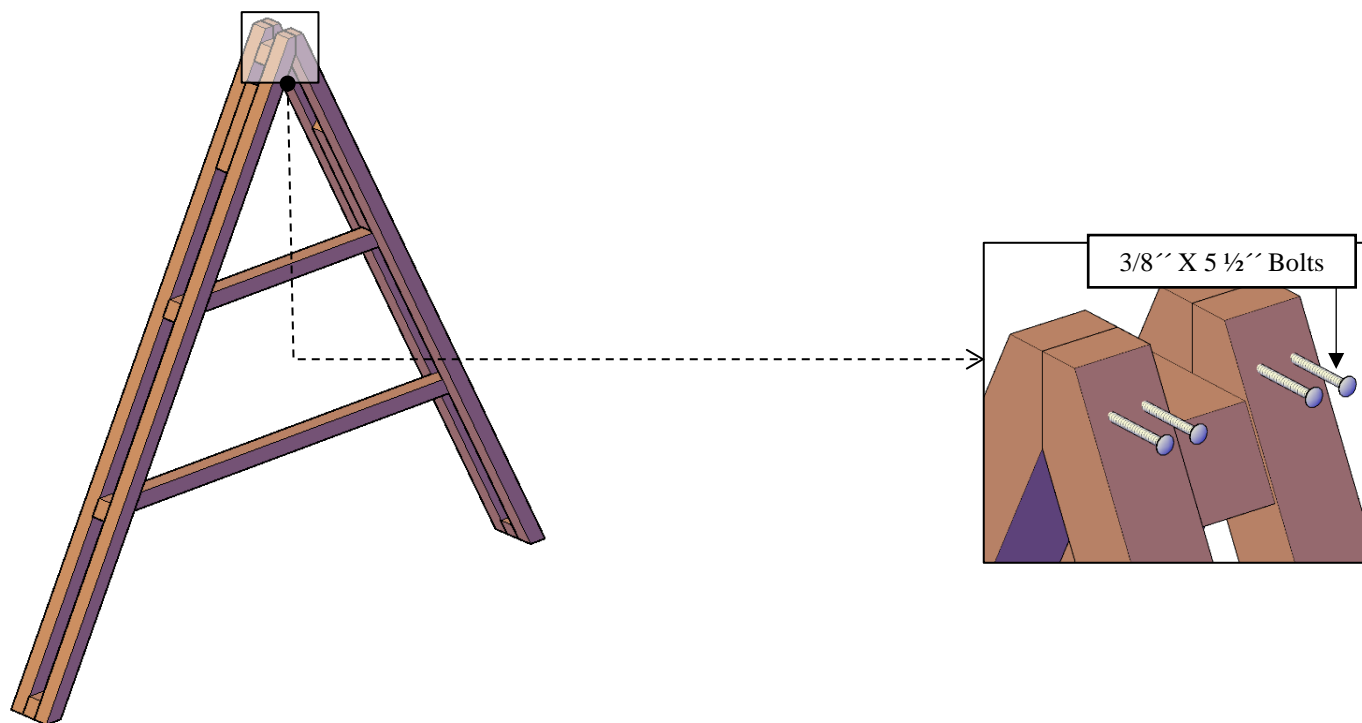


**Step 5:** Pull out the top cross supports.




**Step 6:** Use 3/8" X 10" Bolts (A) with washer and nut to attach the top main supports (3) to the frame legs. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

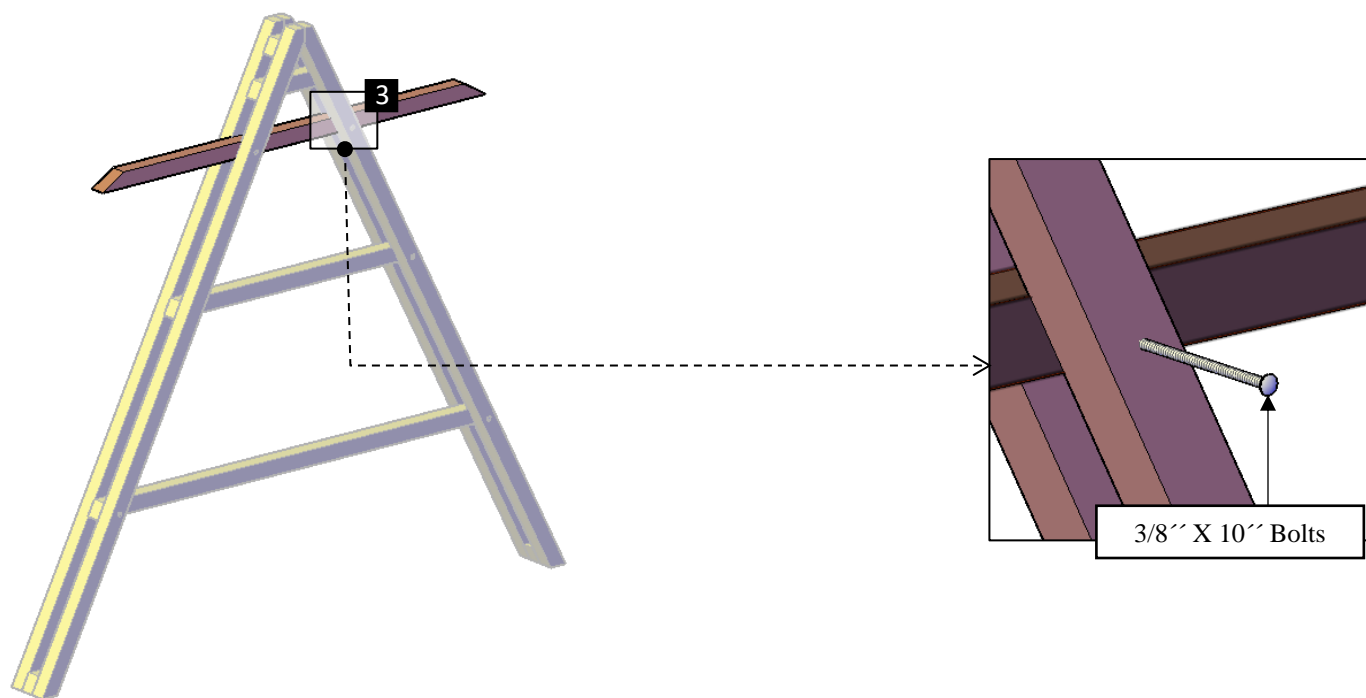


**Step 7:** Install the anchor bases (21) with 1/2" X 3 1/2" anchor bolts (C). Please see the "How to anchor your pergola document" for all details. Set your frame legs (1) in the saddle of the anchor bases. Drill a  $\phi$  1/4" hole in the post prior to anchoring to facilitate the ratcheting of the hardware. After that, use a 5/16" X 3" bolts (D) to attach each post to its respective anchor base.

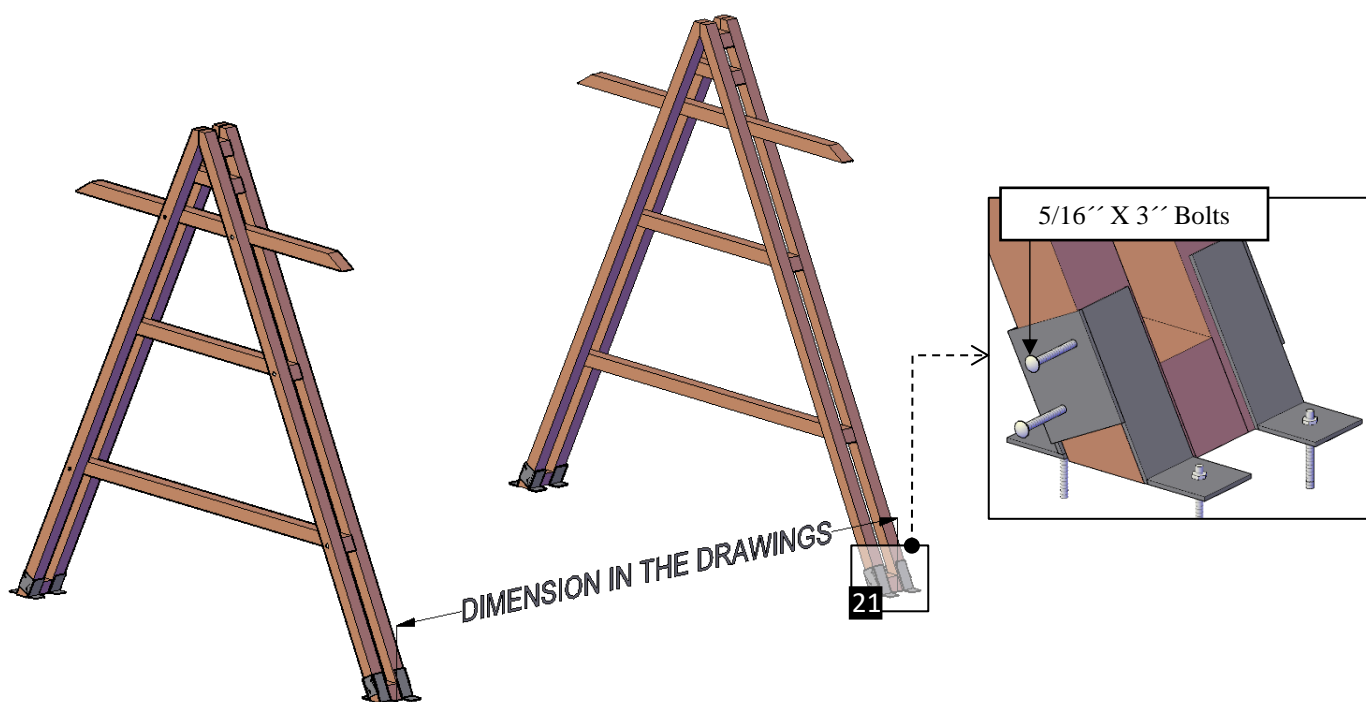


**Step 8:** Attach the roof frame (4) to the frame legs with 3/8" x 7" Bolts (E). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

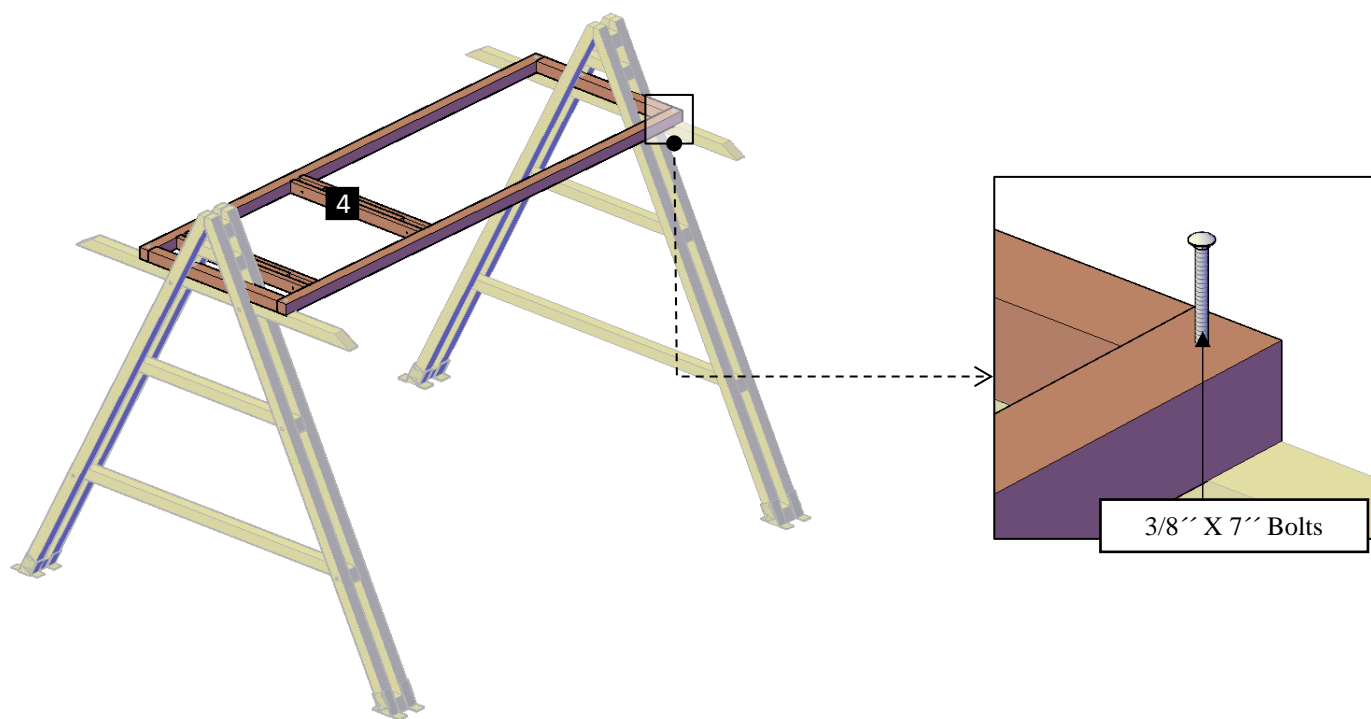


**Step 9:** Use 5/16" x 4 1/2" bolts (F) to attach the metal base (22) to the main structural timber (5). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

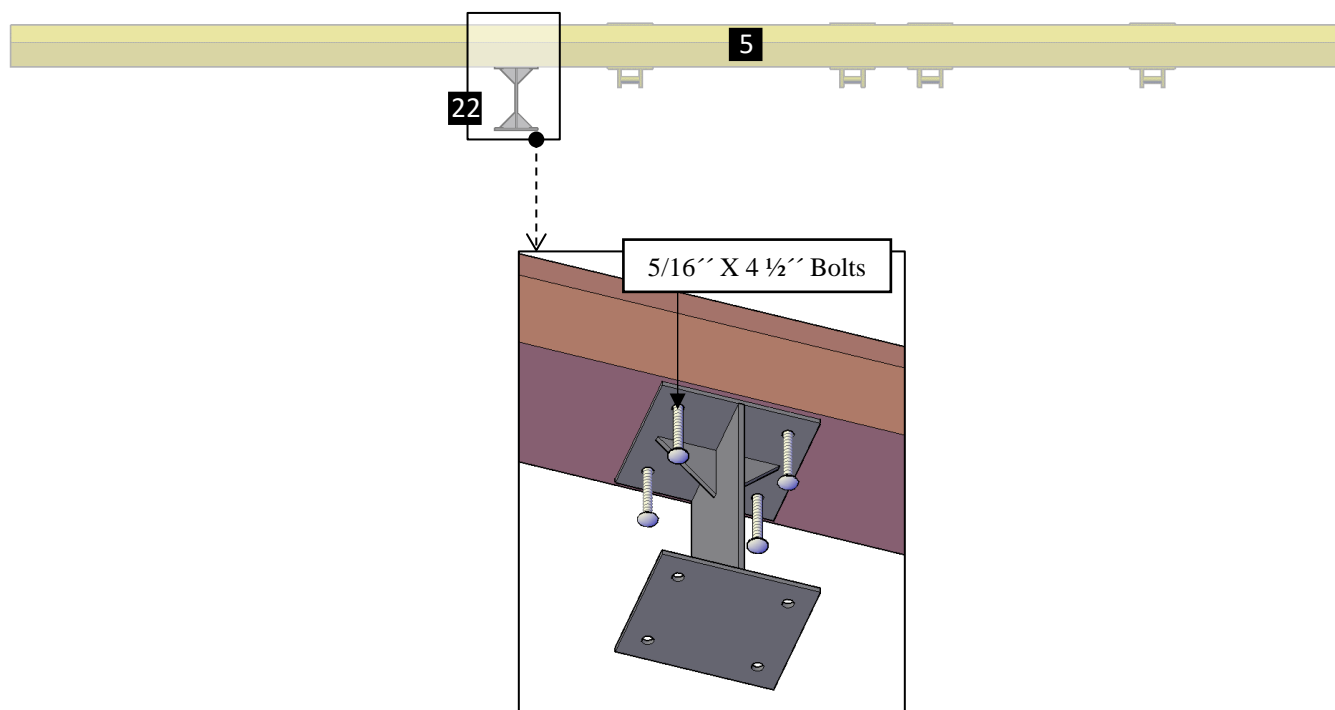

**Step 10:** Put the Quick Links (P) in the hangers. After that, put the chains (O). Take a few minutes to adjust the chain height to your preference.

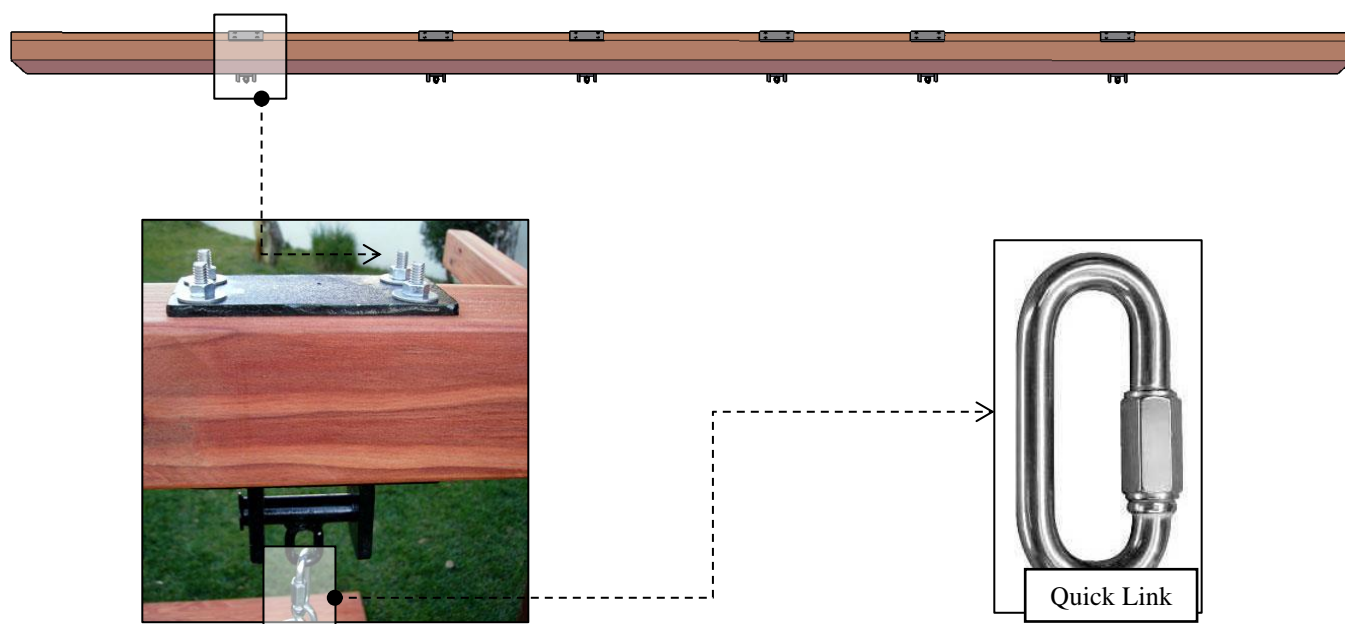


**Step 11:** Use 3/8" x 10" bolts (A) to attach the small support (6) to the frame legs. After that, attach the main structural timber (5) to the frames legs with 3/8" x 12" bolts (G) with washer and nut. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

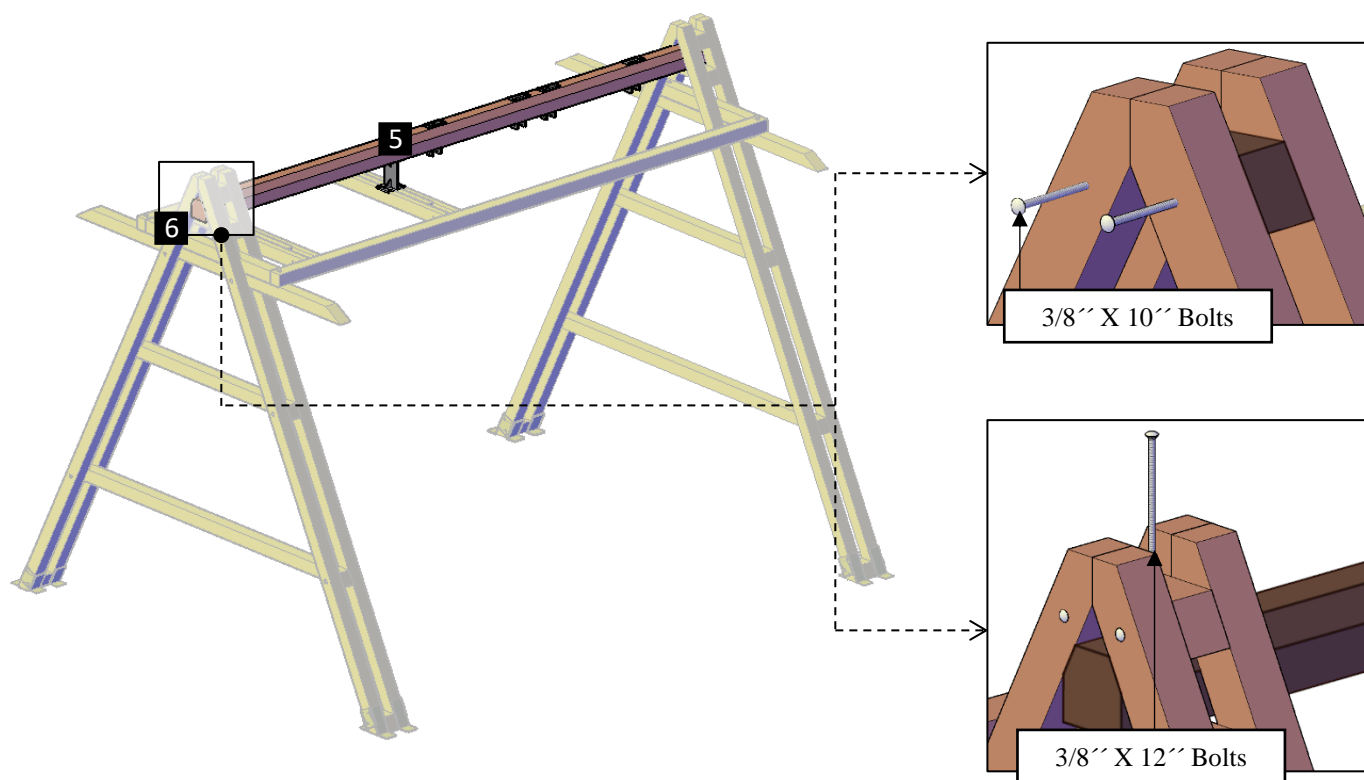





**Step 12:** Use 3/8" X 10" Bolts (A) with washer and nut to attach the cross supports to the frame legs.

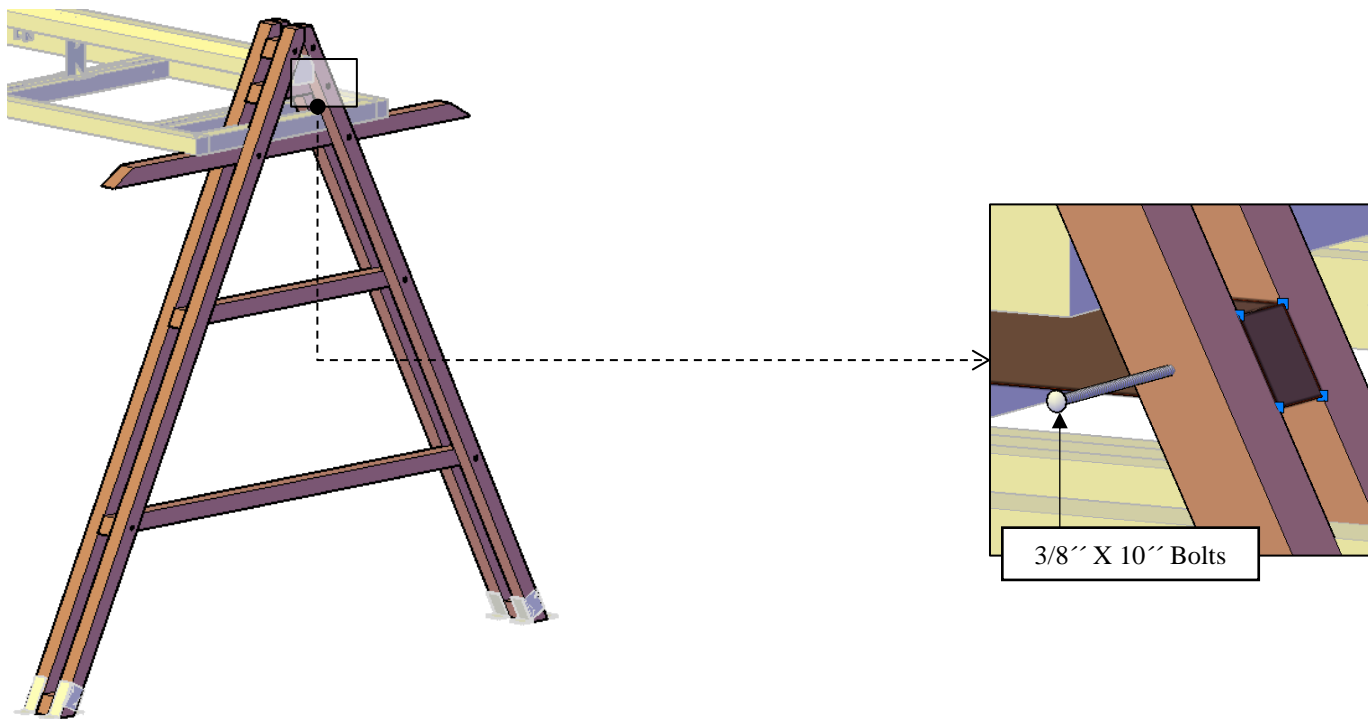


**Step 13:** Attach the connector timbers (7) to reinforce the connection between the frame legs and the main structural timber. Use 3/8" x 7" bolts (E) with washer and nut to attach. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

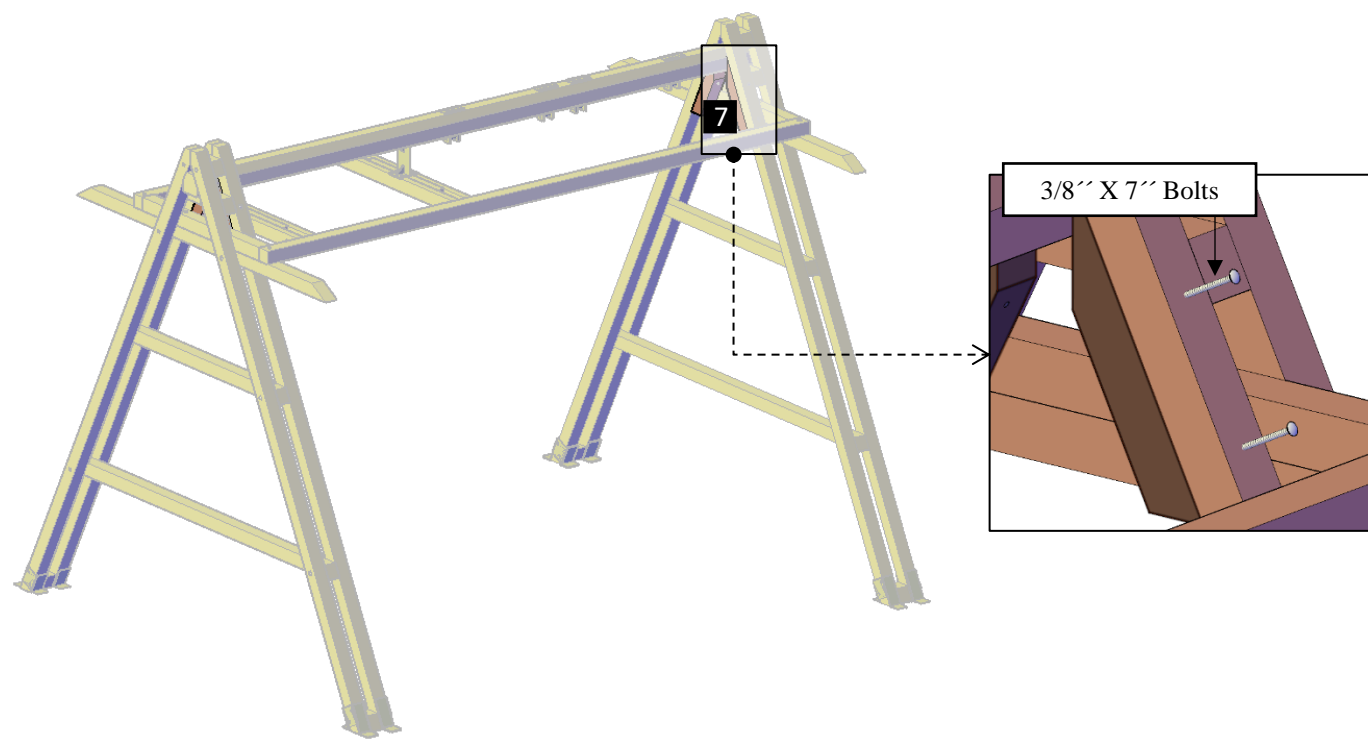


**Step 14:** Attach the knee braces (8) to the main structural timber with 3/8" x 10" bolts (A) and to the frame legs with 3/8" x 7" bolts (E). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

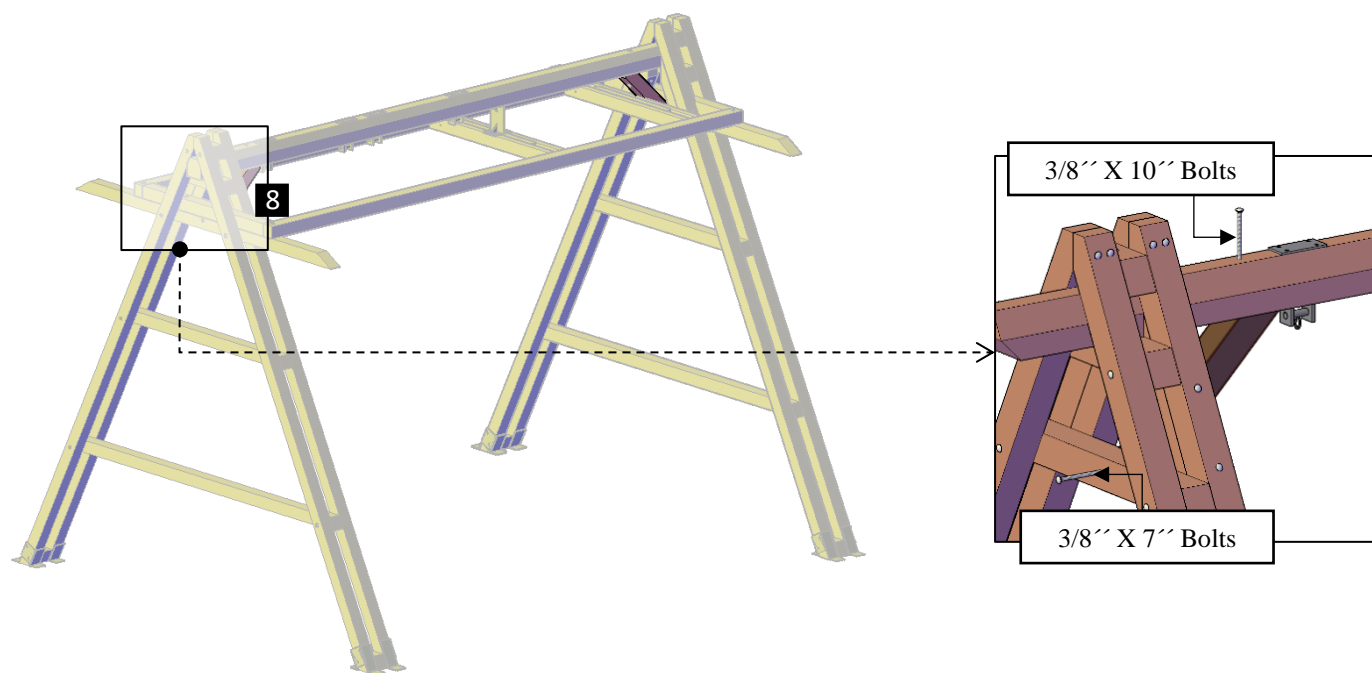


**Step 15:** Use 5/16" x 5" bolts (H) to attach the metal base to the roof frame. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

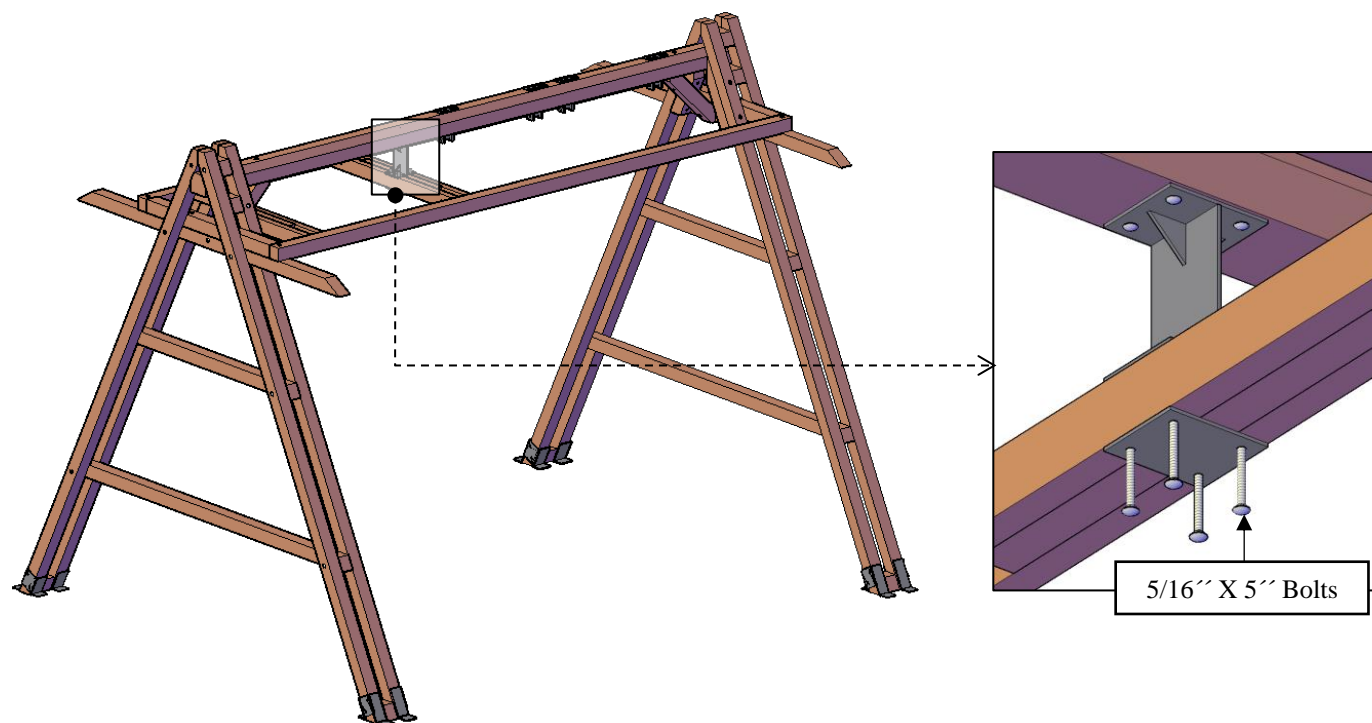


**Step 16:** Use 3/8" x 6 1/2" bolts (I) to attach the straps (9) to the roof frame. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

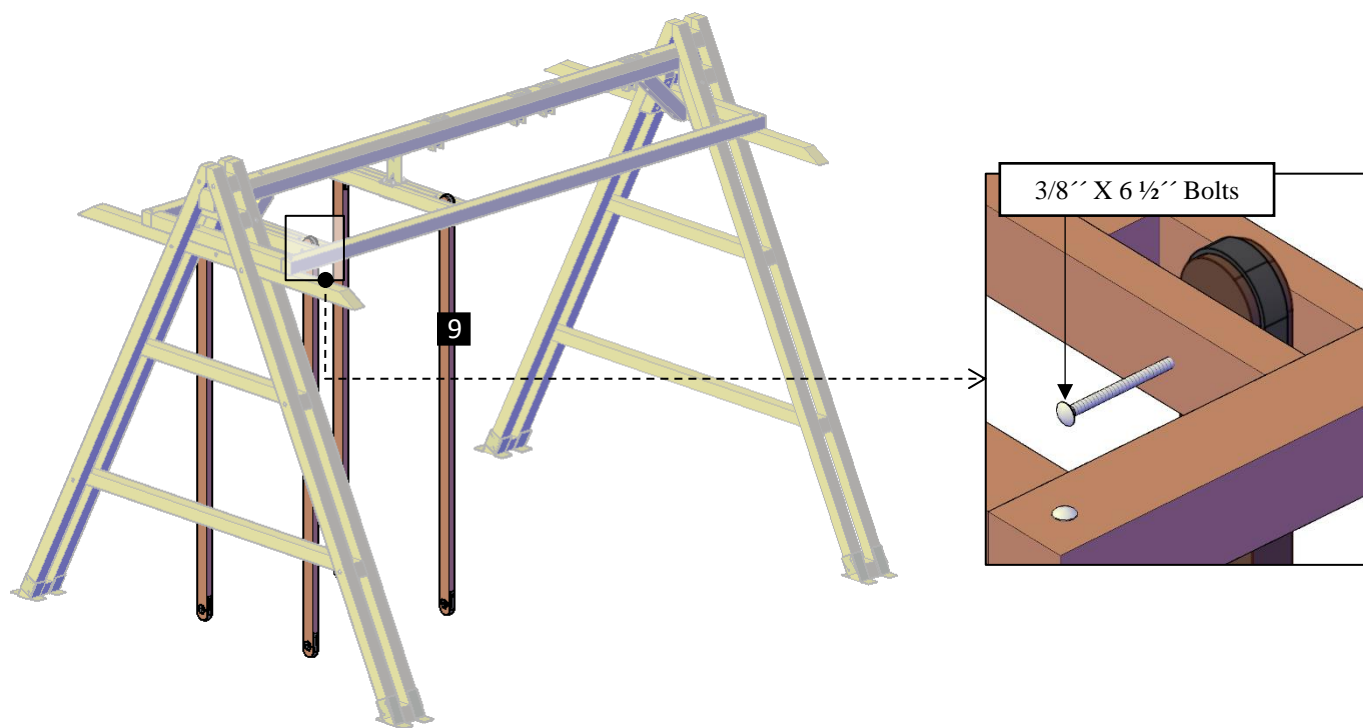


**Step 17:** Use 3/8" x 6 1/2" bolts (I) to attach the Kid's Platform (10) to the straps. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

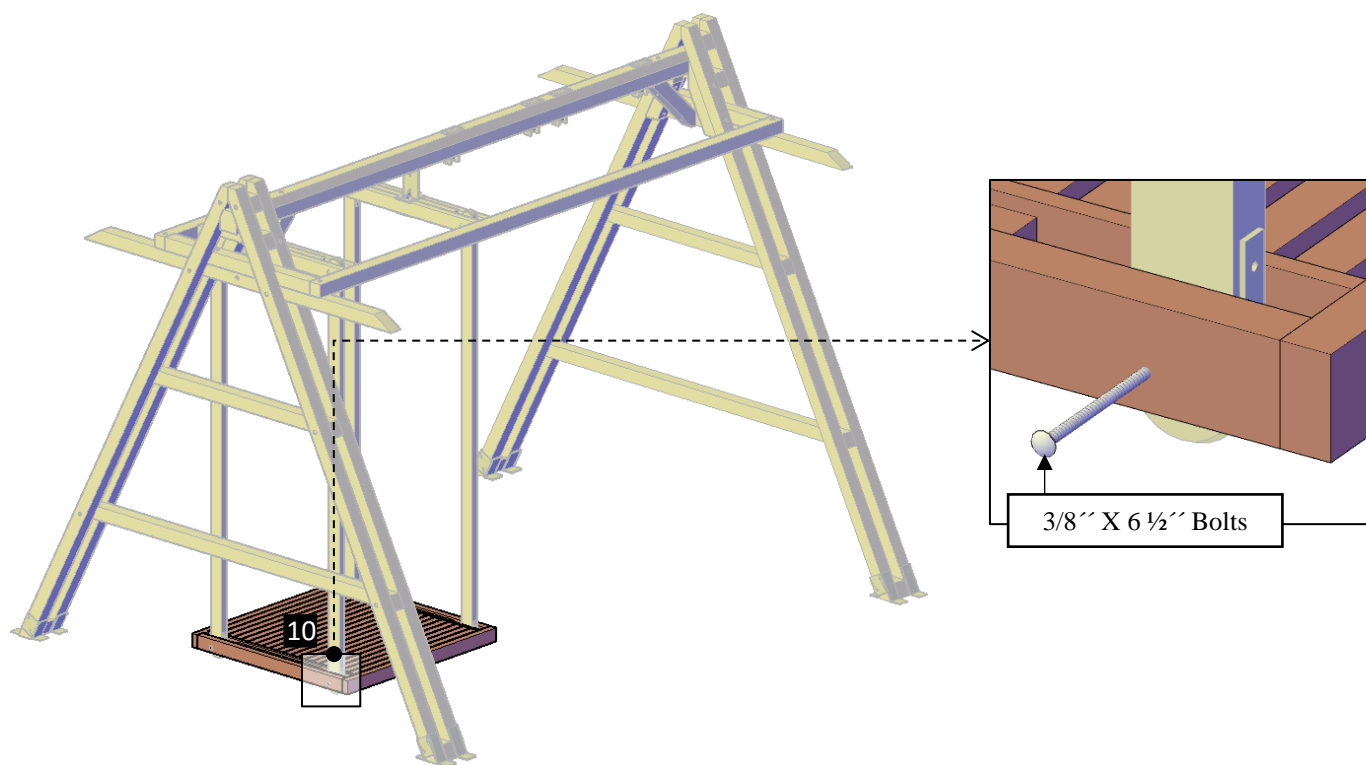


**Step 18:** Use 5/16" X 3 1/2" bolts (J) to attach the long bench legs (12) to the bench seats (11). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

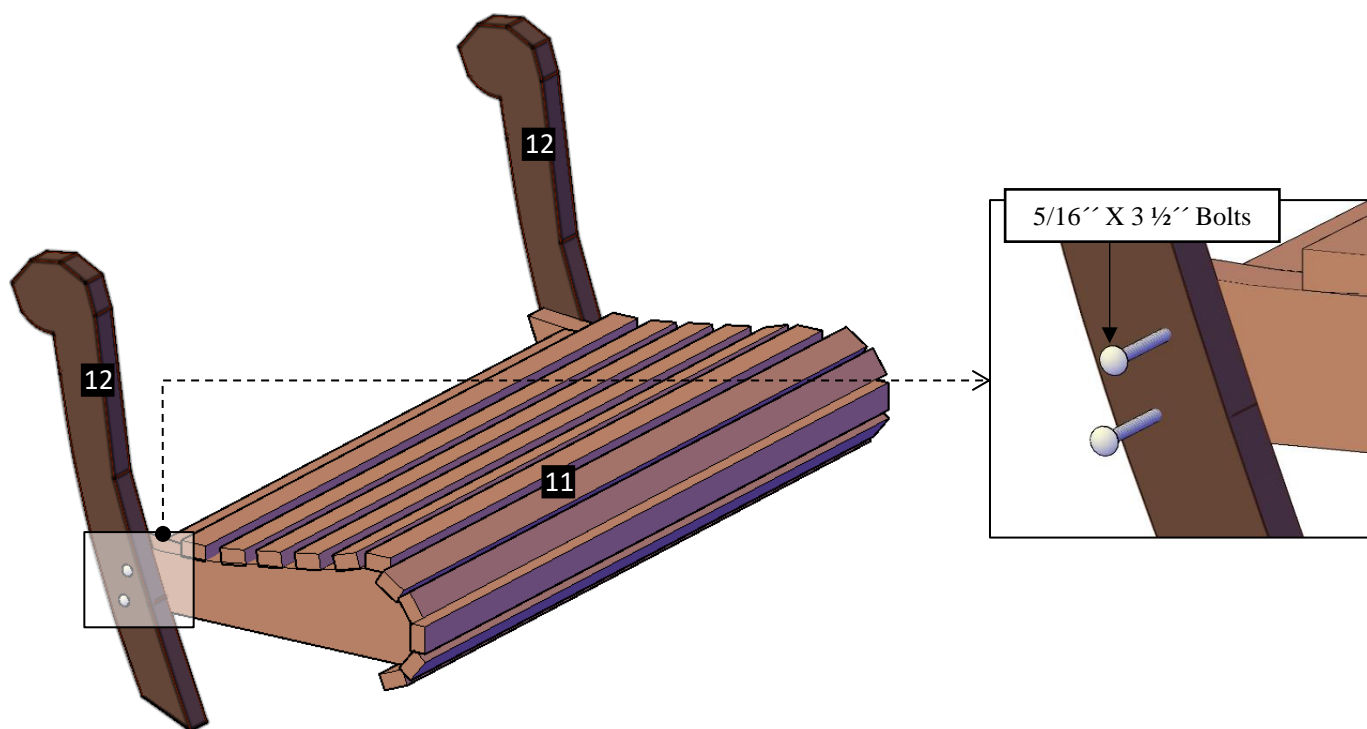


**Step 19:** Use 5/16" X 3 1/2" bolts (J) to attach the benches to the straps. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

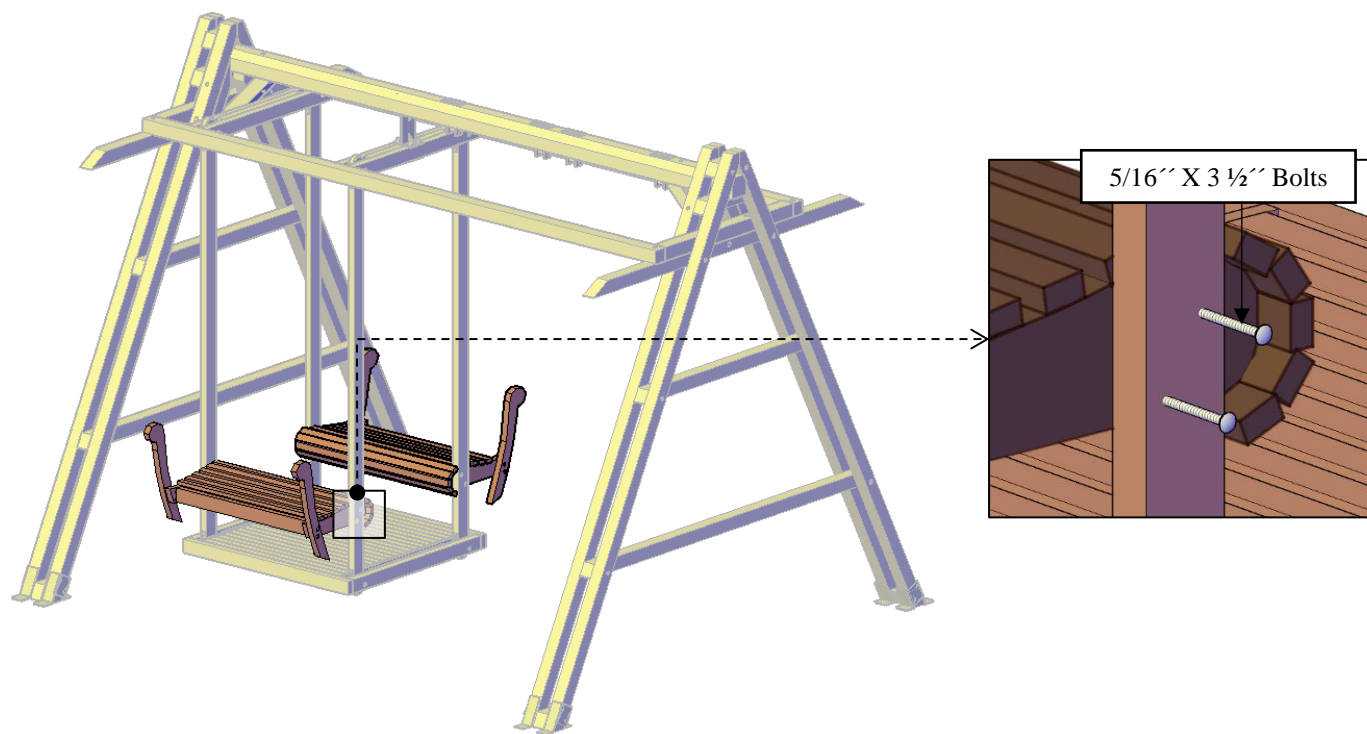

**Step 20:** Attach the short bench legs (13) to the benches and to the straps with 5/16" x 3 1/2" bolts (J). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

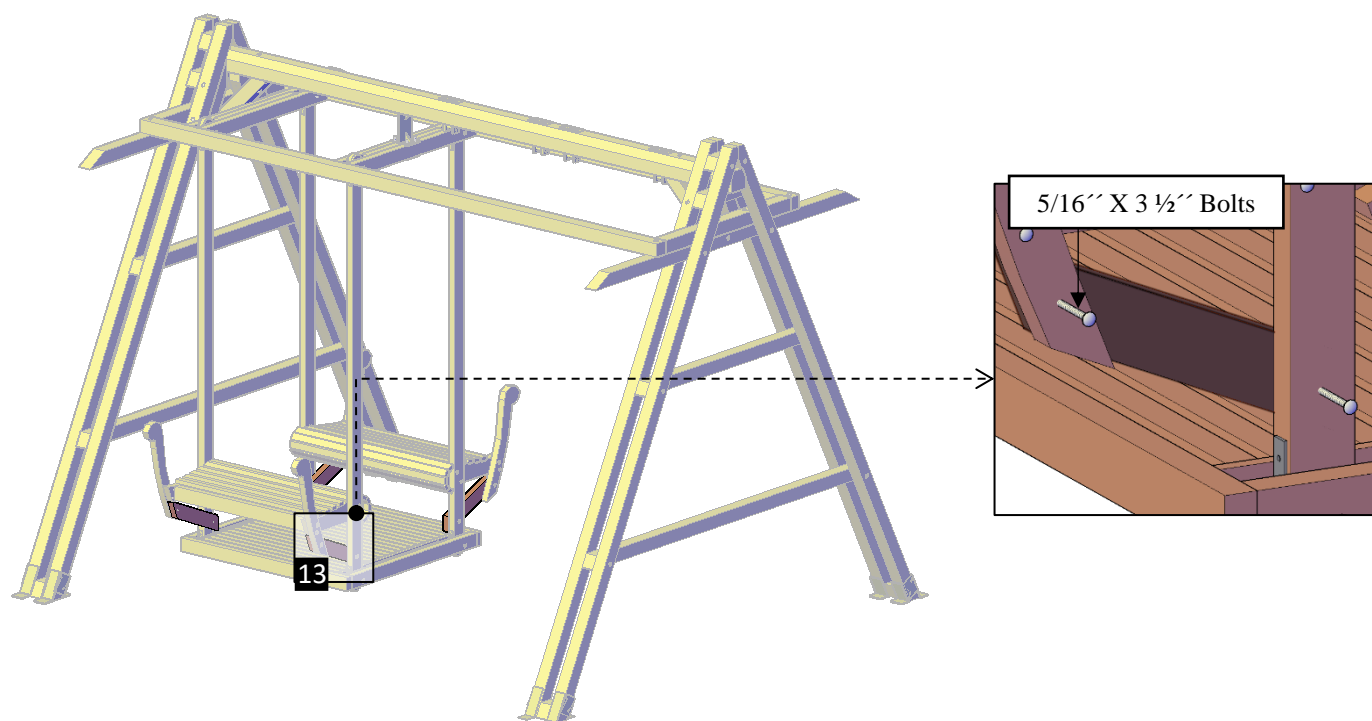


**Step 21:** Attach the bench backrests (14) to the benches with 5/16" x 3 1/2" bolts (J). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

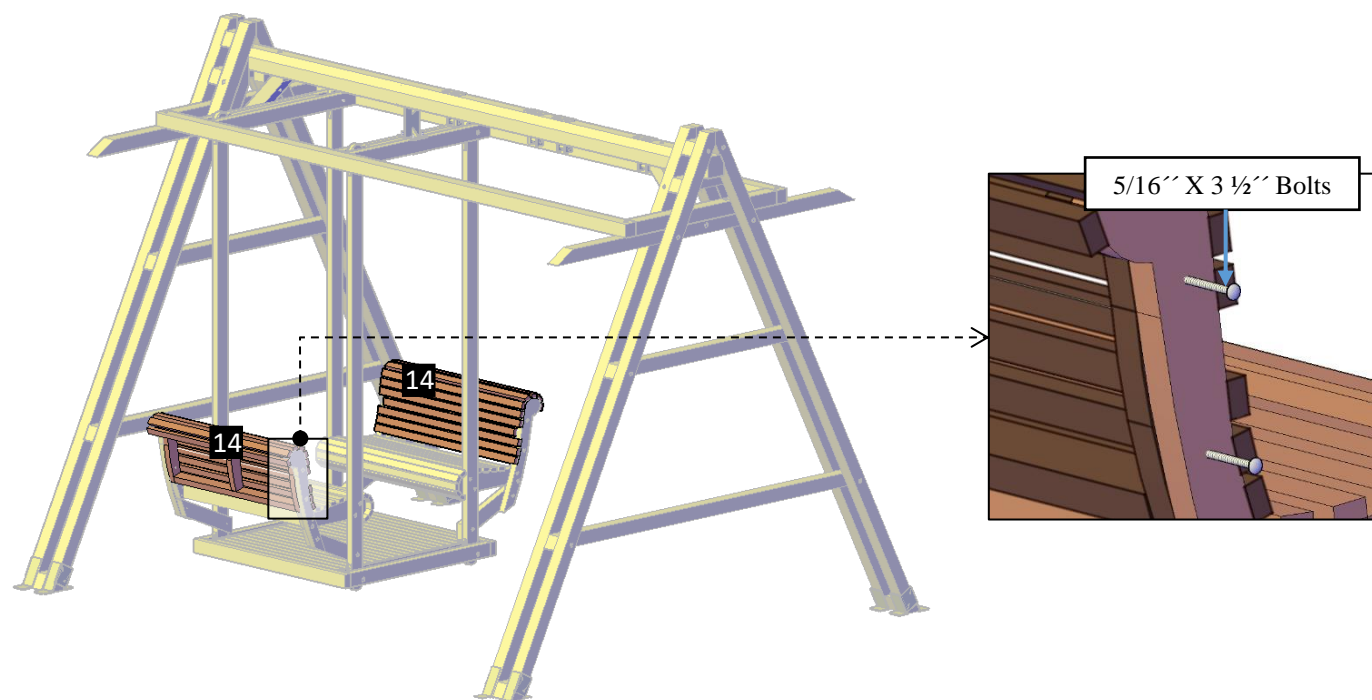





**Step 22:** Use 5/16" x 3 1/2" bolts (J) to attach the bench armrests (15) to the straps and to the benches. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

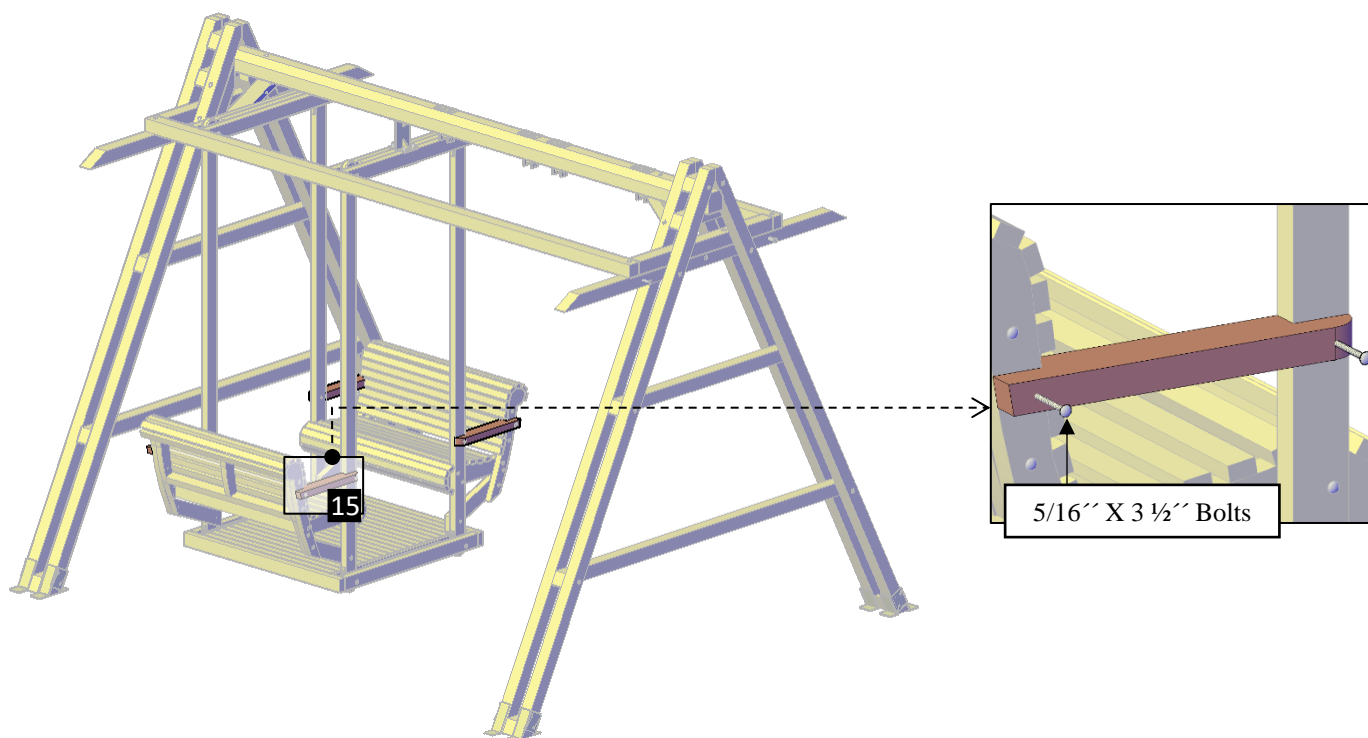


**Step 23:** Use quick links (P) to join the Swing seats (16) to the chains.

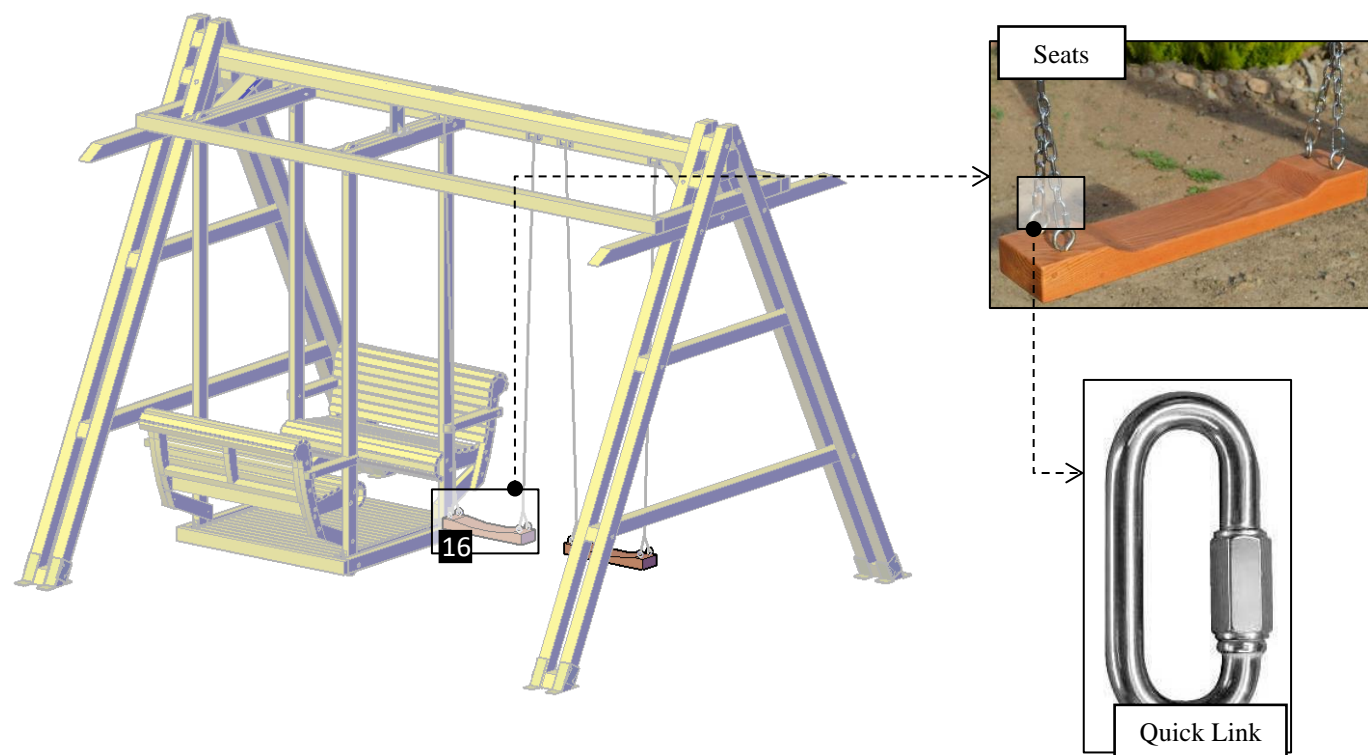


**Step 24:** Use 3/8" x 6" bolts (K) to attach the roof covers (17) to the roof frames. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

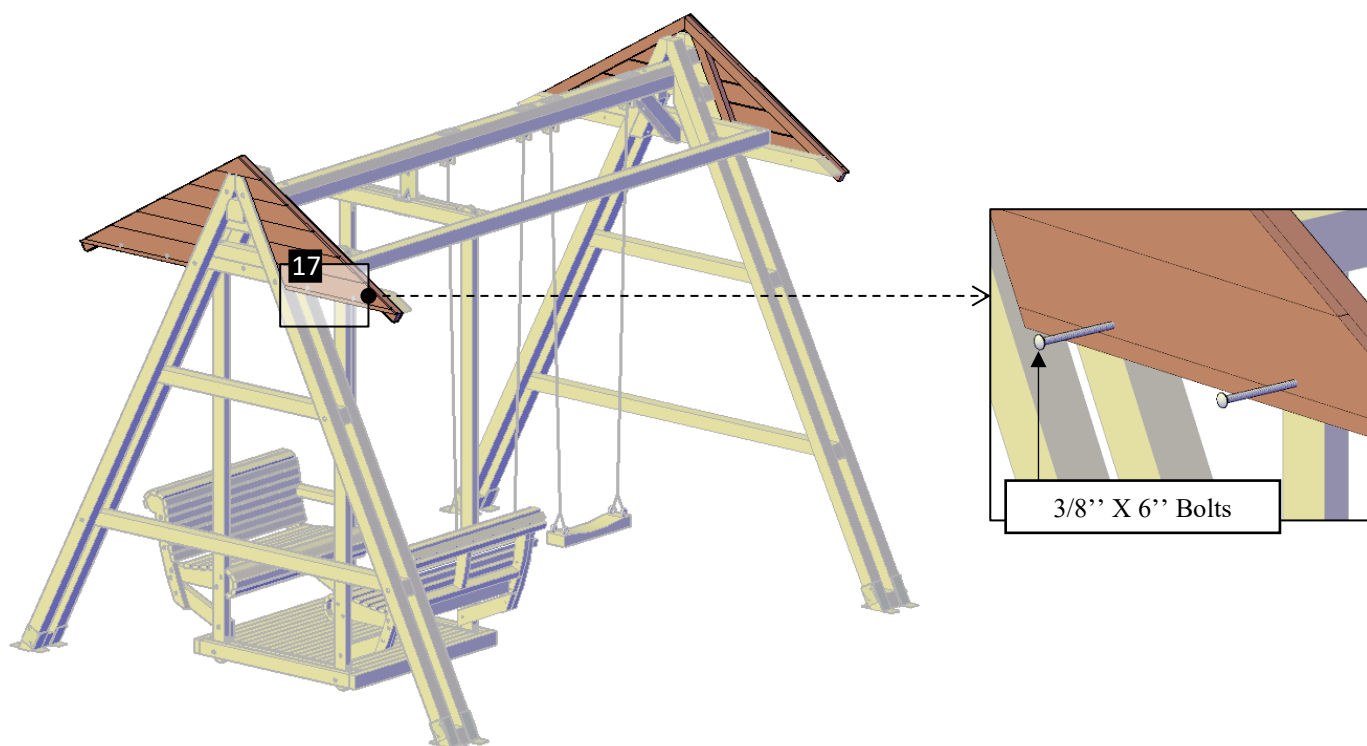


**Step 25:** Attach the roof panels (18) to the roof covers with 3/8" x 8 1/2" bolts (L). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

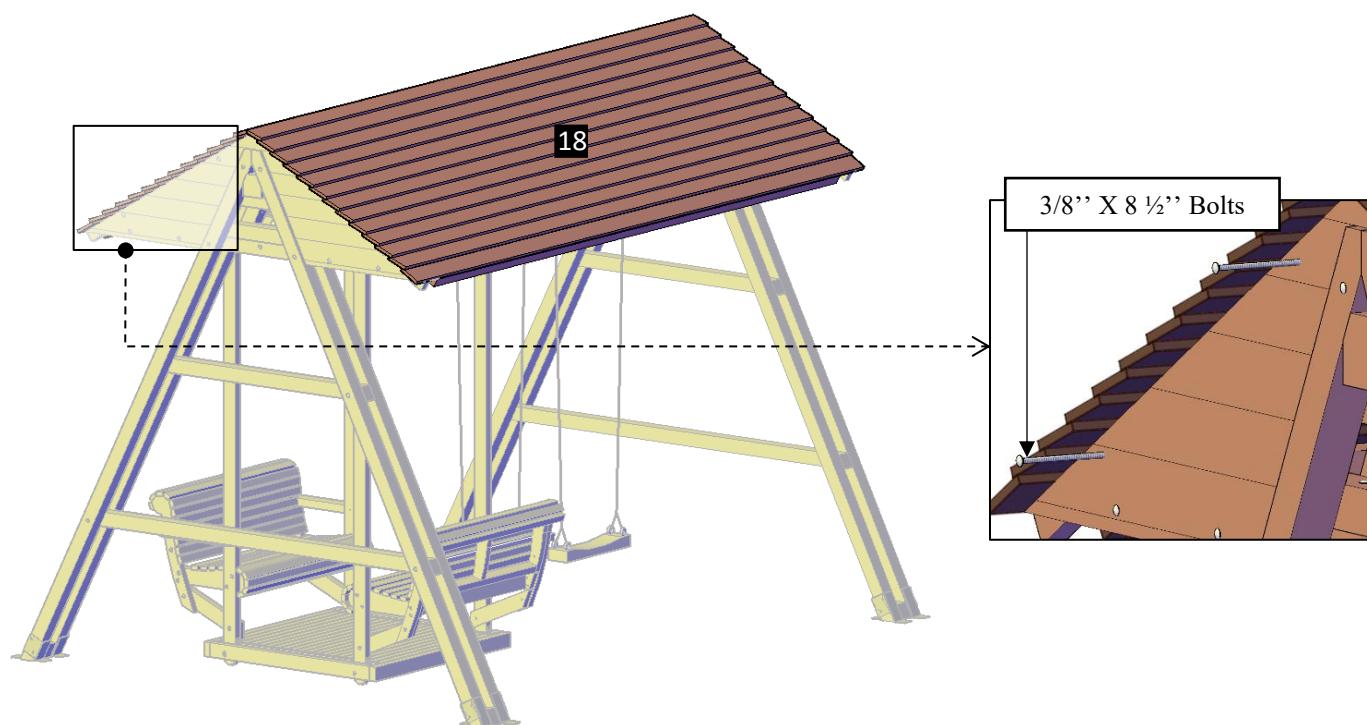

**Step 26:** Use 2'' deck screws (**M**) to attach the roof board (**19**) to the roof panels. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

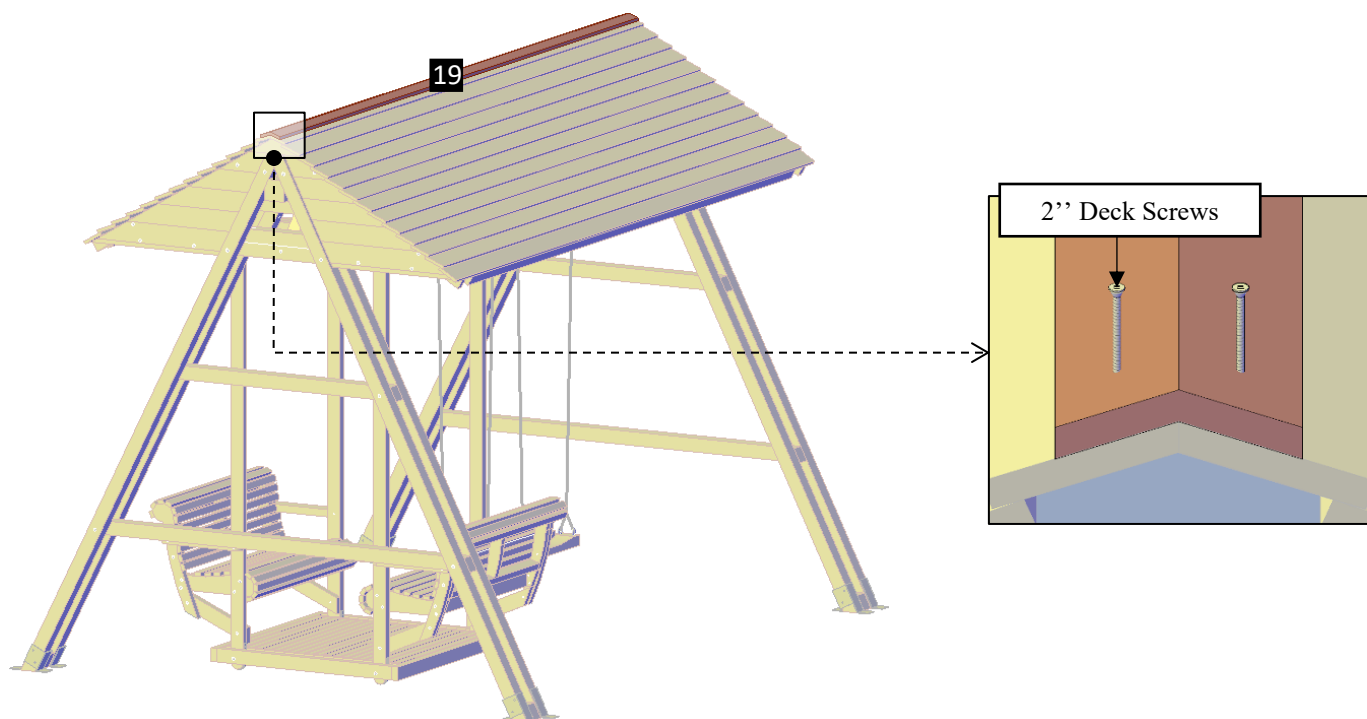

**Step 27:** Attach the boots (20) to the leg frames with 3'' deck screws (**N**). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

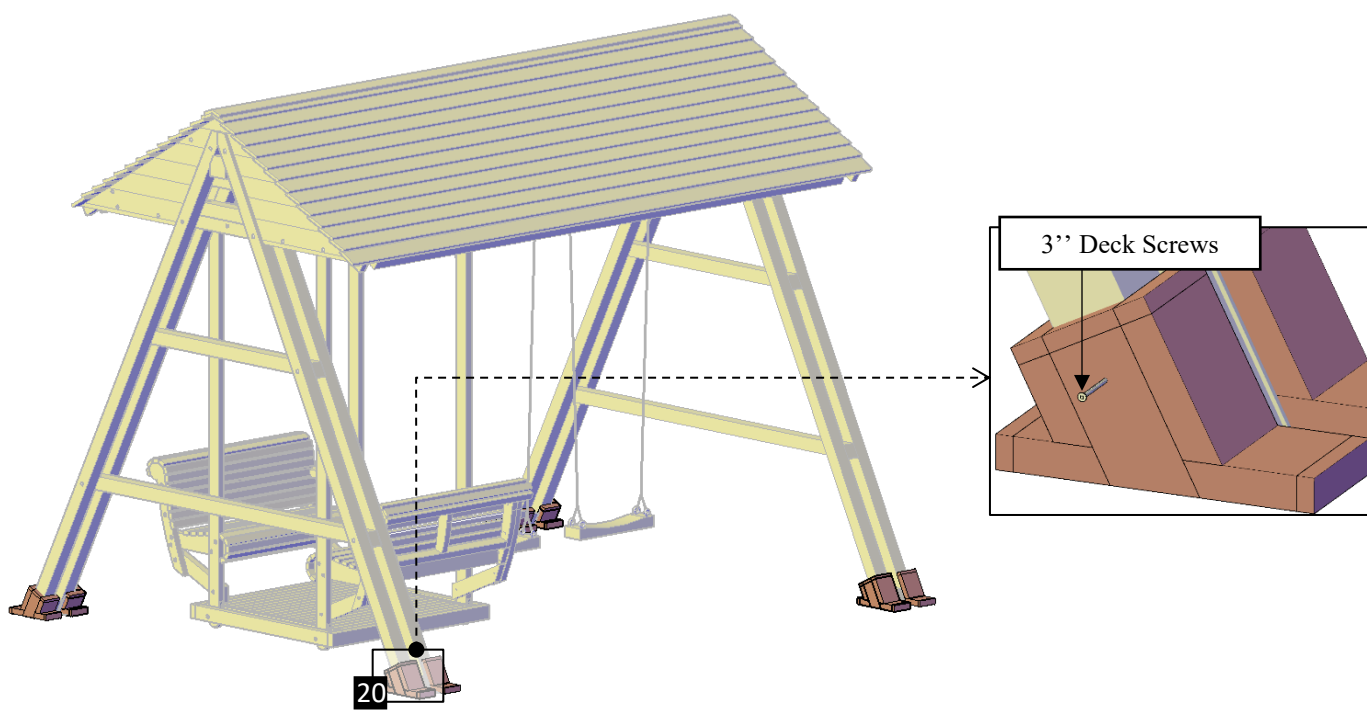



**Step 28:** Finally, with a couple of people helping, turn the swing right side up.



*This completes the Swing Set assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.*