
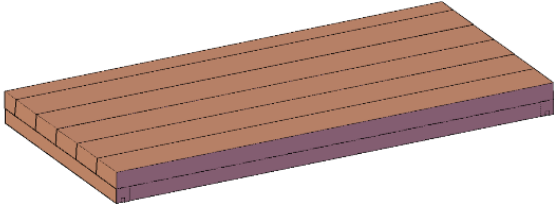
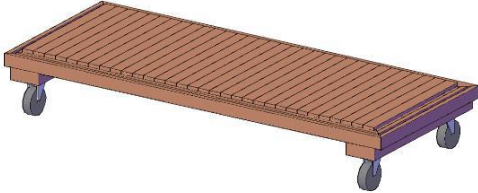
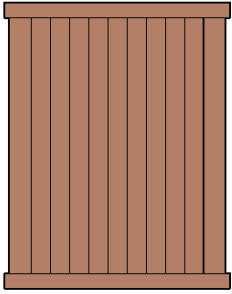
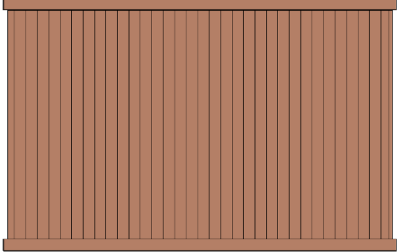
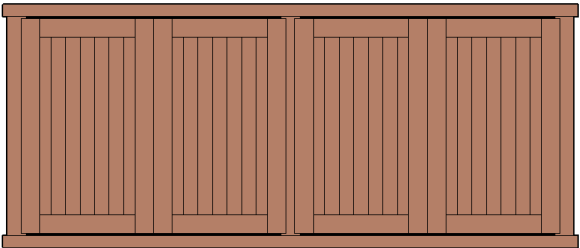


866.332.2403; Outside the US: 619.600.5630 8am-5pm Pacific Time, Monday-Friday

## Assembly Instructions for: **KIYOMI'S HOST CARTS**



## CONTENT OF BOXES

Quantity	Description	Drawing
1	Top	
1	Floor	
2	Side Walls	
1	Back Wall	
1	Front Wall	
2	Shelves	
12	2 1/2" x 5/16" Carriage Bolts, Washers and Nuts	
12	3" x 5/16" Carriage Bolts, Washers and Nuts	
8	4" x 5/16" Carriage Bolts, Washers and Nuts	


## ASSEMBLY INSTRUCTIONS

Thank you for purchasing Forever Redwood patio furniture. Forever Redwood is built by Old-Growth Again Restoration Forestry (OGA). OGA is dedicated to restoration forestry. Sales of patio furniture finance our restoration work in California redwood forestlands.


**Tools required:** ½-inch ratchet and a mallet or small hammer.

The parts that go together have the same numbers written next to the predrilled holes they attach to. Align the parts with the numbers as shown for ease of reference.

**Step 1:** Attach back wall to floor with two bolts (4" x 5/16"), washers and nuts. Match the numbers next to the predrilled holes. Tap in the carriage bolts all the way into the wood so that it is "set" into the wood. Then insert the washer and nut and tighten lightly with a ½-inch ratchet. The bolts should tap into their holes. If you have to force a bolt, the piece is probably on the wrong side, is not aligned properly or is turned around. Do not over tighten or you'll crush the redwood and weaken the swing's strength.

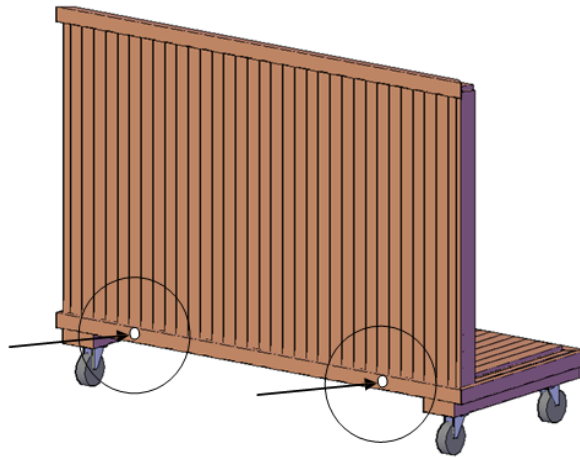


**Step 2:** Attach side wall to back wall with 3 carriage bolts (2 ½" x 5/16"), washers and nuts. Line up the predrilled holes on both sides and make sure the numbers written match. *Repeat this step for other side wall.*

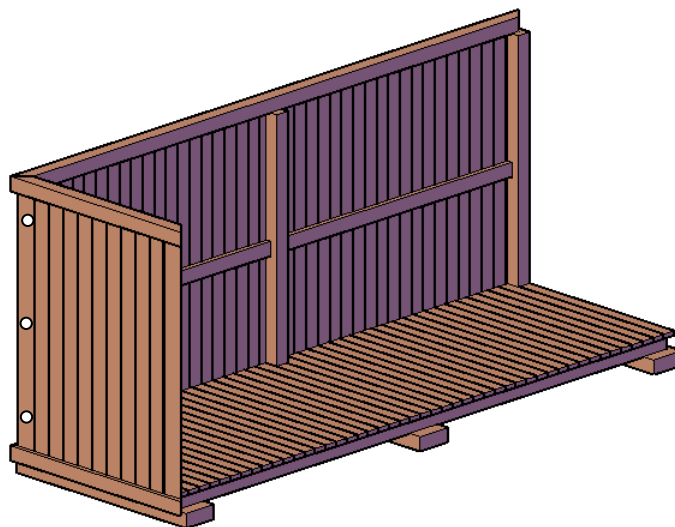


**Step 3:** Attach shelf to walls. Use two carriage bolts (3" x 5/16"), washers and nuts to attach to each side wall and one carriage bolt, washer and nut to attach to back wall as shown below. Repeat this step for the other shelf.



**Step 4:** Attach front wall to side walls, shelves and floor. Use two carriage bolts (4" x 5/16"), washers and nuts to attach to floor, 3 carriage bolts (2 1/2" x 5/16"), washers and nuts to attach to each side wall and one carriage bolt (3" x 5/16") to attach to each shelf

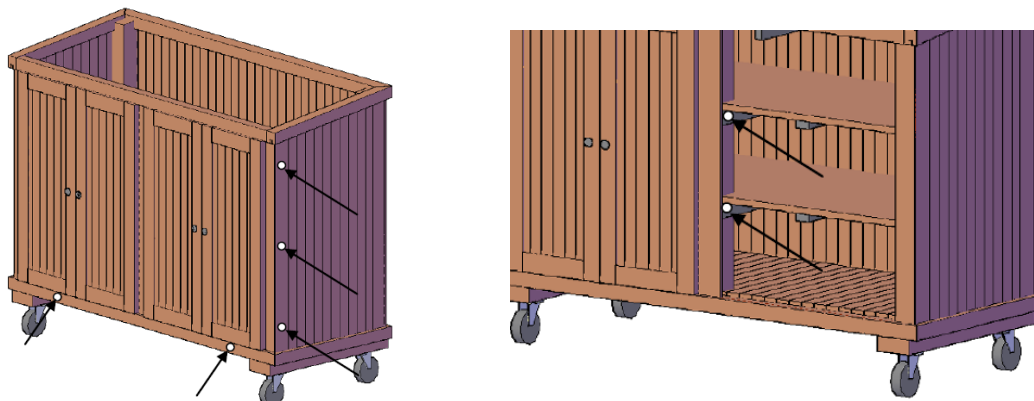

**Step 5:** Attach top to side walls with 2 carriage bolts (4" x 5/16"), washers and nuts per side. Match the numbers written next to the predrilled holes.

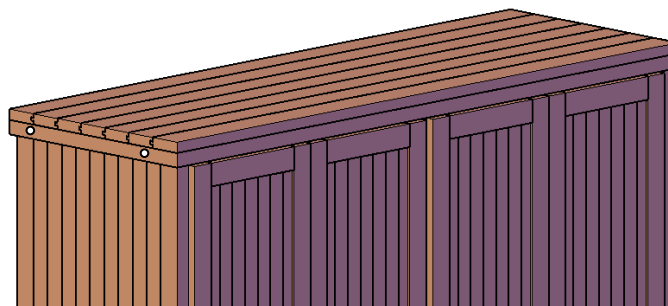

Thank you! If you have any questions, please call or email us.