
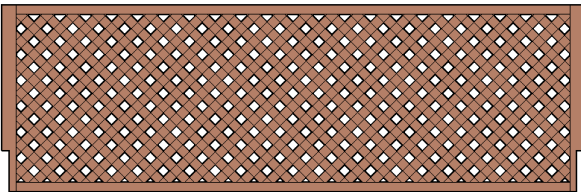









Assembly instructions for: **LATTICE GAZEBO**



CONTENT OF BOXES

<u>QUANTITY</u>	<u>DESCRIPTION</u>	<u>DRAWING</u>
4	Posts	
3	Bottom Panels	
3	Upper Panels	
1	Front support timber with decorative cantilevers	
4	Roof timbers (two of each one)	
Quantity will vary depending on size	Roof panels	
1	Skylight	
Quantity will vary depending on size	Rafters	
4	Plaques for corners	

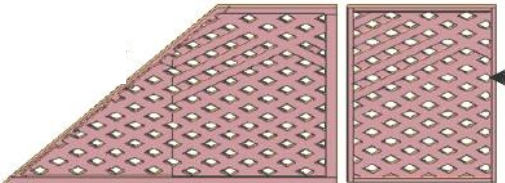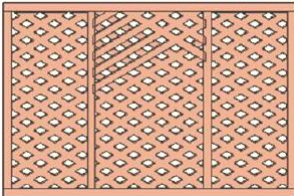
ASSEMBLY INSTRUCTIONS

All Gazebos are completely erected in the shop prior to crating for shipping. All hardware is included. All parts are fully sanded, routed, notched, drilled and numbered for ease of reassembly. The parts that go together have the same numbers/letters written next to the predrilled holes they attach to.


All Gazebos parts are notched into the part they connect to. You'll find the numbers next to the notches and/or drill holes. Before beginning re-assembly, place the parts that go together on the ground with one another so you don't have to be searching around in the middle of the reassembly. Most Gazebos take less than one day to reassemble with one helper.

Note: print the drawings that you approved before start the construction, they are needed to see the distances between the posts.


Step 1. Attach your anchor kit (if you ordered) to the ground. See the distance between the posts shown in your approved drawings.

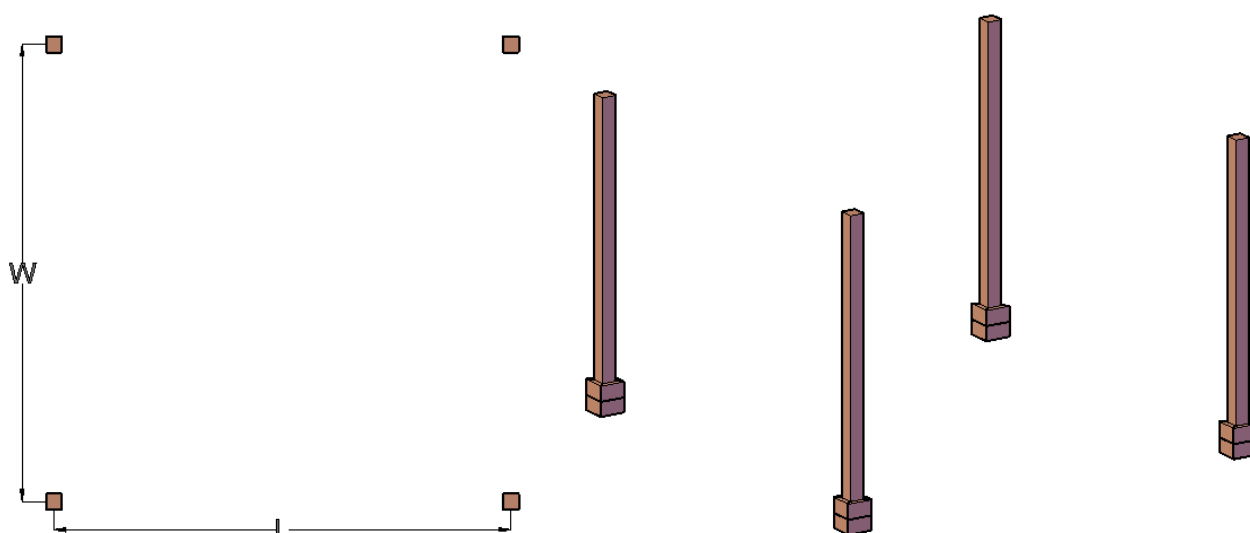




Step 2: Attach posts to lower & upper panels with deck screws (3"X #8) per side. Screw from inside of panel frame into the posts. Match up the numbers to attach the correct two parts together. *Repeat this step with other two posts and panels and then attach the back panels.*

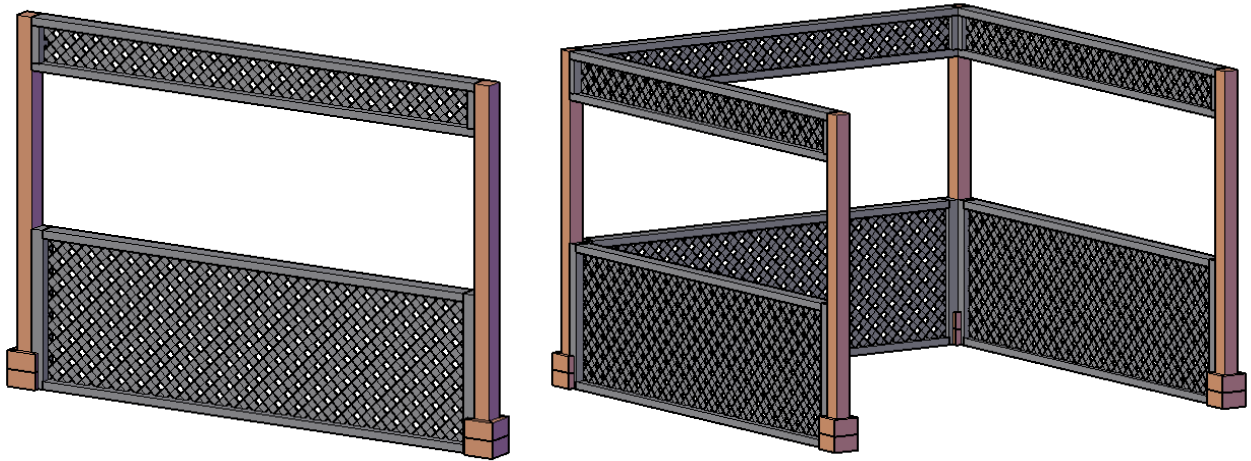

Step 3: Attach front support timber with decorative cantilevers to posts with deck screws (3"X #8) into each post. Match up the numbers to attach the two ends to the correct sides.

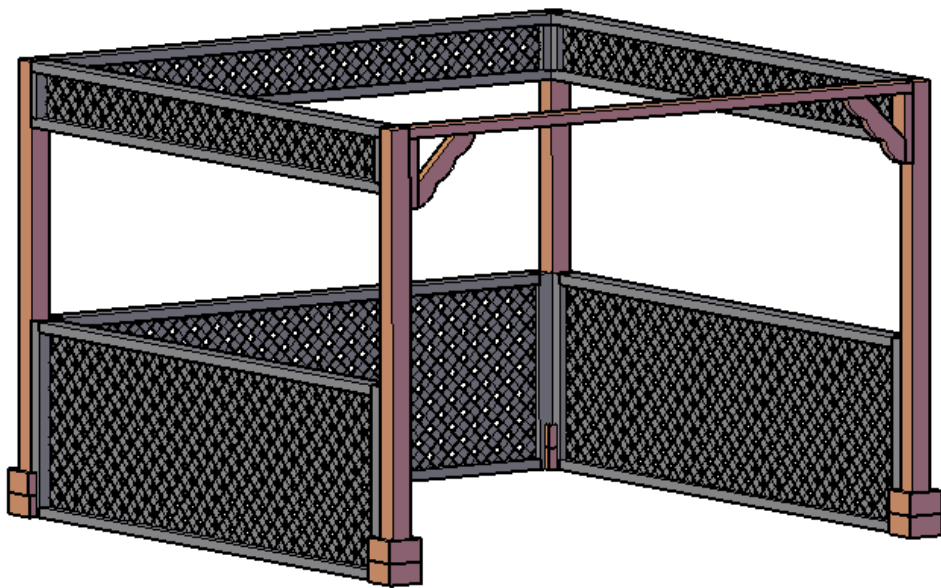


Step 4: Attach the 4 roof timbers together to form the base of the roof. Use a plaque and four lag bolts (5/16" x 4") per corner. (Match up the numbers to attach the two parts together). Insert the bolts of 7 1/2" to attach the roof panels and then place the frame base above the walls.

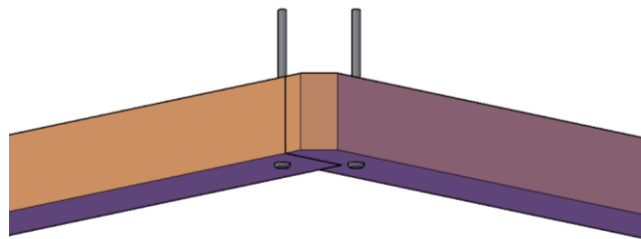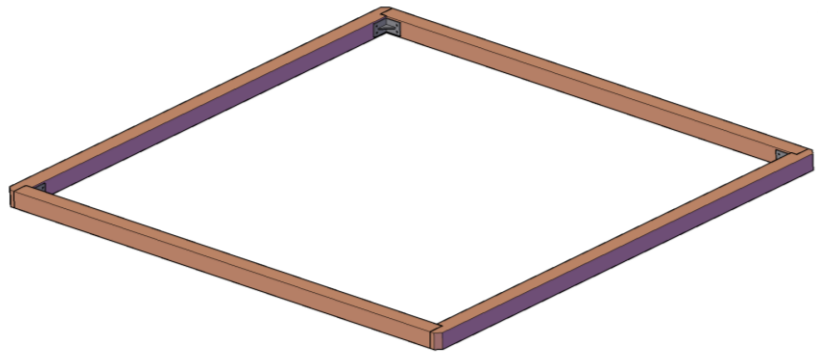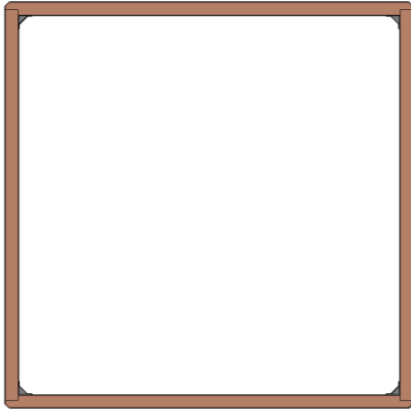


Attach the roof base to the walls panels with lag bolts


Step 5: Attach 6 of the center rafters to the rooftop with bolts (4"x 5/16") washers & nuts. One per rafter. (Match up the numbers to attach the two parts together). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

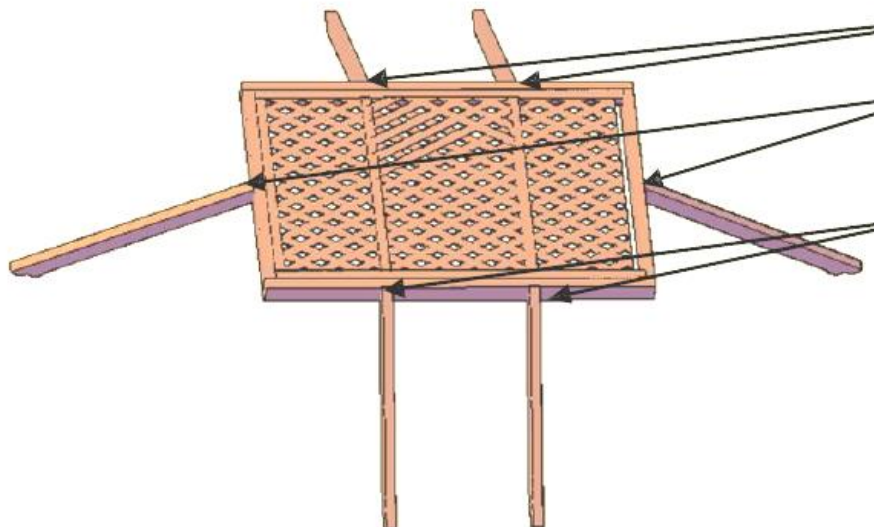



Step 6: Attach the corner rafters to the rooftop with bolts (8"x 3/8") washers & nuts. (Match up the numbers to attach the two parts together). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

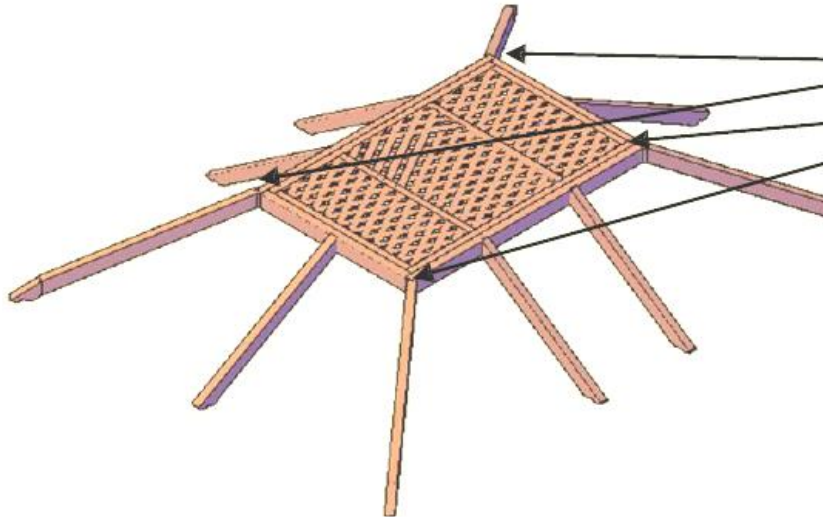

Step 7: Attach the rafters to base of roof with bolts (6 1/2"x 3/8") washers & nuts. (Match up the numbers to attach the two parts together). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

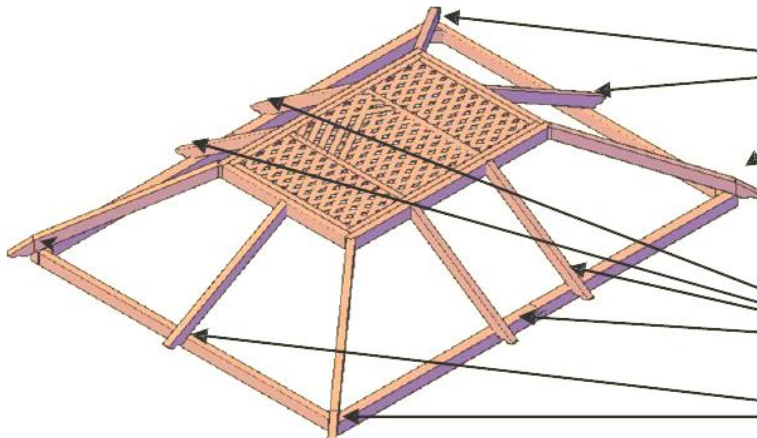

Step 8: Attach the roof panels to rafters with deck screws (#8 x 3") (Match up the numbers to attach the two parts together). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten. *Continue with the other roof panels.*

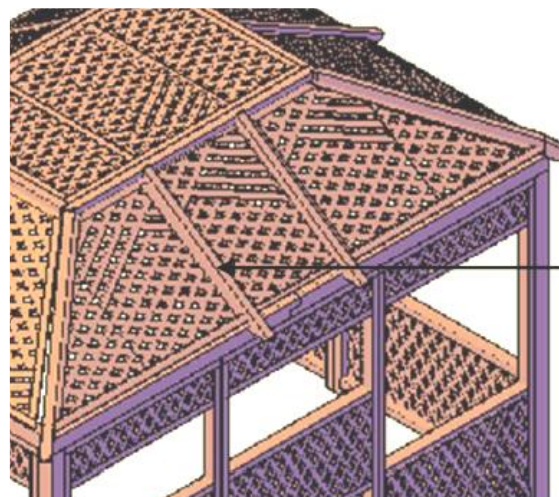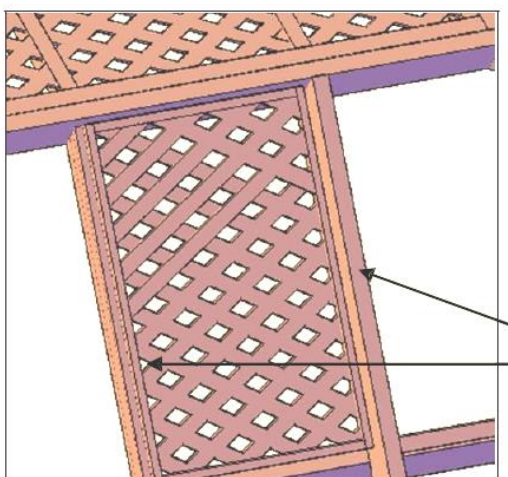



This completes the Gazebo assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.