



866.332.2403; Outside the US: 619.600.5630 8am-5pm Pacific Time, Monday-Friday

Assembly Instructions for: **LIGHTHOUSE WOODEN SHOWER BENCH**

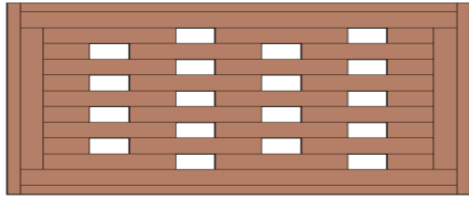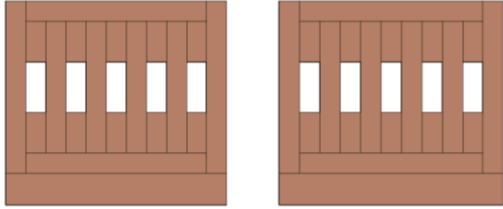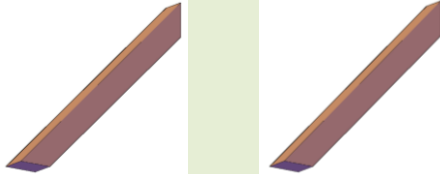

CONTENT OF BOXES

Quantity	Description	Drawing
1	Seat	
2	legs	
2	Diagonal Supports	
8	Deck Screws 8 x 2 1/2"	
4	Carriage bolts 3 1/2" x 5/16", Washers and Nuts	


ASSEMBLY INSTRUCTIONS

Thank you for purchasing Forever Redwood patio furniture. Forever Redwood is built by Old-Growth Again Restoration Forestry (OGA). OGA is dedicated to restoration forestry. Sales of patio furniture finance our restoration work in California redwood forestlands.


Tools required: ½-inch ratchet and a mallet or small hammer.

Unpack your bench and make sure you have all the parts. The parts that go together have the same numbers written next to the predrilled holes they attach to. Align the parts with the numbers as shown for ease of reference.


Step 1: Place the bench seat upside down on a soft surface. The legs are not interchangeable from side to side. You will see that the boards nearest the bench edge have two pre-drilled holes. Line up these holes with the holes on the top of the legs and attach them with 2 carriage bolts, washers and nuts (*for small benches those holes are placed at the edge of the seat). Tap the bolt all the way in to set it into the wood and then add a washer and tighten the nut. Make sure you are attaching the correct side – if the bolts do not line up; just move the leg over to the other side of the bench seat. The bolts should tap into their hole. If you are using force, the leg probably belongs to the other end of the bench seat. Do not over tighten the bolts or you'll crush through the redwood and weaken the bench. Repeat this step with the other leg.

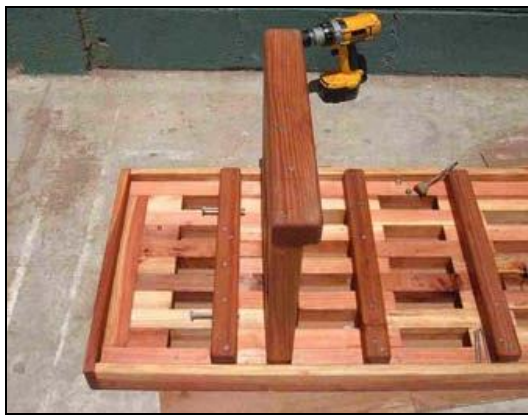

*Small bench legs are attached at the edge of the seat as shown below:

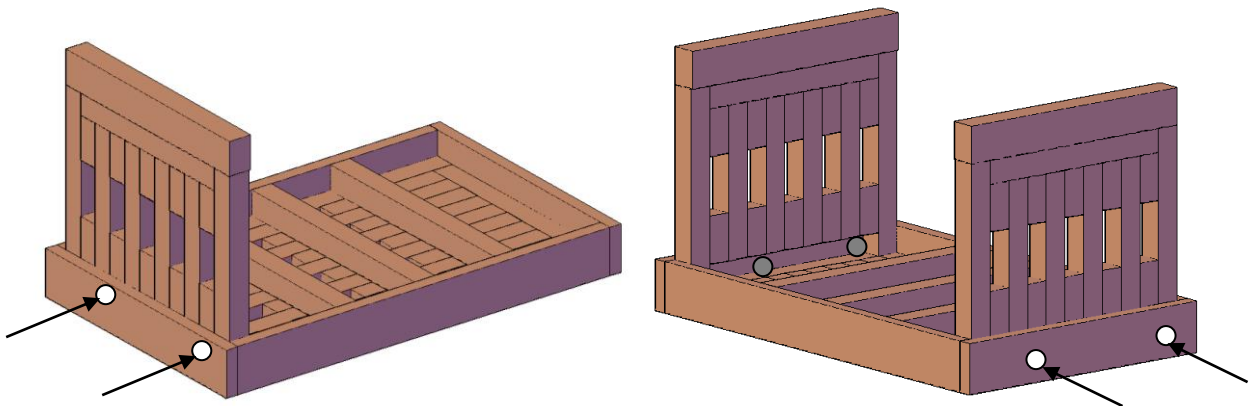

Step 2: Attach the diagonal support to the leg and underside of bench seat with the stainless steel screws supplied. The holes have already been drilled. Use a #2 square bit to screw the stainless steel 2 ½ inch screws into the four pre-drilled holes (if you don't have a no. 2 square bit, you can pick one up at any hardware store for \$1). Repeat this step with the other side.

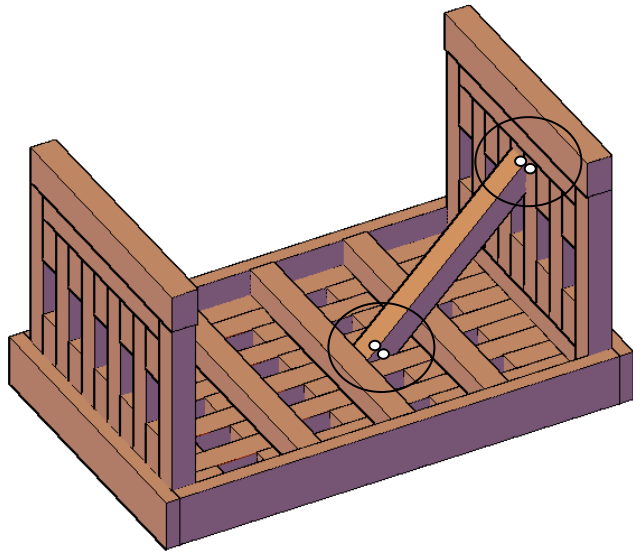

Thank you. If you have any questions, please call or email us.