







---

866.332.2403; Outside the US: 619.600.5630 8am-5pm Pacific Time, Monday-Friday

## Assembly instructions for: **MARISSA'S ADVENTURE LOFT**



## **CONTENT OF BOXES**

<u>Quantity</u>	<u>Description</u>	<u>Photo</u>
1	Frame	
2	Rail A	
1	Rail B	
1	Rail C	
1	Cubbies	
1	Drawer's Box	

1	Bed Base	
4	Drawers	
1	Ladder	
4	Posts	
2	Diagonal Supports	
10	Carriage Bolts 2 1/2" x 5/16", Washers and Nuts	
2	Carriage Bolts 3 1/2" x 5/16", Washers and Nuts	
4	Carriage Bolts 3" x 5/16", Washers and Nuts	
4	Carriage Bolts 4 1/2" x 5/16", Washers and Nuts	
8	Carriage Bolts 4" x 5/16", Washers and Nuts	
2	Carriage Bolts 5" x 5/16", Washers and Nuts	
2	Carriage Bolts 6" x 5/16", Washers and Nuts	
7	3" x #8 Screws	

## ASSEMBLY INSTRUCTIONS

Thank you for purchasing Forever Redwood patio furniture. Forever Redwood is built by Old-Growth Again Restoration Forestry (OGA). OGA is dedicated to restoration forestry. Sales of patio furniture finance our restoration work in California redwood forestlands.

**Tools required:** Hammer, ½" Ratch and a Drill.

Your furniture was fully assembled in the shop prior to being dismantled for shipping. All the parts fit. The parts that go together have the same numbers written next to the predrilled holes they attach to. Please take the time to align the parts with the numbers. If you are forcing a bolt in, the part may be turned around or not aligned properly. Tap the bolt all the way into the wood to set it, then add a washer and lightly tighten. Don't over tighten or you will crush the redwood.

**Step 1:** Unpack your loft and make sure you have all the parts. Place the frame on the floor and attach the 4 posts with one bolt (4 ½" x 5/16") each. You'll notice that each corner has a number that corresponds to each post (see photos below). Make sure the bolts are tapped all the way into the wood, then add washers and nuts and tighten with a ½-inch ratchet. Do not over tighten or you'll crush the redwood and weaken the loft's structure.



**Step 2:** Attach the bed base to the post with 2 bolts (4" x 5/16") each. Make sure the bolts are tapped all the way into the wood, then add washers and nuts and tighten with a ½-inch ratchet.






**Step 3:** Attach Rail C to bed base with 4 bolts (2 1/2" x 5/16"). Make sure the bolts are tapped all the way into the wood, then add washers and nuts and tighten with a 1/2-inch ratchet.




**Step 4:** Attach Rails A to bed base with 2 bolts (3" x 5/16") each. Make sure the bolts are tapped all the way into the wood, then add washers and nuts and tighten with a 1/2-inch ratchet. *Repeat this step for the other rail A.*

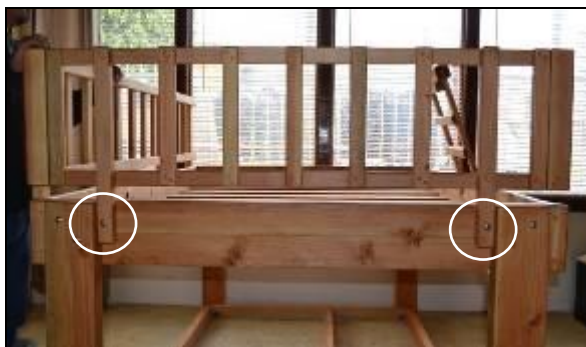


**Step 5:** Attach Rail B to bed base with 4 bolts (2 1/2" x 5/16"). Make sure the bolts are tapped all the way into the wood, then add washers and nuts and tighten with a 1/2-inch ratchet.



**Step 6:** Attach diagonal supports to bed base with one 5" x 5/16" and one 3 1/2" x 5/16" bolts each. Make sure the bolts are tapped all the way into the wood, then add washers and nuts and tighten with a 1/2-inch ratchet.

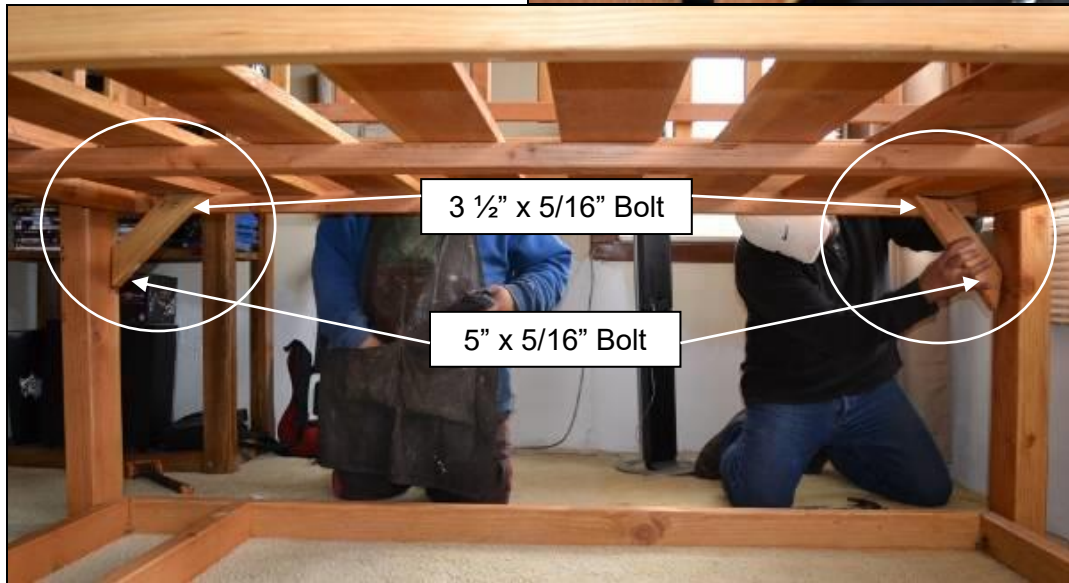

**Step 7:** Attach ladder to bed base and frame with one 2 1/2" x 5/16" and one 6" x 5/16" bolts per side. Make sure the bolts are tapped all the way into the wood, then add washers and nuts and tighten with a 1/2-inch ratchet.

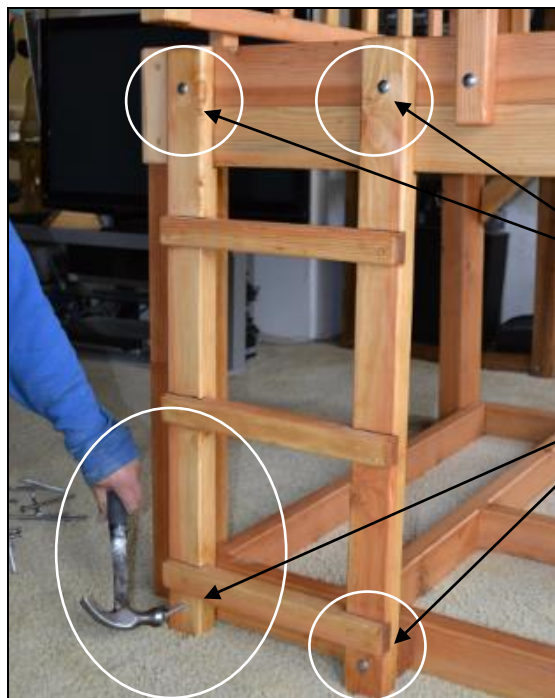



**Step 8:** Insert the drawers box in the space next to the ladder and attach the box to the Floor Frame with 3 screws (3" x #8) as shown in the next photos.



**Step 9:** Insert the drawers into the drawer's box, make sure they fit correctly on the rails.



**Step 10:** Insert cubbies into the space of the south of the bed, and attach it with 4 screws (3" x #8) to the posts as shown.



Enjoy it!