





866.332.2403 (TOLL FREE) (707) 640.29.05 (Option 4) Direct Line for the Design Department; 7am – 7pm Pacific Time, Monday-Saturday

## ASSEMBLY INSTRUCTIONS FOR THE CUSTOM THE MISSION PLANTER WITH ARC TRELLIS

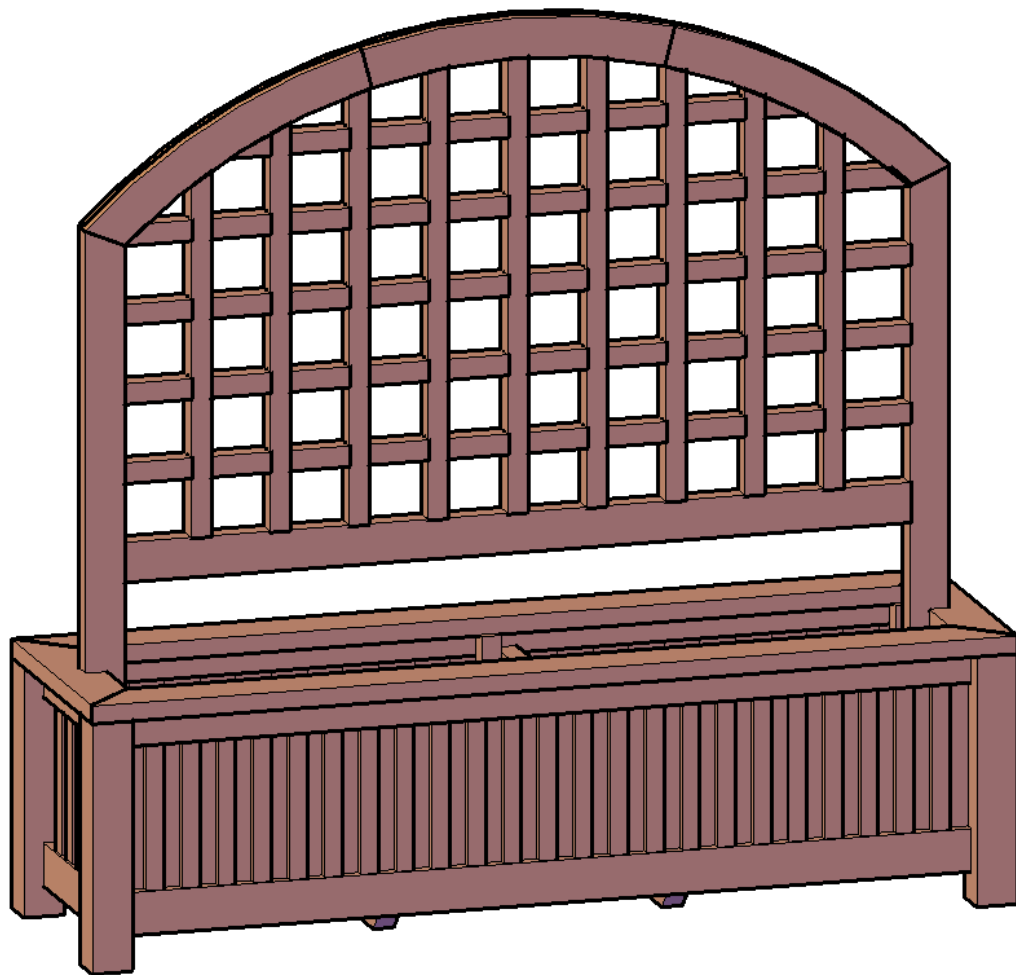


Order 127152-2

**NOTE:** Assembly is best done by two people. To assemble your product, you need a Hammer, a Ratch or a wrench and if required a Drill.

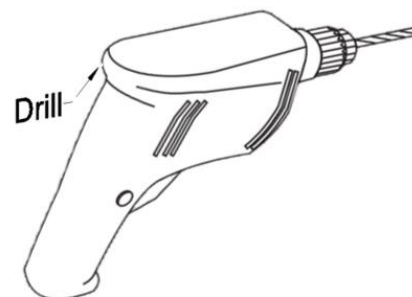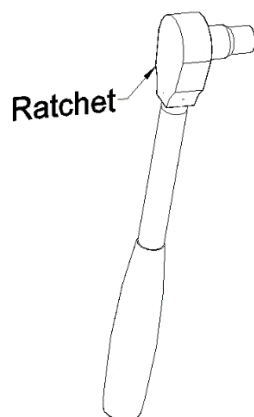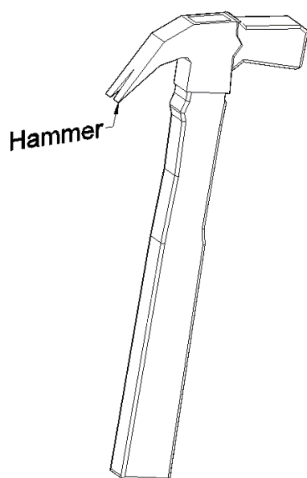


**Required Tools (Are not included in your hardware packing).**

**PROCESS TO INSTALL THE HARDWARE PROVIDED.**

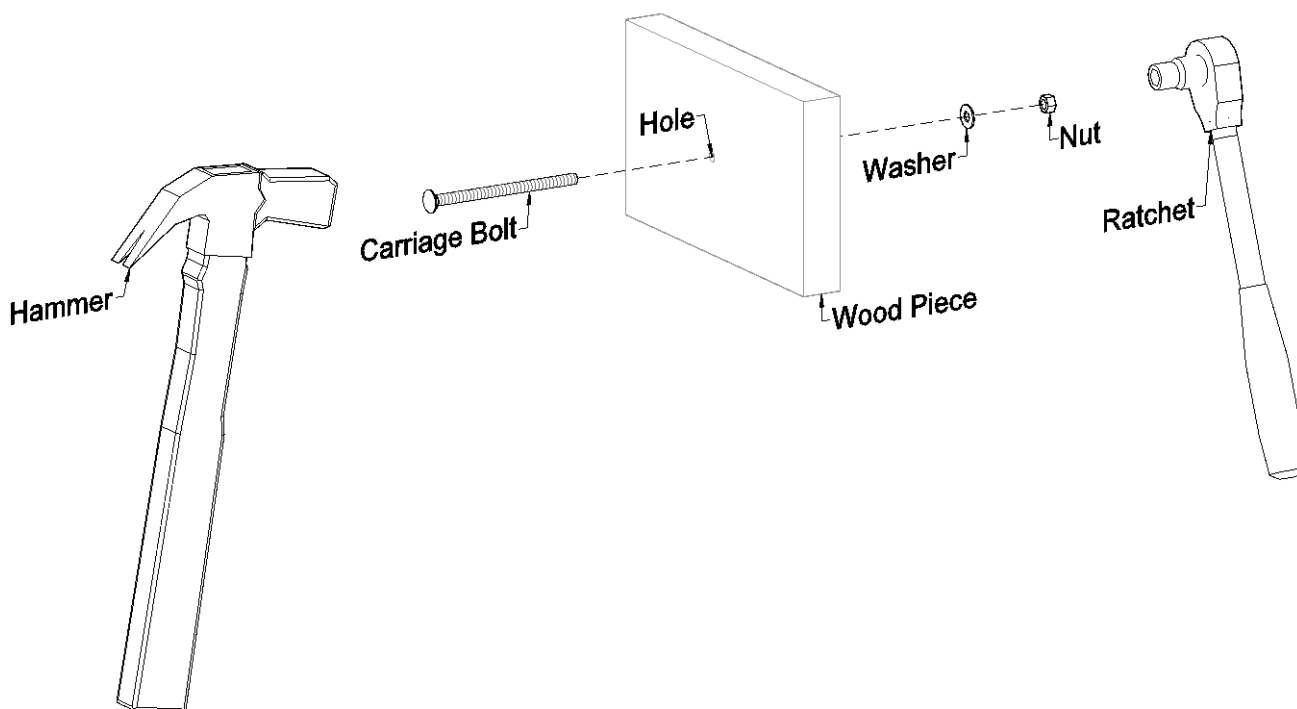

**To install the bolts.**


Insert the carriage bolts into the holes and lightly tap with a hammer until the square neck fit in the wood piece and the bolt head must flush with the wood piece. Finally, place the washer and the nut and carefully tighten it using a ratch with the necessary socket or a wrench.

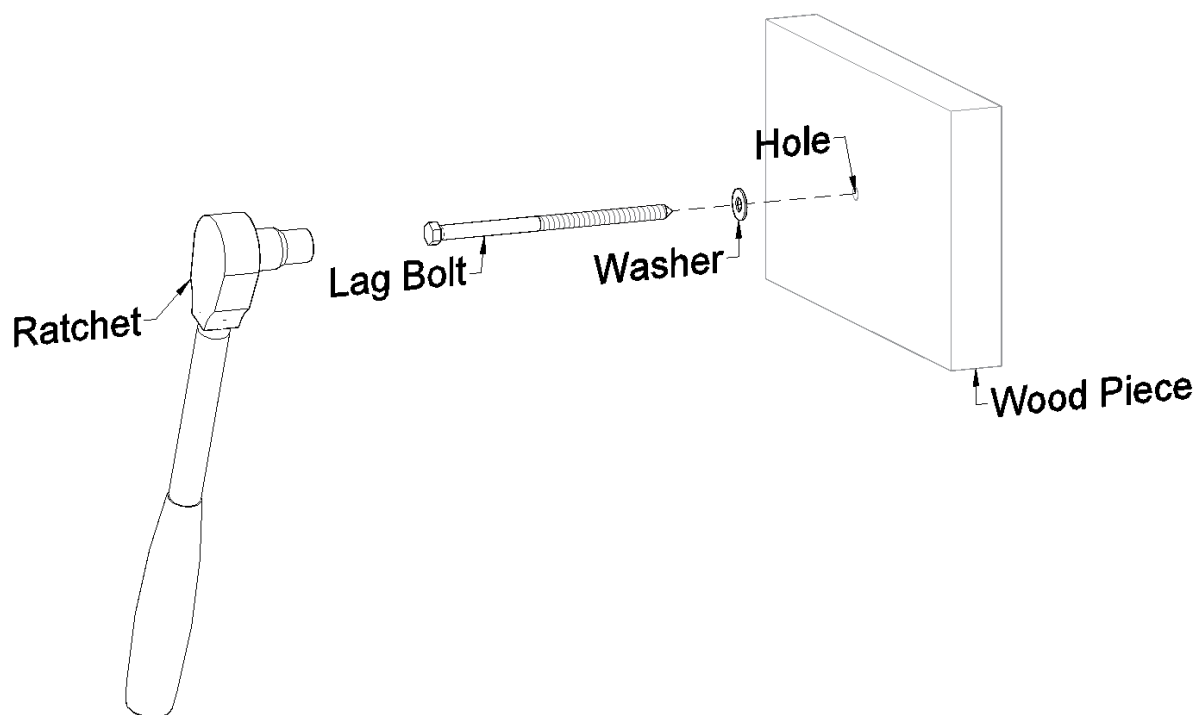

**To install the lag bolts.**






Place the washers in their lag bolts. After that, insert the lag bolts into the holes and carefully tighten it using a **ratch** with the necessary **socket**.

**Use the washers only for the Wood Pieces.**

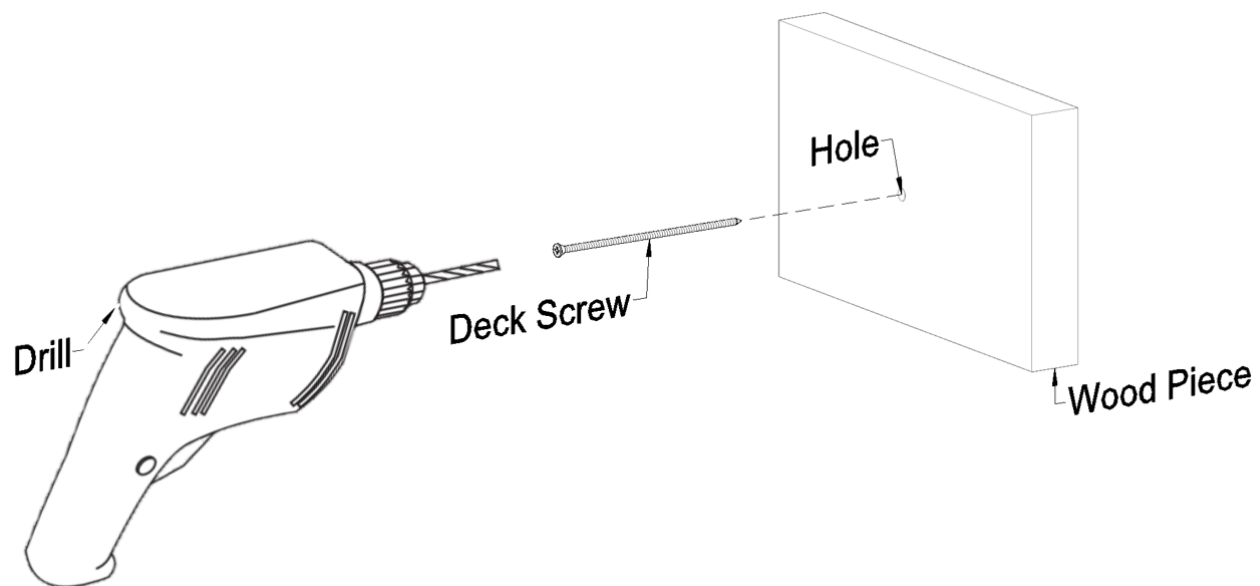





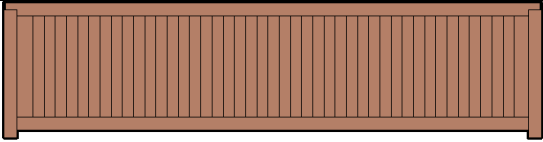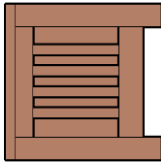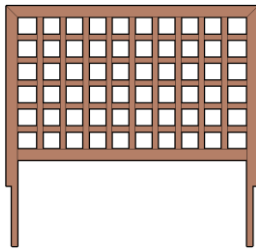

**To install the deck screws.**


Insert the deck screws into the holes and carefully tighten it using a drill.

CONTENT OF BOXES			
Qty.	Description	Drawing	No.
1	Floor		1
2	Long Wall		2
2	Short Wall		3
1	Trellis		4
1	Support		5

**Note:** Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.


HARDWARE LIST			
Qty.	Description	Drawing	No.
10	5/16" x 4" bolts		BL1
8	5/16" x 3" bolts		BL2
2	5/16" x 5" bolts		BL3
4	3" Deck Screws		DS1
20	5/16" washers		WS
20	5/16" Nuts		NS

DESCRIPTION	No.
Floor	1
Long Wall	2
Short Wall	3
Trellis	4
Support	5

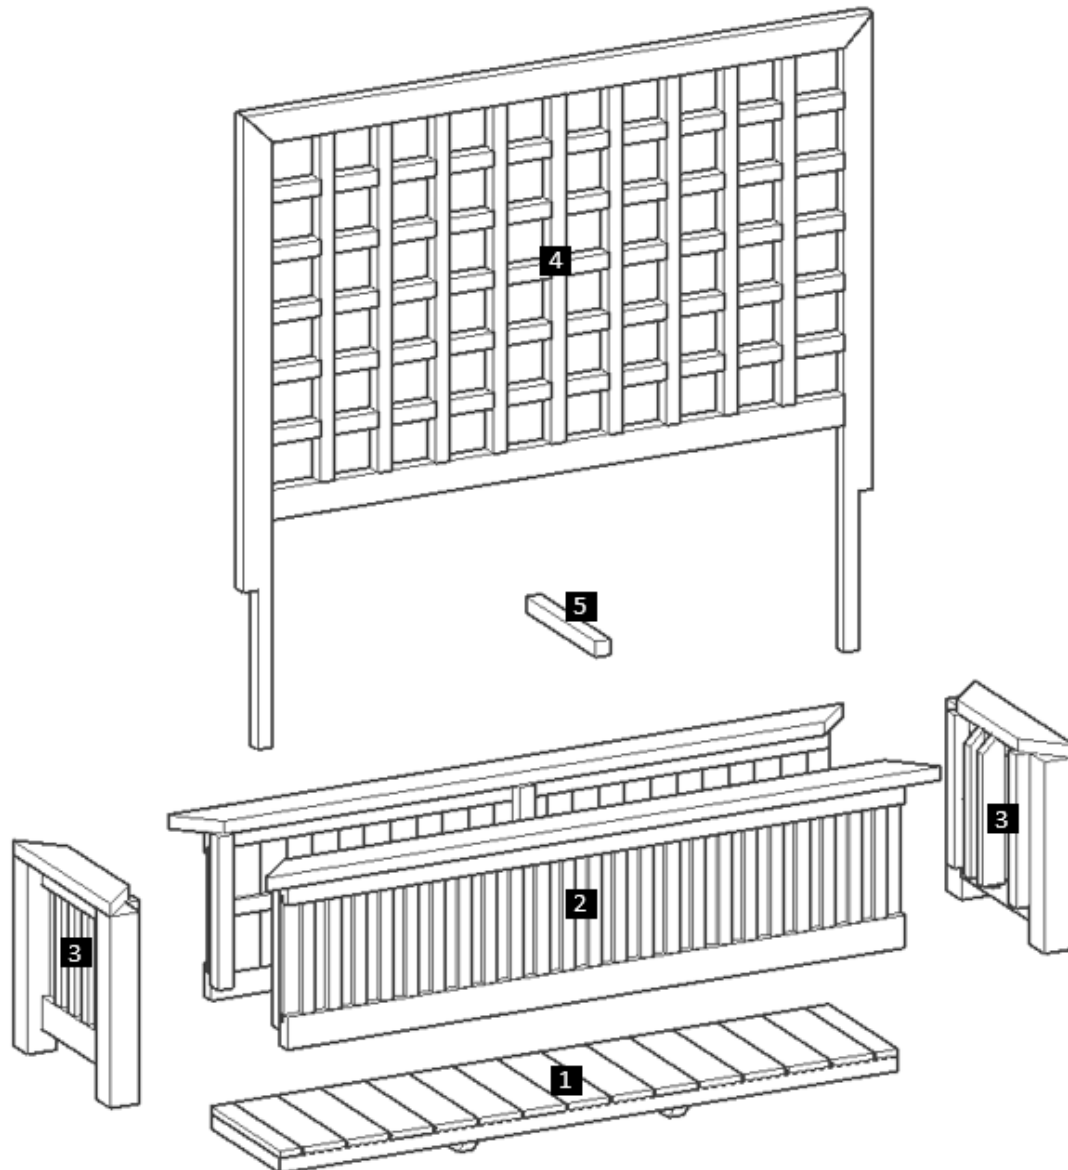


**Note:** Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.

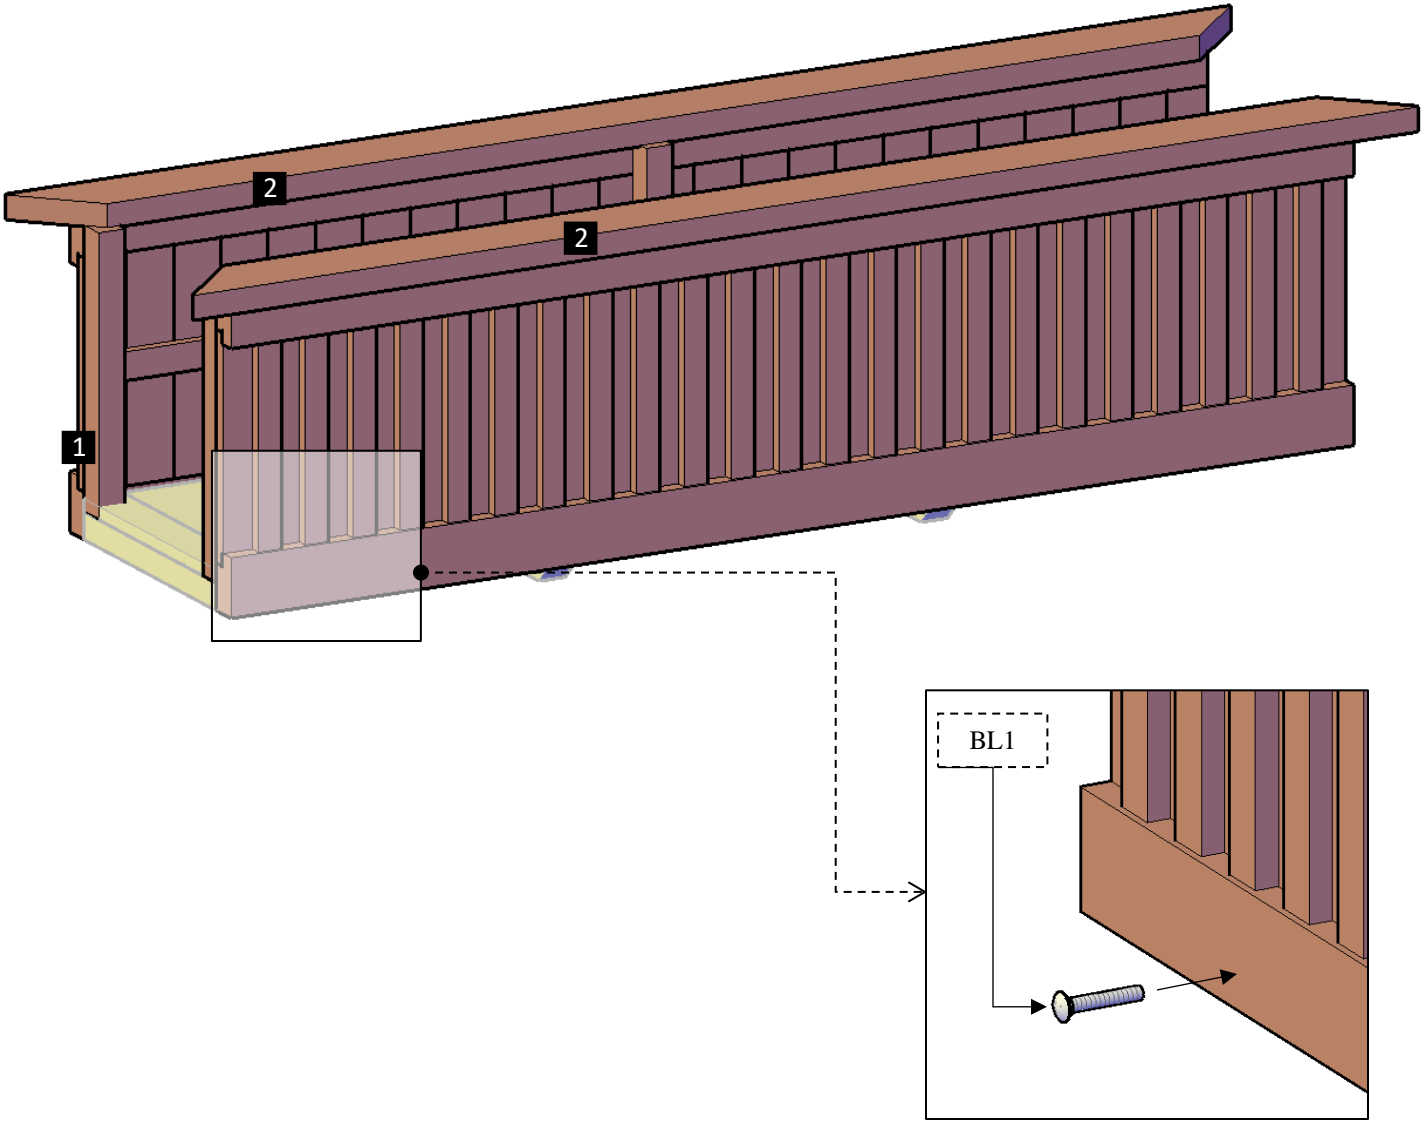


**Step 1:** Use 5/16" x 4" bolts (**BL1**) to attach the Long Wall (**2**) to the Floor (**1**). Each part has a series of numbers that indicate where to attach the part with the corresponding number.




REQUIRED HARDWARE			
Qty.	Description	Drawing	No.
6	5/16" x 4" bolts		BL1
6	5/16" washers		WS
6	5/16" Nuts		NS

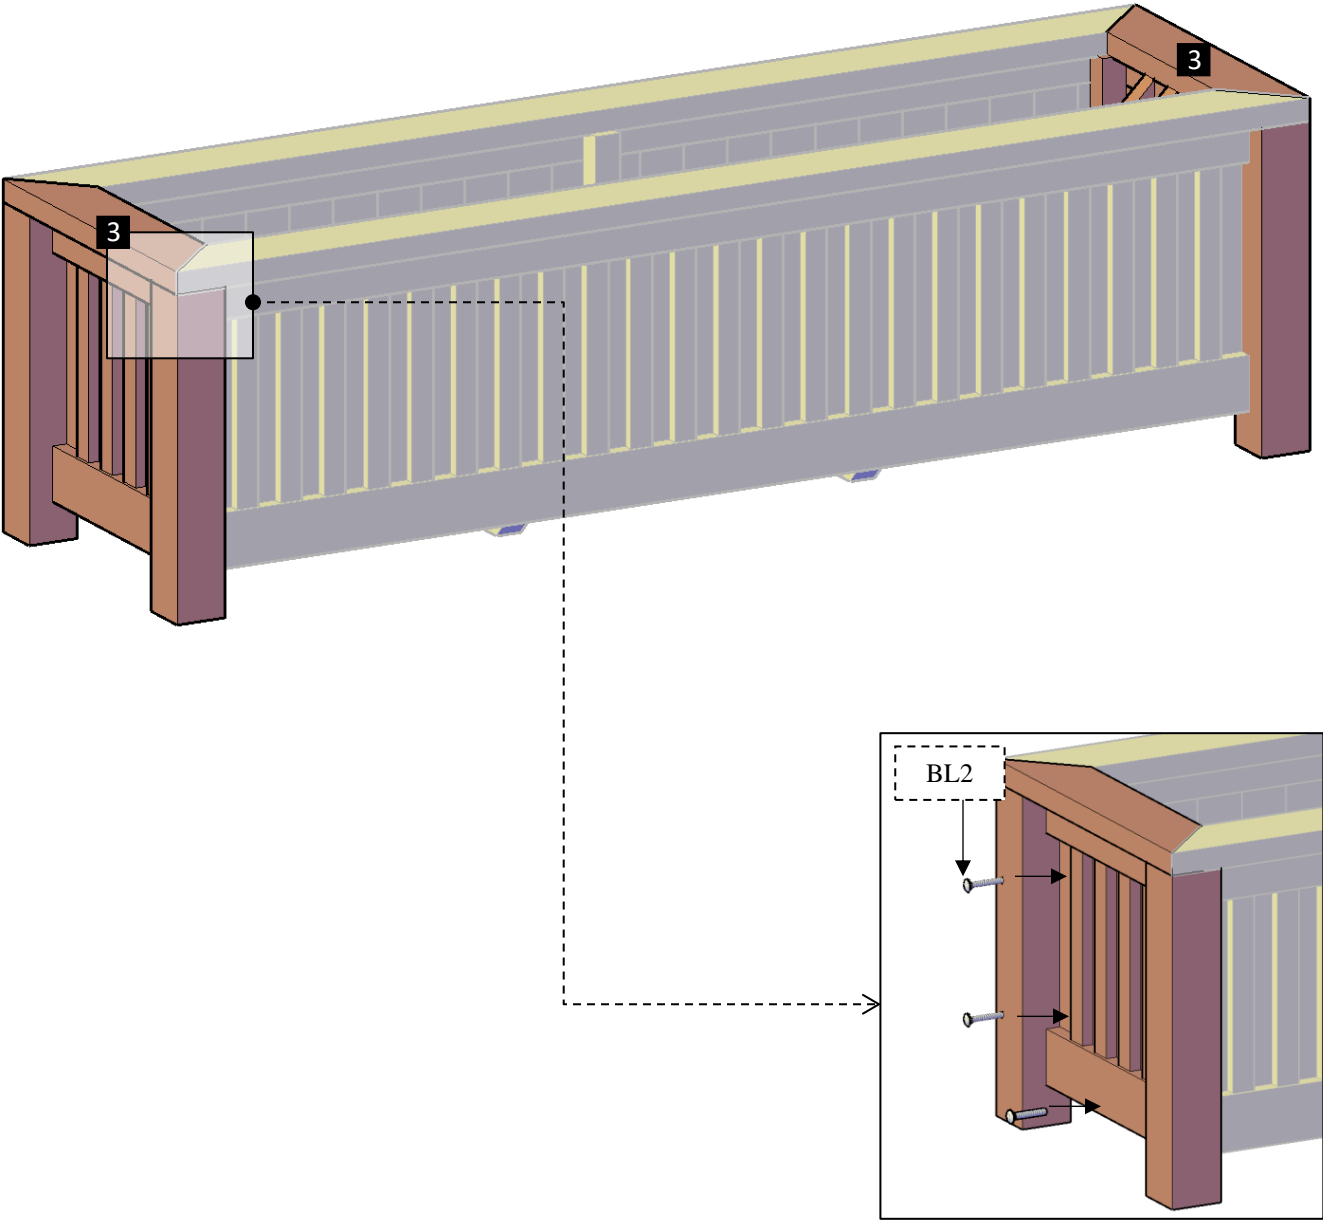


**Step 2:** Use 5/16" x 3" bolts (**BL2**) to attach the Short Wall (**3**) to the Floor (**1**) and to the Long Wall (**5**). Each part has a series of numbers that indicate where to attach the part with the corresponding number.



REQUIRED HARDWARE			
Qty.	Description	Drawing	No.
5	5/16" x 3" bolts		BL1
5	5/16" washers		WS
5	5/16" Nuts		NS

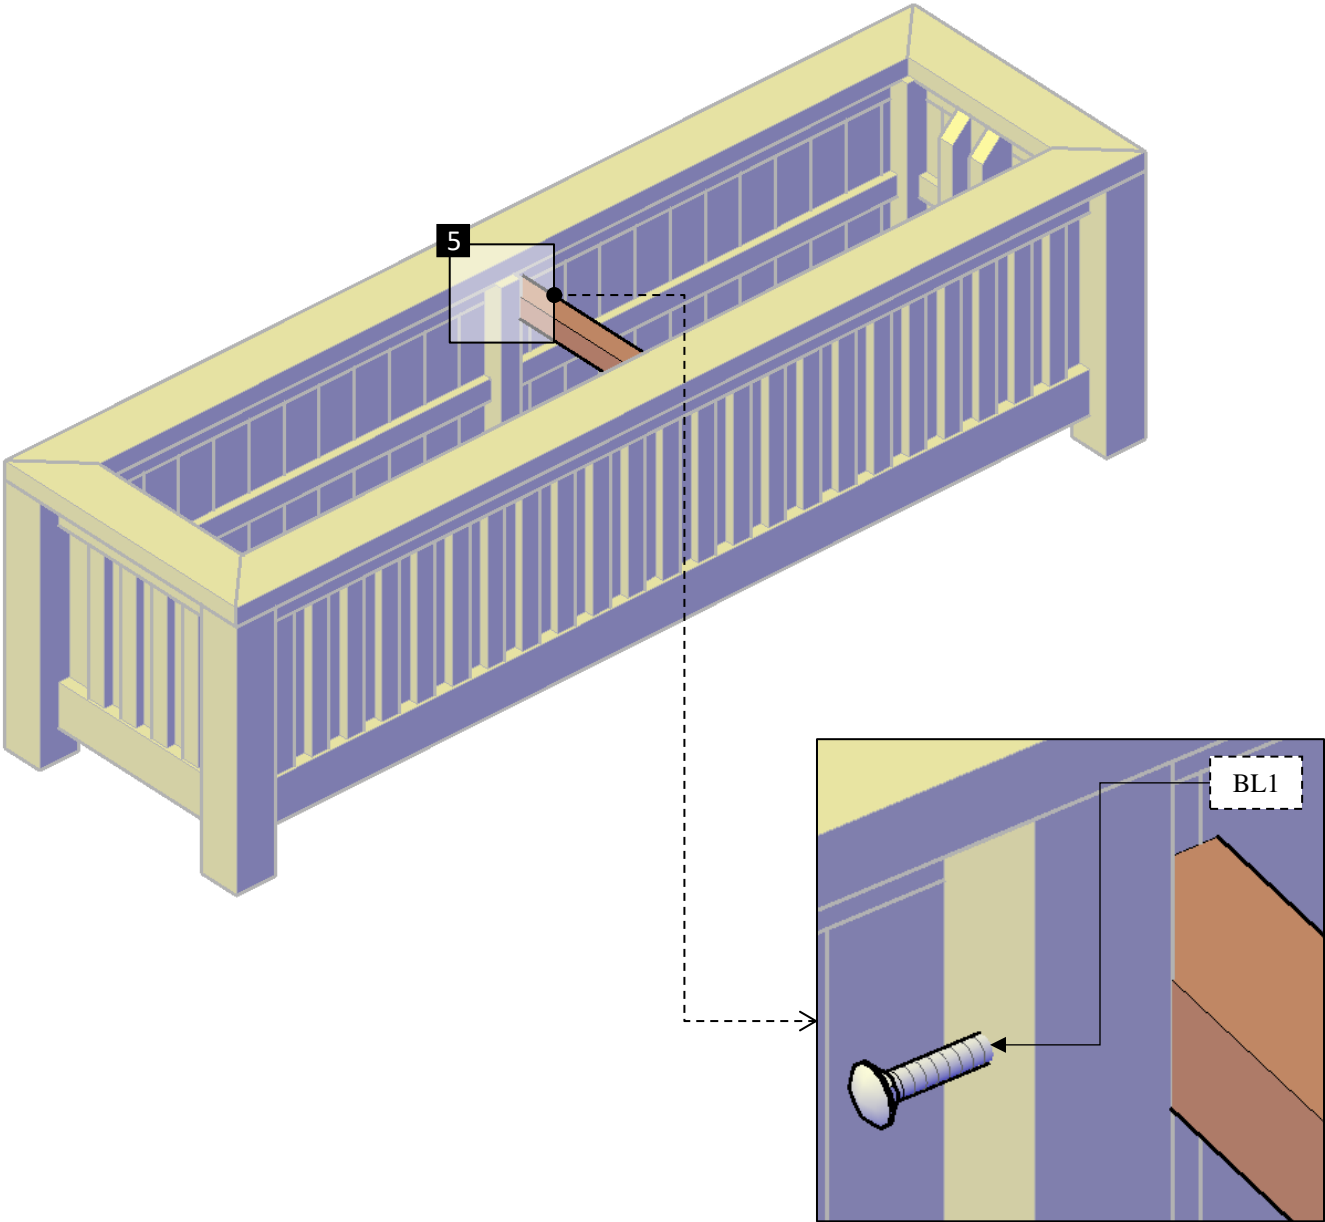
**Step 3:** Use 5/16" x 4" bolts (**BL1**) to attach the support (**5**) to the Long Wall (**2**). Each part has a series of numbers that indicate where to attach the part with the corresponding number.




REQUIRED HARDWARE			
Qty.	Description	Drawing	No.
2	5/16" x 4" bolts		BL1
2	5/16" washers		WS
2	5/16" Nuts		NS




**Step 4:** Attach the walls together with 3” Deck Screws (**DS1**). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

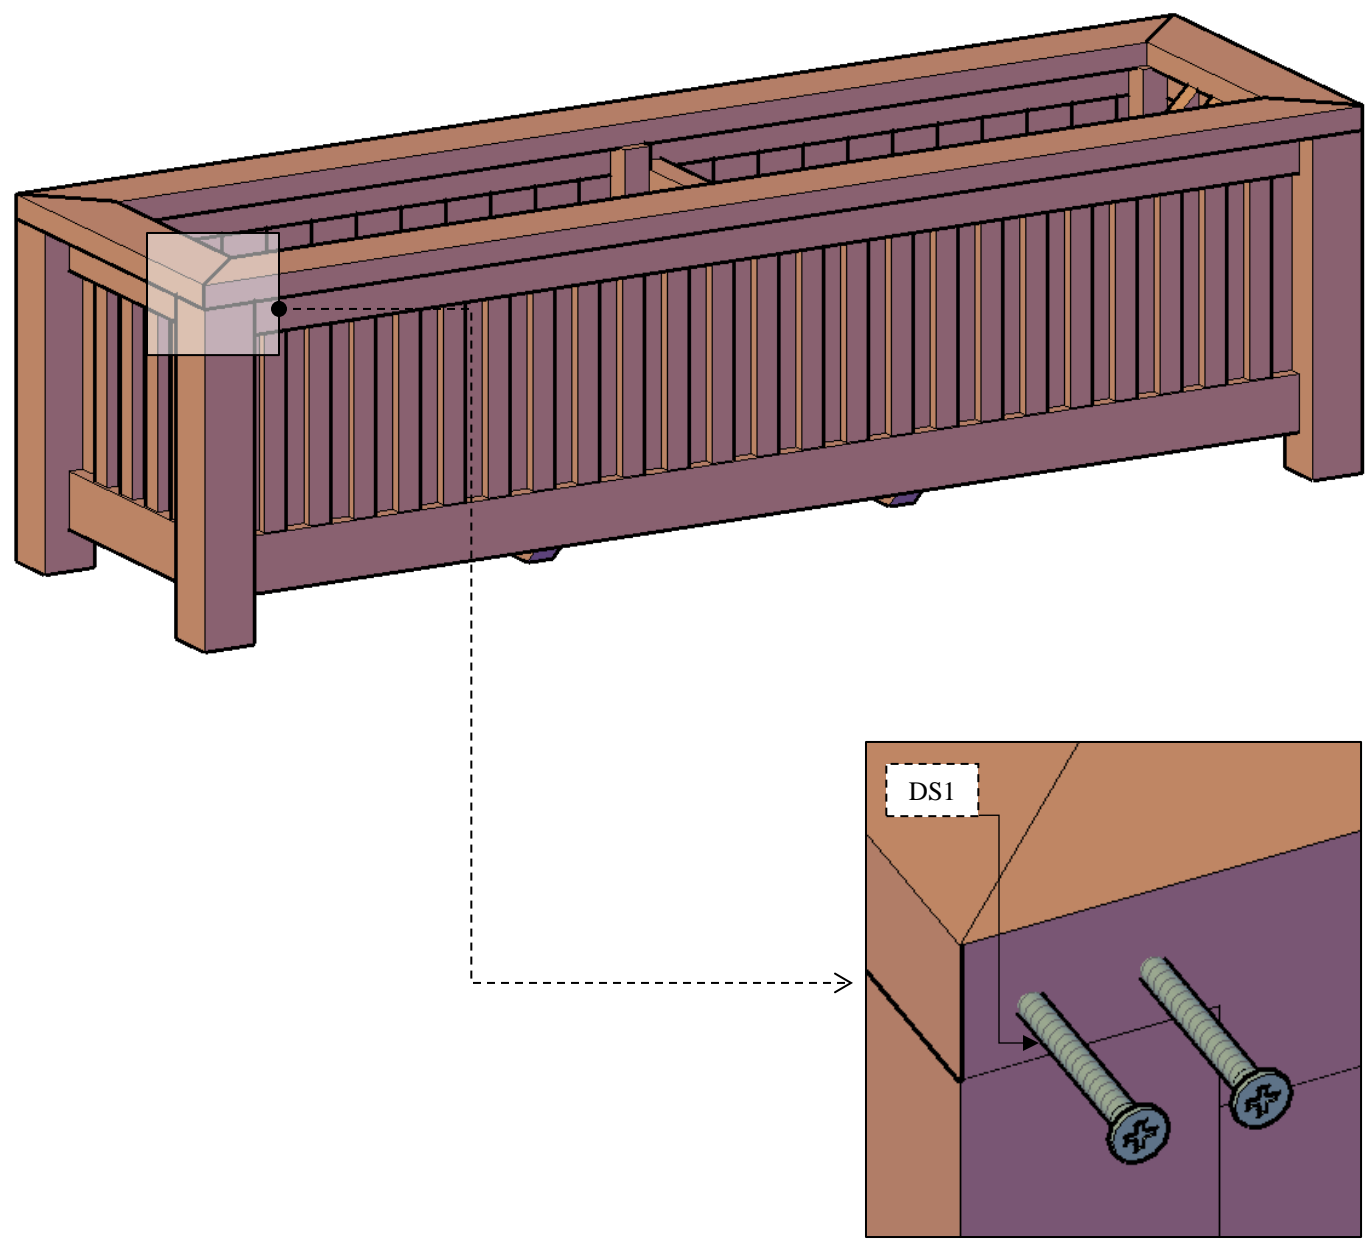


REQUIRED HARDWARE			
Qty.	Description	Drawing	No.
4	3” Deck Screws		DS1

**Step 5:** Use 5/16" x 5" bolts (**BL3**) to attach the trellis (**4**) to the Short Wall (**3**). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

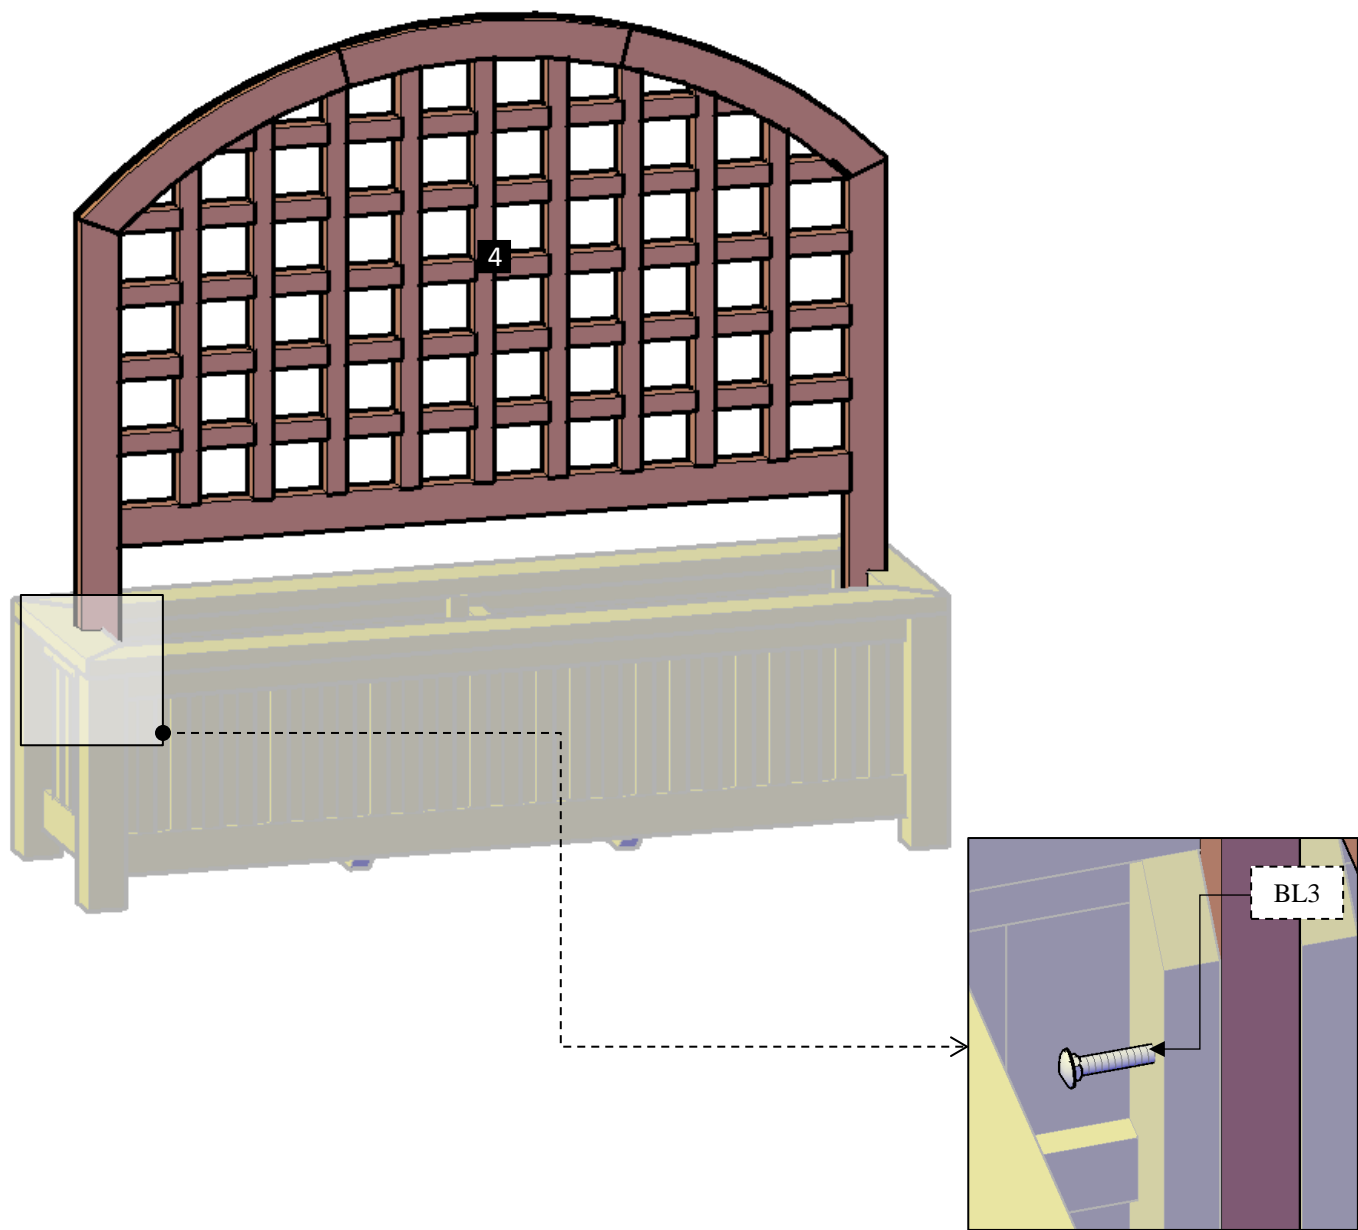

REQUIRED HARDWARE			
Qty.	Description	Drawing	No.
2	5/16" x 5" bolts		BL4
2	3/8" washers		WS
2	5/16" Nuts		NS

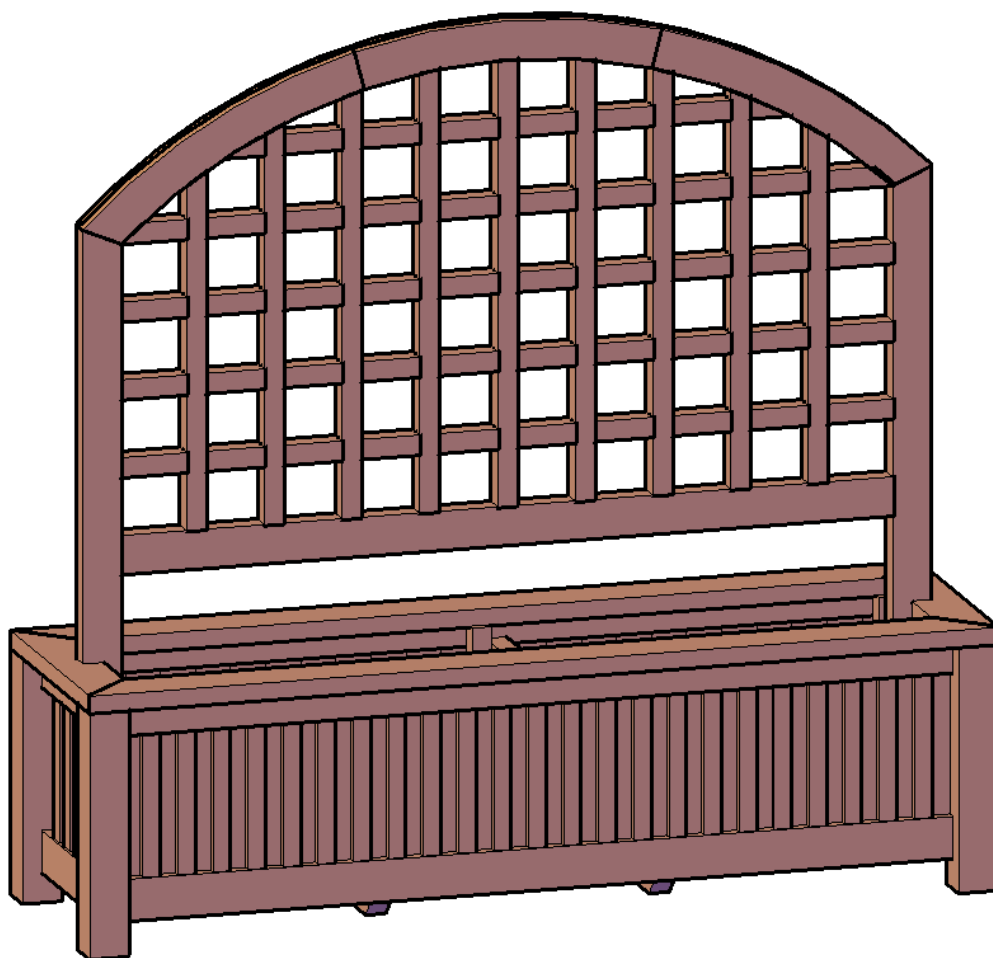

*This completes the Bench assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.*