










FOREVER REDWOOD

From the Forest, For the Forest since 1995

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE **OCTAGONAL SUNROOM GAZEBO**

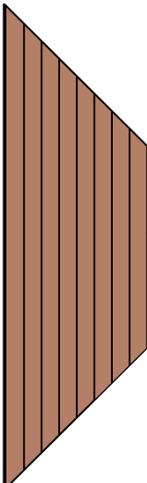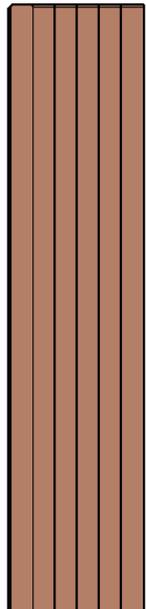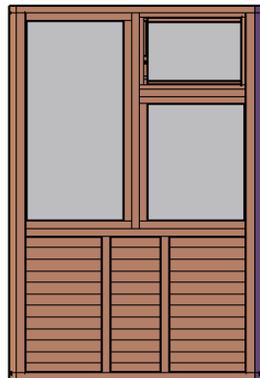
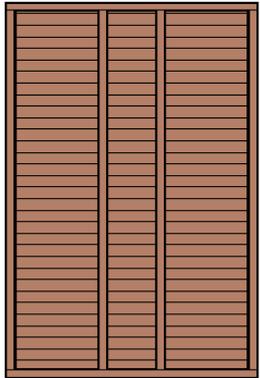
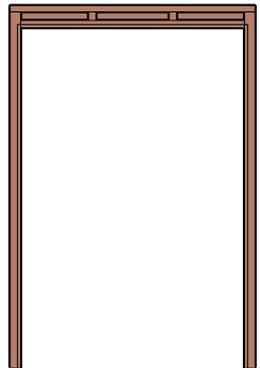


CONTENT OF BOXES			
Qty.	Description	Drawing	No.
	Deck Frame	 	1
	Deck Panels-A		2
	Deck Panels-B		3
Will Vary	Wall Panels	 	4
	Door Frames		5

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.




CONTENT OF BOXES

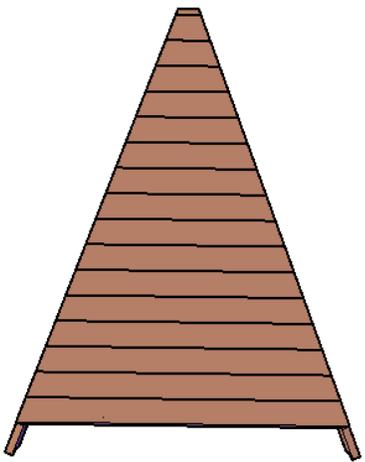Qty.	Description	Drawing	No.
8	Supports		6
8	Roof Panels		7
1	Roof Frame		8
Will Vary	Roof Boards or Steel Roof Boards	 	9
8	Roof Trims		10
8	Metal Plaques		11


Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.



HARDWARE LIST

Description	Drawing	No.
2'' Deck Screws (To attach the deck panels together).		A
3'' Deck Screws (To attach deck frames together and to the deck panels/ To attach roof frame).		B
5/16'' X 3'' Lag Bolts (To attach the wall panels to the deck. / To attach the metal plaques to the supports).		C
5/16'' X 4'' Lag Bolts (To attach the wall panels to the supports).		D
3/8'' X 6'' Bolts (To attach the supports together).		E
5/16'' X 4 1/2'' Bolts (To attach the roof panels to the metal plaques.).		F
3/8'' X 6'' Bolts (To attach the roof panels to the center roof frame).		G
1 5/8'' Deck Screws (To attach the roof boards to the roof panels).		H
4'' Deck Screws (To attach the roof trims to the roof panels).		I
Washers		J
5/16'' Nuts		K
3/8'' Nuts		L


Note: Dimensions of your hardware will vary depending on size.

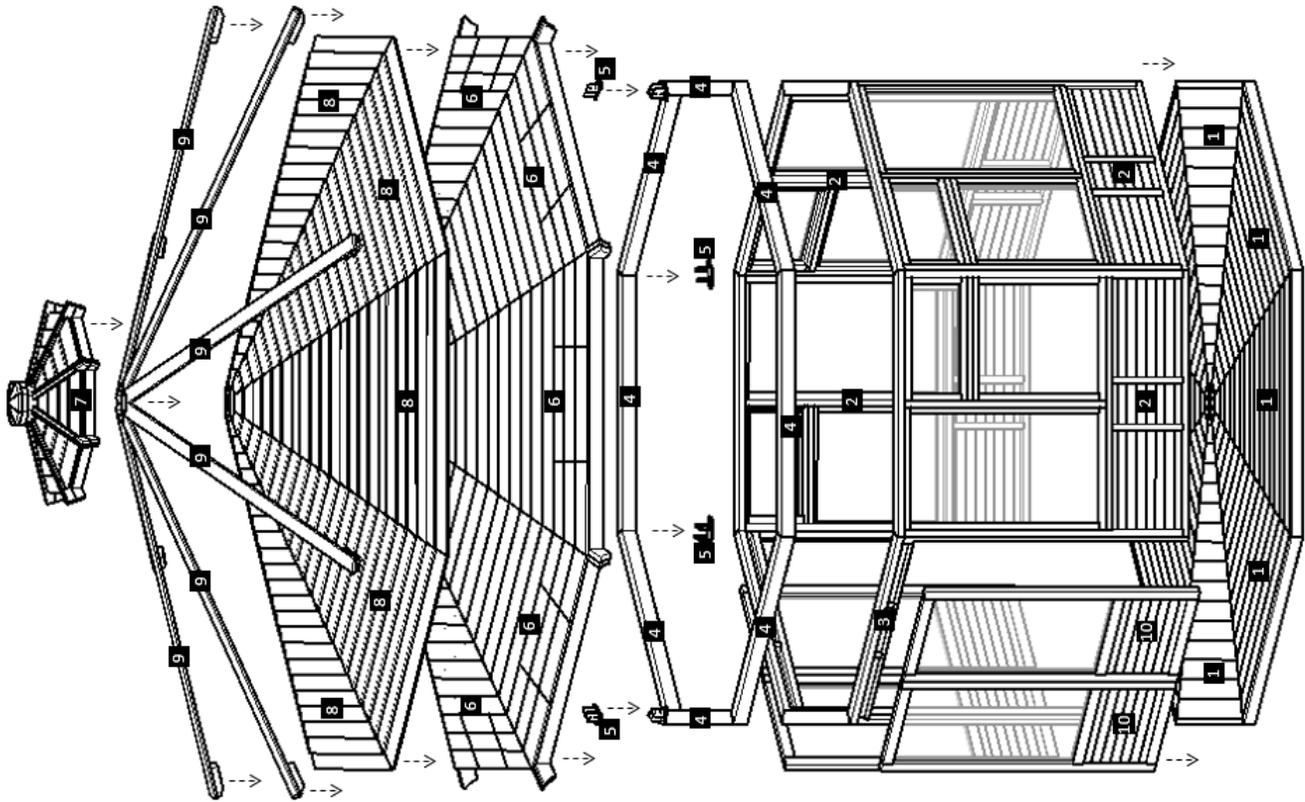


DESCRIPTION	No.
Deck Frame	1
Deck Panels	2
Deck Panels	3
Wall Panels	4
Door Frame	5
Supports	6
Roof P	7
Roof Frame	8
Deck Panels	9
Deck Panels	10
Metal Plaques	11

Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.

Step 1: Attach the deck panels (2, 3) with 2" deck screws (A). After that, use 3" deck screws (B) to attach the deck frames (1a, 1b) together and to the deck panels (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

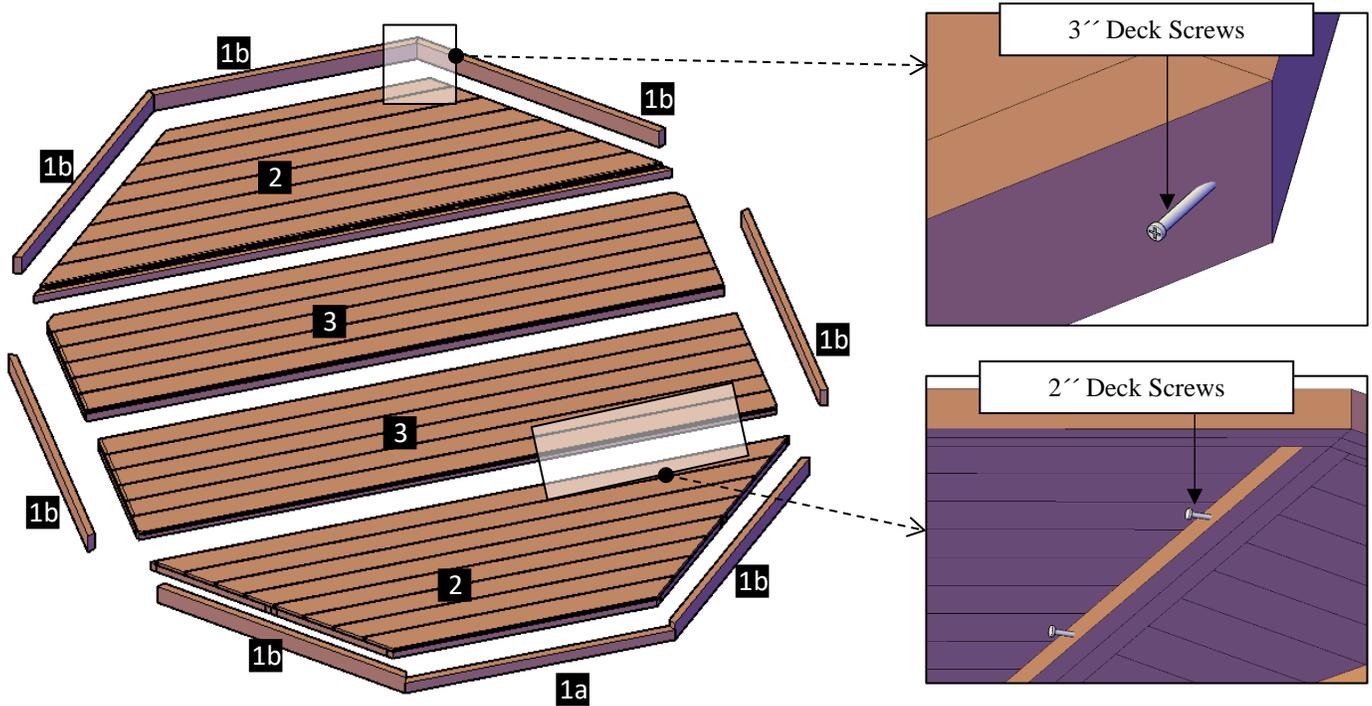


Step 2: Attach the wall panels (4a, 4b) to the deck panels (2, 3) with 5/16" x 3" lag bolts (C). Use 3" deck screws (B) to attach the wall panels together (4a, 4b) and to the door frame (5). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

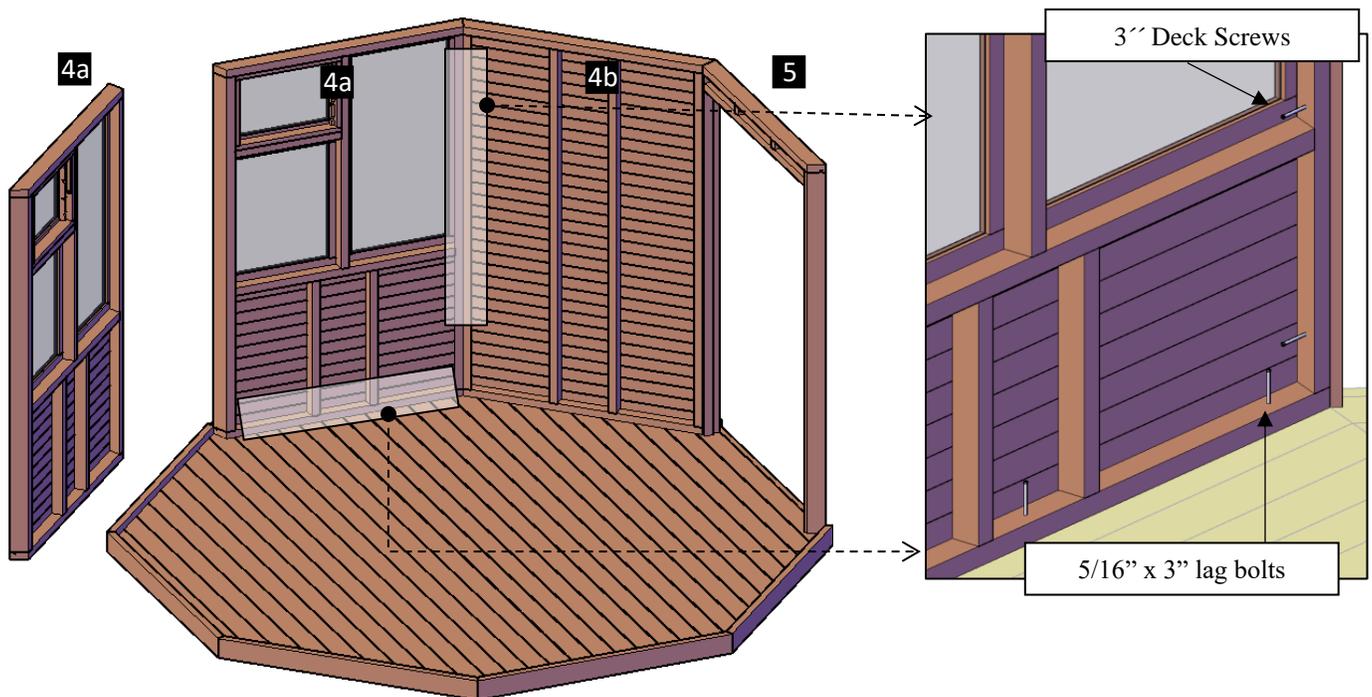


Repeat this step until the installation is complete.




Step 3: Attach the supports (6) to the wall panels and to the door frames with 5/16" x 4" lag bolts (D). The supports will be attached together with 3/8" x 6" bolts (E). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

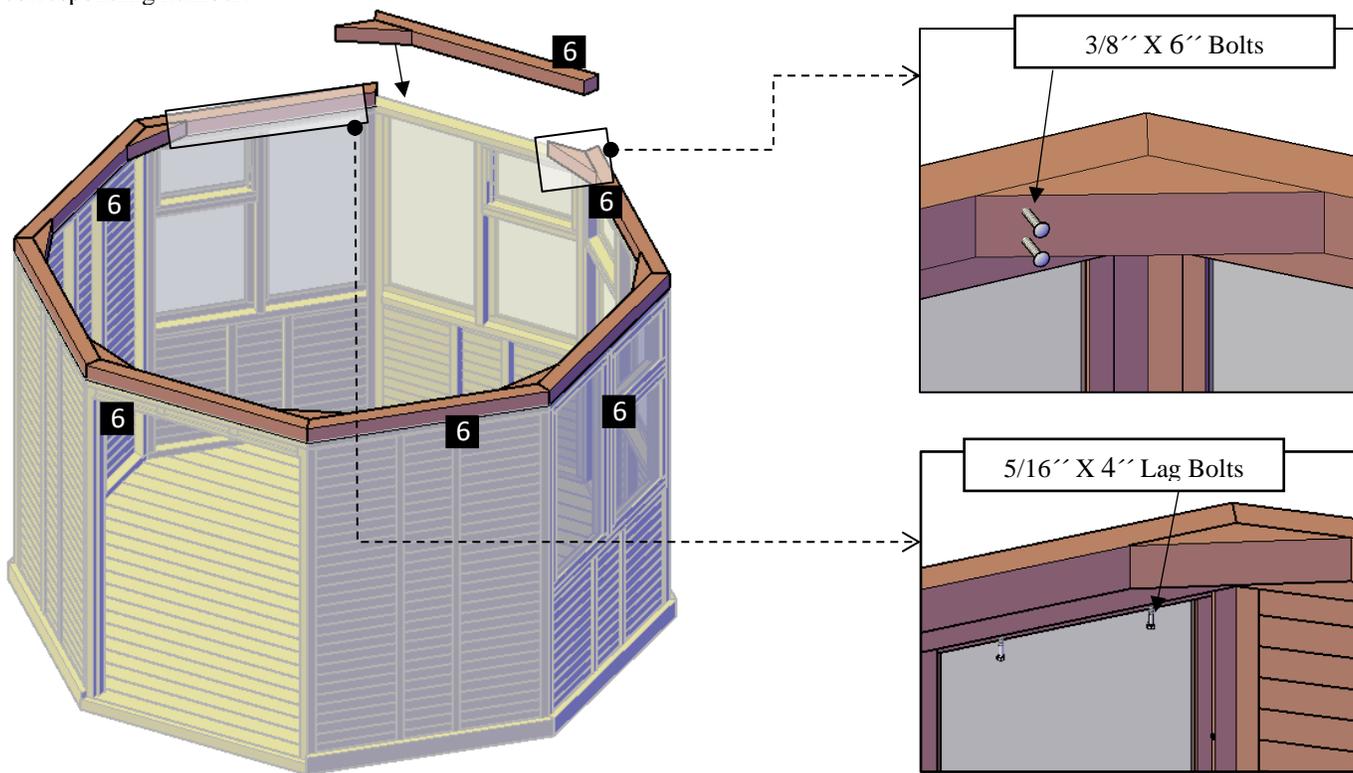


Step 4: Use 5/16" X 3" lag bolts (C) to attach the metal plaques (11) to the supports. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

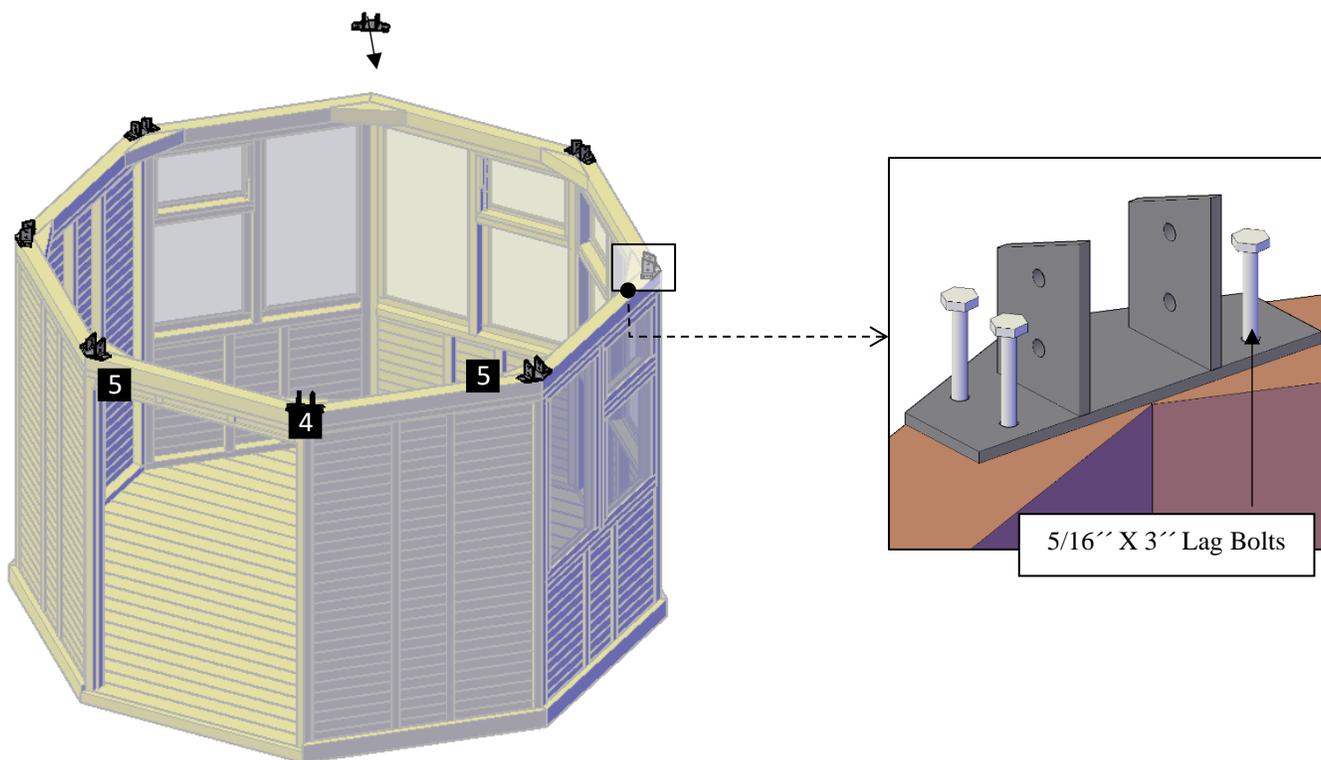

Step 5: Remove the lower and upper tables from the roof panels (6), as shown below.

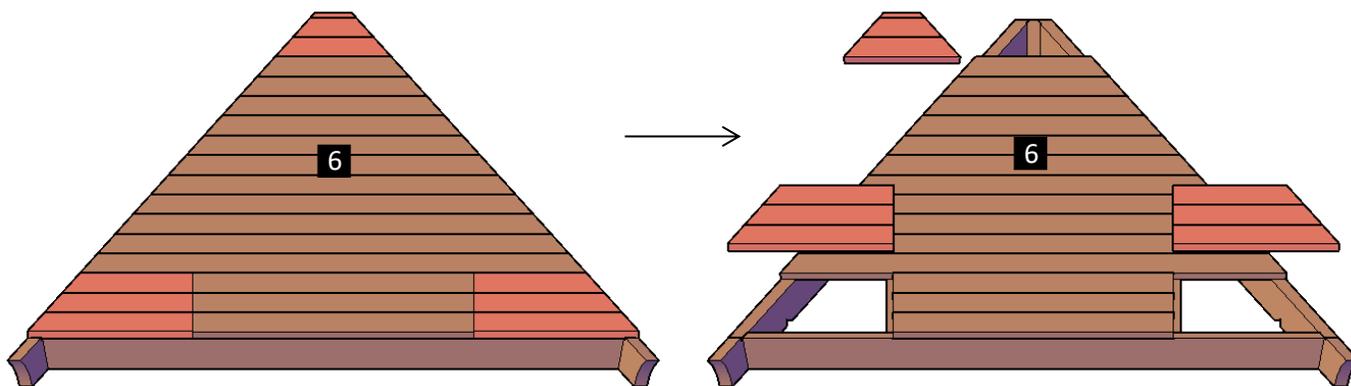


Step 6: Attach the roof panels to the metal plaques with 5/16'' x 4 1/2'' bolts (F). After that, attach to the roof frame with 3/8'' x 6'' lag bolts (G). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

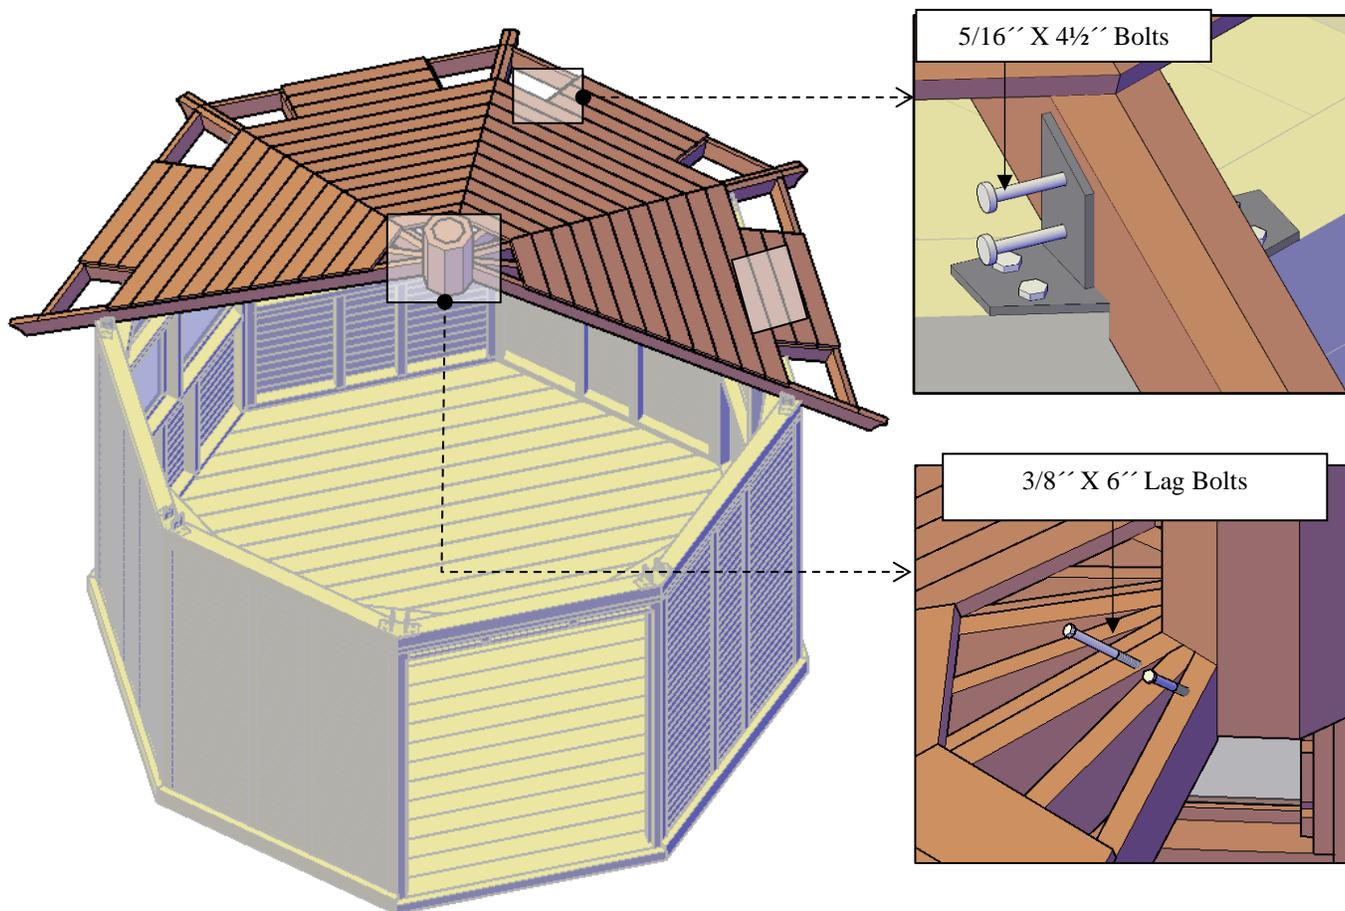


Repeat this step until the installation is complete.

Step 7: Place the tables that were removed from the roof panels. After that, put Exterior Clear Silicone on the roof panels joints.

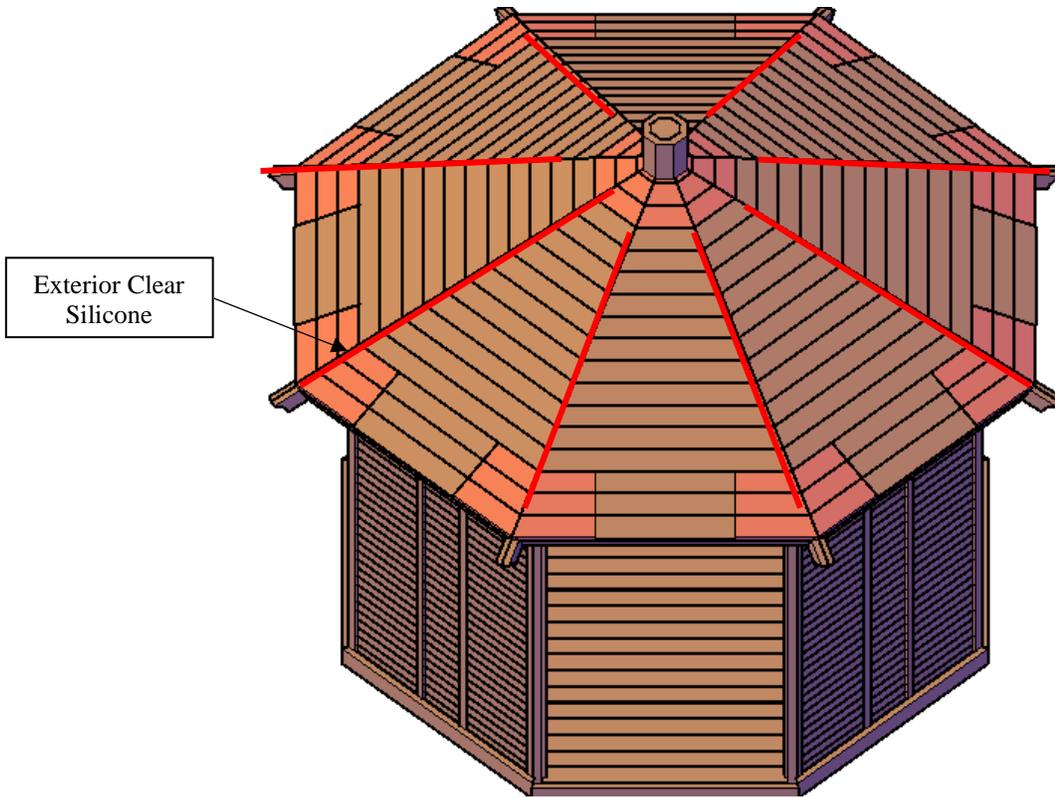


Step 8: Measure the roof panels. After that, cut the #30 Felt Roof Deck Protection to those measures. Use staples to attach the #30 Felt Roof Deck Protection to the roof panels.

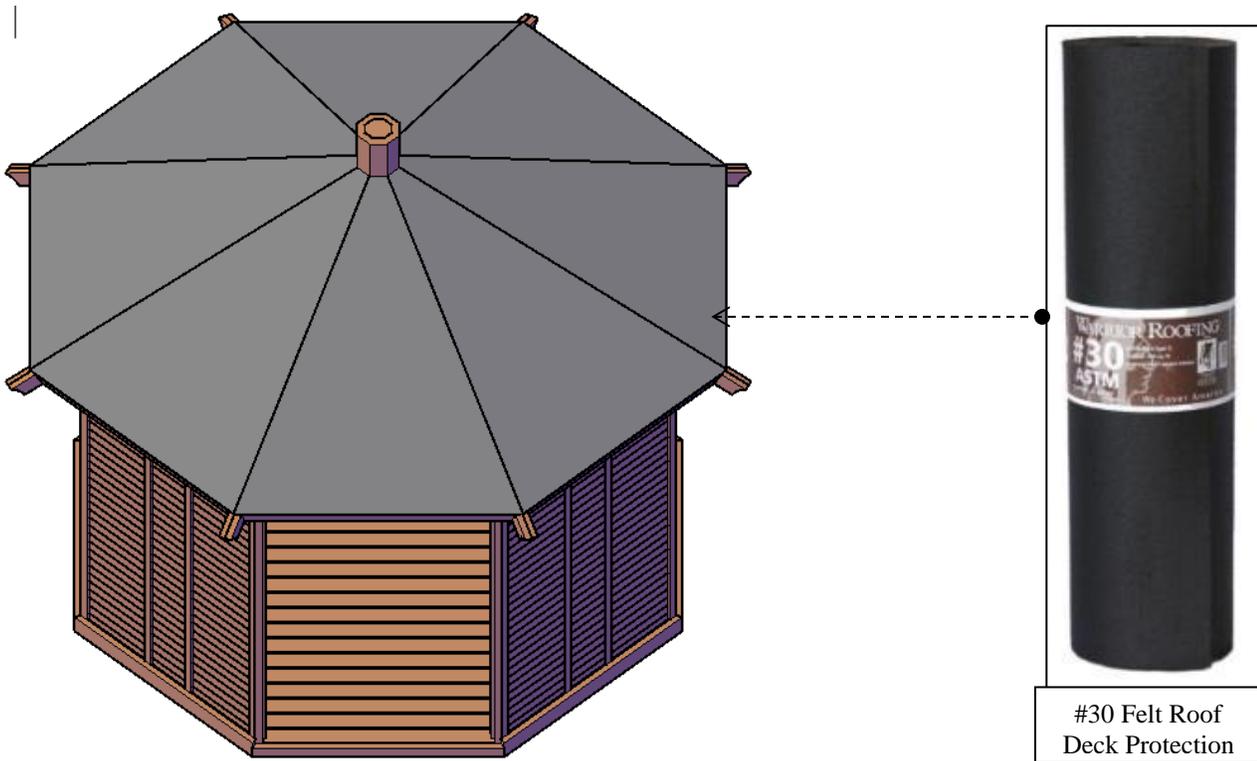


Option A. With Roof Boards

Step 9: Use 1 5/8" deck screws (H) to attach the roof boards (8) to the roof panels. Put the boards from the bottom to the top, the overlapping between this boards it will be of 3/4". Each part has a series of numbers that indicate where to attach the part with the corresponding number.

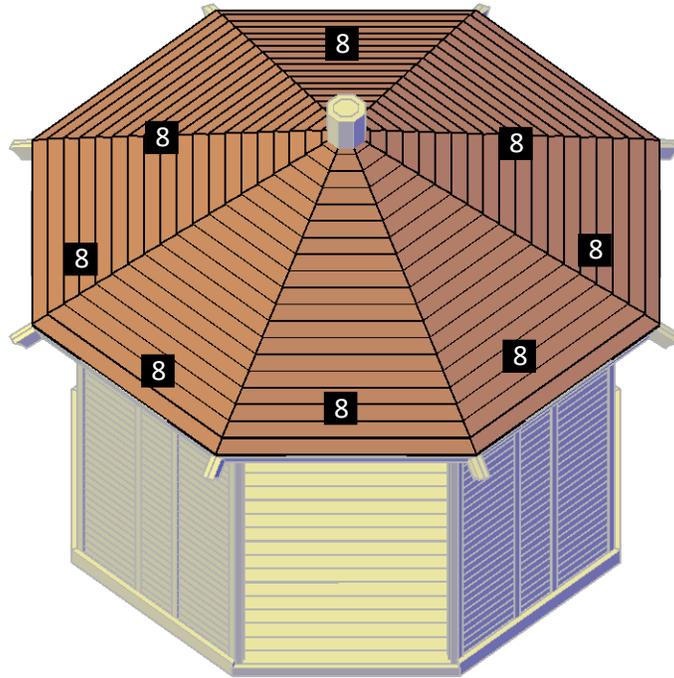


Option B. With Steel Roof Panels


Step 10: Measures the roof panels, start at the corner. After that, cut the Galvanized Steel Roof Panel (8) to the above measurements, leaving an extra inch along of the Galvanized Steel Roof Panel.

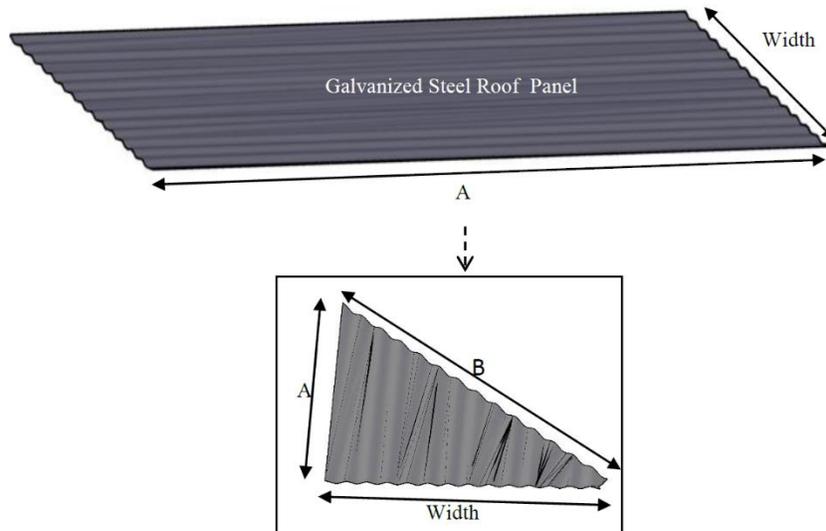

Step 11: Use #10 X ¾" Wood Screw, hex head with Neoprene Washer to attach the steel roof panels to the roof panels. The overlapping between these steel roof panels it will be approximately of 2".

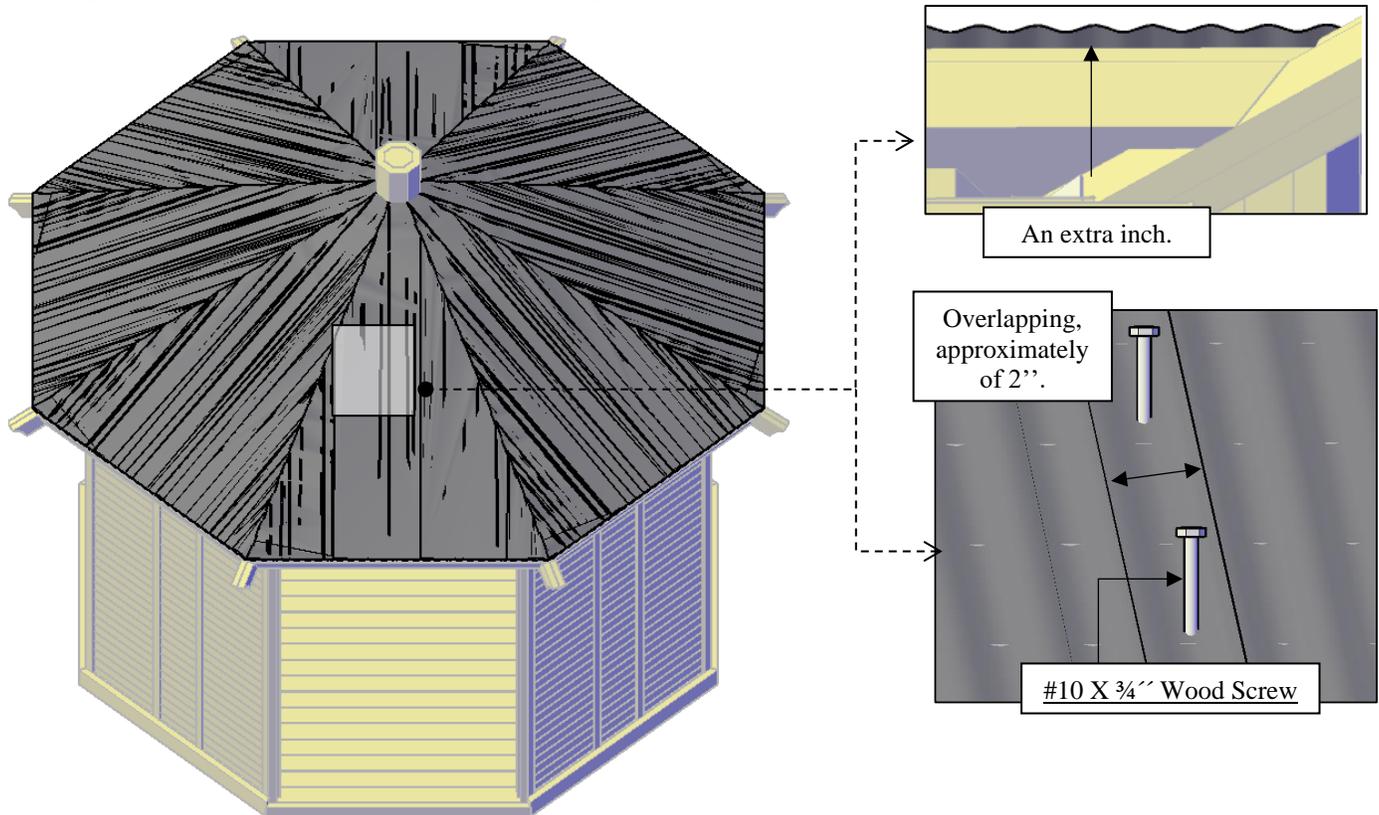


Step 12: Use #10 X ¾" Wood Screw, hex head with Neoprene Washer to attach the Ridge Cap to the roof panels.

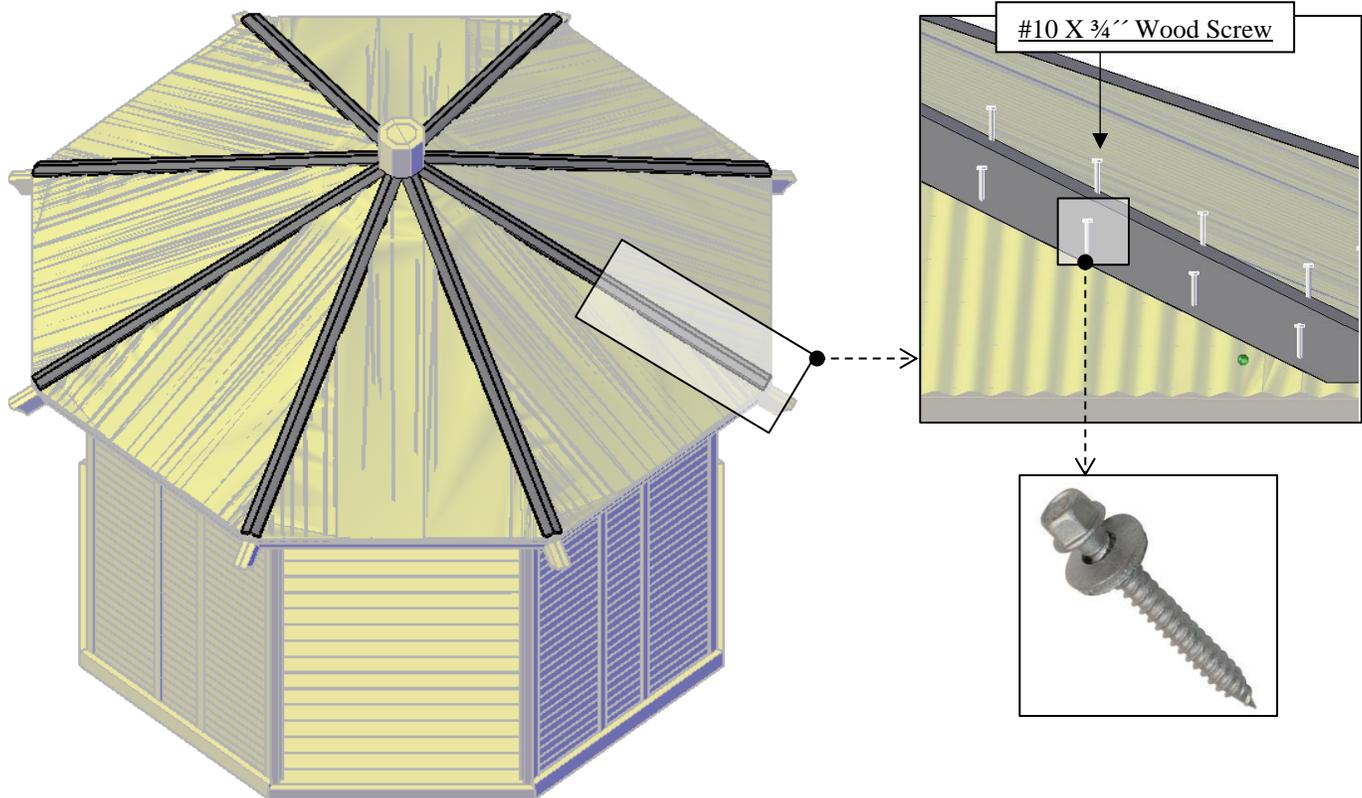

Step 13: Attach the roof trims (9) to the roof panels.


Option A. With Roof Boards

Use 3/8" x 8" lag bolts and 3/8" x 6" lag bolts to attach the roof trims (9) to the roof panels. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

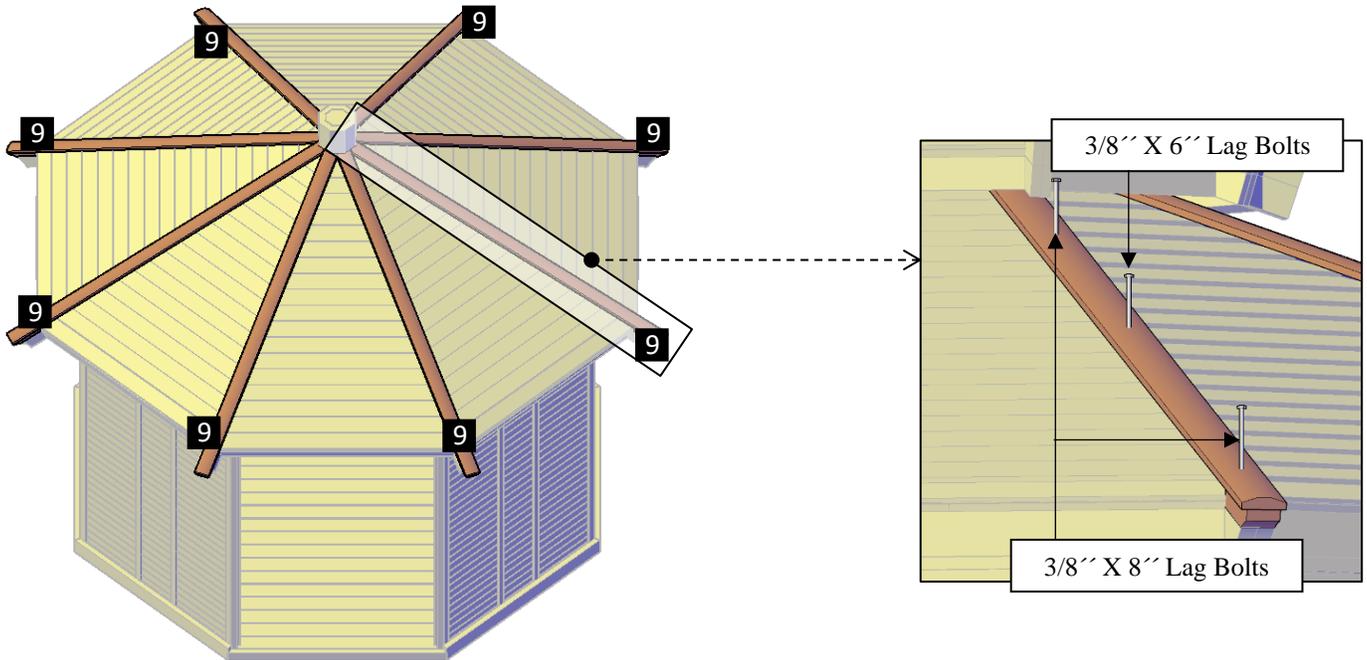


Option B. With Steel Roof Panels


Use 4" deck screws (I) to attach the roof trims (9) to the roof panels. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

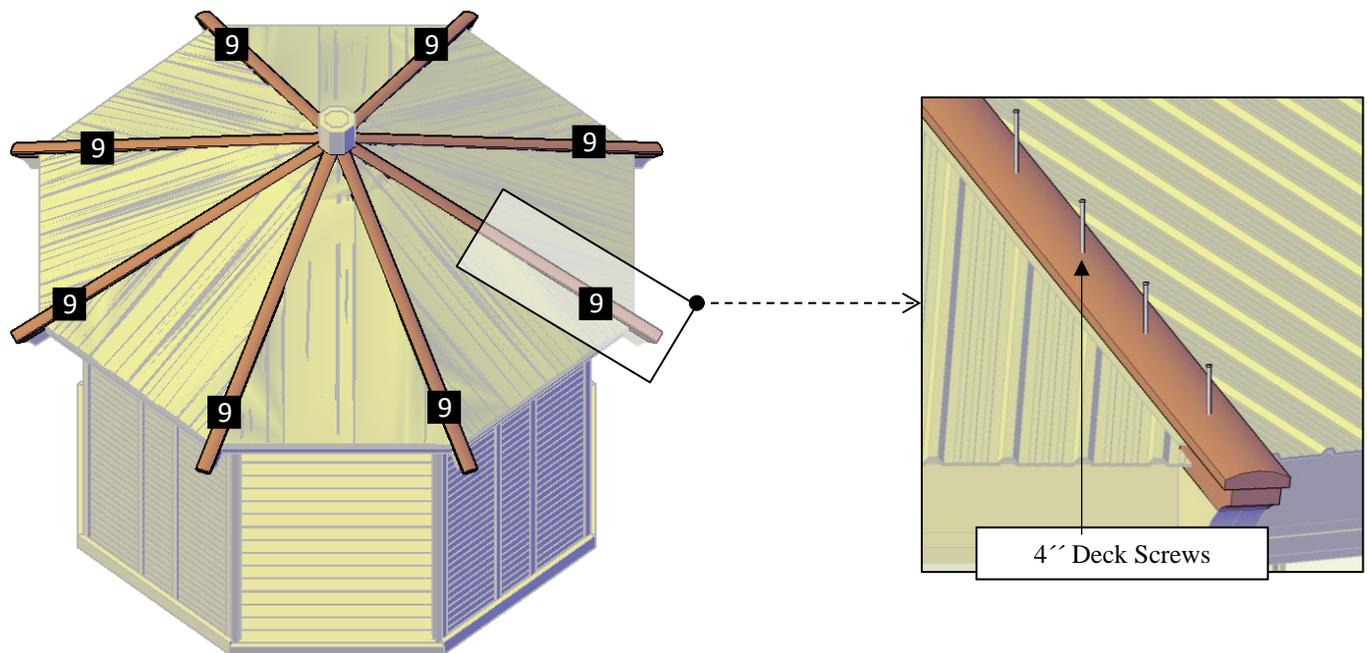


Step 14: Place the doors (10) in their place. Finally, attach the roof frame (8) With 3'' Deck Screws (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

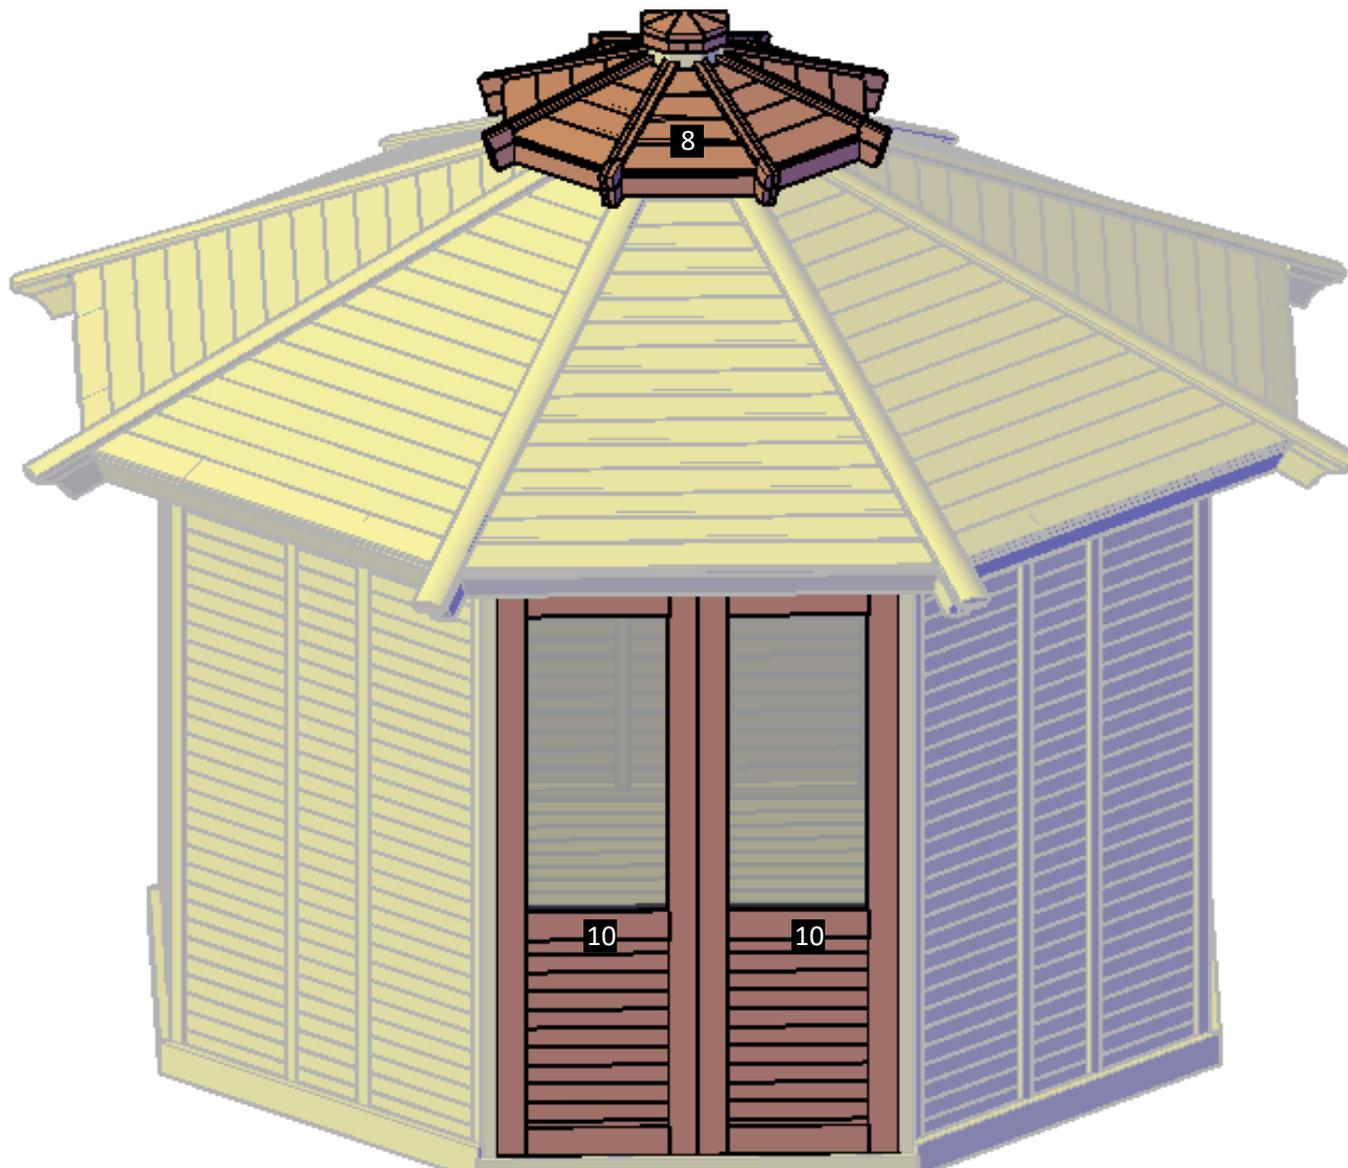

Octagonal Sunroom Gazebo with Roof Boards

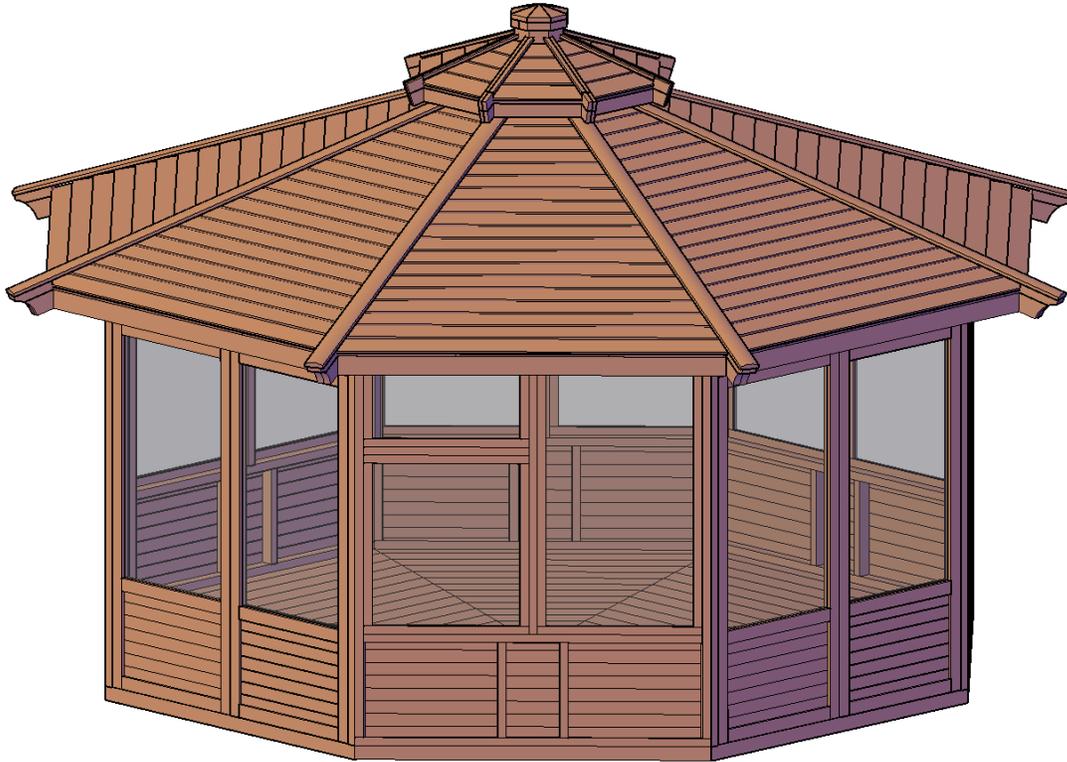

Octagonal Sunroom Gazebo with Steel Roof Panels

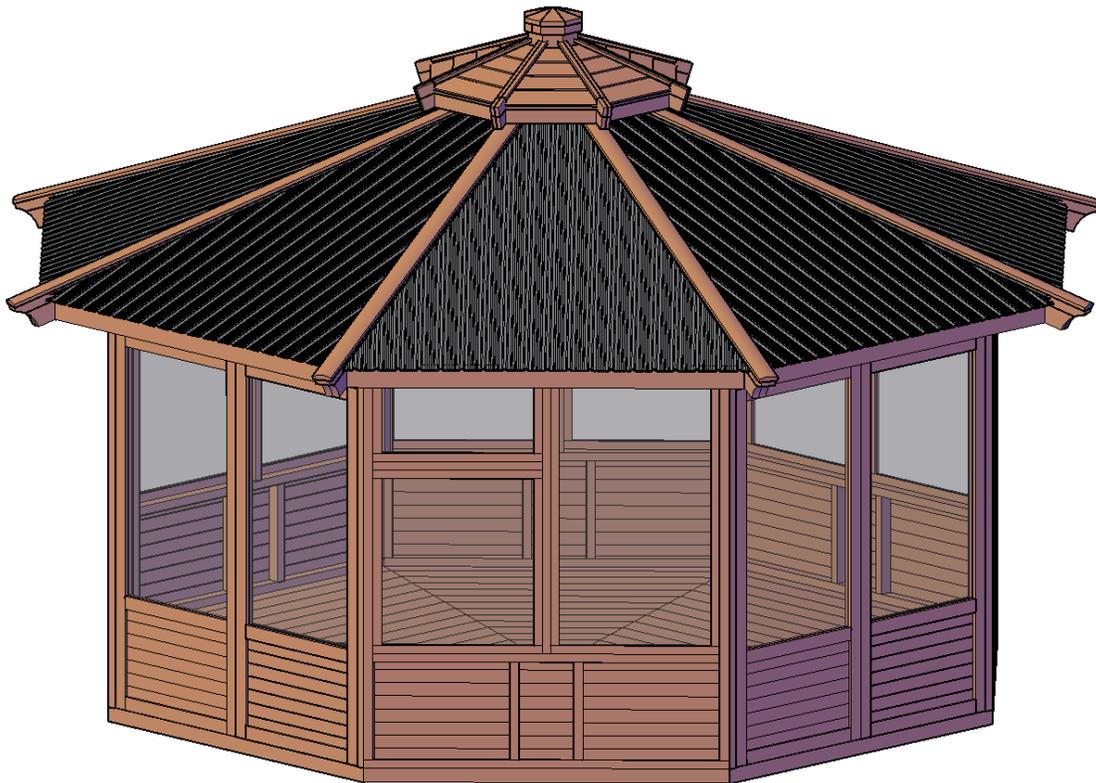



This completes the Gazebo Assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.