

866.332.2403; Outside the US: 619.600.5630 7am-7pm Pacific Time, Monday-Saturday

Assembly instructions for: **PLAYHOUSE BEDS**



CONTENT OF BOXES

Quantity	<u>Description</u>	<u>Drawing</u>
1	Slide	
1	Climbing ladder	
1	Side Wall	
1	Floor	
1	Back Wall	
1	Front Wall	
2	Roof	
2	Brace A	
1	Top Slat	

Quantity	<u>Description</u>
8	Carriage bolts 5 ½" x 5/16", Washers & Nuts
4	Carriage bolts 4 ½" x 5/16", Washers & Nuts
8	3/8" x 7" bolts
10	5/16" x 4 1/2" bolts
14	5/16" x 3 ½" bolts
6	6 x 2 s.s. screws


ASSEMBLY INSTRUCTIONS

Thank you for purchasing Forever Redwood patio furniture. Forever Redwood is built by Old-Growth Again Restoration Forestry (OGA).OGA is dedicated to restoration forestry. Sales of patio furniture finance our restoration work in California redwood forestlands.


Tools required: ½-inch ratchet, a square head screwdriver and a mallet or small hammer.


The parts that go together have the same numbers written next to the predrilled holes they attach to. Align the parts with the numbers as shown for ease of reference.


STEP 1: Attach climbing ladder and side wall to floor with four bolts (3 ½" x 5/16"), washers & nuts (into four holes marked) each side. Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

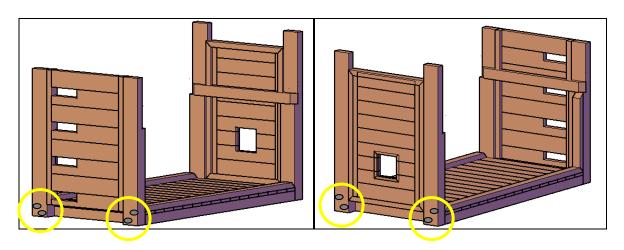

STEP 2: Attach back wall to side wall & climbing ladder, with two bolts ($4 \frac{1}{2}$ " x 5/16"), washers & nuts per side. Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

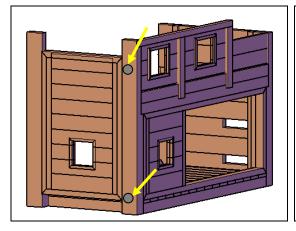

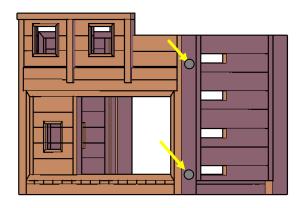

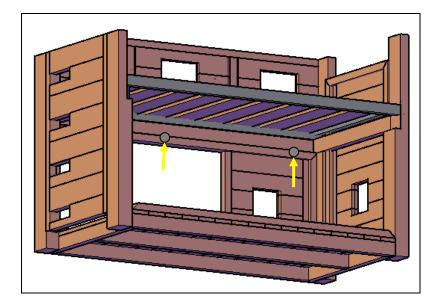


STEP 3:


Attach bed to back wall, with two bolts (3 ½" x 5/16"), washers & nuts (into two holes marked). Tap the bolt all the way into the wood to set it.

STEP 3:

Attach front wall to climbing ladder and side wall, with two bolts (3 ½" x 5/16"), washers & nuts both sides (into two holes marked) per side. Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

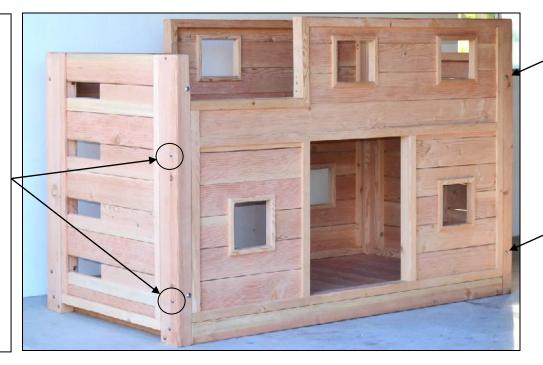


STEP 4: Attach slide to front wall and climbing ladder, with two bolts per side (3"x 5 1/6"), washers & nuts (into holes marked). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

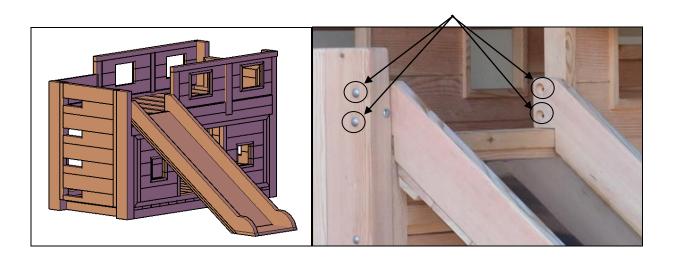


STEP 5: Attach both sides of roof to front & back walls, with two bolts per side (3"x 5 1/6"), washers & nuts (into holes marked). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.



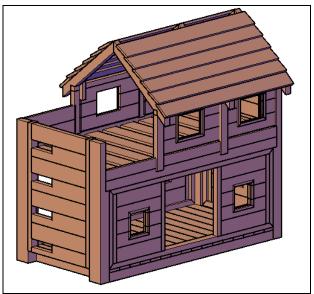

STEP 6:

Top slat and Brace A to both sides of roof with screws.

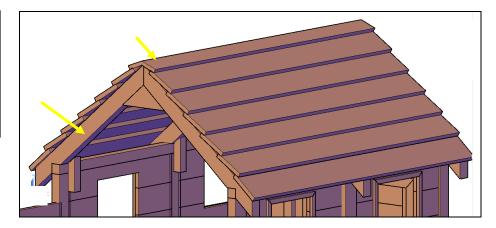



Thank you. If you have any questions, please call or email us.