



FOREVER REDWOOD






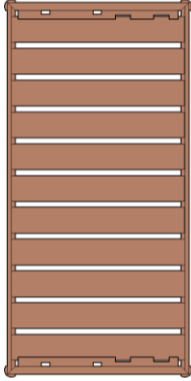



From the Forest, For the Forest since 1995

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE PUNTA BANDA BUNK BEDS









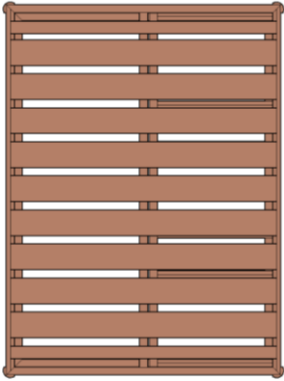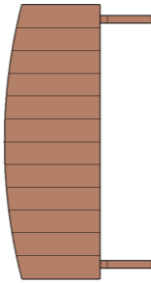CONTENT OF BOXES			
Qty.	Description	Drawing	No.
1	Bottom Base		1
1	Standard or Halfmoon Headboard If ordered.	 	2
Quantity will vary.	Posts		3
Quantity will vary.	Ladder		4
1	Top Base		5
4	Bed Rails		6
3	Knee Braces		7
Quantity will vary.	Drawers If ordered.		8

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.






HARDWARE LIST		
Description	Drawing	No.
5/16'' X 4'' Bolts (To attach the posts to the bottom base and to the top base).		A
5/16'' X 3'' Bolts (To attach the headboard to the bottom baser. / To attach the ladder to the bottom base and to the top base. / To attach the bed rails and the knee braces to the top base).		B
3'' Deck Screws (To attach the bed rails together).		C
5/16'' X 5'' Bolts (To attach the knee braces to the posts).		D

Note: Dimensions of your hardware will vary depending on size.



DESCRIPTION	No
Bottom Base	1
Headboard	2
Posts	3
Ladder	4
Top Base	5
Bed Rails	6
Knee Braces	7
Drawers	8

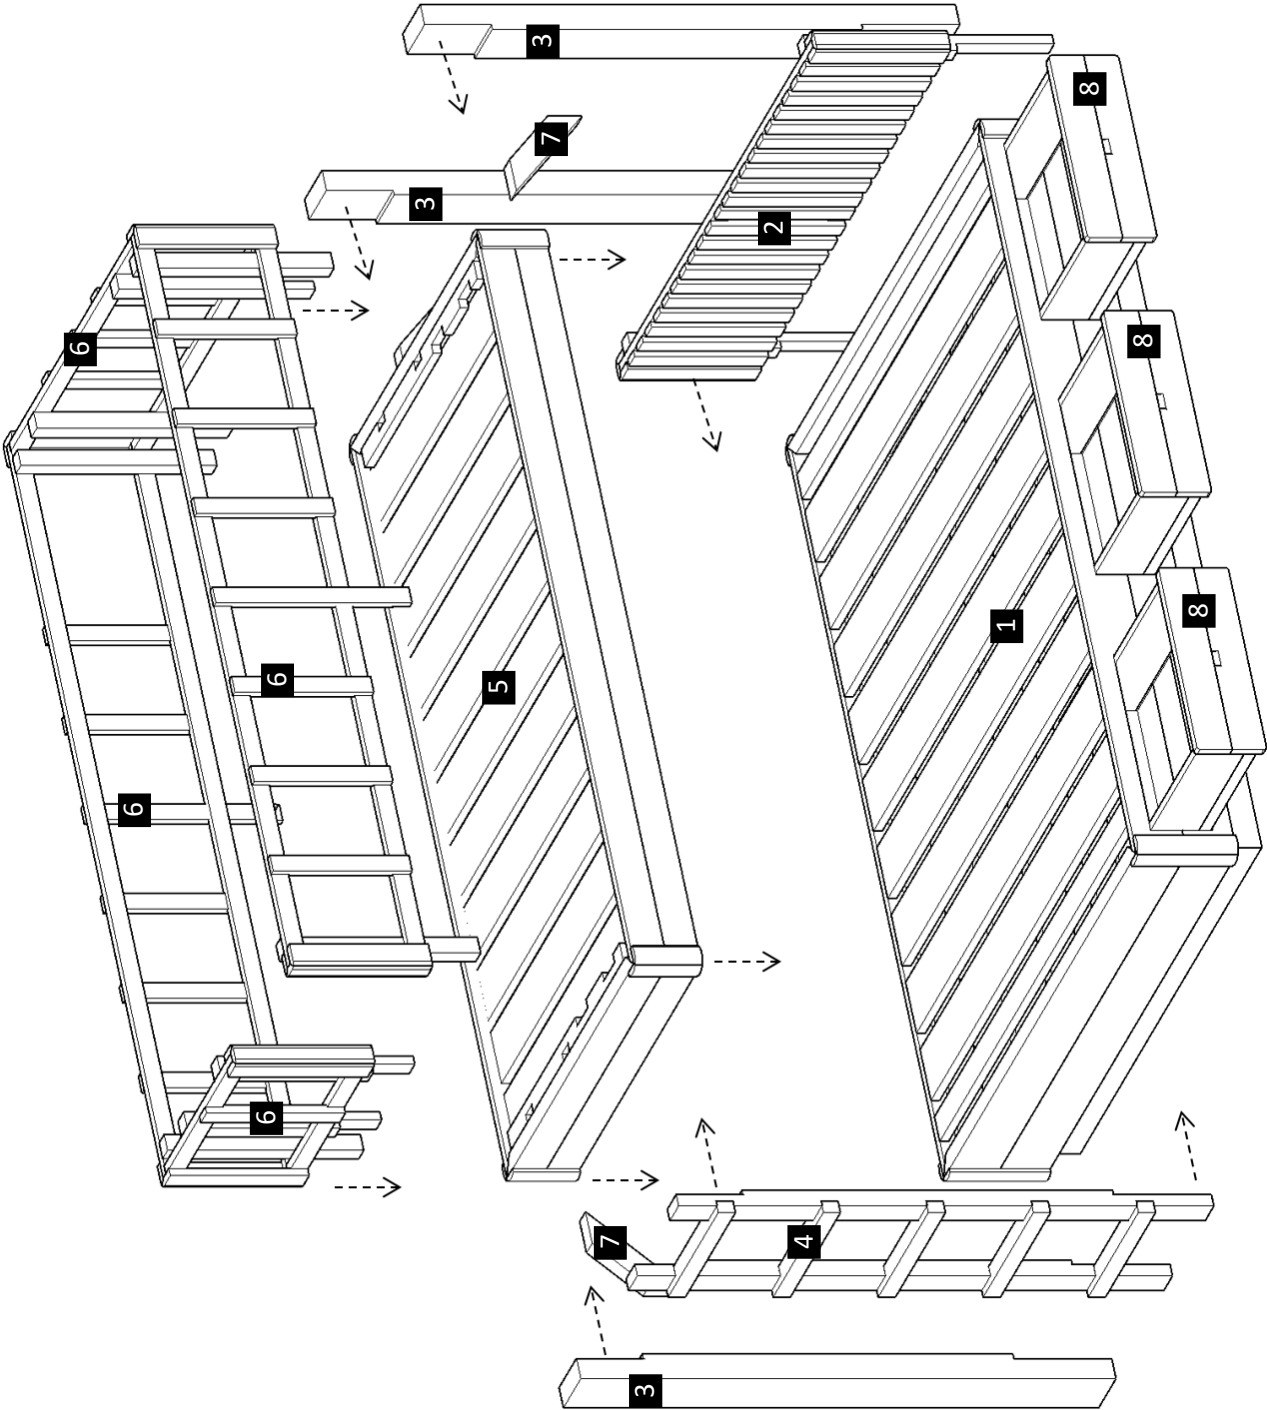


Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.

If your bed doesn't include the headboard, then go to step 2.


Step 1: Use 5/16" x 3" bolts (B) to attach the headboard (2) to the bottom base (1). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

Note: The assembled is the same for both headboard styles.

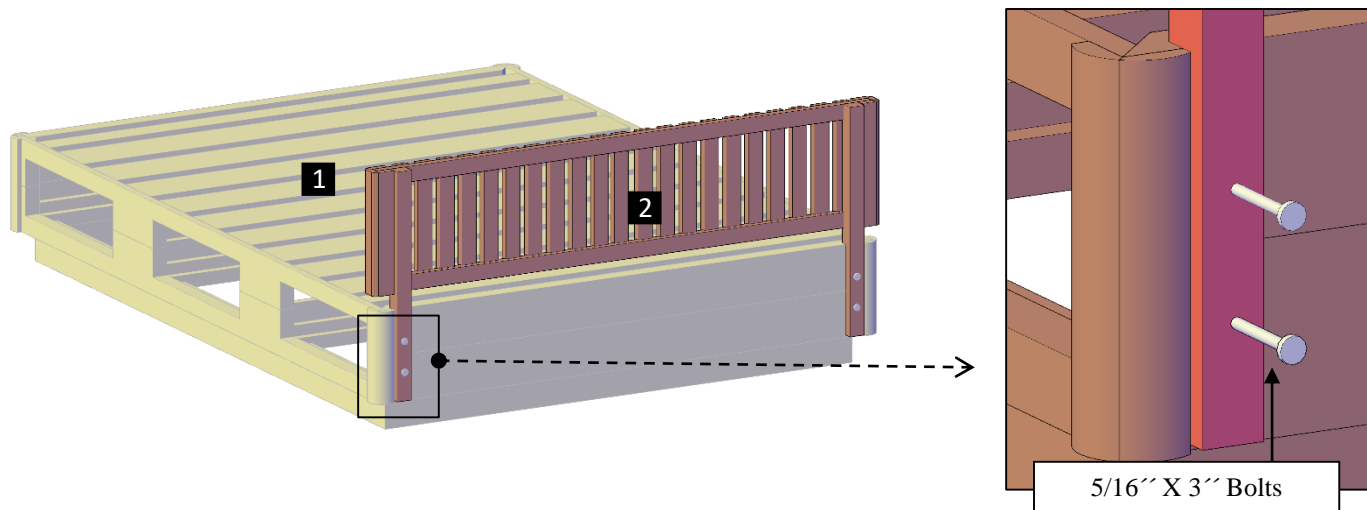


Step 2: Use 5/16" x 4" bolts (A) to attach the posts (3) to the bottom base (1). Each part has a series of numbers that indicate where to attach the part with the corresponding number.


Option A: Without Headboard

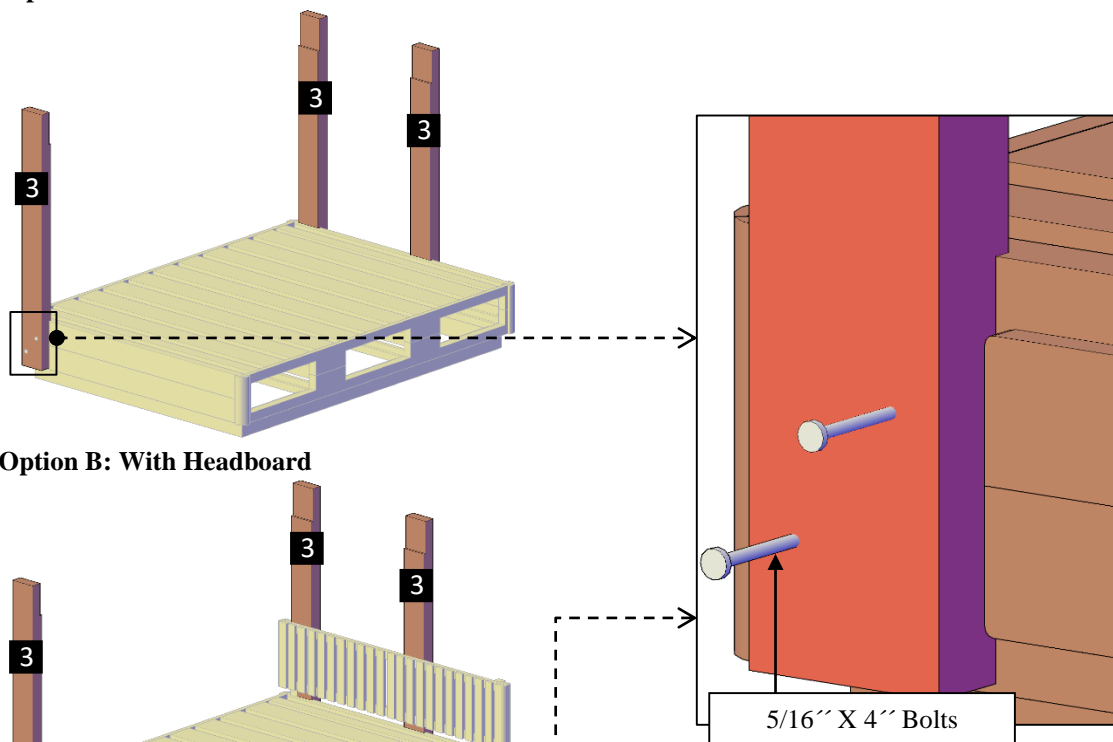


Step 3: Attach the ladder (s) (4) to the bottom base with 5/16" x 3" bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

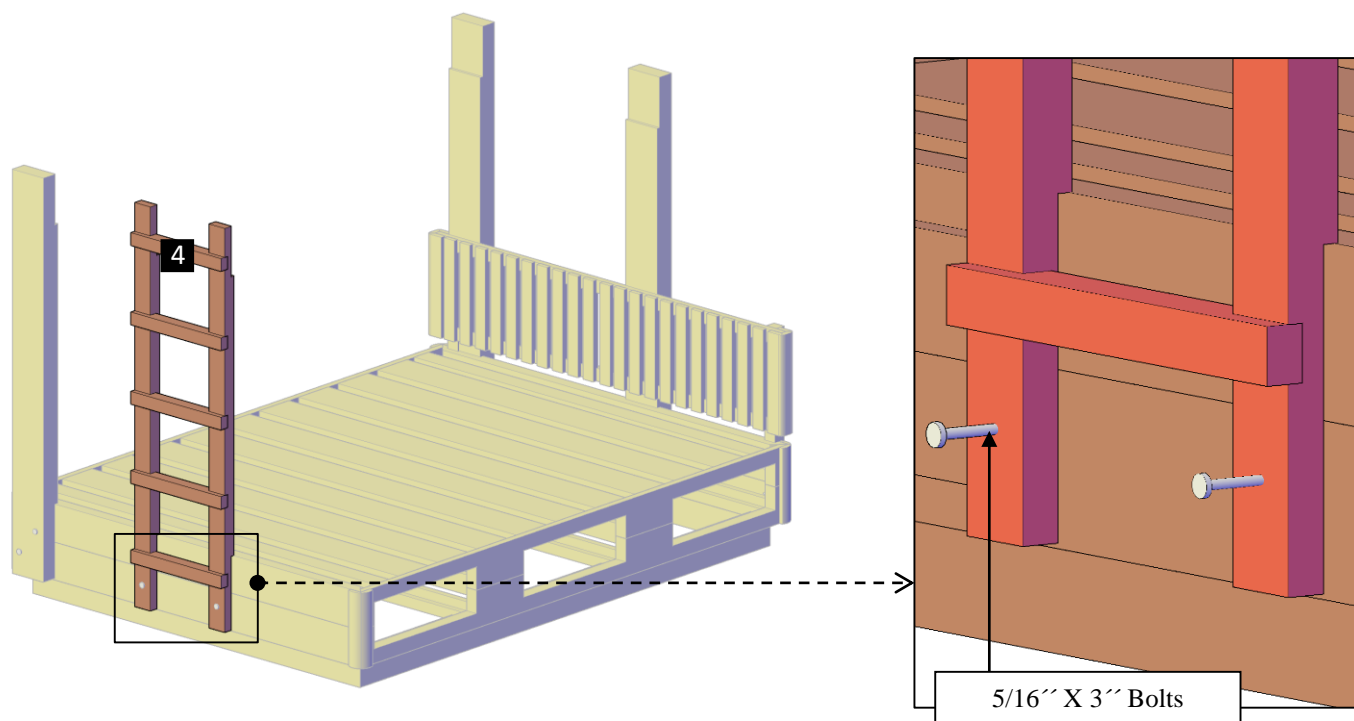


Step 4: Use 5/16" x 4" bolts (A) to attach the top base (5) to the posts. After that, use 5/16" x 3" bolts (B) to attach the top base to the ladder. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

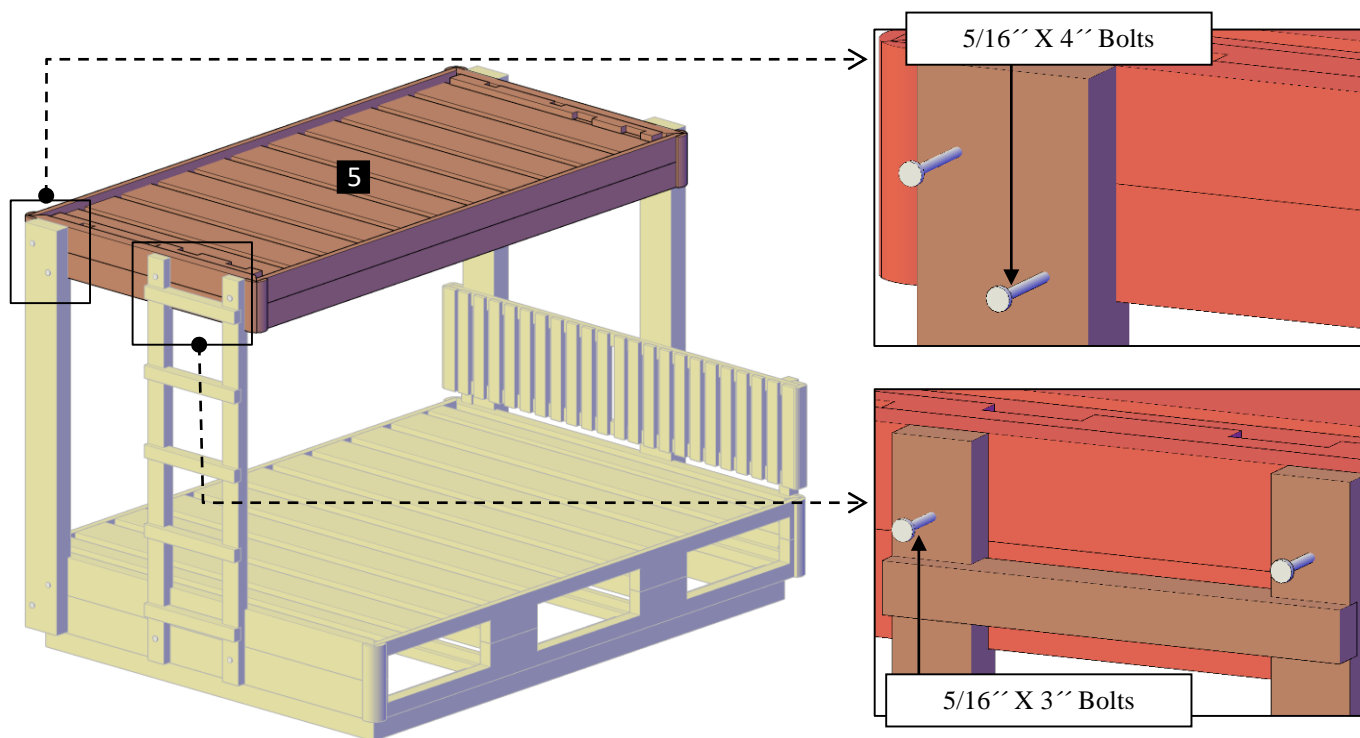


Step 5: Attach the bed rails (6) to the top base with 5/16" x 3" bolts (B). The bed rails will be attached together with 3" deck screws (C). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

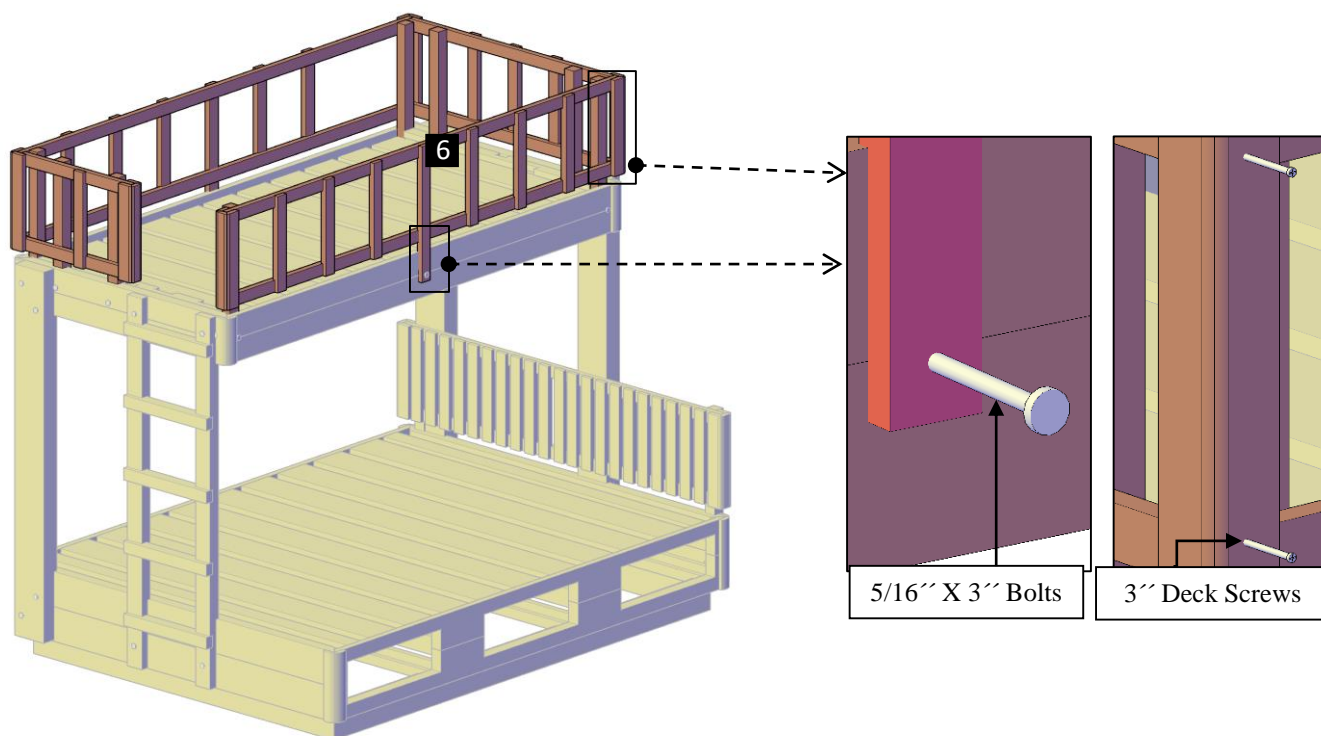

Step 6: Attach the Knee Braces (7) to the posts with 5/16" x 5" bolts (D) and to the top base with 5/16" x 3" bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

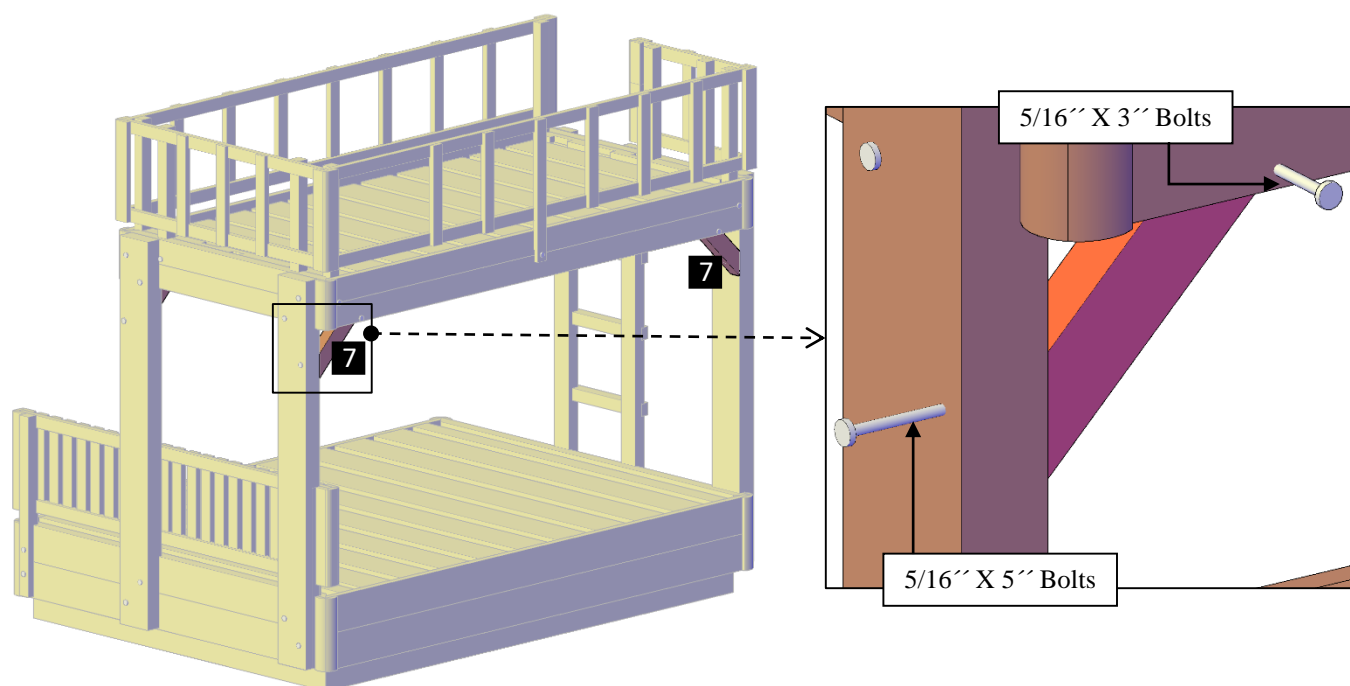

Step 7: Finally, if your bed includes drawers (8), place them.

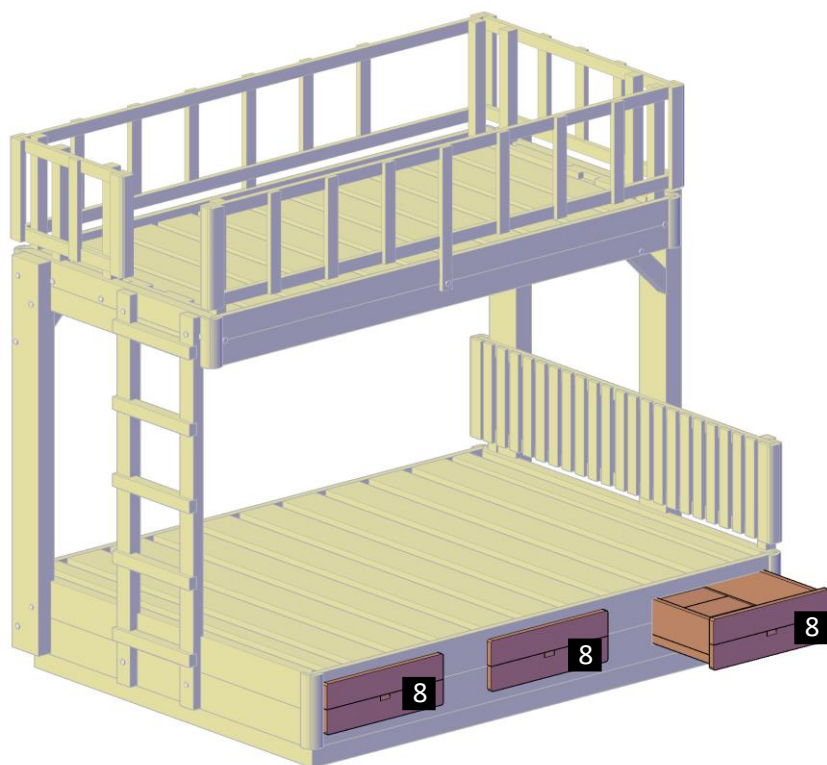



This completes the Bed Assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.