



FOREVER REDWOOD






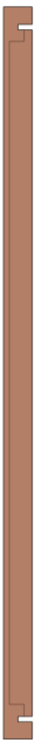







From the Forest, For the Forest since 1995

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE **RETRACTABLE CANOPY PERGOLA**


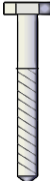
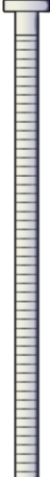

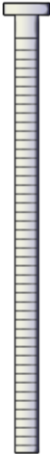







CONTENT OF BOXES				
Qty.	Description	Drawing		No.
4	Posts			1
2	Short Single Supports			2
2	Short Supports with In-Between Blocking			3
2	Short In-Between Covers			4
2	Long Single Supports			5
2	Long Supports with In-Between Blocking			6
2	Long In-Between Covers			7
8	Angle Covers			8
Quantity will vary.	Central Supports			9
4	Boots			10
8	Angles			11
4	Standard, Gale Wind or Hurricane Anchors Bases. If ordered.			Hurricane


Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.



HARDWARE LIST		
Description	Drawing	No.
1/2" X 4" Anchor Bolts (To attach the anchor bases to the ground).		A
3/8" X 3" Lag Bolts (To attach the anchor bases to the posts. / To attach the angles to the posts and to the in-between blocking).		B
3/8" X 8" Bolts (To attach the single supports to the posts).		C
3/8" X 4" Lag Bolts (To attach the supports together).		D
3/8" X 7 1/2" Bolts (To attach the supports with in-between blocking to the single supports).		E
3" Deck Screws (To attach the in-between covers to the supports with in-between blocking. / To attach the boots to the posts).		F
2" Deck Screws (To attach the in-between covers to the posts and to the supports).		G
3/8" X 10" Lag Bolts (To attach the central supports to the short supports).		H

Note: Dimensions of your hardware will vary depending on size.



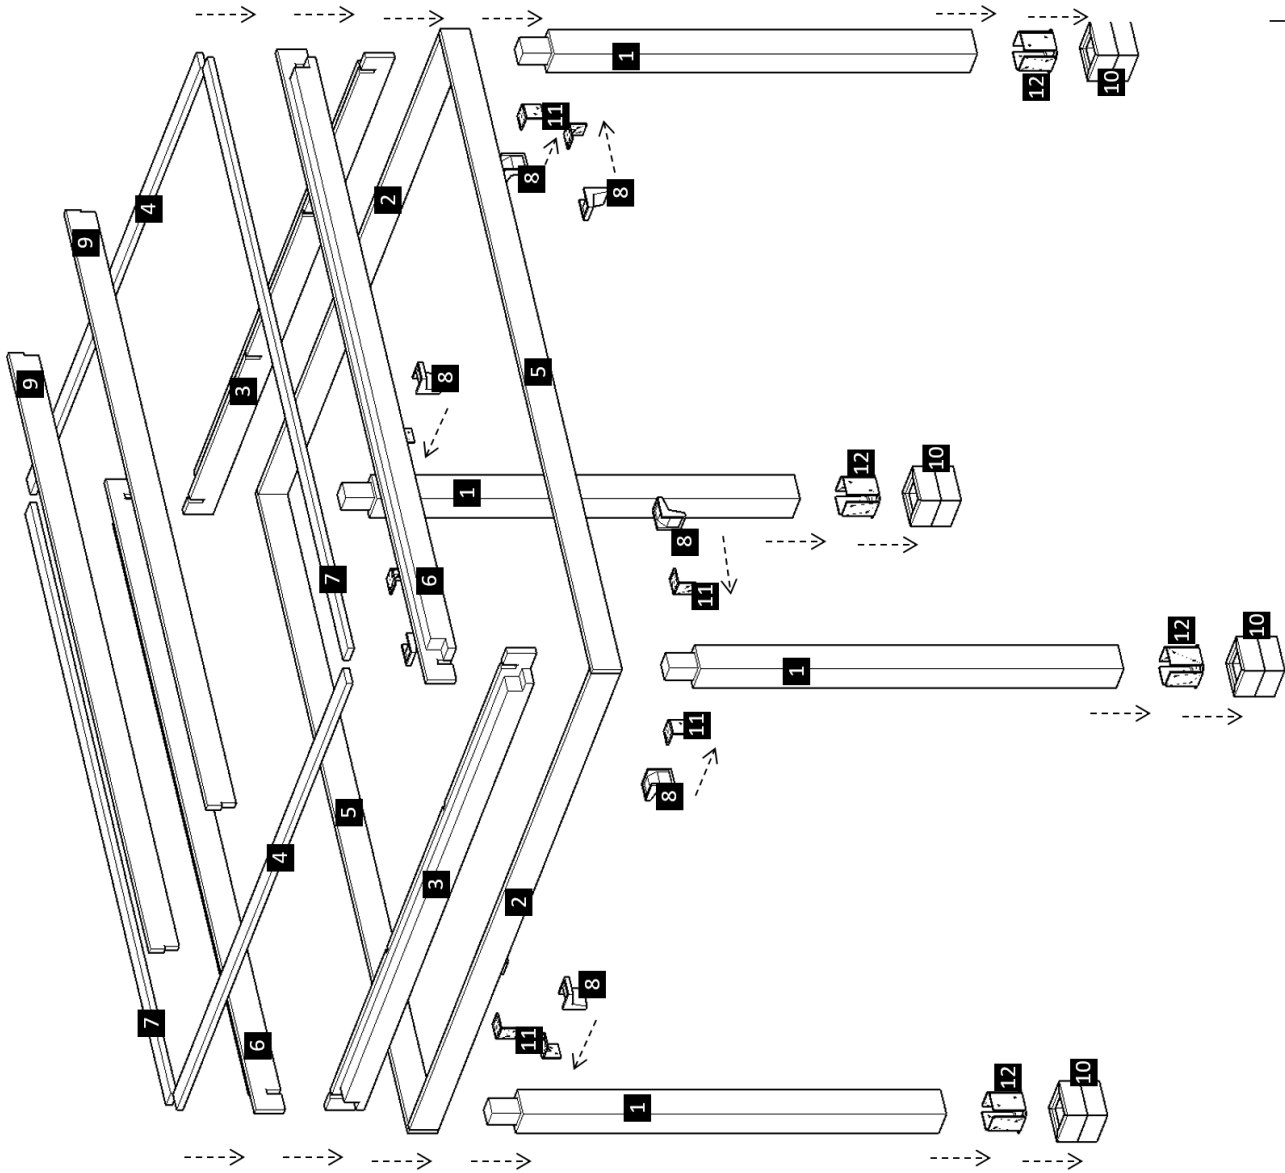


DESCRIPTION	No
Posts	1
Short Single Supports	2
Short Supports with In-Between Blocking	3
Short In-Between Covers	4
Long Single Supports	5
Long Supports with In-Between Blocking	6
Long In-Between Covers	7
Angle Covers	8
Central Supports	9
Boots	10
Angles	11
Anchor Bases	12


Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.

NOTE: In order to know where the post needs to be placed, check the numbers on them. If the post is not marked, then place the single Supports on the ground to locate the markings for each post position and clearly set your bearings. (“Don’t attach yet, only place them on the ground to begin with”).


Step 1: Install the anchor base (12) with $\frac{1}{2}$ " X 4" anchor bolts (A) or lag bolts. Please see the “How to anchor your pergola document” for all details. Set your post (1) in the saddle of the anchor bases (12). Drill a $\phi \frac{1}{4}$ " hole in the post prior to anchoring to facilitate the ratcheting of the hardware. After that, use a $\frac{3}{8}$ " X 3" lag bolts (B) to attach each post to its respective anchor base (12).

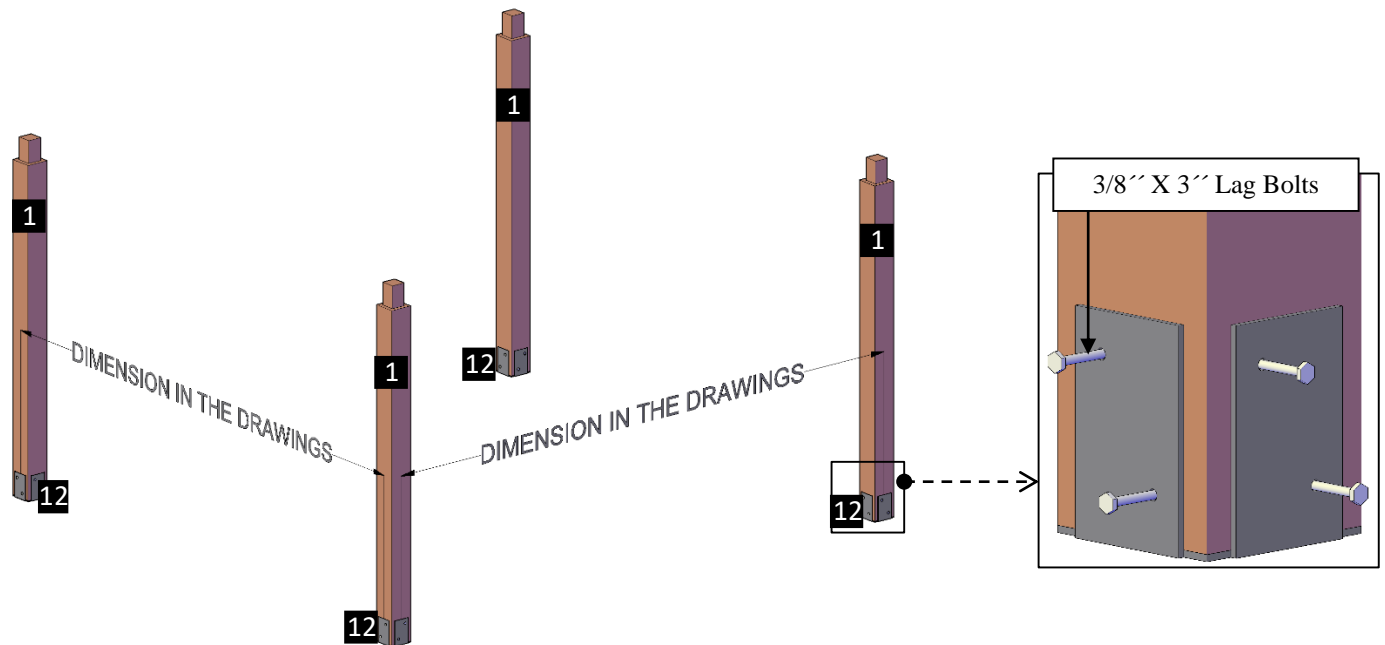


Step 2: Attach the single supports (2,5) to the posts with $\frac{3}{8}$ " x 8" bolts (C). After that, use $\frac{3}{8}$ " x 4" lag bolts (D) to attach the supports together. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

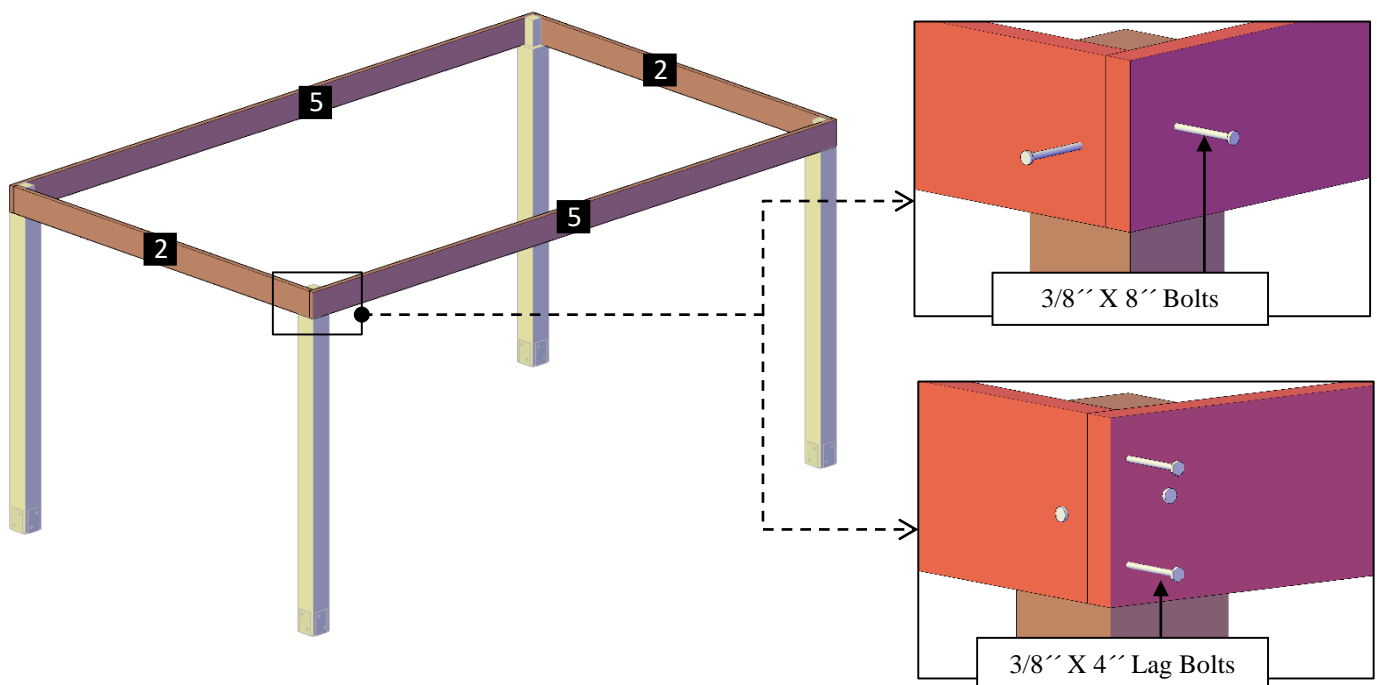


Step 3: Place the short supports with in-between blocking (3) into the post notches and attach to the posts with the short single support bolts. After that, attach the short supports with in-between blocking (3) to the long single supports (2), use 3/8" x 4" lag bolts (D). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

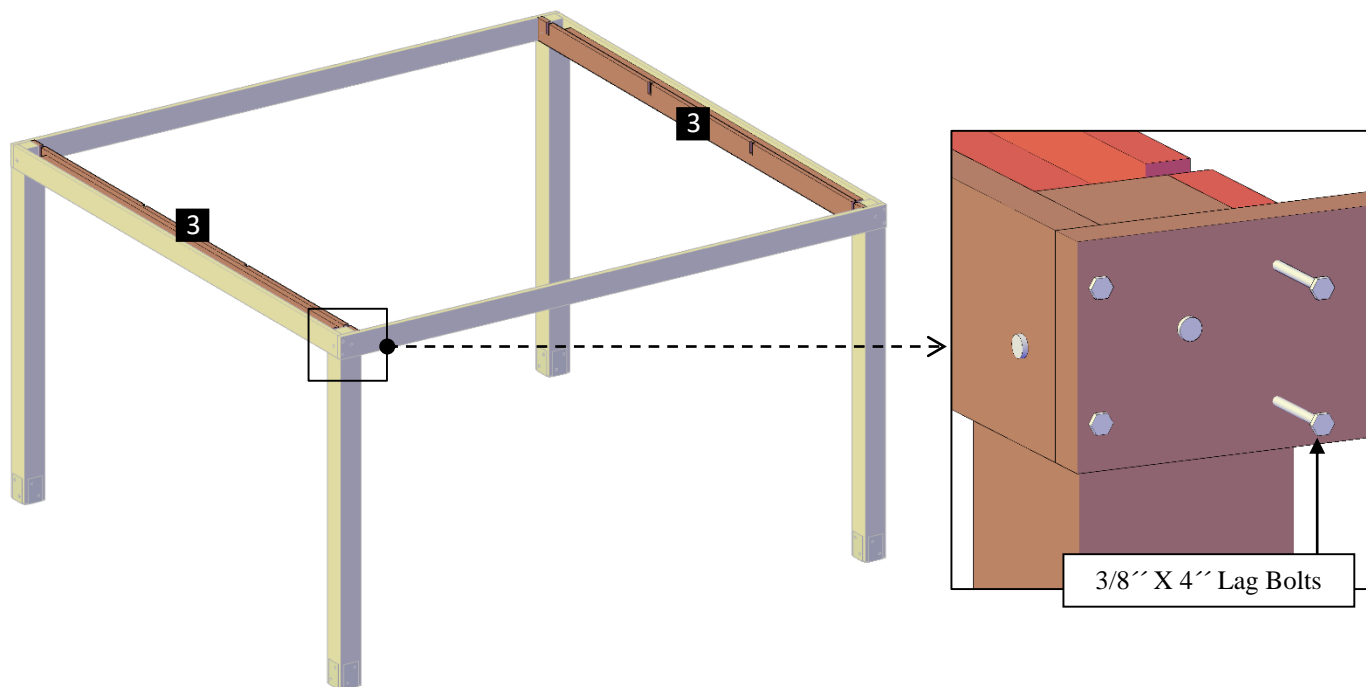


Step 4: Attach the short supports with in-between blocking (3) to the short single supports (2) with 3/8" x 7 1/2" bolts (E). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

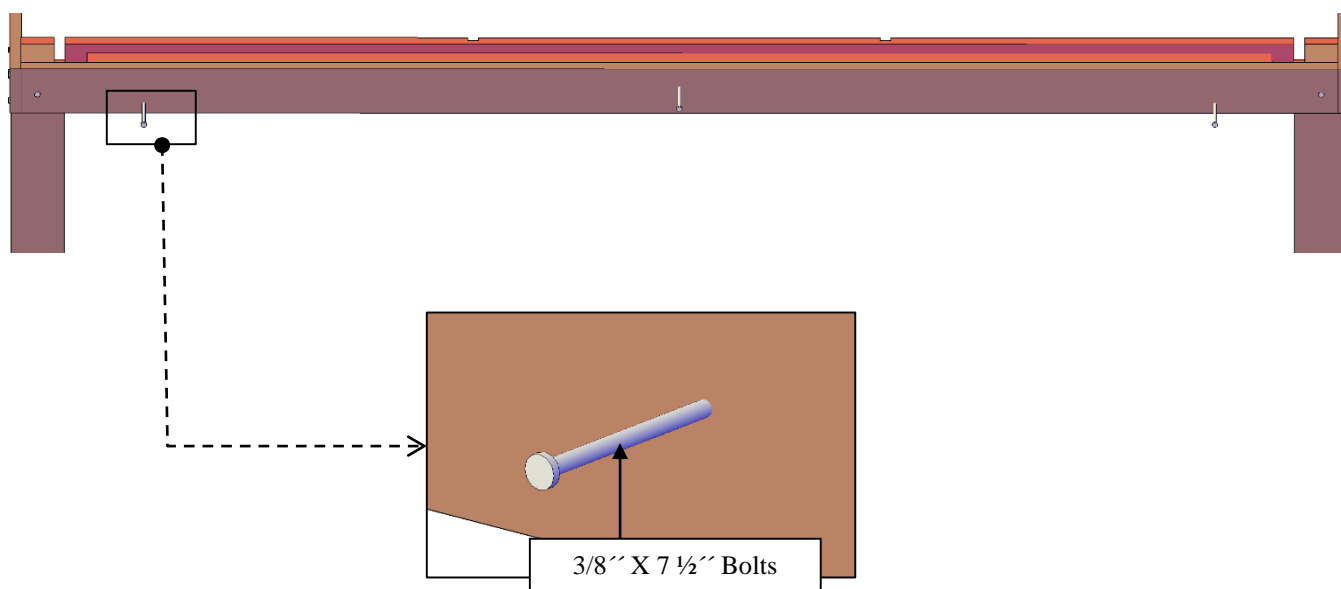


Step 5: Use 3" Deck Screws (F) to attach the short in-between covers (4) to the short supports with in-between blocking. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

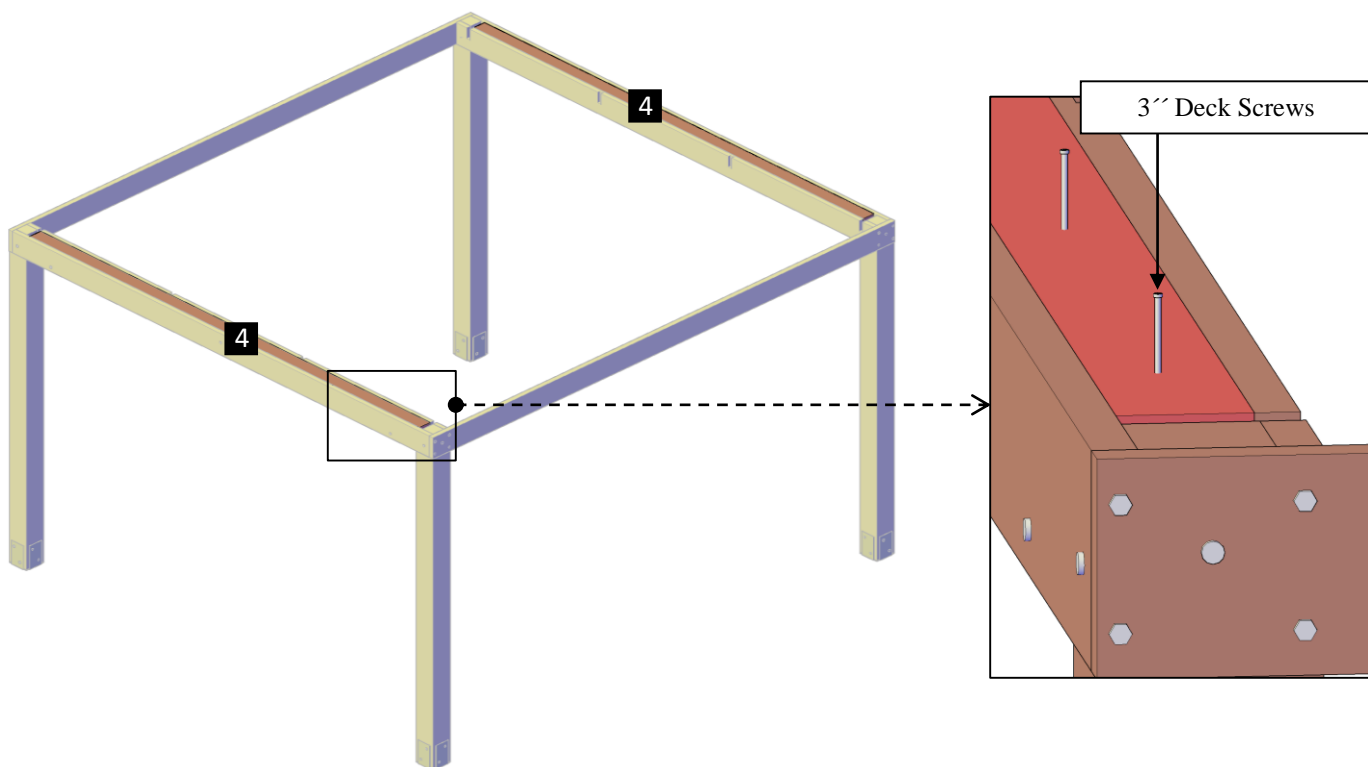


Step 6: To attach the long supports with in-between covers (6) and the long in-between covers (7), repeat steps 3 to 5 above. Make sure that the supports fit correctly. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

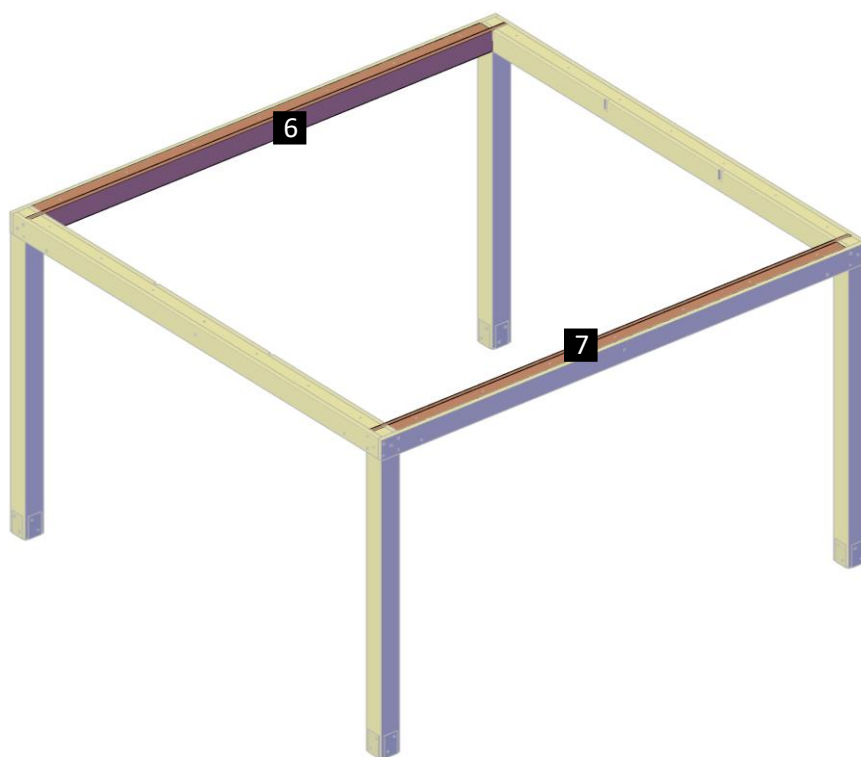


Step 7: Attach the angles (**11**) to the posts and to the in-between blocking with 3/8" X 3" lag bolts (**B**). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

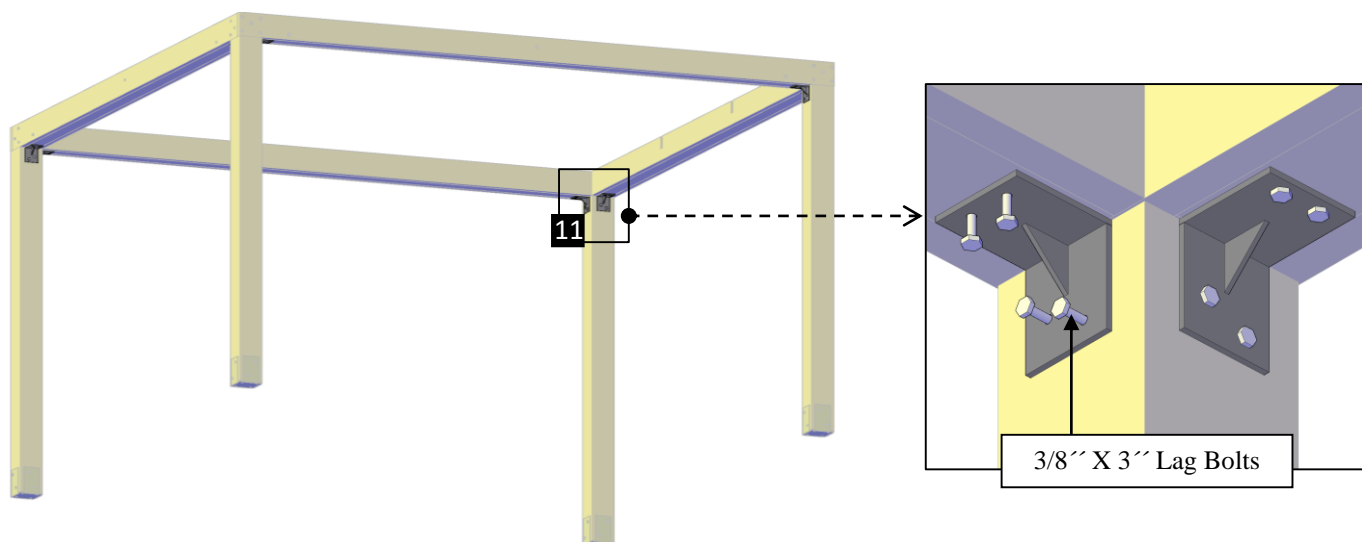


Step 8: Use 2" Deck Screws (**G**) to attach the angle covers (**8**) to the posts and to the supports. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

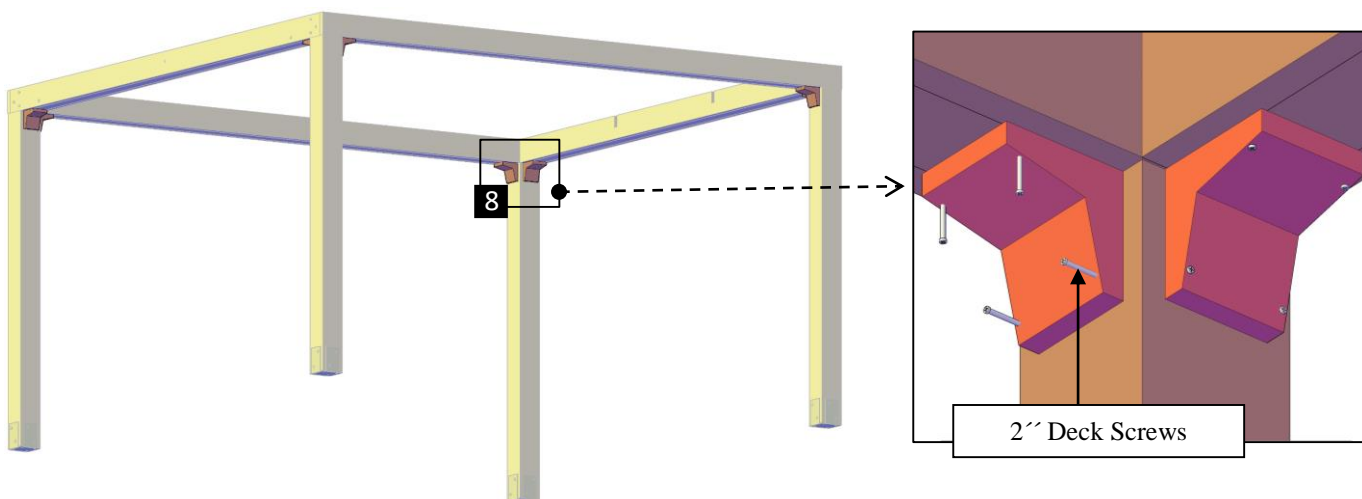

Step 9: Attach the central supports (9) to the short supports with 3/8" x 10" lag bolts (H). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

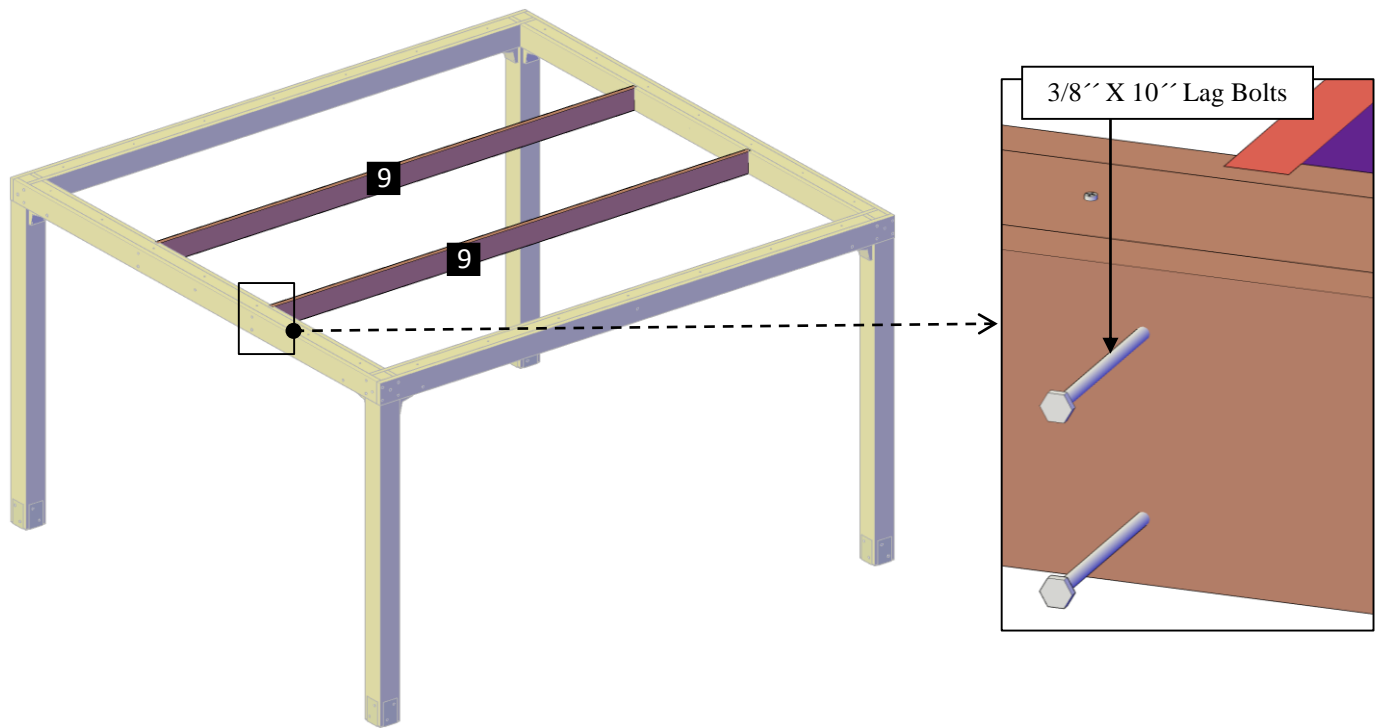

Step 10: Finally, attach the boots (10) to the posts with 3" deck screws (F). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

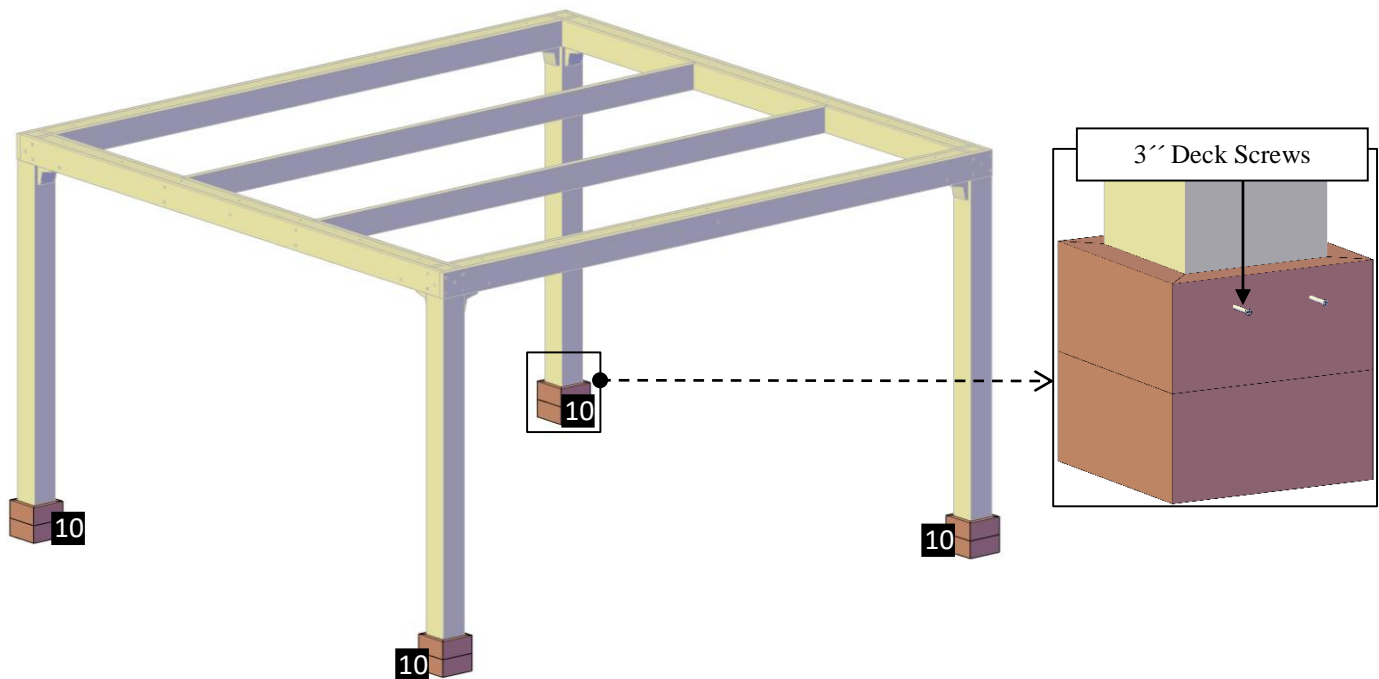



This completes the Pergola assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.