

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE STORAGE MINI BARNS



	No.	1	2	8	4	S	9	7	8	
CONTENT OF BOXES	Drawing									
	Description	Short Floor Supports	Long Floor Supports	Wall Panels	Front Wall Panels	Posts	Short Roof Supports	Long Roof Supports	Frontal Triangle	
	Qty.	2	2	Quantity will vary.	2	4	1	2	1 2	

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.

	No.	6	10	=	12	13	14	15
CONTENT OF BOXES	Drawing							
	Description	Central Triangles	Back Triangle	Roof Panels	Roof Boards	Doors	Shelves If ordered	Knee Braces If ordered
	Qty.	Quantity will vary.	1	Quantity will vary.	Quantity will vary.	Quantity will vary.	Quantity will vary.	Quantity will vary.

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.


	HARDWARE LIST	
Description	Drawing	No.
3/8′′ X 2 ½′′ Lag Bolts (To attach the wall panels to the floor supports).		A
5/16" X 3 ½" Bolts (To attach the wall panels together. / To attach the wall panels to the roof supports).		В
5/16" X 5" Bolts (To attach the posts to the walls. / To attach the roof panels to the perimeter triangles).		C
4" Deck Screws (To attach the frontal and the central tringles to the walls).		D
5/16" X 4" Lag Bolts (To attach the back triangle to the wall).		E
3/8" X 7" Bolts (To attach the roof panels to the central panels).		F
2 ½.′ Deck Screws (To attach the roof boards to the roof panels).	√	G
34" deck screws (To attach the doors to the frontal wall).		Н
3′′ Deck Screws (To attach the shelves to the walls. / To attach the knee braces to the shelves and to the walls).		Ι

Note: Dimensions of your hardware will vary depending on size.

DESCRIPTION	No.
Short Floor Supports	1
Long Floor Supports	2
Wall Panels	3
Front Wall Panels	4
Posts	5
Short Roof Supports	9
Long Roof Supports	7
Frontal Triangle	8
Central Triangles	6
Back Triangle	10
Roof Panels	11
Roof Boards	12
Doors	13

Note: Part numbers in the <u>Drawing</u> are for reference only. These do not match to the numbers marked on the parts sent.


Step 1: Attach the back walls panels (3) to the floor support (1,2) with 3/8" x 2 ½" lag bolts (A). The wall panels will be attached together with 5/16" x 3 ½" bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

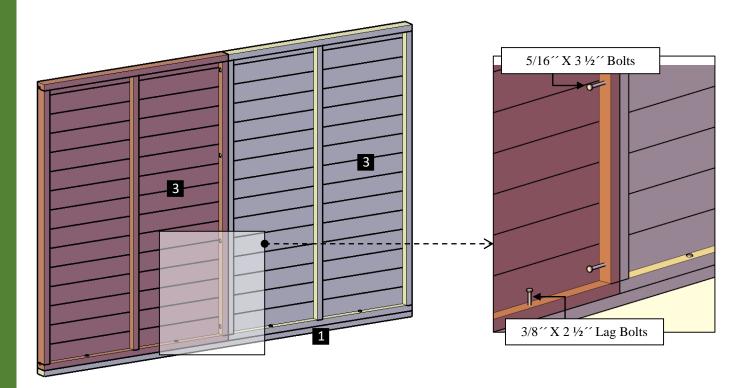


Repeat this step to assemble the lateral walls.




Step 2: Attach the front walls panels (4) to the front floor support (1) with 3/8" x 2 ½" lag bolts (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

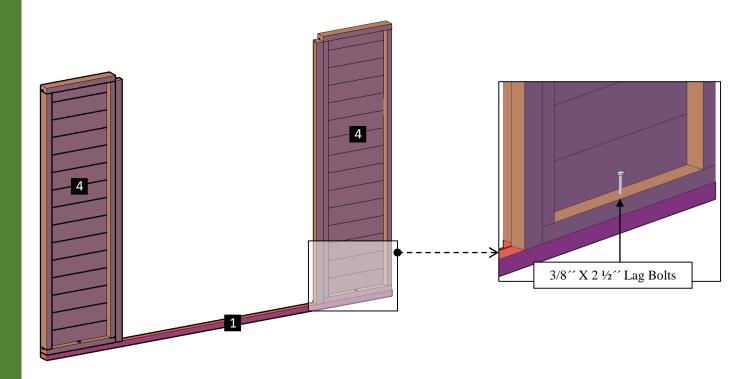


Step 3: Use 5/16" x 5" bolts (5) to attach the posts (C) to the walls. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

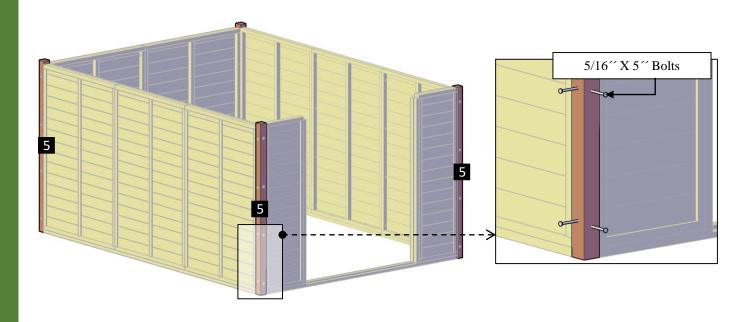


Step 4: Attach the roof supports (6,7) to the walls with 5/16'' x $3\frac{1}{2}$ '' bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

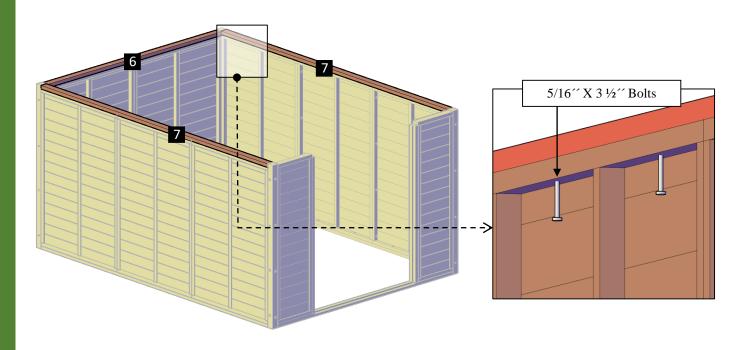


Step 5: Use 4" deck screws **(D)** to attach the frontal triangle **(8)** to the frontal walls. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

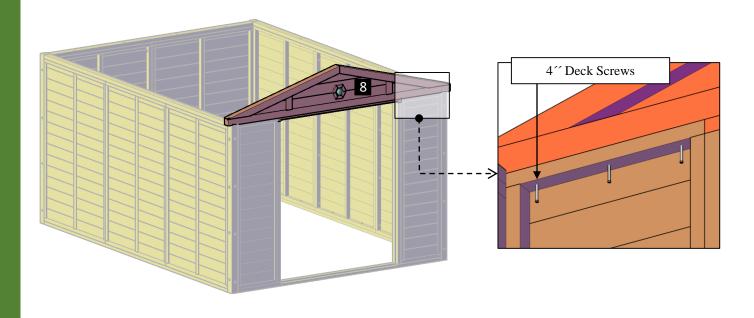


Step 6: Attach the central triangles (9) to the lateral walls with 4" deck screws (**D**). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

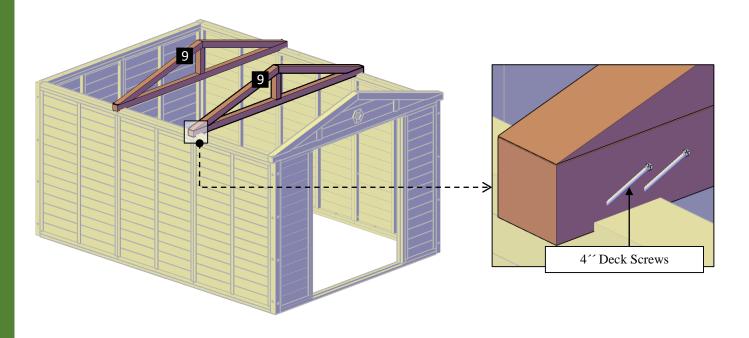


Step 7: Use 5/16" x 4" lag bolts (**E**) to attach the back triangle (**10**) to the back walls. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

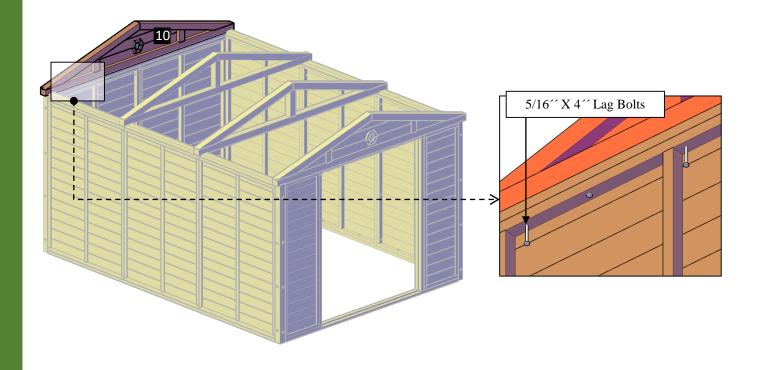


Step 8: Attach the roof panels (11) to the perimeter triangles with 5/16" x 5" bolts (C). After that, use 3/8" x 7" bolts (F) to attach to the central triangles. Finally, put <u>Exterior Clear Silicone</u> on the roof panels joints. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

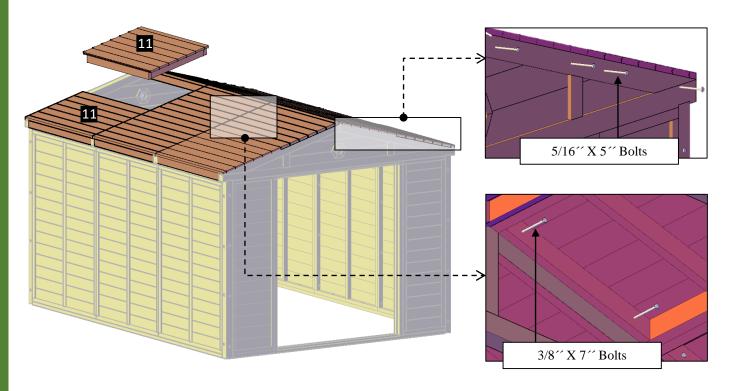


Step 9: Measure the roof panels. After that, cut the #30 Felt Roof Deck Protection to those measurements. Use staples to attach the #30 Felt Roof Deck Protection to the roof panels.

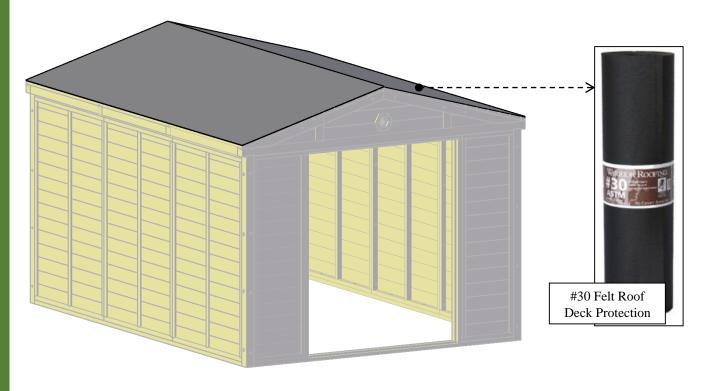

Step 10: Use 2 ½" deck screws (G) to attach the roof boards (12) to the roof panels. Put the boards from the bottom to the top, the overlapping between these boards it will be of ¾". Each part has a series of numbers that indicate where to attach the part with the corresponding number.

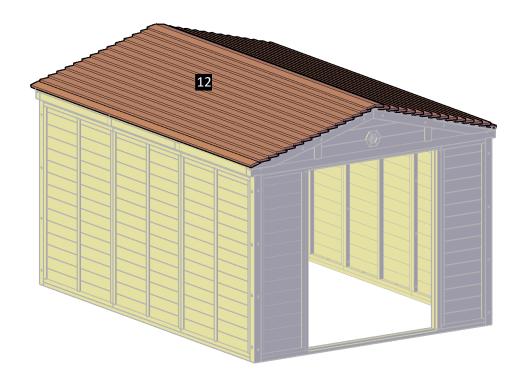


Step 11: Attach the doors (13) to the front wall with ³/₄'' deck screws (H). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

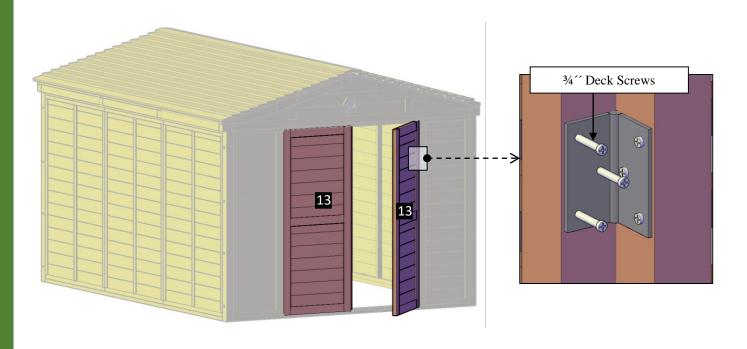


If your Storage includes shelves, follow these instructions.

Step 12: Attach the shelves **(14)** to the walls with 3" Deck Screws **(I)**. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

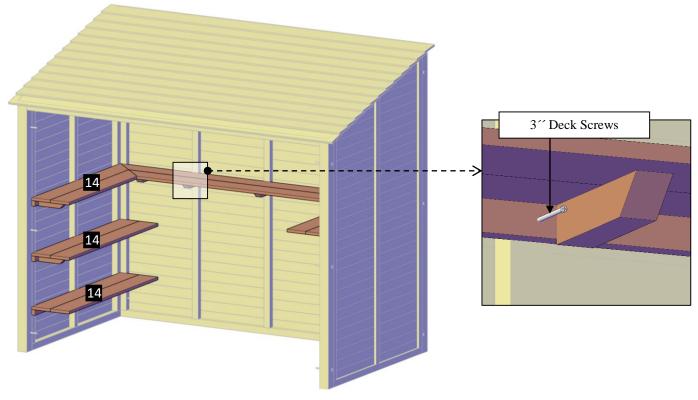

Step 13: Finally, use 3" Deck Screws (I) to attach the knee braces (15) to the shelves and to the walls. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

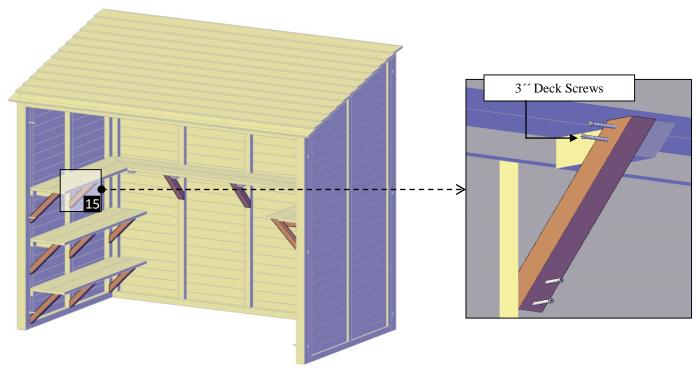



This completes the Storage assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.