

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE **STORAGE SHEDS**



	No.	1	2	ю
CONTENT OF BOXES	Drawing			
	Description	Back Wall	Lateral Walls	Frontal Wall
	Qty.	1	2	-

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.

	No.	4	S	9	7	8
CONTENT OF BOXES	Drawing					
	Description	Door (s)	Roof Panel	Roof Boards	Shelves If ordered	Knee Braces If ordered
	Qty.	Quantity will vary	1		Quantity will vary	

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.


	HARDWARE LIST	
Description	Drawing	No.
5/16" X 5" Bolts (To attach back wall and the frontal wall to the lateral walls./ To attach the roof panel to the lateral walls).		A
1 5/8" Deck Screws (To attach the doors to the frontal wall).		В
2" Deck Screws (To attach the roof boards to the roof panel).		C
3. Deck Screws (To attach the shelves to the walls. / To attach the knee braces to the walls and to the shelves).		D

Note: Dimensions of your hardware will vary depending on size.


DESCRIPTION	No
Back Wall	1
Lateral Walls	2
Frontal Wall	3
Door (s)	4
Roof Panel	5
Roof Boards	9
Shelves	7
Knee Braces	8

are for reference only. These do not match to the numbers marked on the Note: Part numbers in the <u>Drawing</u>


parts sent.

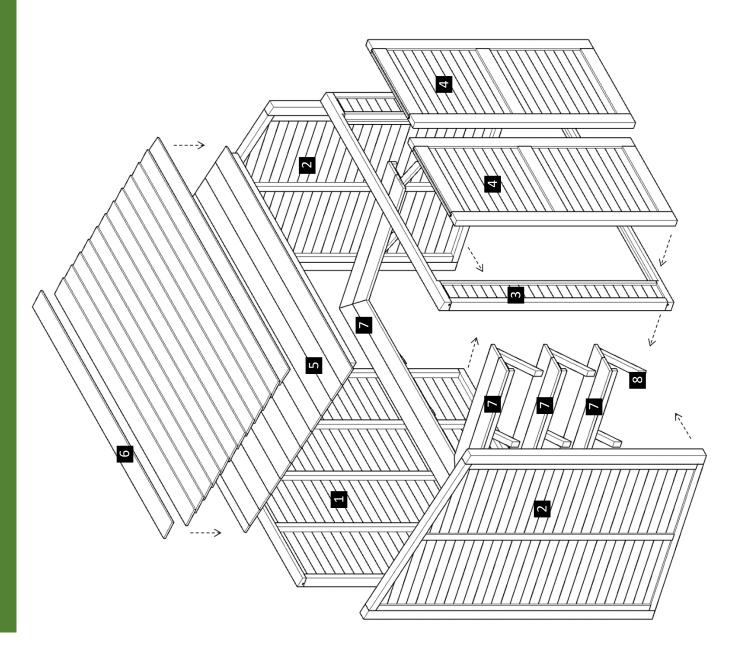


Step 1: Use 5/16 ' x 5' bolts (**A**) to attach the lateral walls (**2**) to the back wall (**1**). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

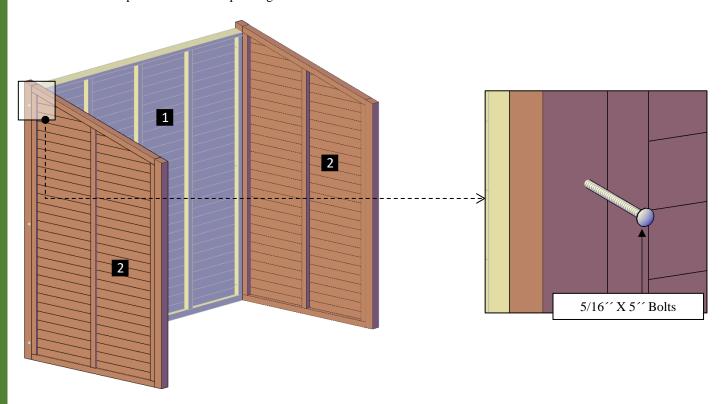


Step 2: Attach the frontal wall (3) to the lateral walls with 5/16 x 5 bolts (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

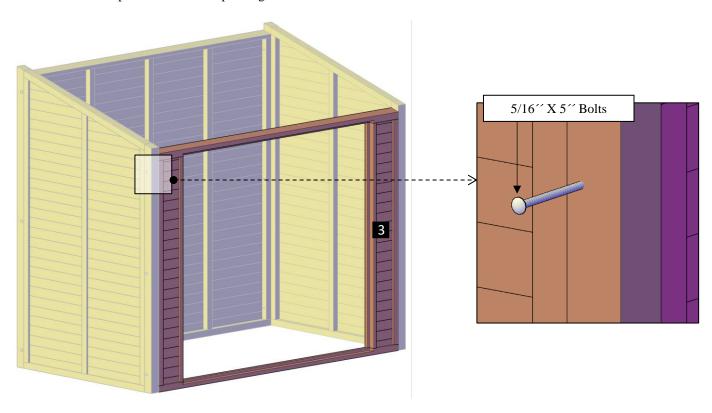


Step 3: Use 1 5/8" Deck Screws **(B)** to attach the doors **(4)** to the frontal wall. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

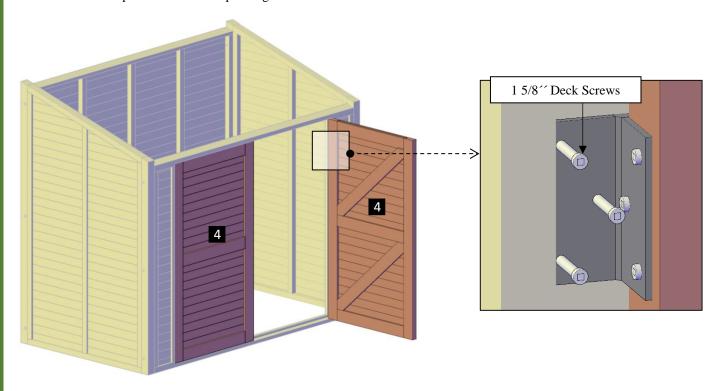


Step 4: Attach the roof panel (5) to the lateral walls with $5/16^{\prime\prime}$ x $5^{\prime\prime}$ bolts (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

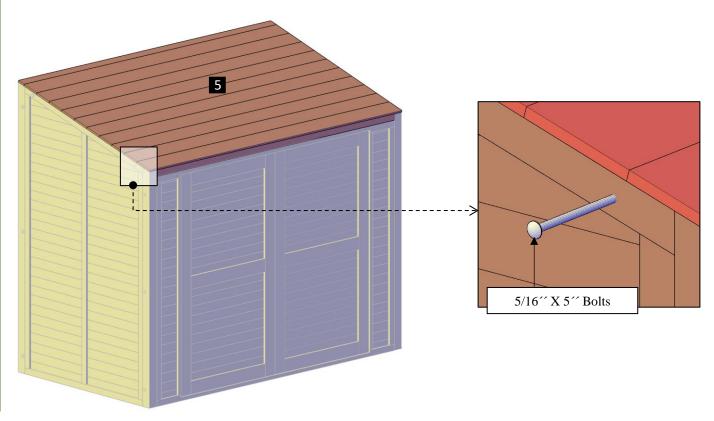


Step 5: First, measure the roof panel. After that, cut the #30 Felt Roof Deck Protection to those measures. Use staples to attach the #30 Felt Roof Deck Protection to the roof panel.

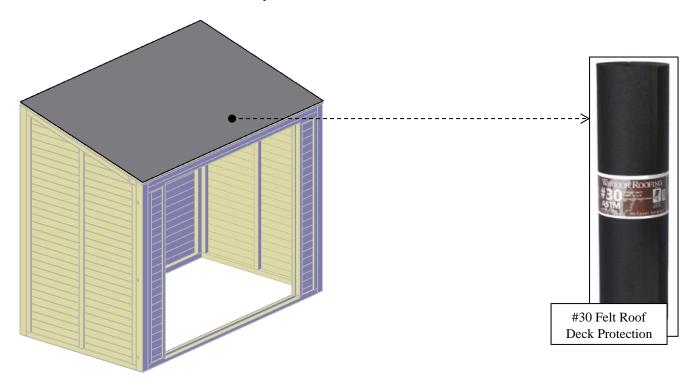


Step 6: Use 2" Deck Screws (C) to attach the roof boards (6) to the roof panel. Put the boards from the bottom to the top, the overlapping between these boards it will be of 34" approx. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

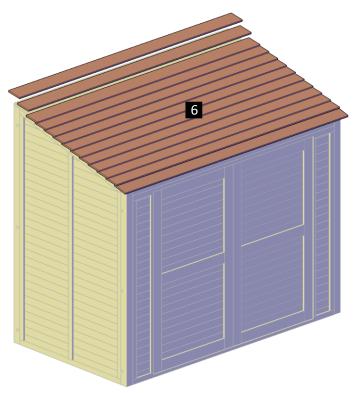

Step 7: Attach the shelves (7) to the walls with 3" Deck Screws (**D**). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

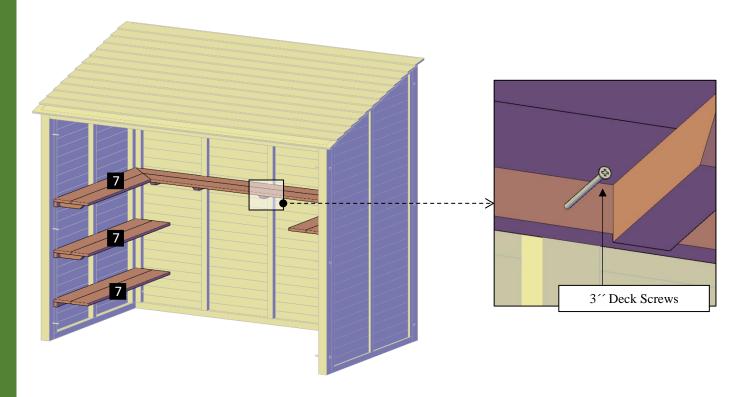

Step 8: Finally, use 3" Deck Screws (**D**) to attach the knee braces (**8**) to the shelves and to the walls. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

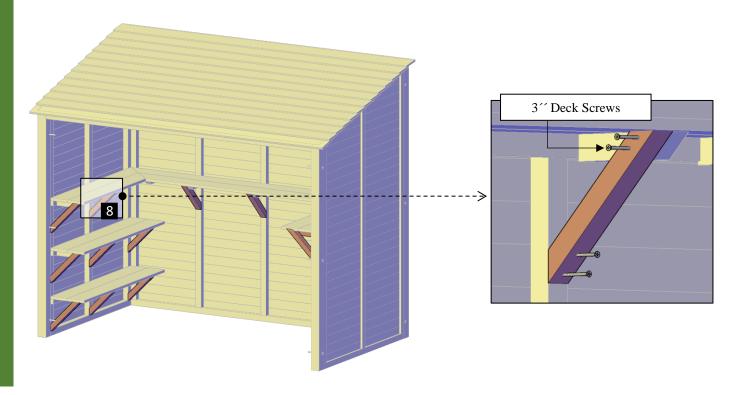



This completes the Storage Sheds Assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.