



# FOREVER REDWOOD

*From the Forest, For the Forest since 1995*









---

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

## ASSEMBLY INSTRUCTIONS FOR THE **THE BREEZY SMALL PAVILION**


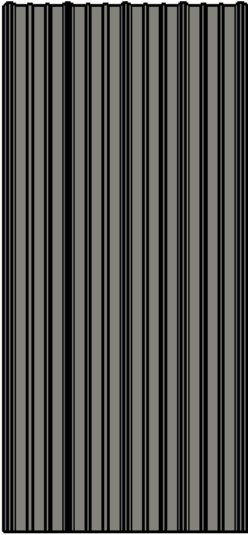


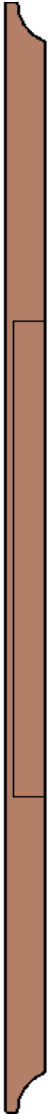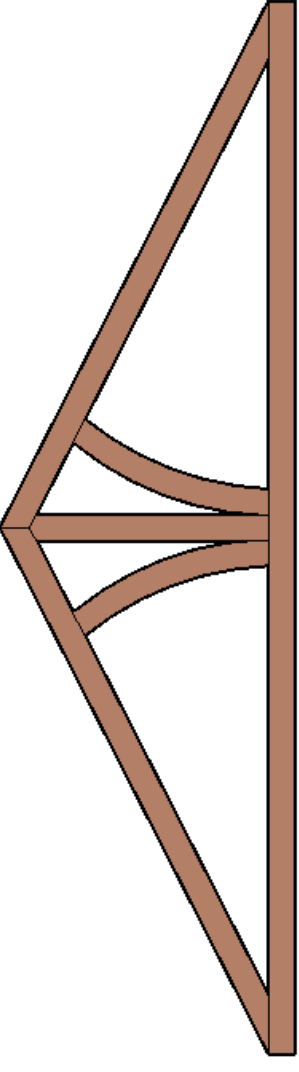


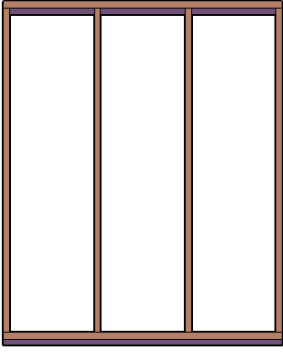



CONTENT OF BOXES			
Qty.	Description	Drawing	No.
Will Vary	Posts		1
Will Vary	Single Supports		2
Will Vary	Supports with In-Between Blocking		3
Will Vary	Triangles		4
Will Vary	Main Knee Braces		5
Will Vary	Secondary Knee Braces		6
Will Vary	Roof Panels		7
Will Vary	Roof Trims		8


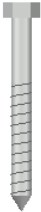
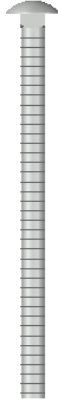

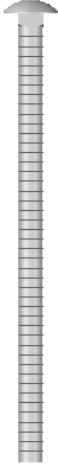
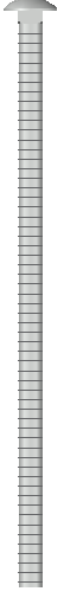





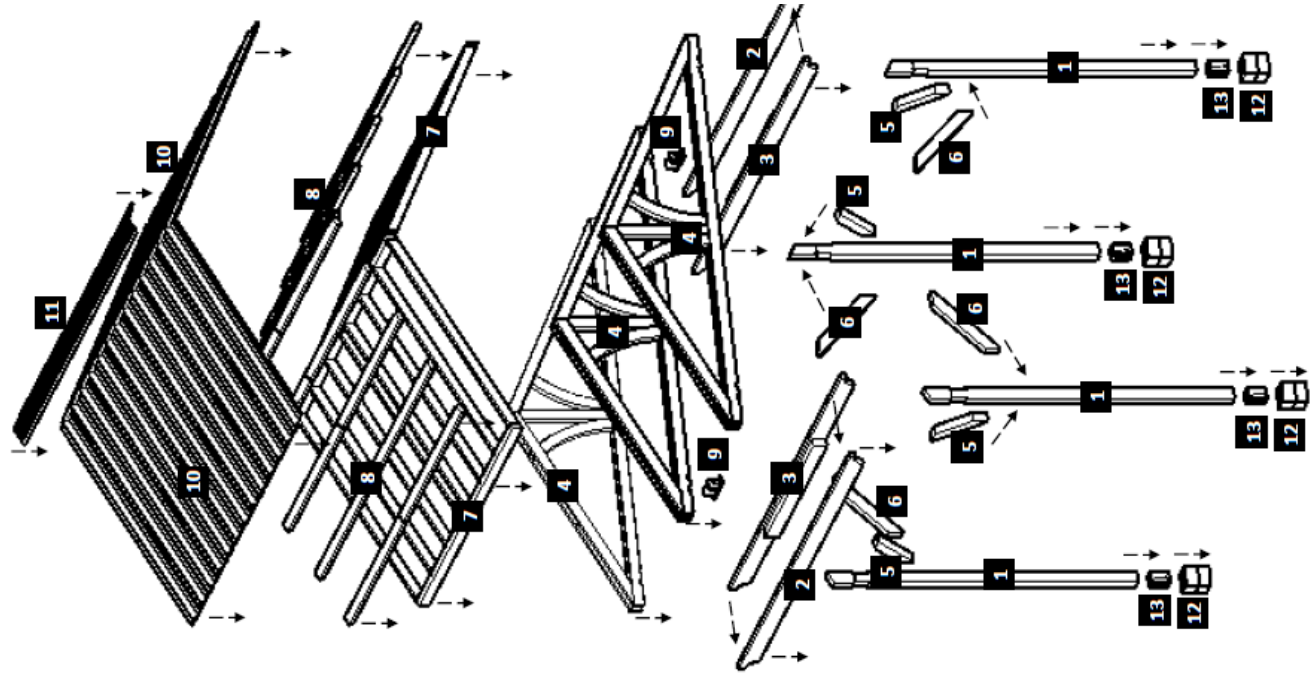
CONTENT OF BOXES				
Qty.	Description	Drawing		No.
Will Vary.	Metal plaques			9
Will Vary.	Steel Roof Panel			10
Will Vary.	Ridge Cap			11
Will Vary.	Boots			12
Will Vary.	Anchor Bases		Standard	13
			Gale Wind	
			Hurricane	

*Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.*



HARDWARE LIST		
Description	Drawing	No.
1/2'' X 3 1/2'' Anchor Bolts (To attach the anchor bases to the ground).		A
5/16'' X 3'' Lag Bolts (To attach the posts to the anchor bases/ To attach the metal plates to the supports).		B
3/8'' X 6'' Bolts (To attach the single supports to the posts. / To attach the single supports to the supports with in-between blocking. / To attach the triangles to the posts. / To attach the knee braces to the supports and triangles).		C
3'' Deck screws (To attach the triangles to the supports. / To attach the boots to the posts. / To attach the trims to the triangles).		D
3/8'' X 7'' Bolts (To attach the knee braces to the posts. /To attach the metal plates to the central triangle/ To attach the roof panels to the perimeter triangles).		E
3/8'' X 9'' Bolts (To attach the roof panels to the central triangles. / To attach the ceiling fan base).		F
2'' Deck Screws with Neoprene Washer (To attach the steel roof panels to the roof panels. / To attach the ridge cap to the steel roof panels).		G






DESCRIPTION	No
Posts	1
Single Supports	2
Supports with In-Between Blocking	3
Triangles	4
Main Knee Braces	5
Secondary Knee Braces	6
Roof Panels	7
Roof Trims	8
Metal plates	9
Steel Roof Panel	10
Ridge Cap	11
Boots	12
Anchor Bases	13


*Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.*

**NOTE:** In order to know where the post needs to be placed, check the numbers on them. If the post is not marked, then place the single Supports on the ground to locate the markings for each post position and clearly set your bearings. (“Don’t attach yet, only place them on the ground to begin with”).


**Step 1:** Install the anchor bases (13). After that, set your post (1) in the saddle of the anchor bases (13). Drill a  $\phi \frac{1}{4}$  hole in the post prior to anchoring to facilitate the ratcheting of the hardware. After that, use a 5/16" X 3" lag bolts (A) to attach each post to its respective anchor bases (13).

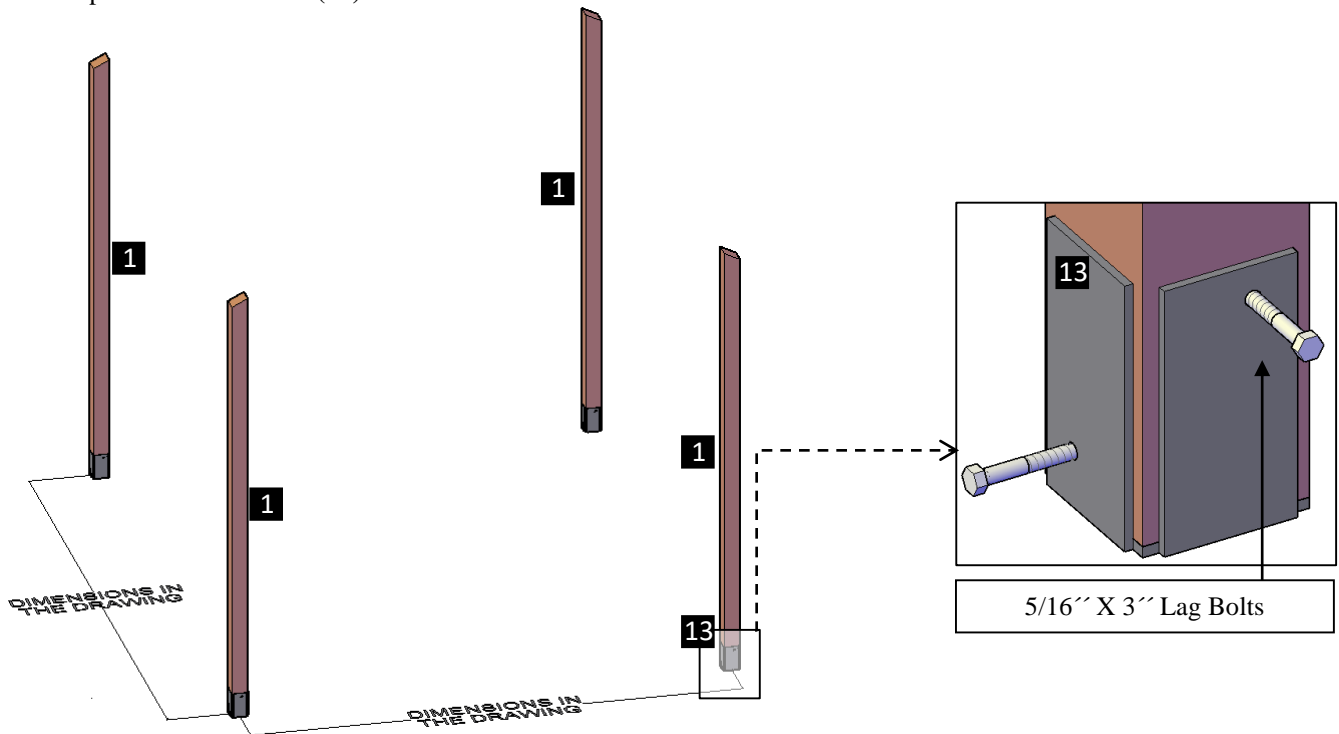


**Step 2:** Attach the single supports (2) to the posts with 3/8" x 6" bolts (C). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

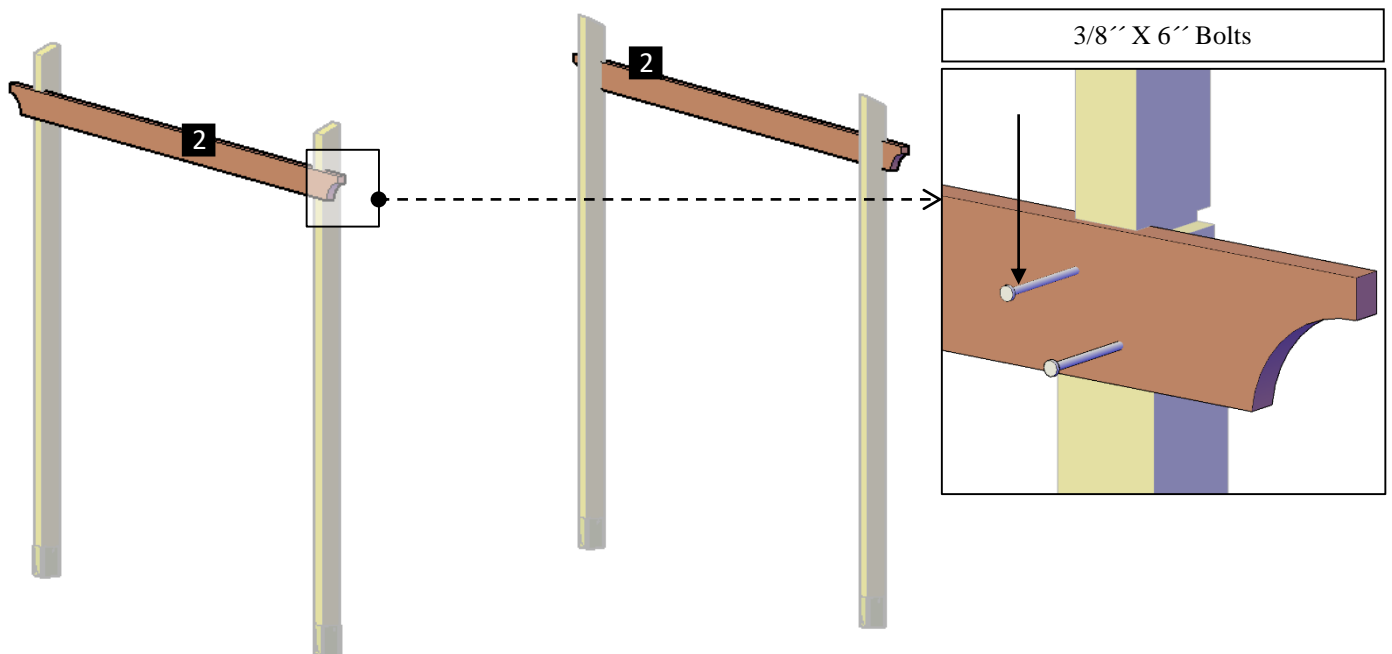


**Step 3:** Put up the supports with in-between blocking (3), into the post notches as shown and attach to the posts with the single support bolts. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

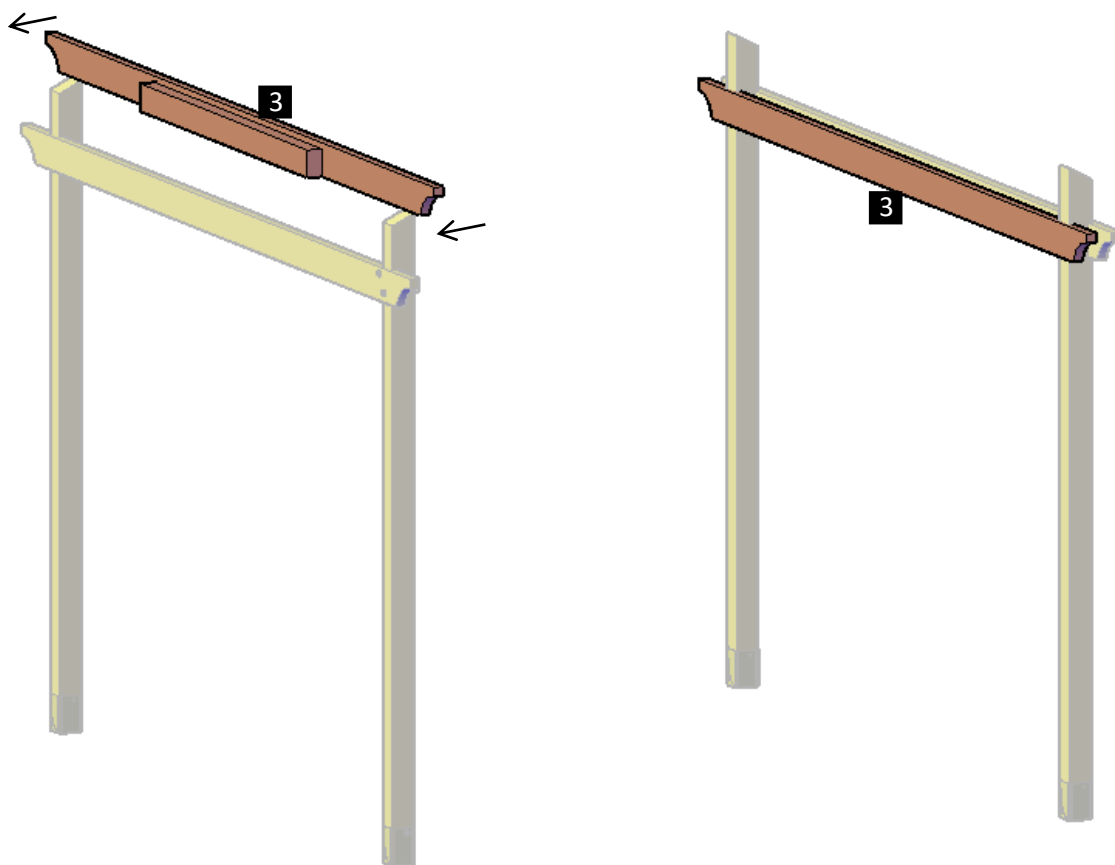


**Step 4:** Attach the single supports to the supports with in-between blocking, use 3/8" X 6" bolts (C). The quantity of bolts depends on the length of the supports.

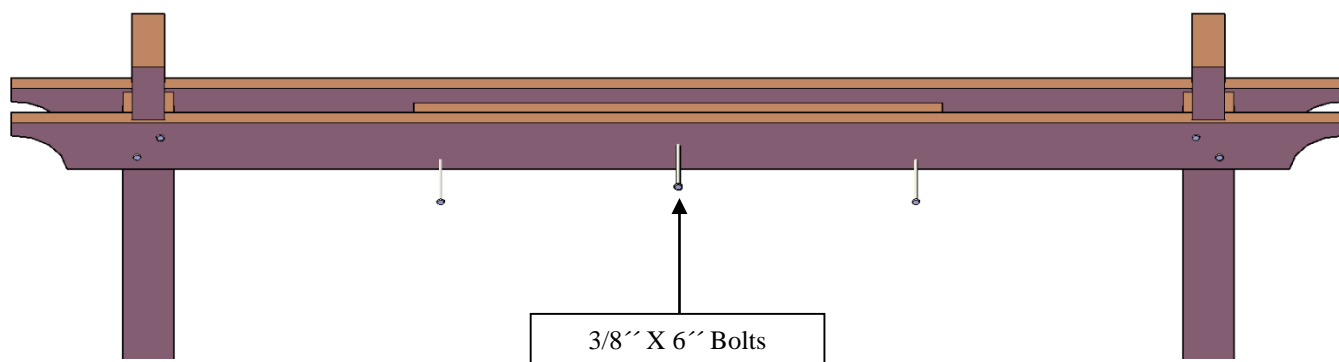

**Step 5:** Attach the triangles (4) to the posts with 3/8" x 6" bolts (C) and to the supports with 3" deck screws (D). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

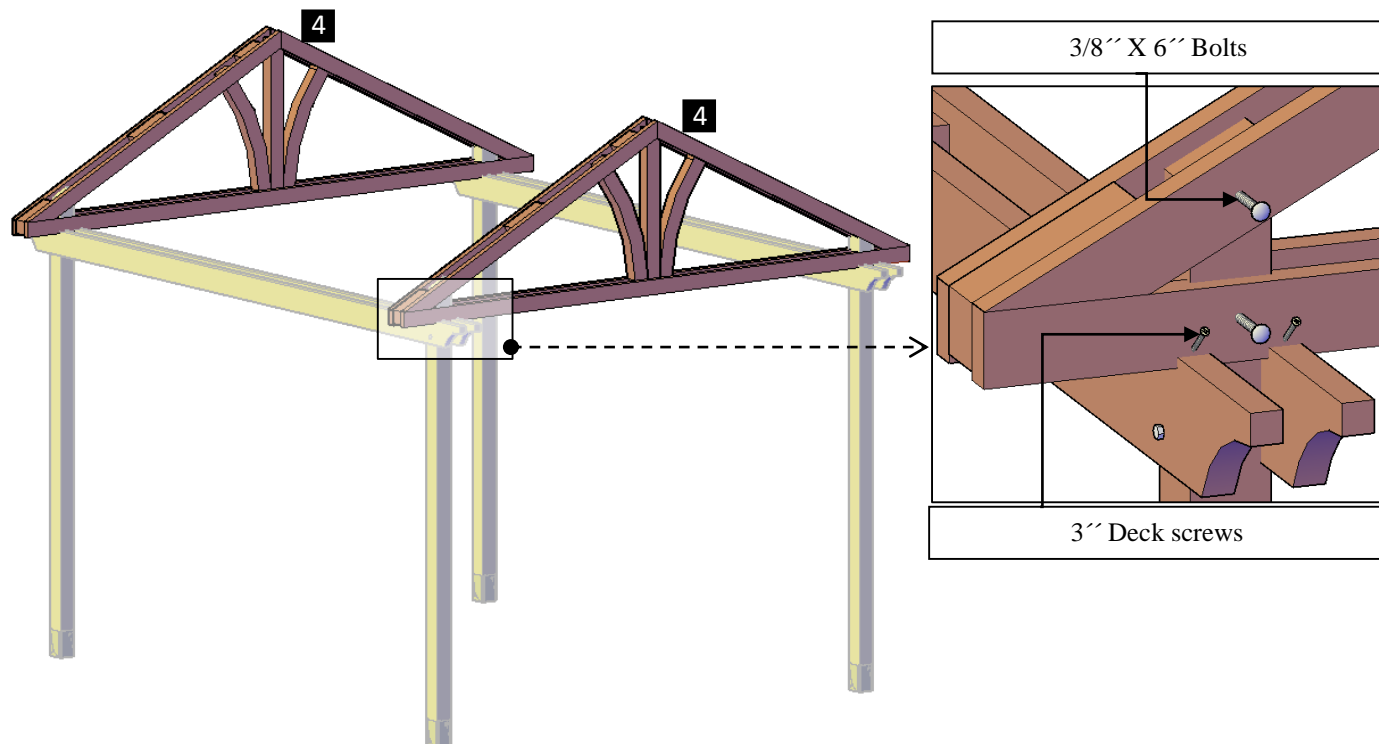


**Step 6:** Attach the metal plaques (10) to the supports with in-between blocking with 5/16" x 3" Lag Bolt (C). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

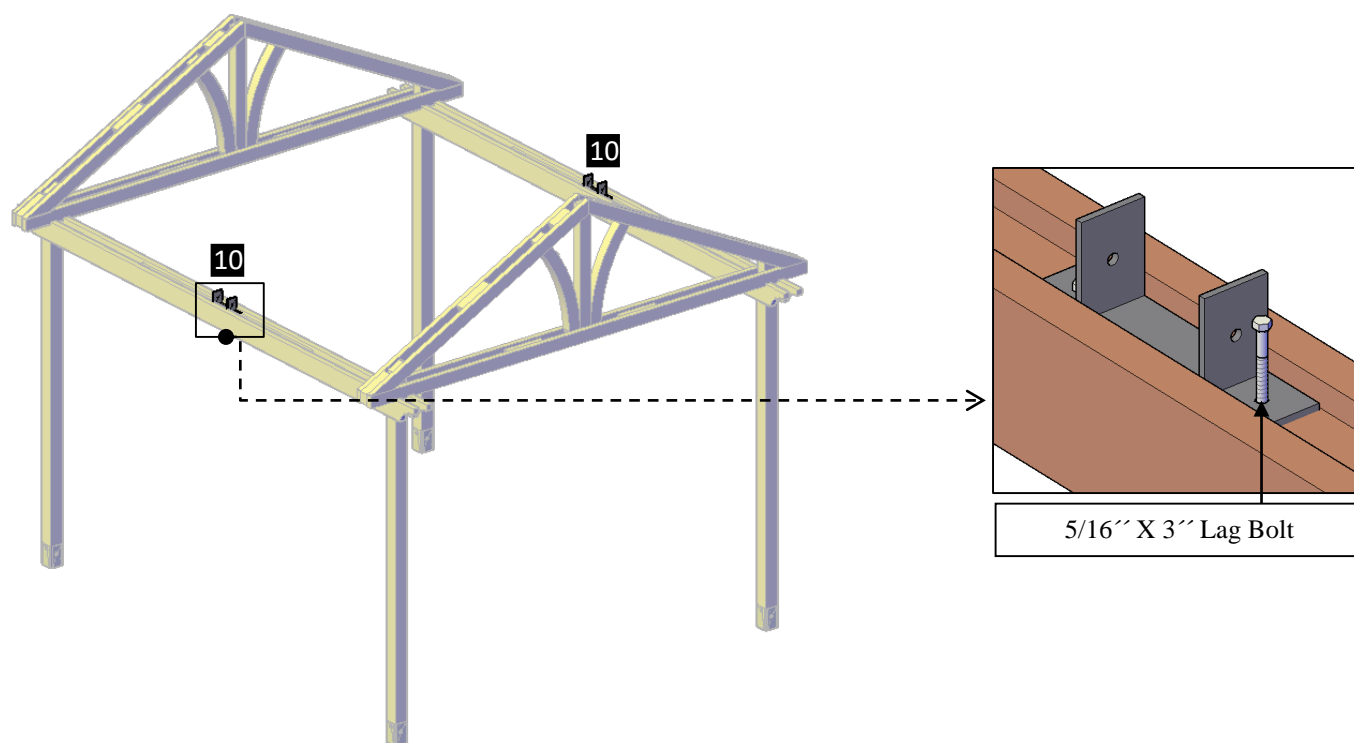





**Step 7:** Attach the central triangle (4) to the supports with 8'' x 3'' deck screws (E) and use 3/8'' X 7'' Bolt (F) to attach the metal plaques to the central triangle. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

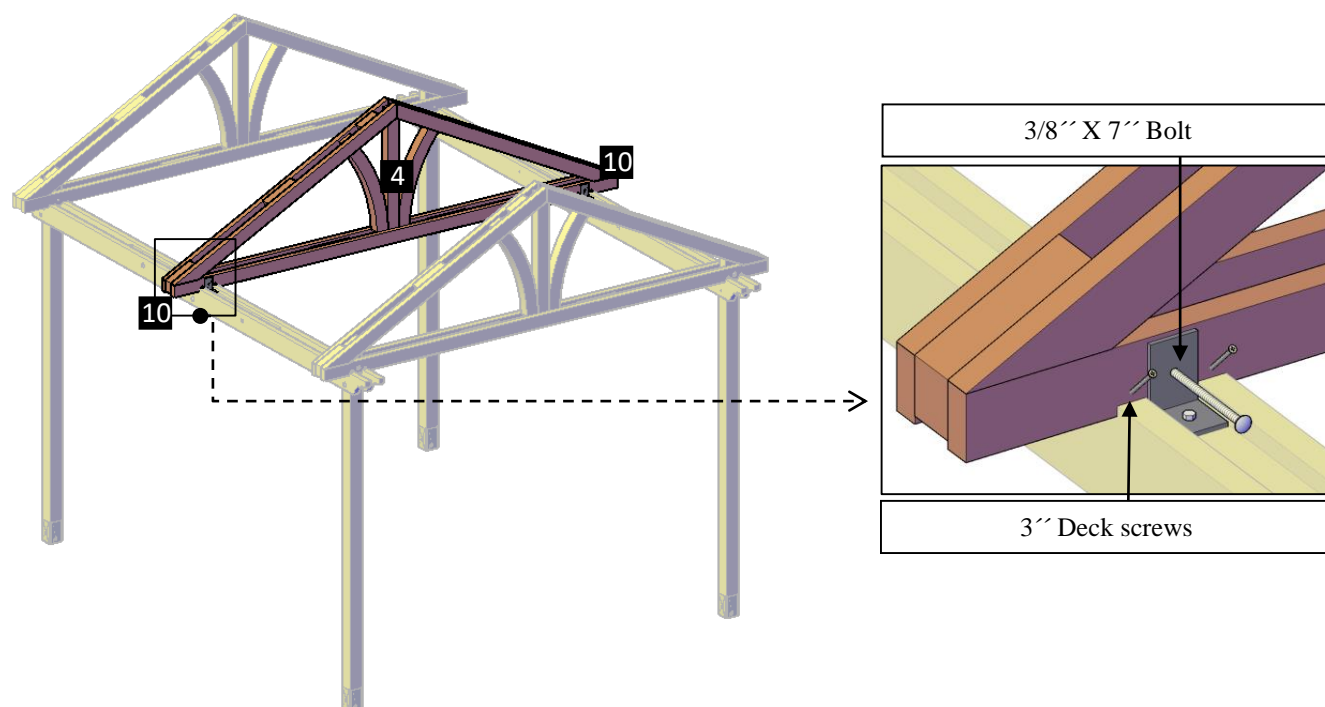


**Step 8:** Attach the main knee braces (5) to the supports with 3/8'' x 6'' Bolts (C) and to the posts with 3/8'' x 7'' bolts (E). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

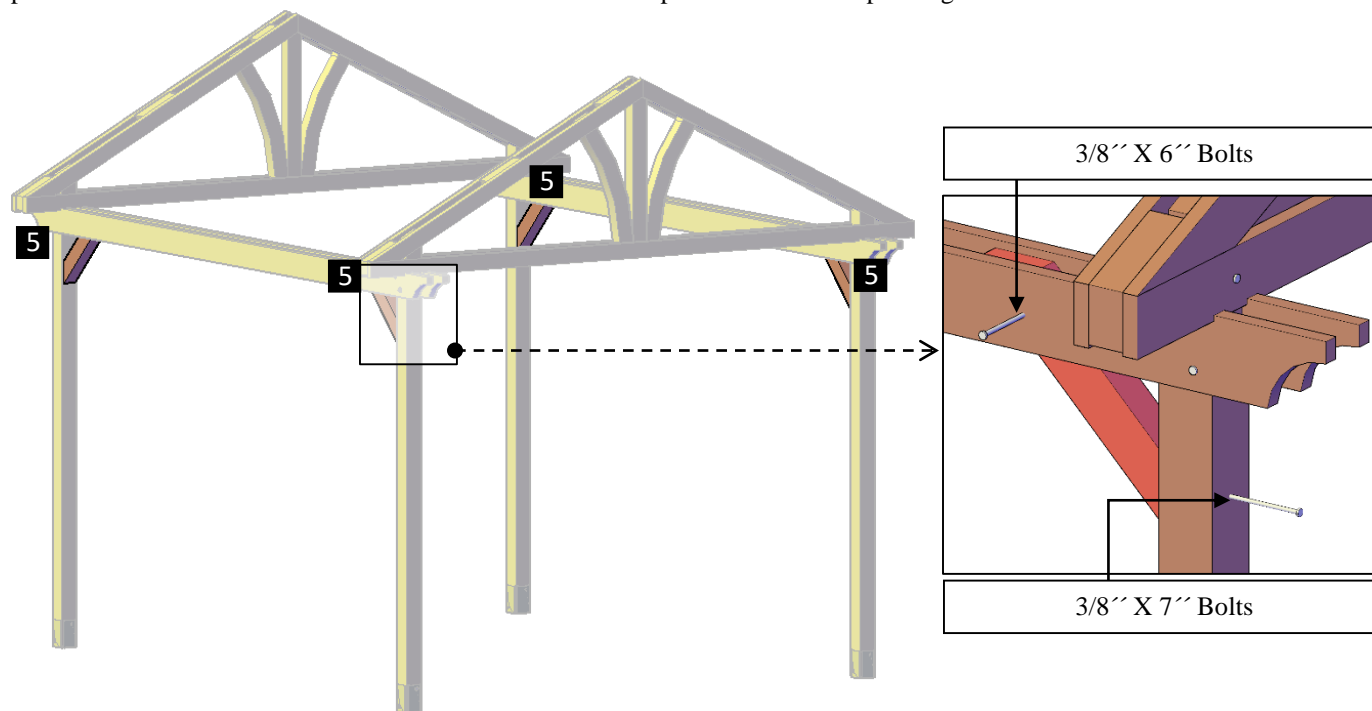


**Step 9:** Attach the secondary knee braces (6) to the triangles with 3/8" x 6" Bolts (C) and to the posts with 3/8" x 7" bolts (E). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

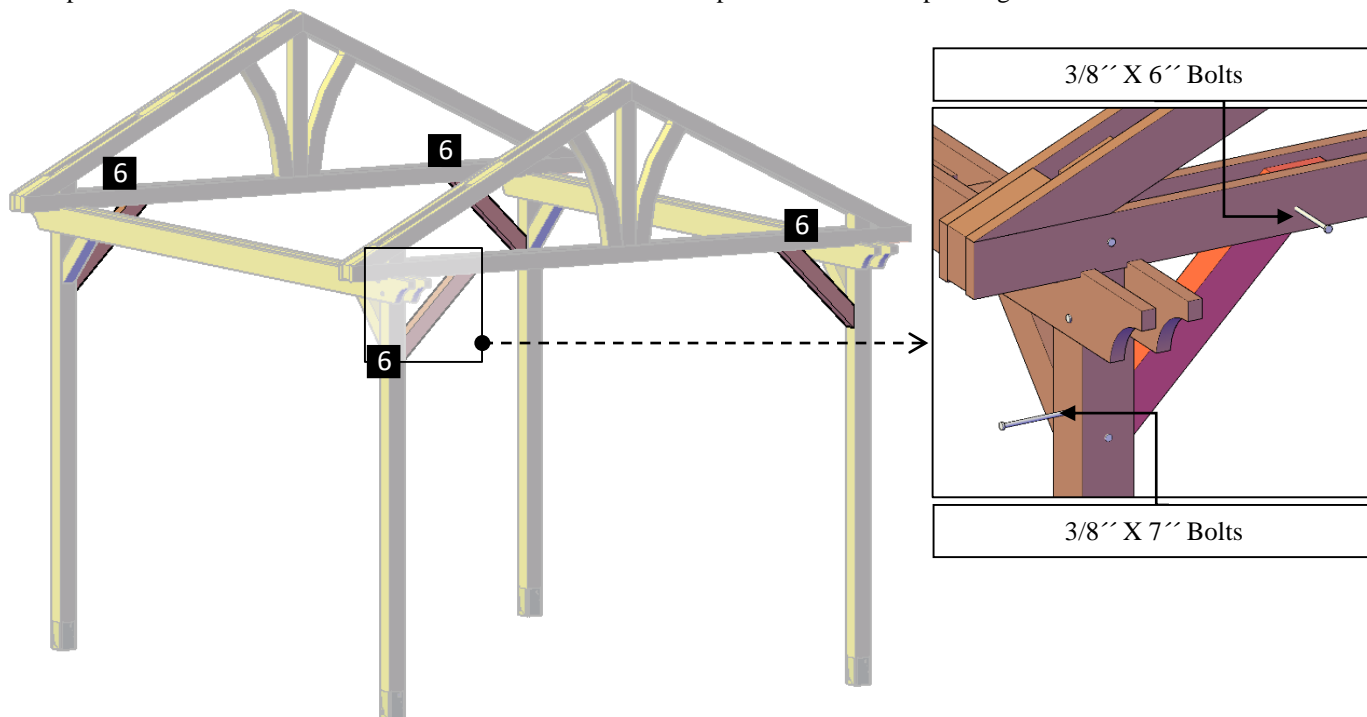


**Step 10:** Use 3" deck screws (D) to attach the central triangle (4) to the supports. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

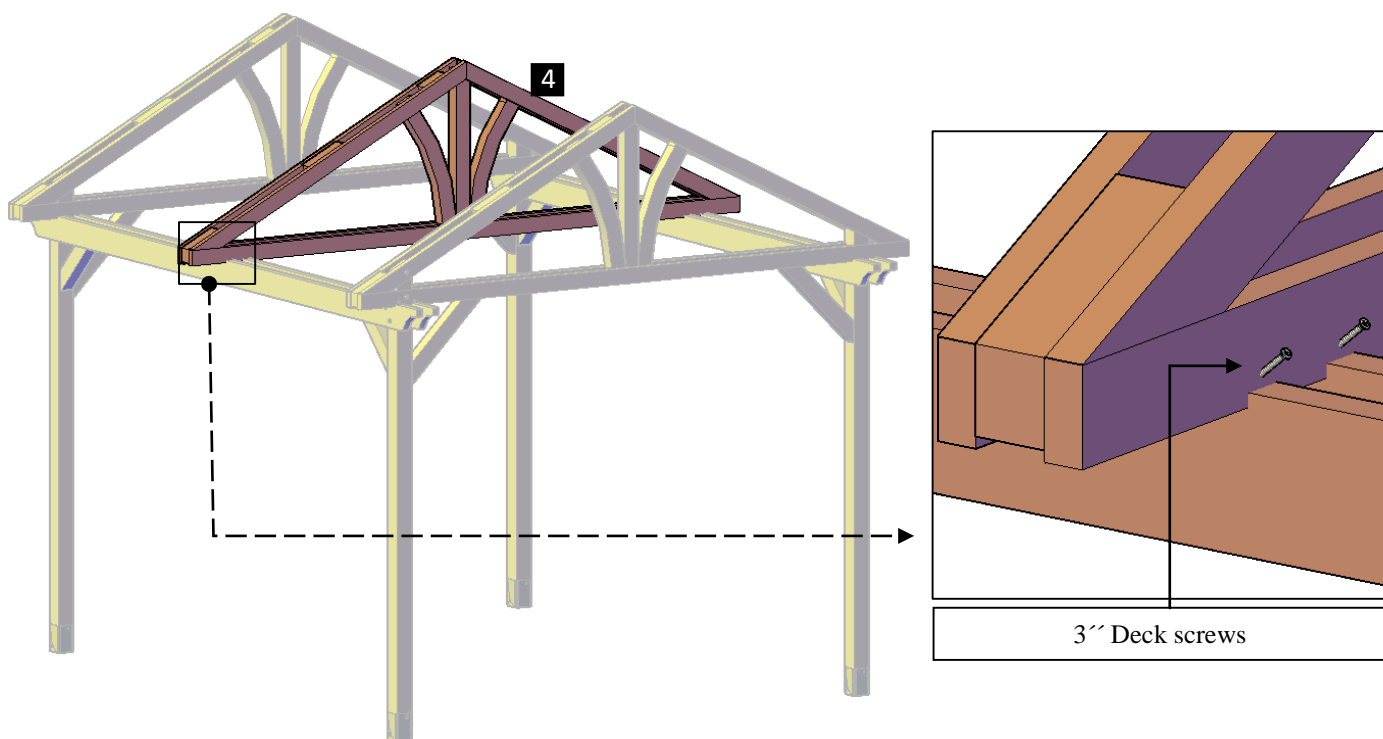


**Step 11:** Use 3/8" x 7" bolts (E) to attach the roof panels (7) to the perimeter triangles and 3/8" x 9" bolts (F) to attach the roof panels (7) to the central triangle, as shown below. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

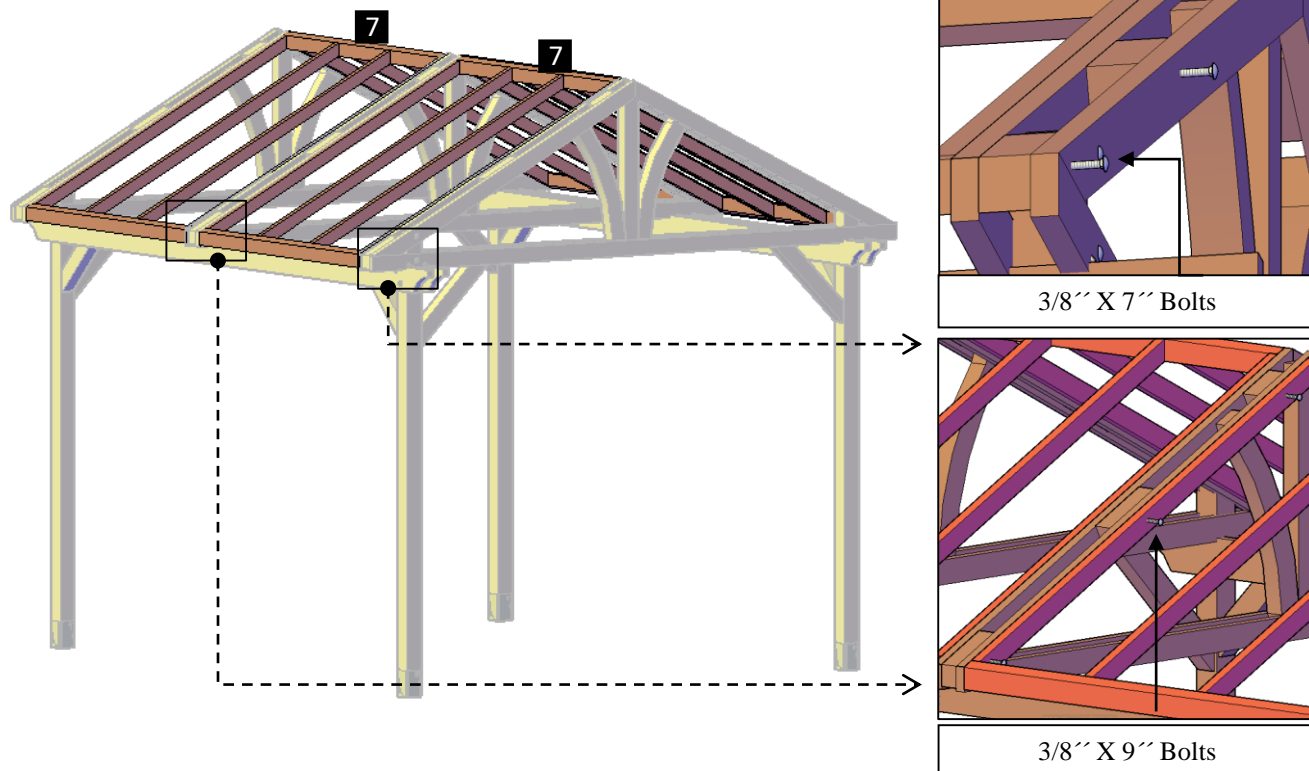


**Step 12:** Attach the trims (8) to the triangles with 3" deck screws (D).

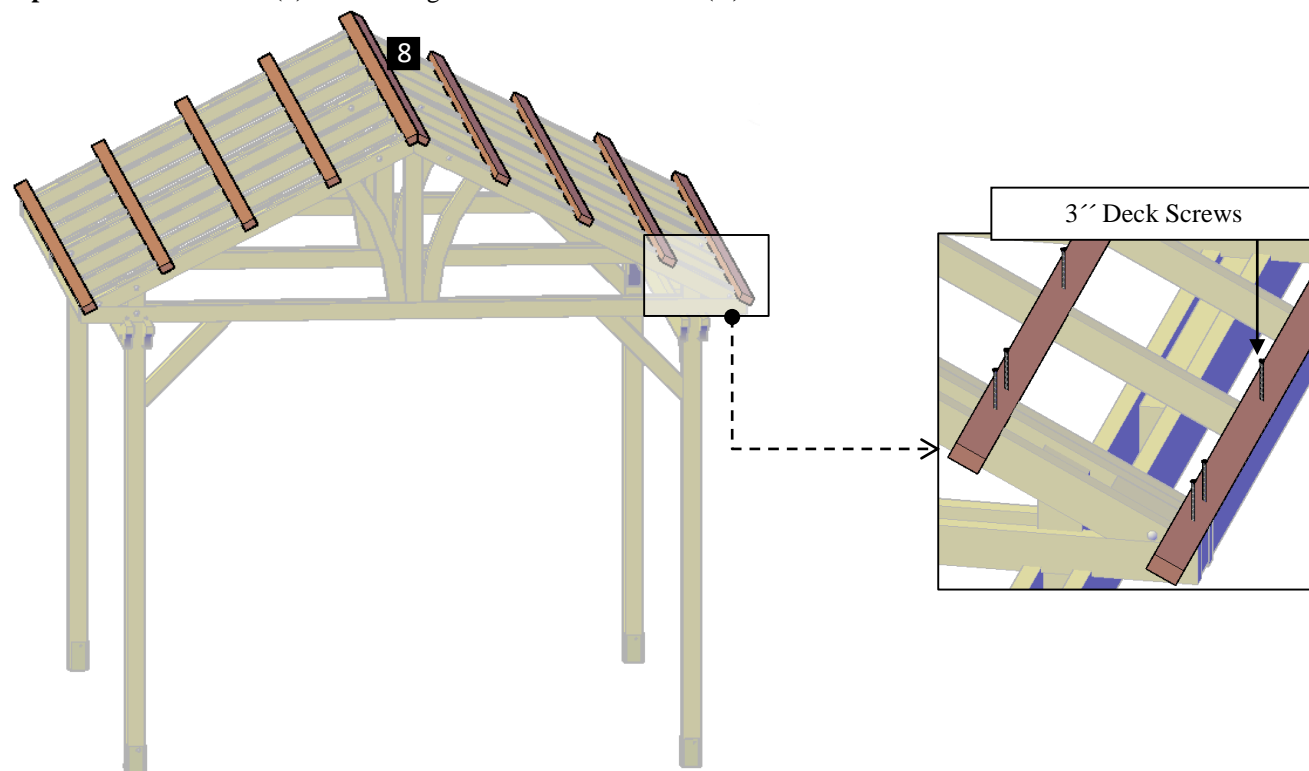


**Step 13:** Use 2'' Wood Screw with Neoprene Washer (G) to attach the steel roof panels (10) to the roof panels. The overlapping between these steel roof panels it will be approximately of 2''. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

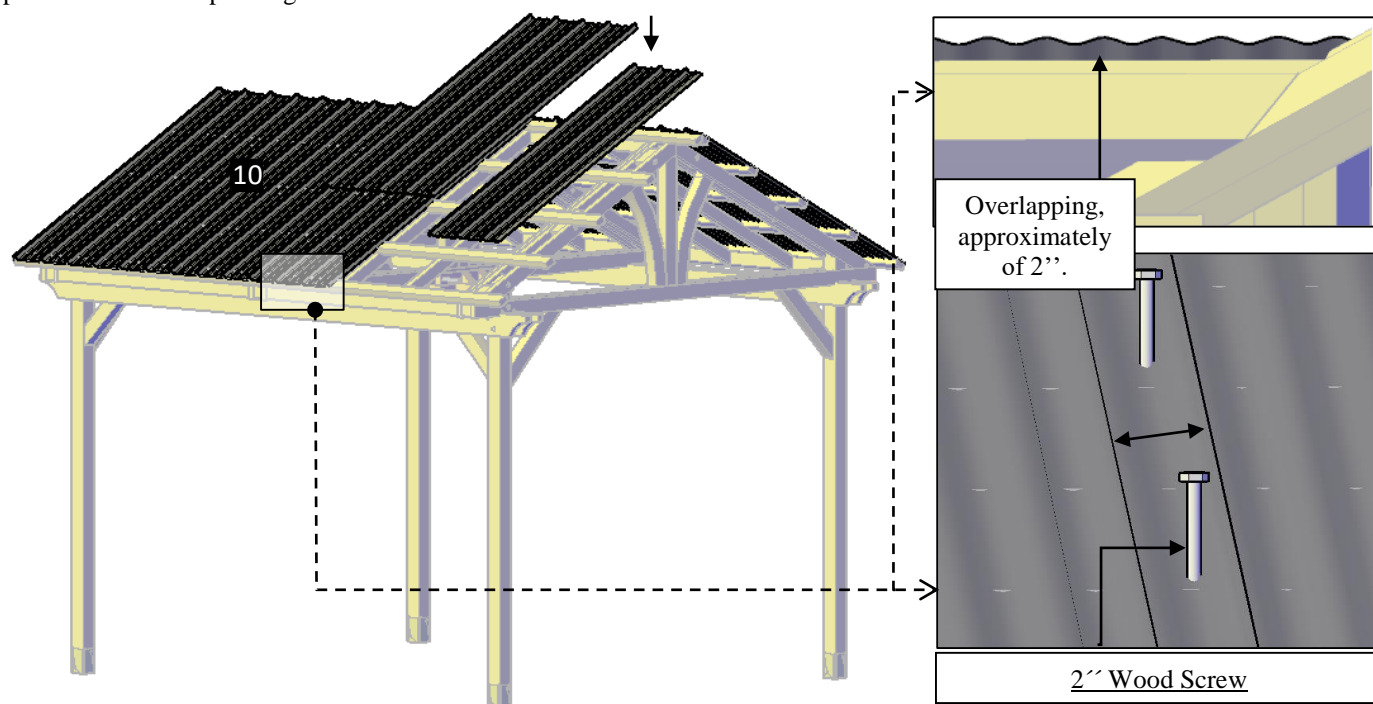

**Step 14:** Use 2'' Wood Screw with Neoprene Washer to attach the ridge cap (18). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

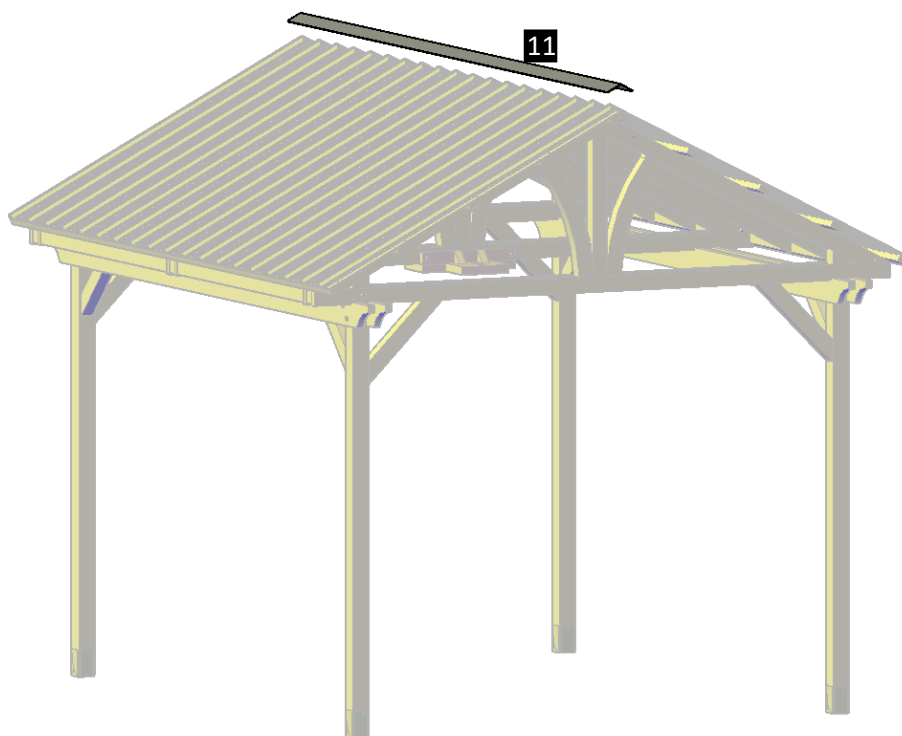

**Step 15:** Finally, attach the boots (12) to each post with 8'' x 3'' deck screws (C).

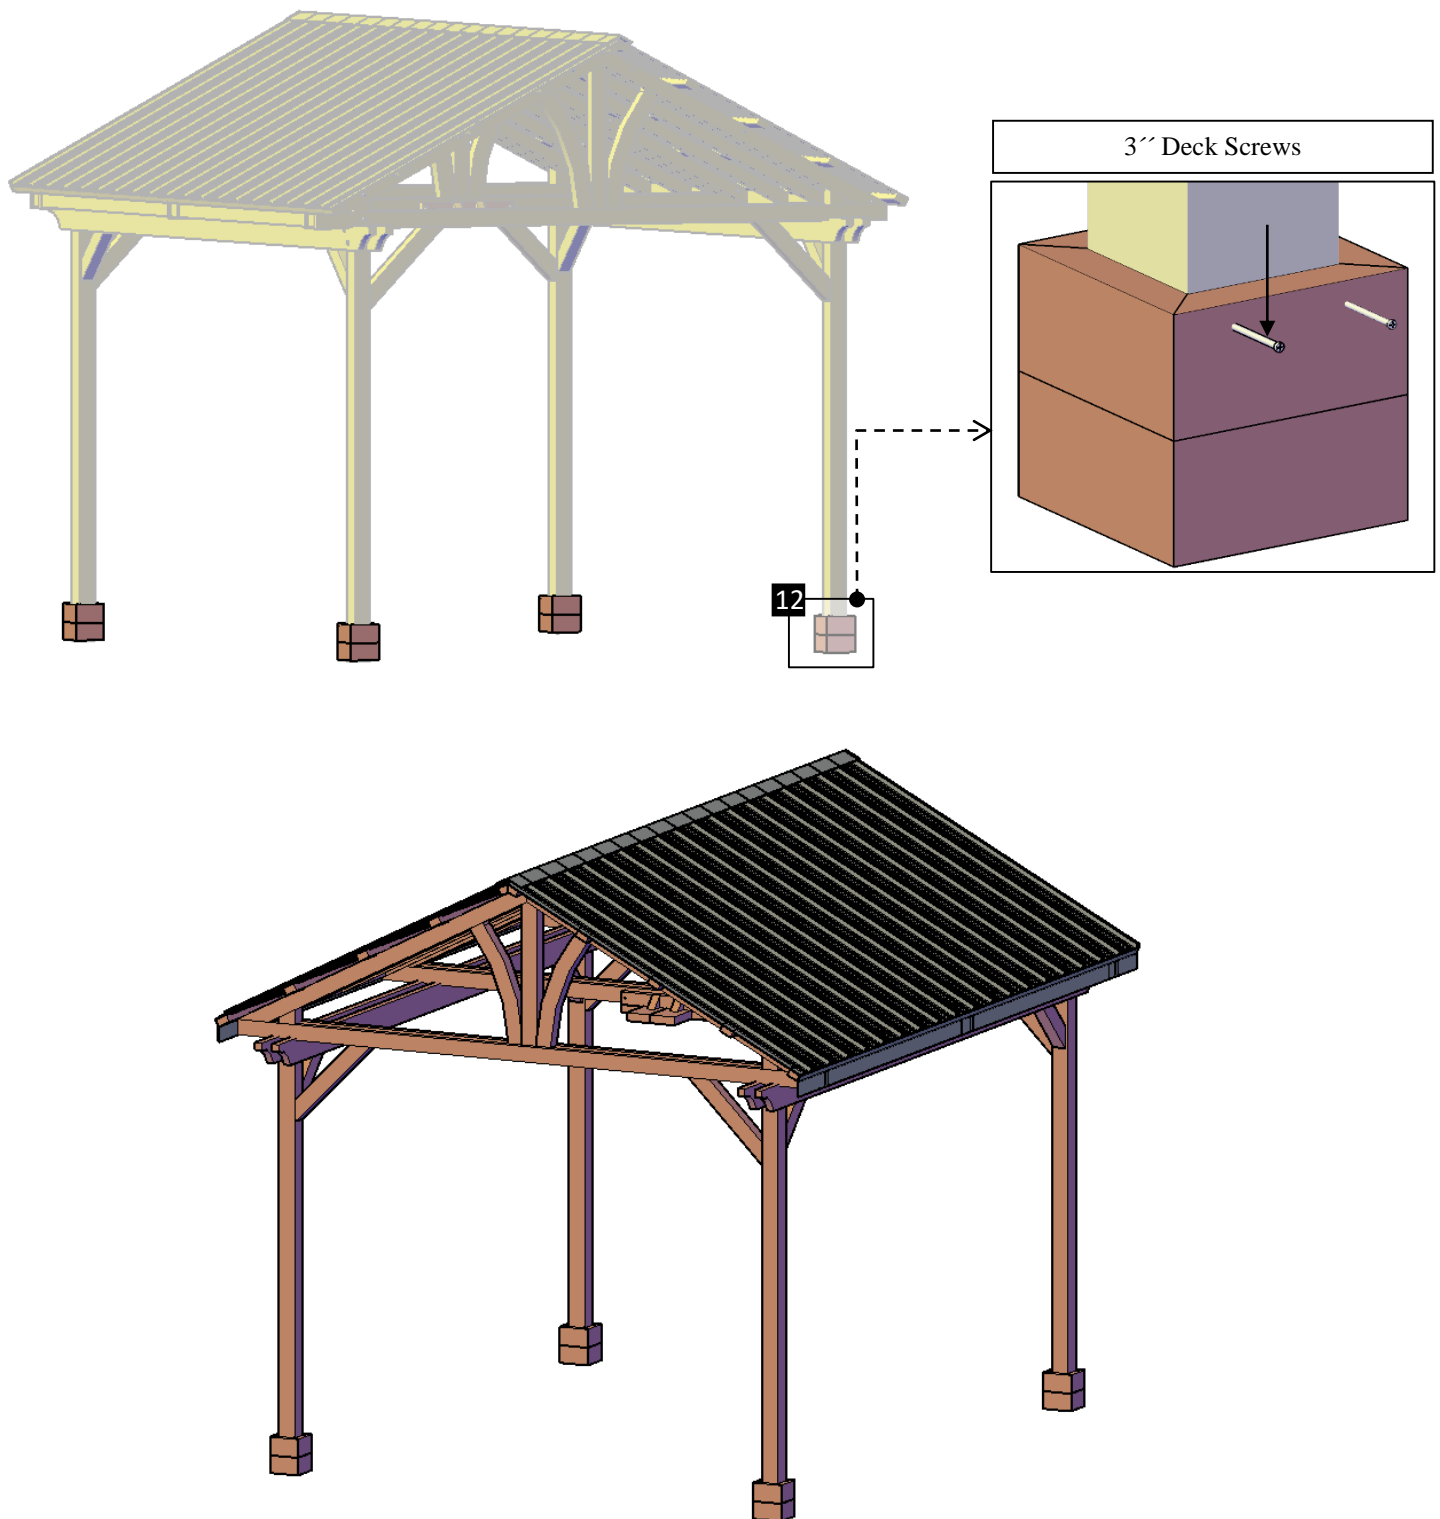

*This completes the Pavilion Assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.*