



FOREVER REDWOOD




From the Forest, For the Forest since 1995

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE CLASSIC REDWOOD PATIO TABLE






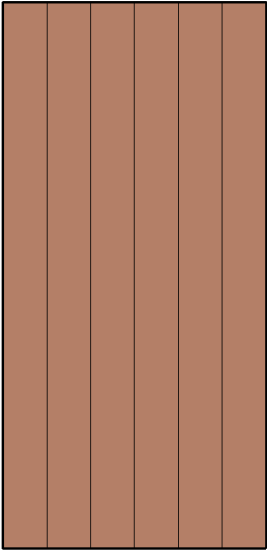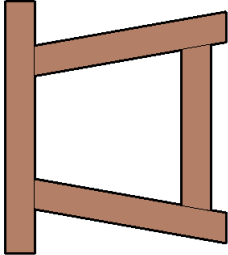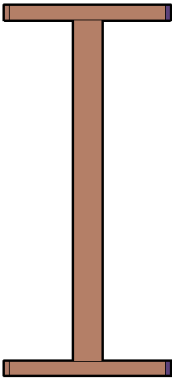

CONTENT OF BOXES			
Qty.	Description	Drawing	No.
1	Tabletop		1
2	Legs		2
1	Horizontal Support		3
2	Knee Braces		4


Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.



HARDWARE LIST		
Description	Drawing	No.
5/16" X 5 1/2" Bolts (To attach the legs to the tabletop / To attach the knee braces to the horizontal support).		A
5/16" X 3 1/2" Bolts (To attach the legs to the horizontal support).		B
5/16" X 6" Lag Bolts (To attach the knee braces to the tabletop).		C

Note: Dimensions of your hardware will vary depending on size.




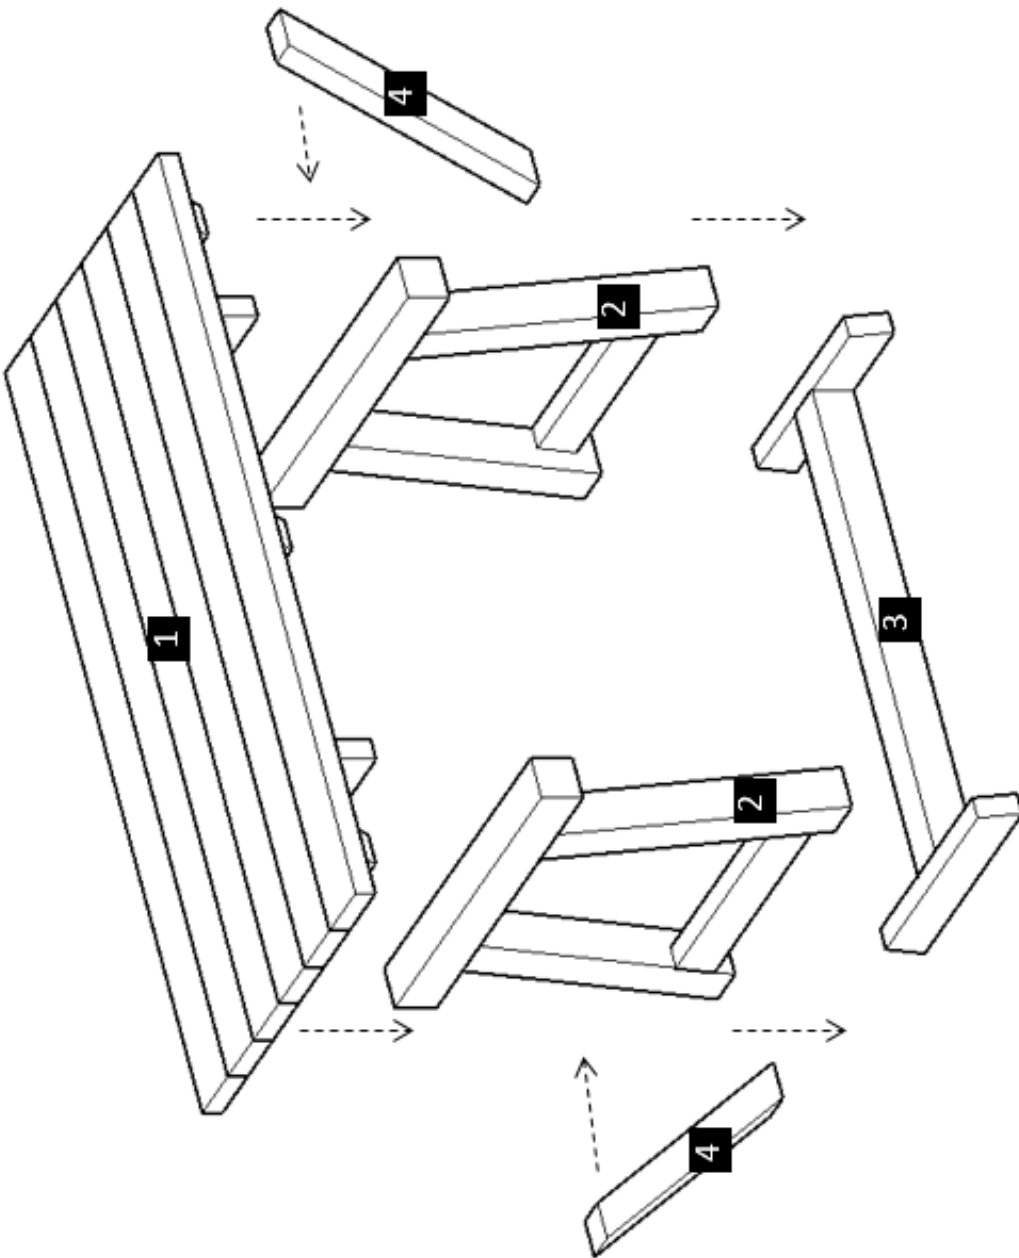


DESCRIPTION	No
Tabletop	1
Legs	2
Horizontal Support	3
Knee Braces	4

Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.



Step 1: Use 5/16" x 5 1/2" bolts (A) to attach the legs (2) to the tabletop (1). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

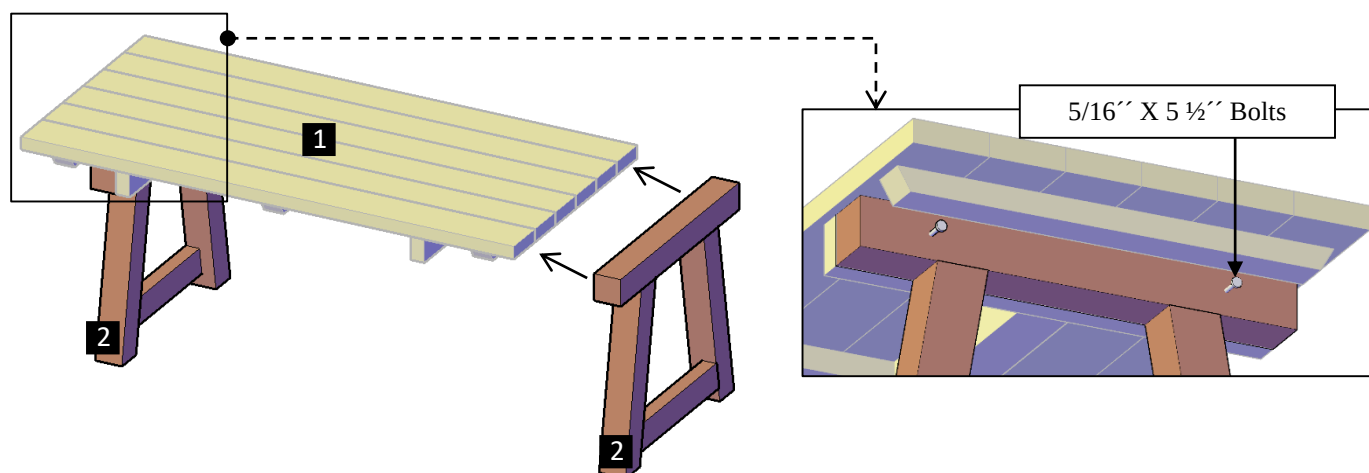

Step 2: Attach the horizontal support (3) to the legs with 5/16" X 3 1/2" Bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

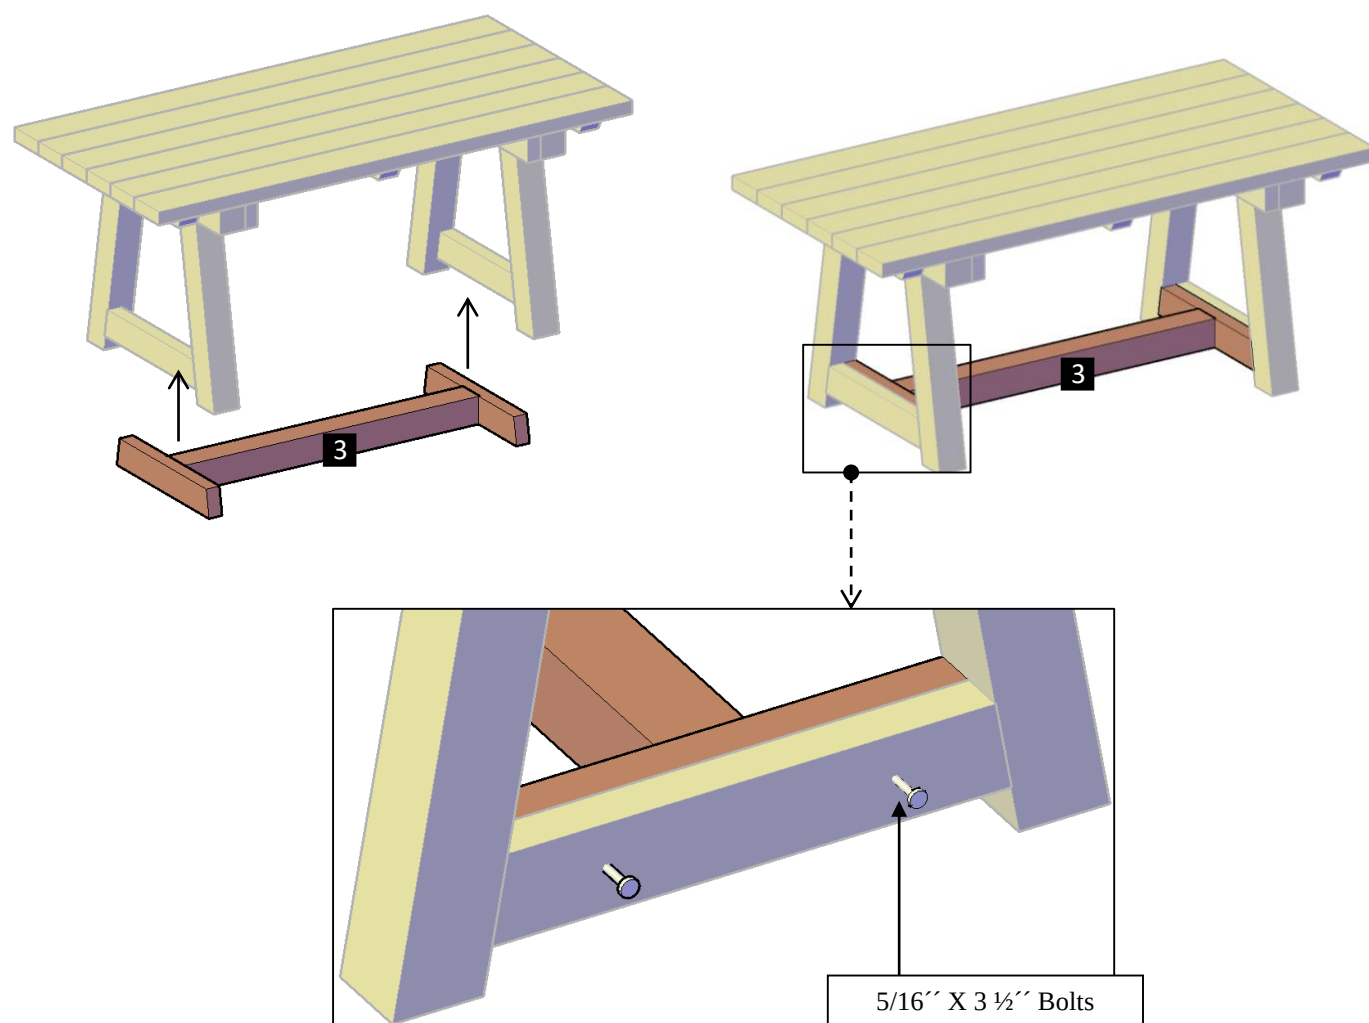

Step 3: Finally, attach the knee braces (4) to tabletop with 5/16" x 6" lag bolts (C) and to horizontal support with 5/16" x 5 1/2" bolts (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

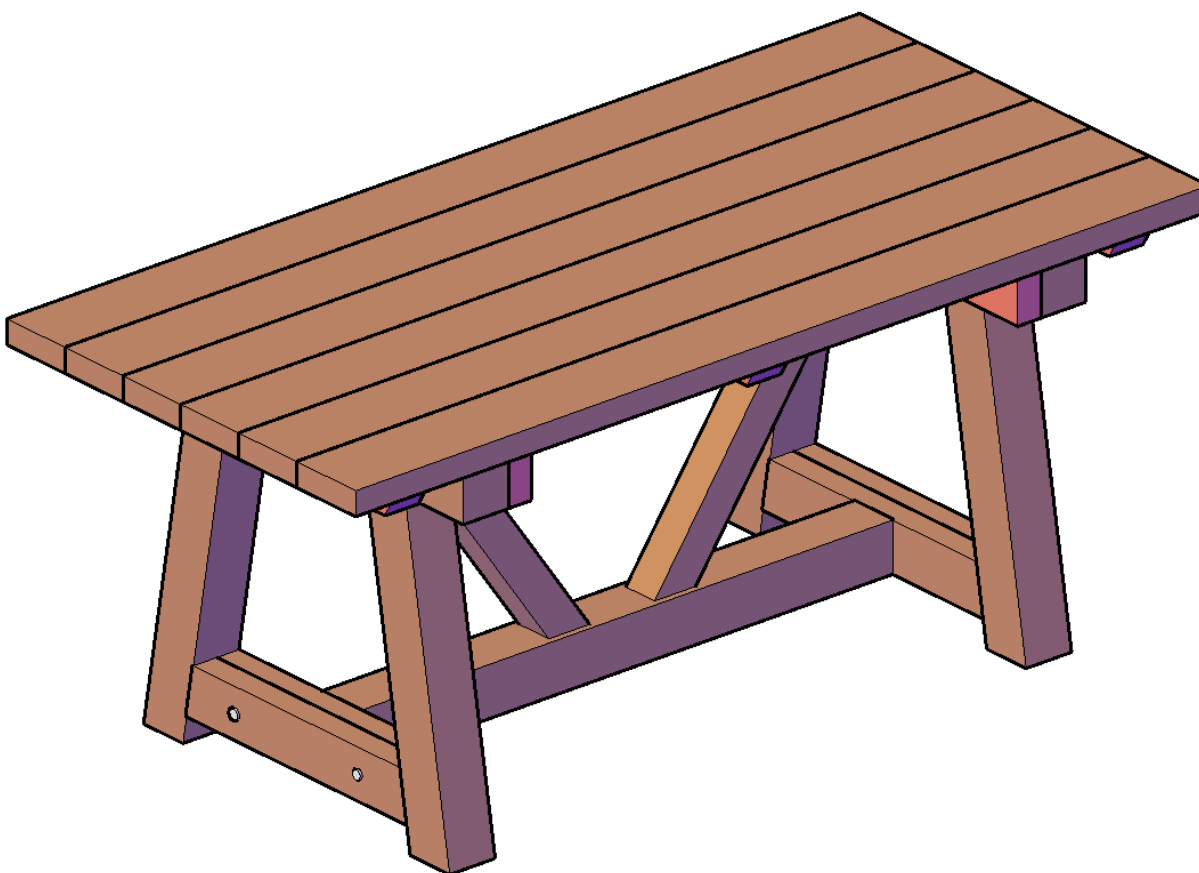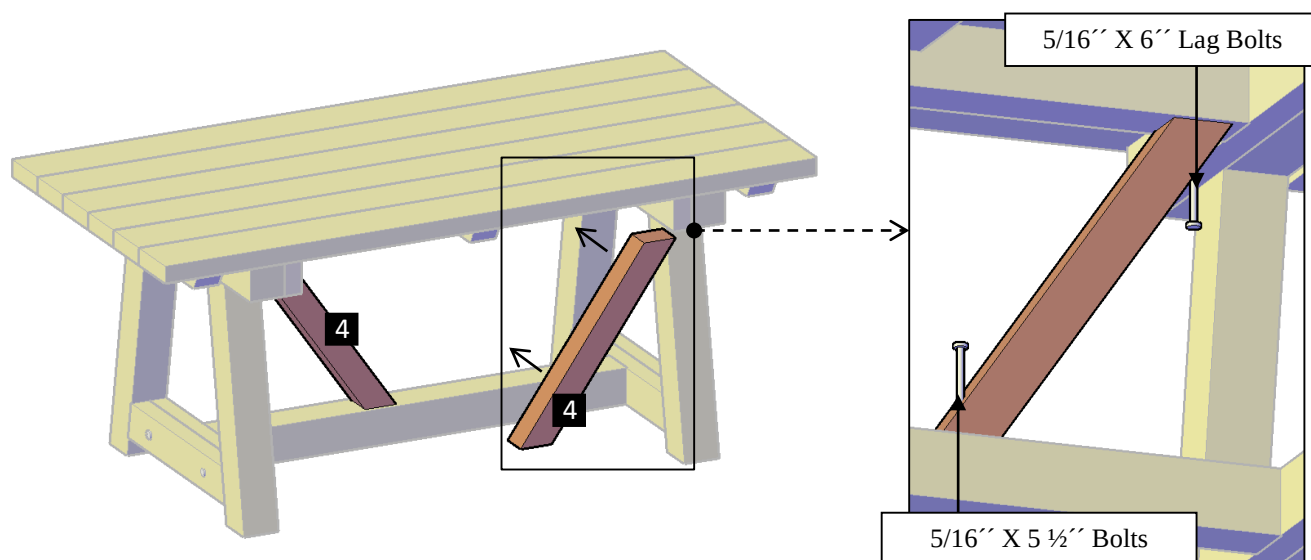



This completes the Patio Table assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.