







866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR
**THE CLASSIC REDWOOD PATIO TABLE
(BENCH)**



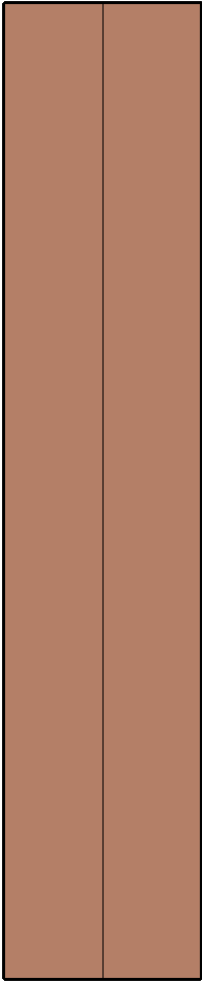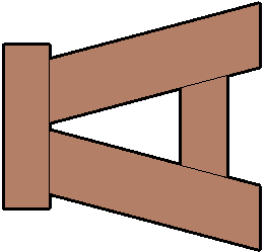
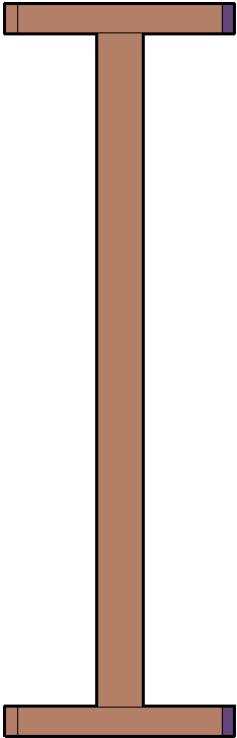



CONTENT OF BOXES			
Qty.	Description	Drawing	No.
1	Seat		1
2	Legs		2
1	Horizontal Support		3
2	Knee Braces		4

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.






HARDWARE LIST		
Description	Drawing	No.
5/16" X 5 1/2" Bolts (To attach the seat to the legs. / To attach the horizontal support to the legs).		A
5/16" X 4" Lag Bolts (To attach the knee braces to the seat).		B
5/16" X 4 1/2" Bolts (To attach the knee braces to the horizontal support).		C

Note: Dimensions of your hardware will vary depending on size.



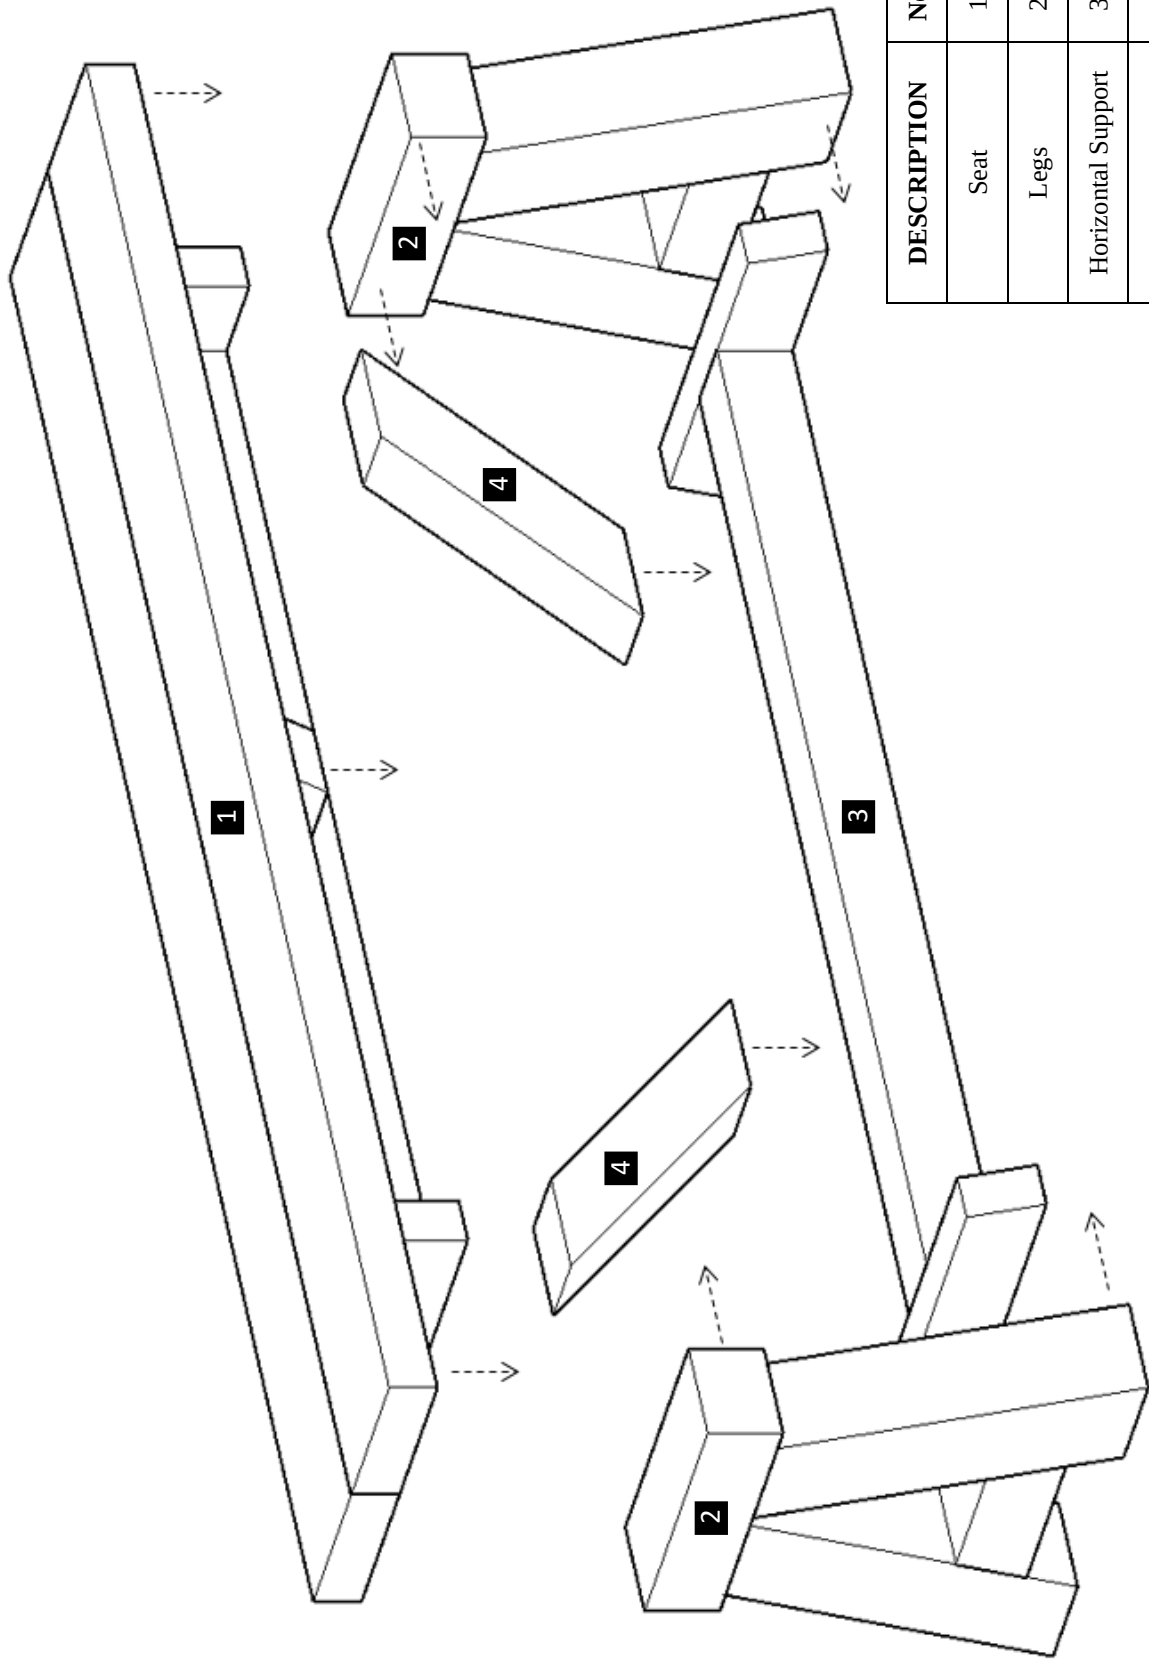


DESCRIPTION	No
Seat	1
Legs	2
Horizontal Support	3
Knee Braces	4


Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.





Step 1: Use 5/16" x 5 1/2" bolts (A) to attach the seat (1) to the legs (2). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

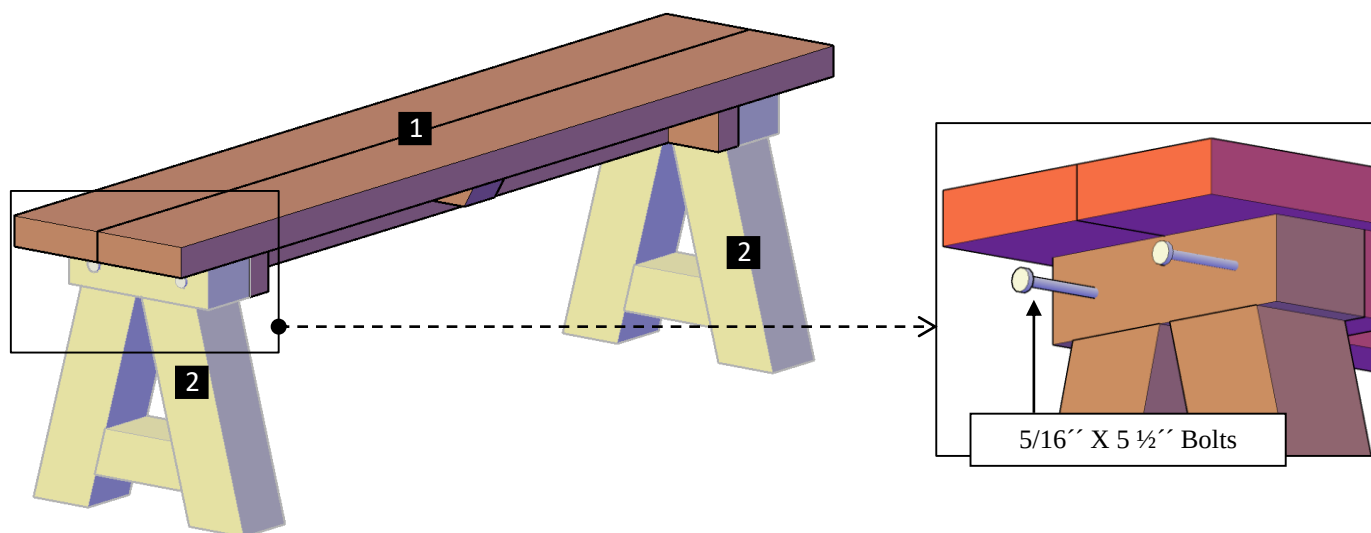

Step 2: Attach the horizontal support (3) to the legs with 5/16" X 5 1/2" Bolts (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

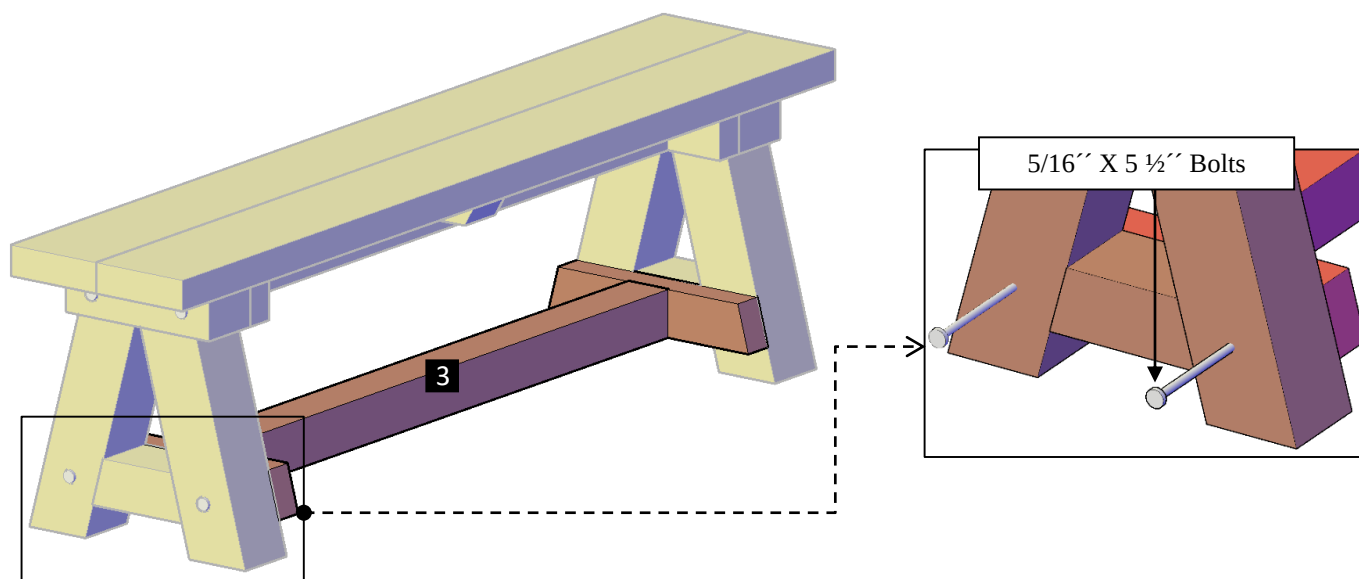

Step 3: Finally, attach the knee braces **(4)** to the seat with 5/16" x 4" lag bolts **(B)** and to the horizontal support with 5/16" x 4 1/2" bolts **(C)**. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

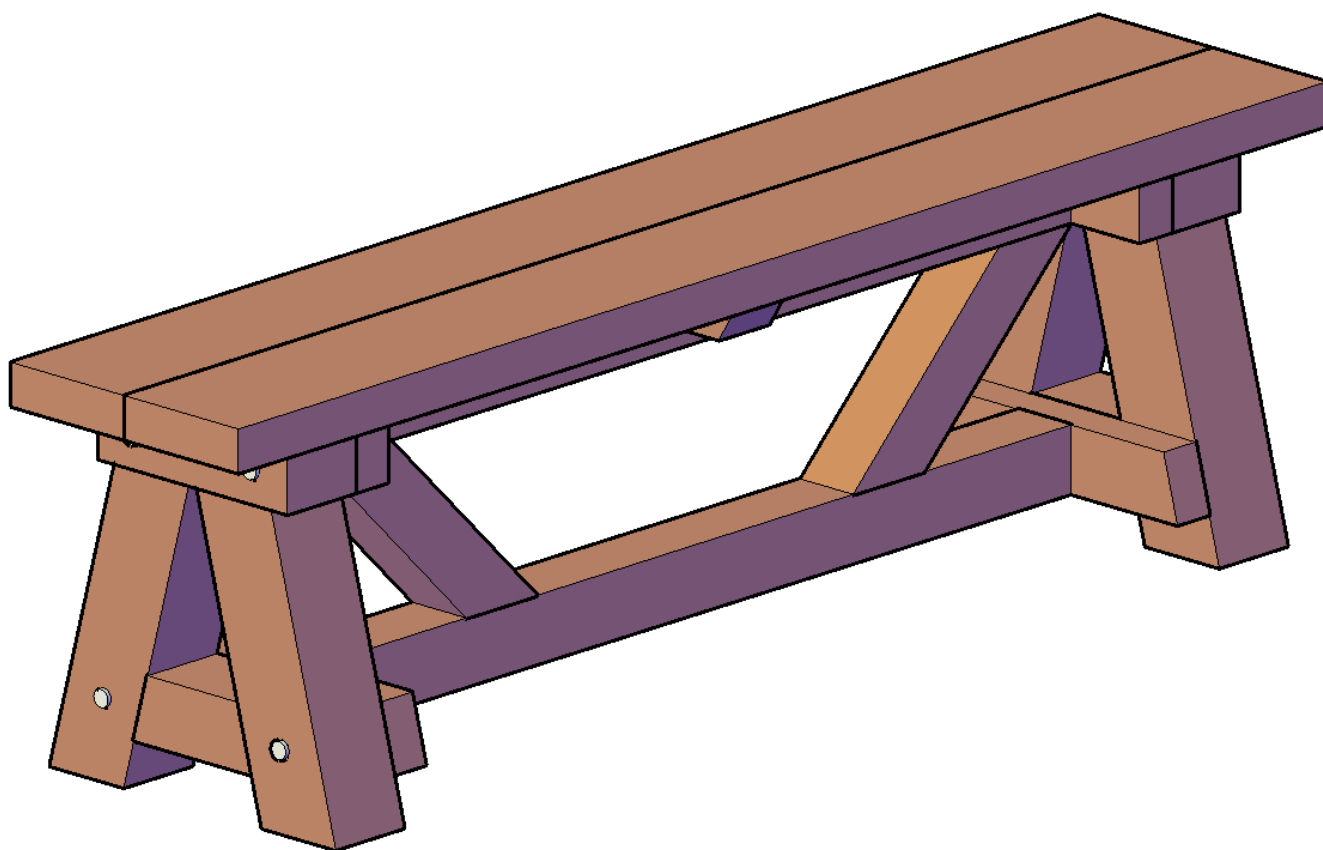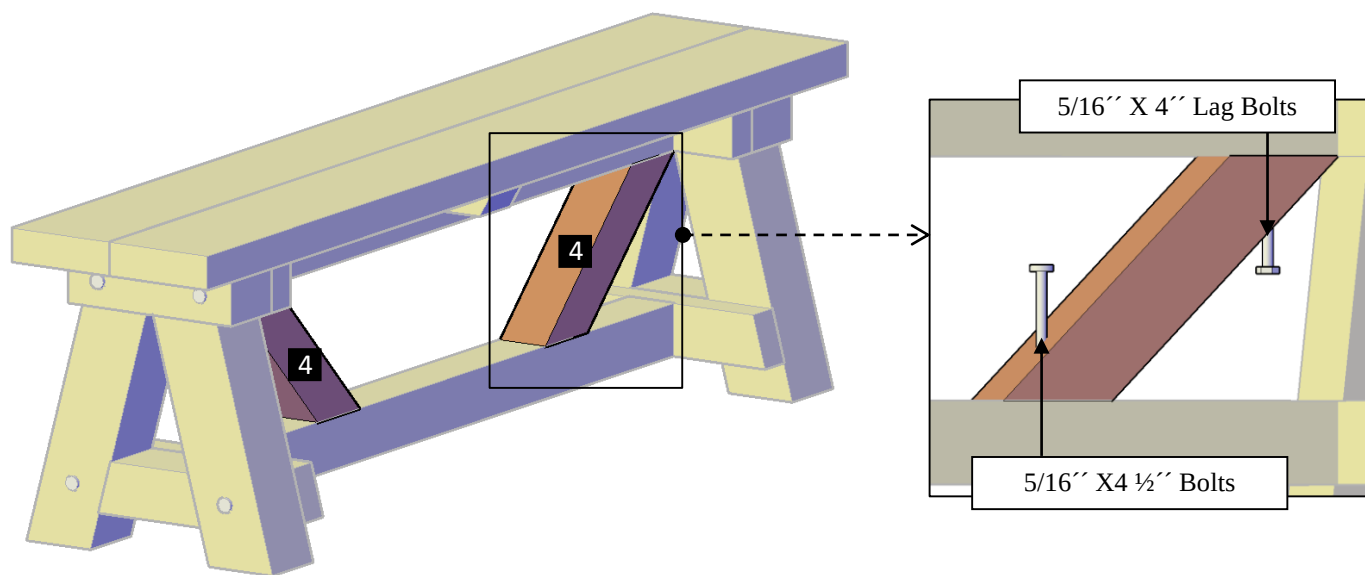



This completes the Bench assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.