



FOREVER REDWOOD









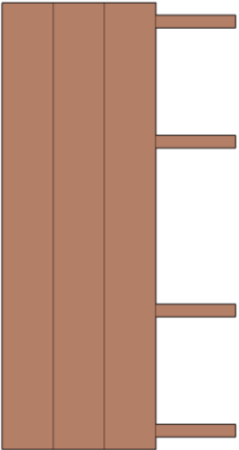


From the Forest, For the Forest since 1995

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR **THE MATHIEU HERITAGE BEDS**












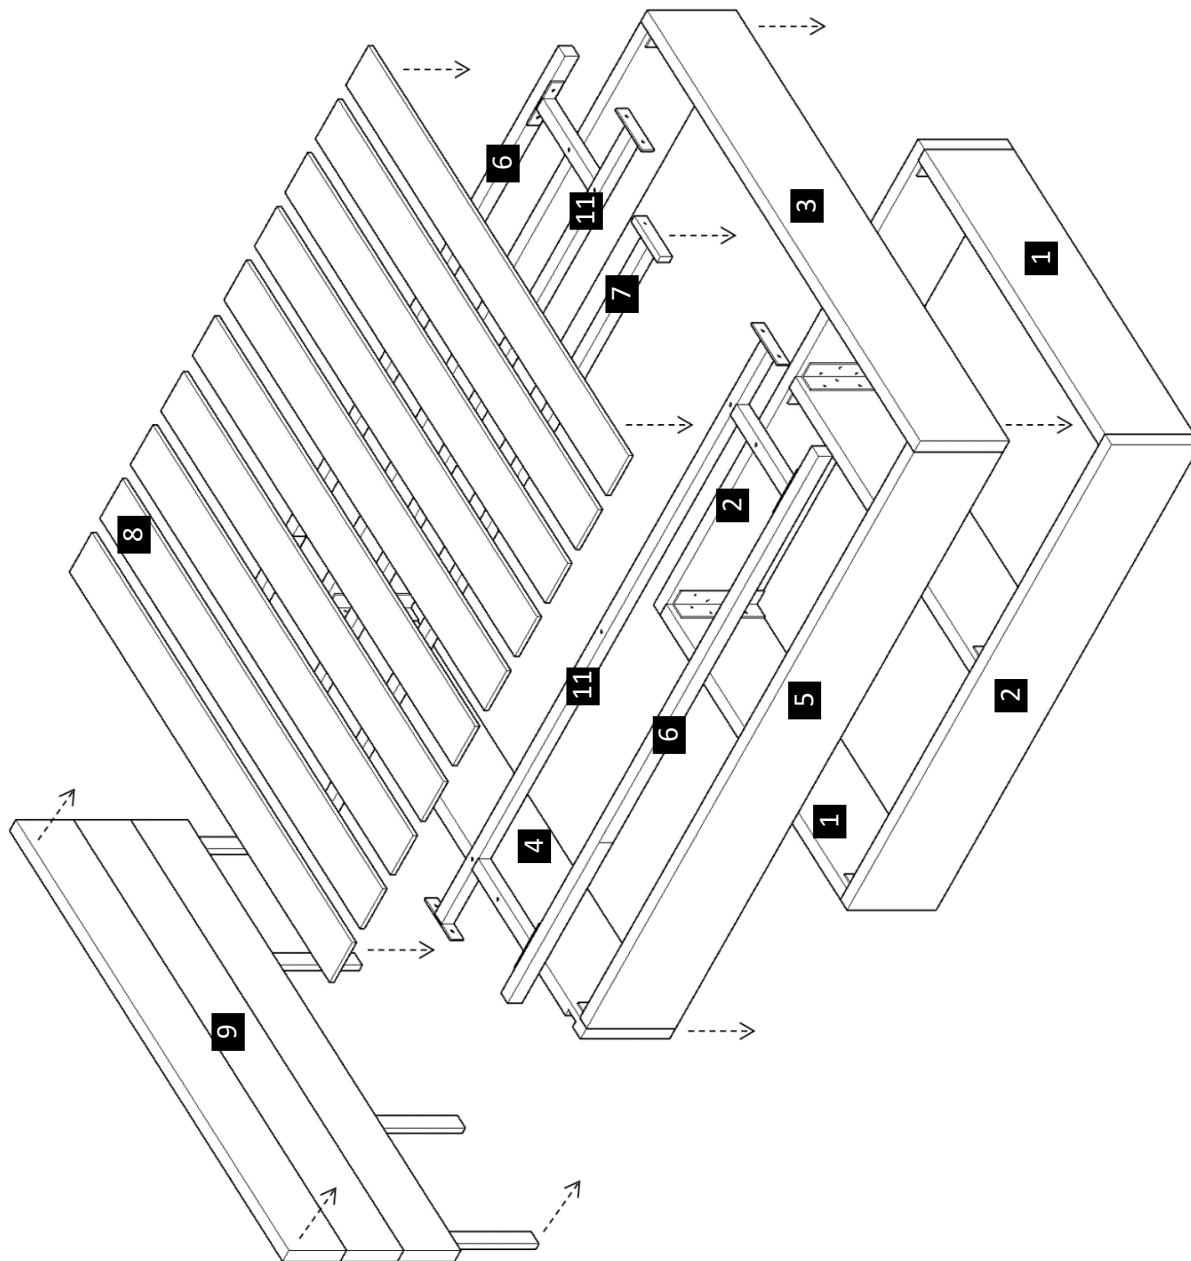
CONTENT OF BOXES			
Qty.	Description	Drawing	No.
3	Bottom Base (Short Sides)		1
2	Bottom Base (Long Sides)		2
1	Top Base (Short Side)		3
1	Top Base (Short Side with Cutouts)		4
2	Top Base (Long Sides)		5
2	Side Reinforcements		6
1	Central Reinforcement		7
Quantity will vary.	Boards		8
1	Backrest		9
12	Angles		10
2	Metal Support		11

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.



CONTENT OF BOXES		
Description	Drawing	No.
1 ¼" Deck Screws (To assemble the bottom base and the top base. / To attach the backrest to the top base).		A
3" Deck Screws (To attach the side reinforcements to the top base. / To attach the top base-central reinforcement to the bottom base).		B
2" Deck Screws (To attach the central reinforcement to the top base).		C
5/16" X 1 ½" Lag Bolts (To attach the metal support to the top base).		D
5/16" X 2 ½" Lag Bolts (To attach the metal support to side reinforcements).		E
5/16" X 3" Lag Bolts (To attach top base-metal supports to the bottom base).		F
1 5/8" Deck Screws (To attach the boards to the top base).		G


Note: Dimensions of your hardware will vary depending on size.




DESCRIPTION	No
Bottom Base (Short Sides)	1
Bottom Base (Long Sides)	2
Top Base (Short Side)	3
Top Base (Short Side with Cutouts)	4
Top Base (Long Sides)	5
Side Reinforcements	6
Central Reinforcement	7
Boards	8
Backrest	9
Angles	10
Metal Support	11

Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.


Step 1: To assemble the bottom base (1,2) use the angles (10) and 1 ¼" deck screws (A), as shown below. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

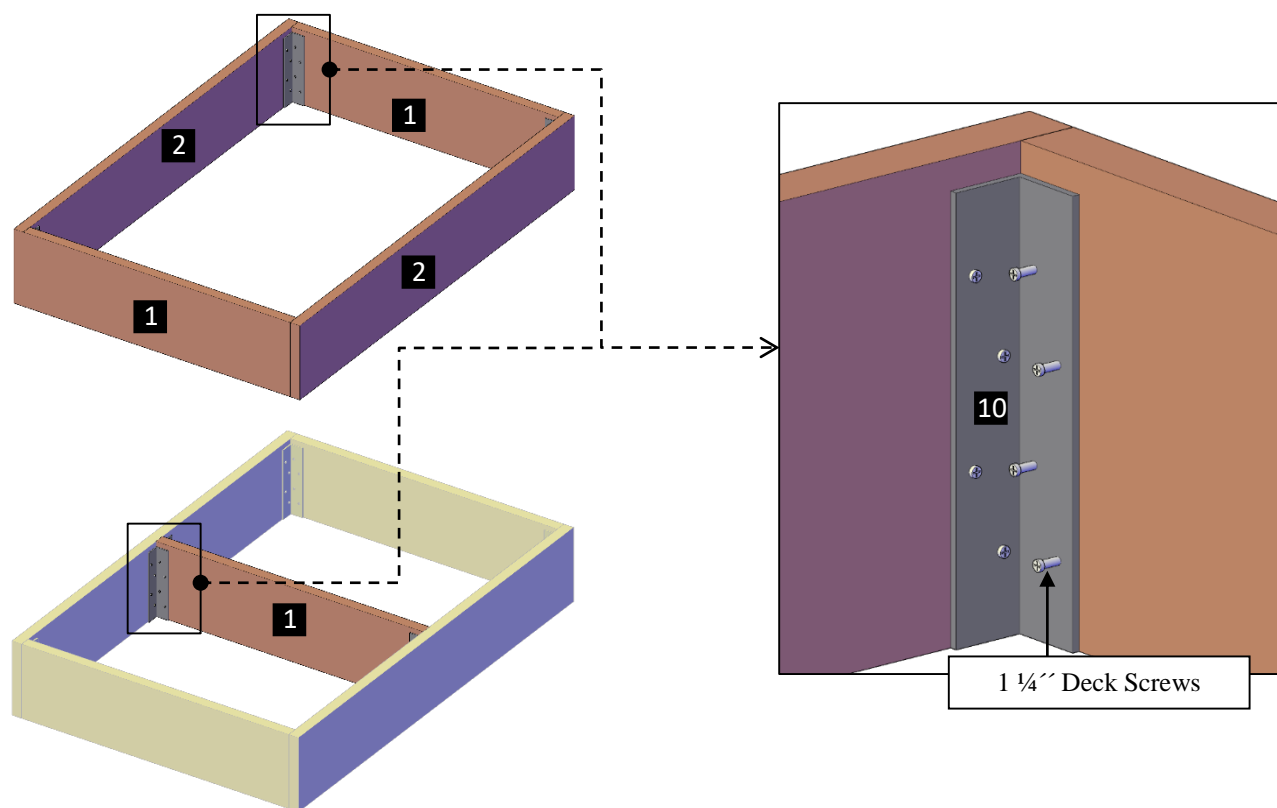


Step 2: To assemble the top base (3,4,5) use the angles (10) and 1 ¼" deck screws (A), as shown below. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

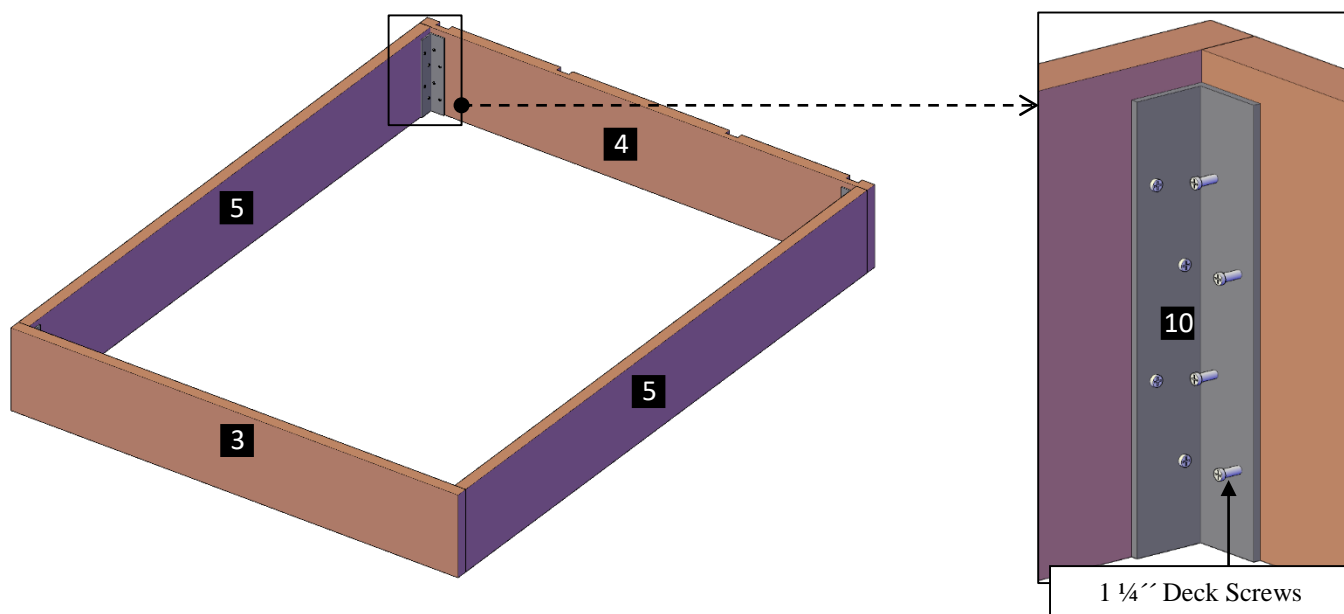


Step 3: Use 3" Deck Screws (**B**) to attach the side reinforcements (**6**) to the top base. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

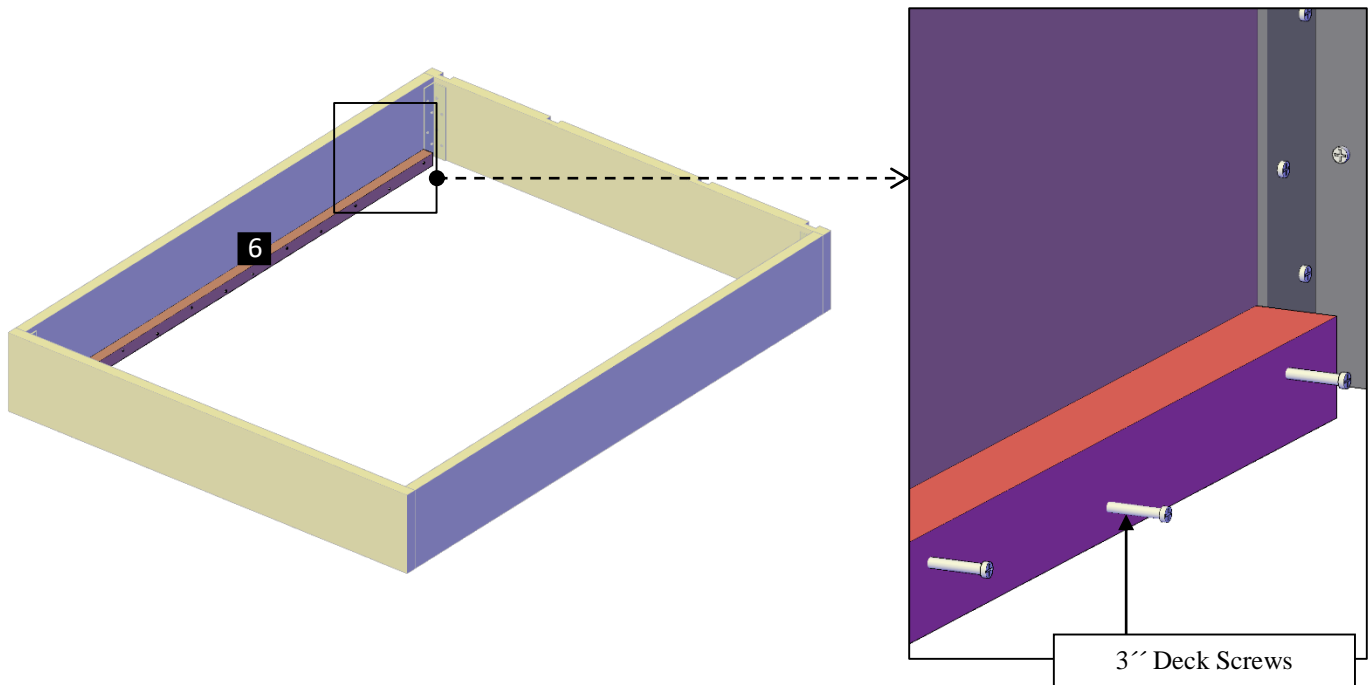


Step 4: Use 2" Deck Screws (**C**) to attach the central reinforcement (**7**) to the top base. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

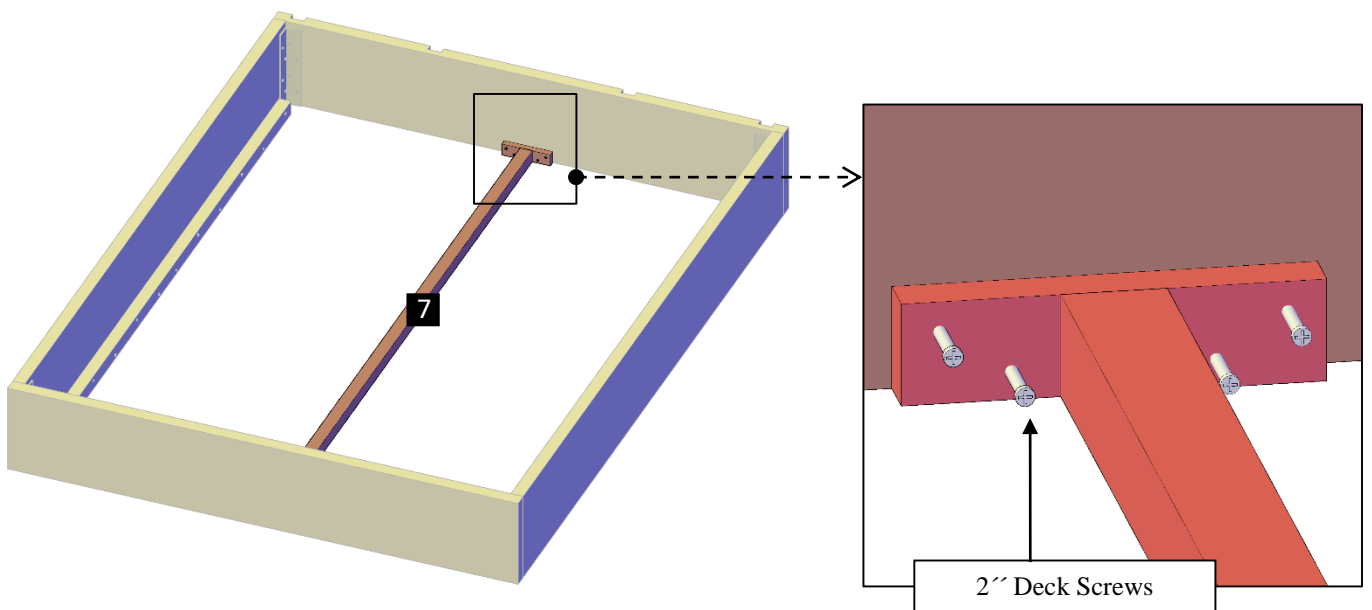


Step 5: Attach the metal supports (11) to the top base with 5/16" x 1 1/2" lag bolts (D) and 5/16" x 2 1/2" lag bolts (E). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

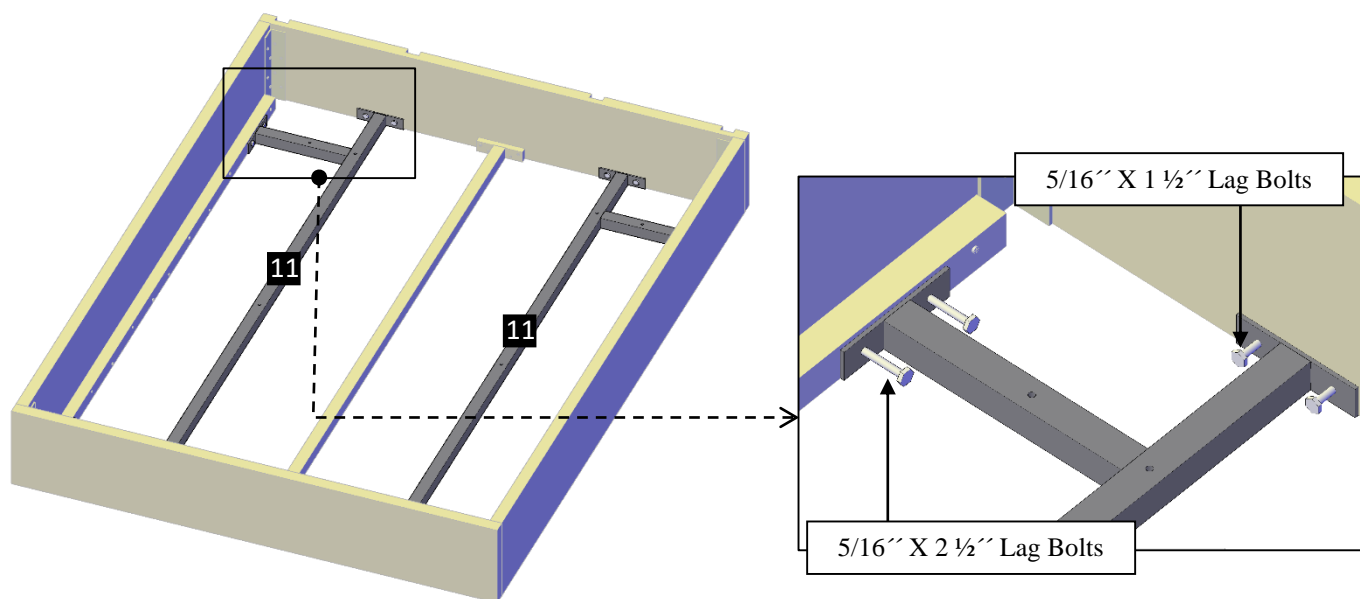


Step 6: Use 5/16" x 3" lag bolts (F) and 3" deck screws (B) to attach the top base to the bottom base, as shown below. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

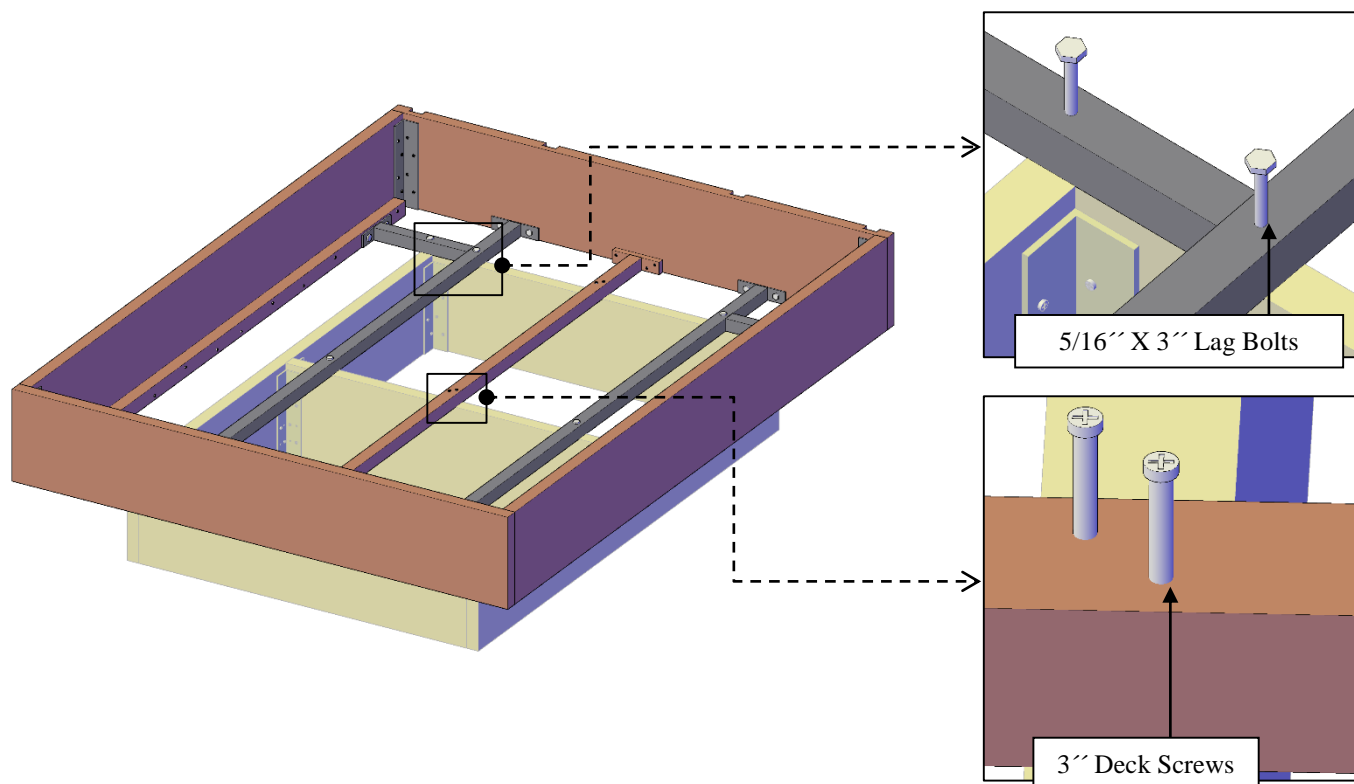

Step 7: Attach the boards (8) to the top base with 1 5/8" deck screws (G). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

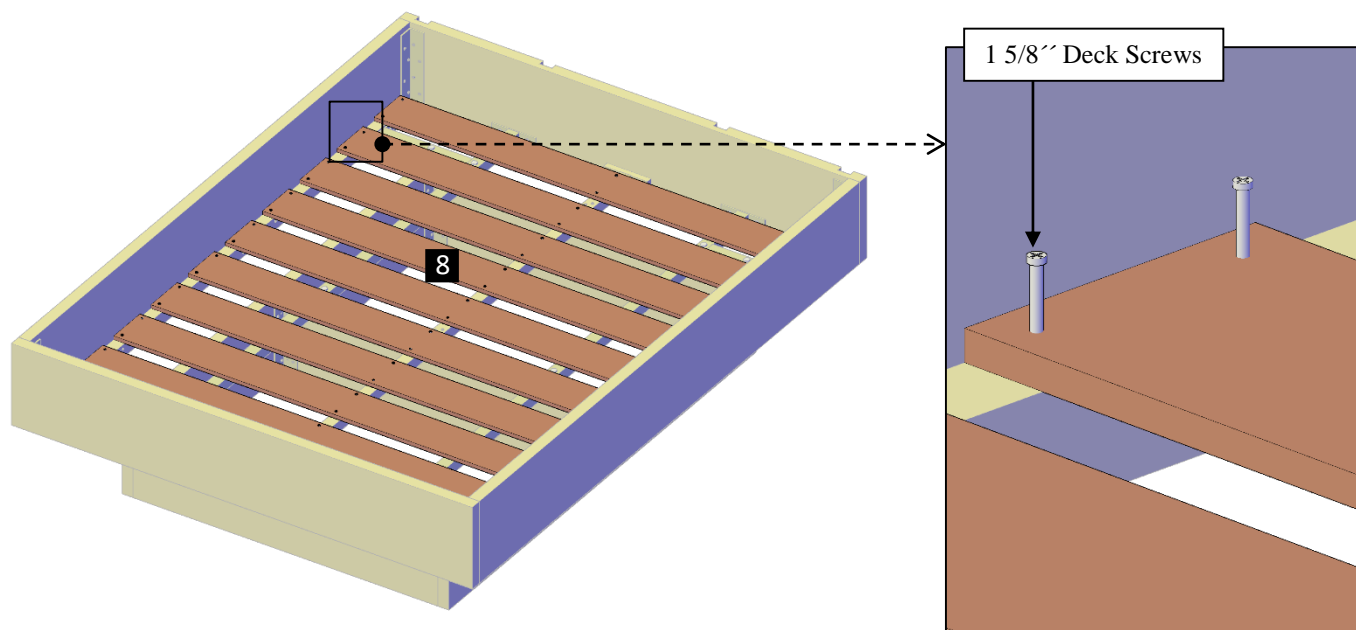

Step 8: Finally, use 1 1/4" deck screws (A) to attach the backrest (9) to the top base. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

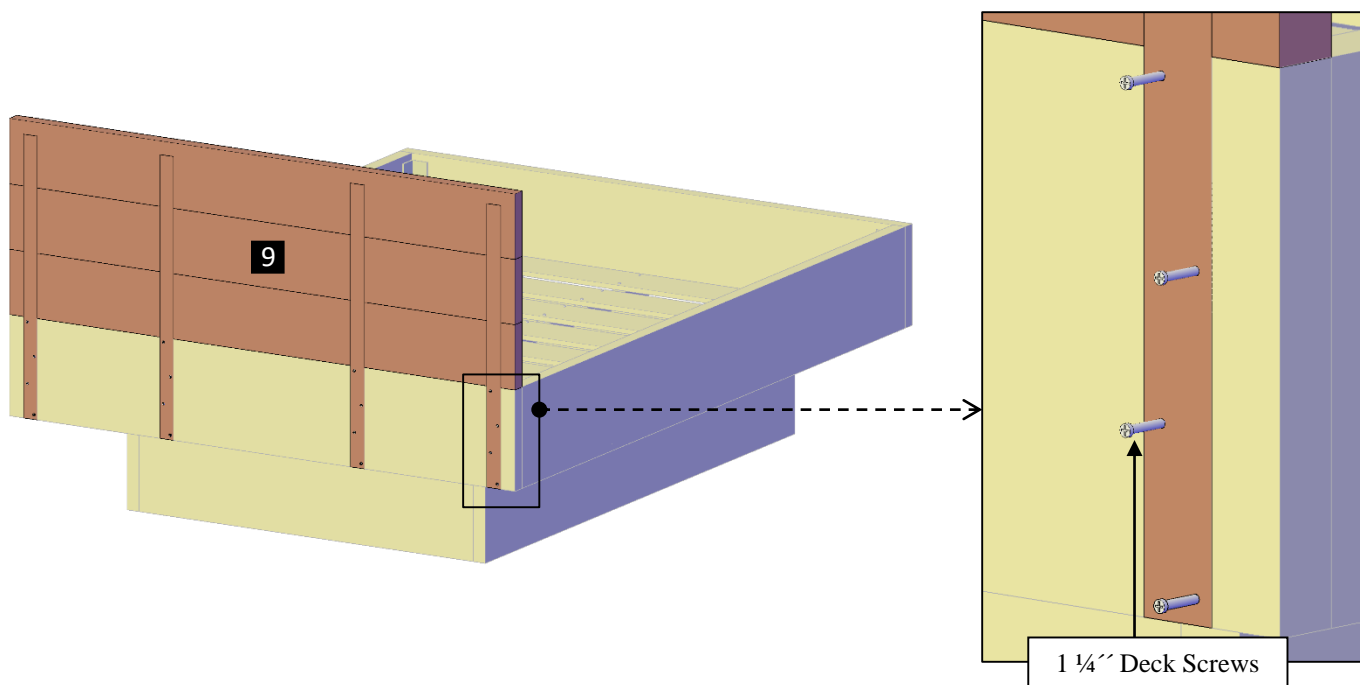



This completes the Bed assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.