



FOREVER REDWOOD






From the Forest, For the Forest since 1995

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE THE STAIRWAY BUNK SETS





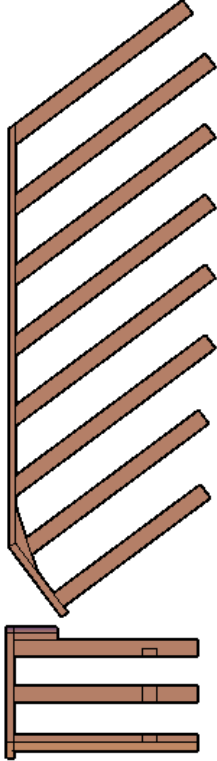




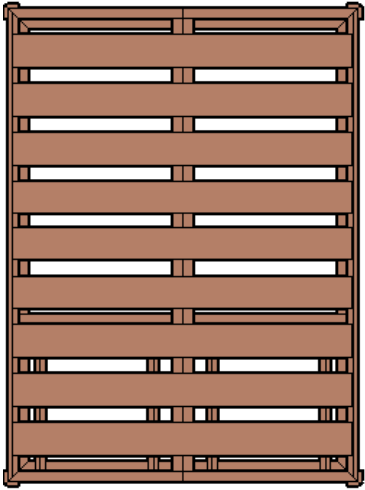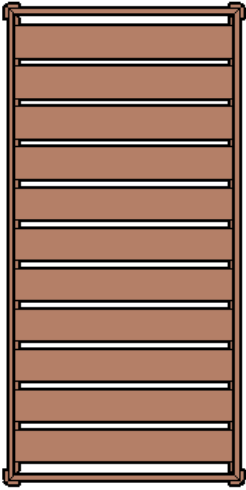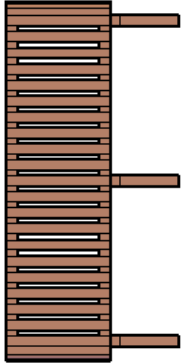

CONTENT OF BOXES				
Qty.	Description	Drawing	No.	
1	Bottom Base If ordered		1	
1	Top Base		2	
1	Headboard If ordered		3	
3	Posts		4	
1	Ladder If ordered		5	








Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.

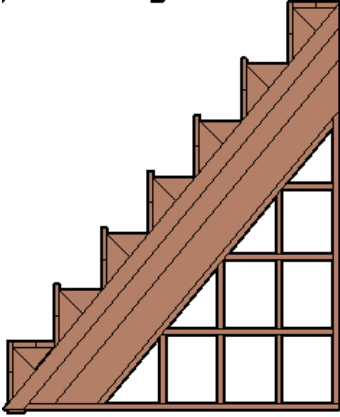

CONTENT OF BOXES			
Qty.	Description	Drawing	No.
1	Stairway		6
4	Knee Braces		7
2	Long Safety Rails		8
2	Short Safety Rails		9
2	Stairway Rails		10
5	Stairway Drawers		11
2	Bottom Base Drawers If ordered.		12

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.




HARDWARE LIST		
Description	Drawing	No.
5/16'' X 3'' Bolts (To attach the headboard to the bottom baser. / To attach the ladder to the bottom base and to the top base).		A
2 1/2'' Deck Screws (To attach the headboard to the bottom baser. / To attach the rails base together. / To attach the rail stairway).		B
5/16'' X 4'' Bolts (To attach the posts to the bottom base and to the top base. / To attach the rail stairway to the stairway).		C
5/16'' X 4 1/2'' Bolts (To attach the post to the stairway).		D
5/16'' X 5 1/2'' Bolts (To attach the knee braces to the posts).		E
5/16'' X 3 1/2'' Bolts (To attach the knee braces to the top base. / To attach the short rail base to the base).		F
5/16'' X 2 1/2'' Bolts (To attach the long rail base to the base).		G

Note: Dimensions of your hardware will vary depending on size.




DESCRIPTION	No
Bottom Base	1
Top Base	2
Headboard	3
Posts	4
Ladder	5
Stairway	6
Knee Braces	7
Long Safety Rails	8
Short Safety Rails	9
Stairway Rails	10
Stairway Drawers	11
Bottom Base Drawers	12

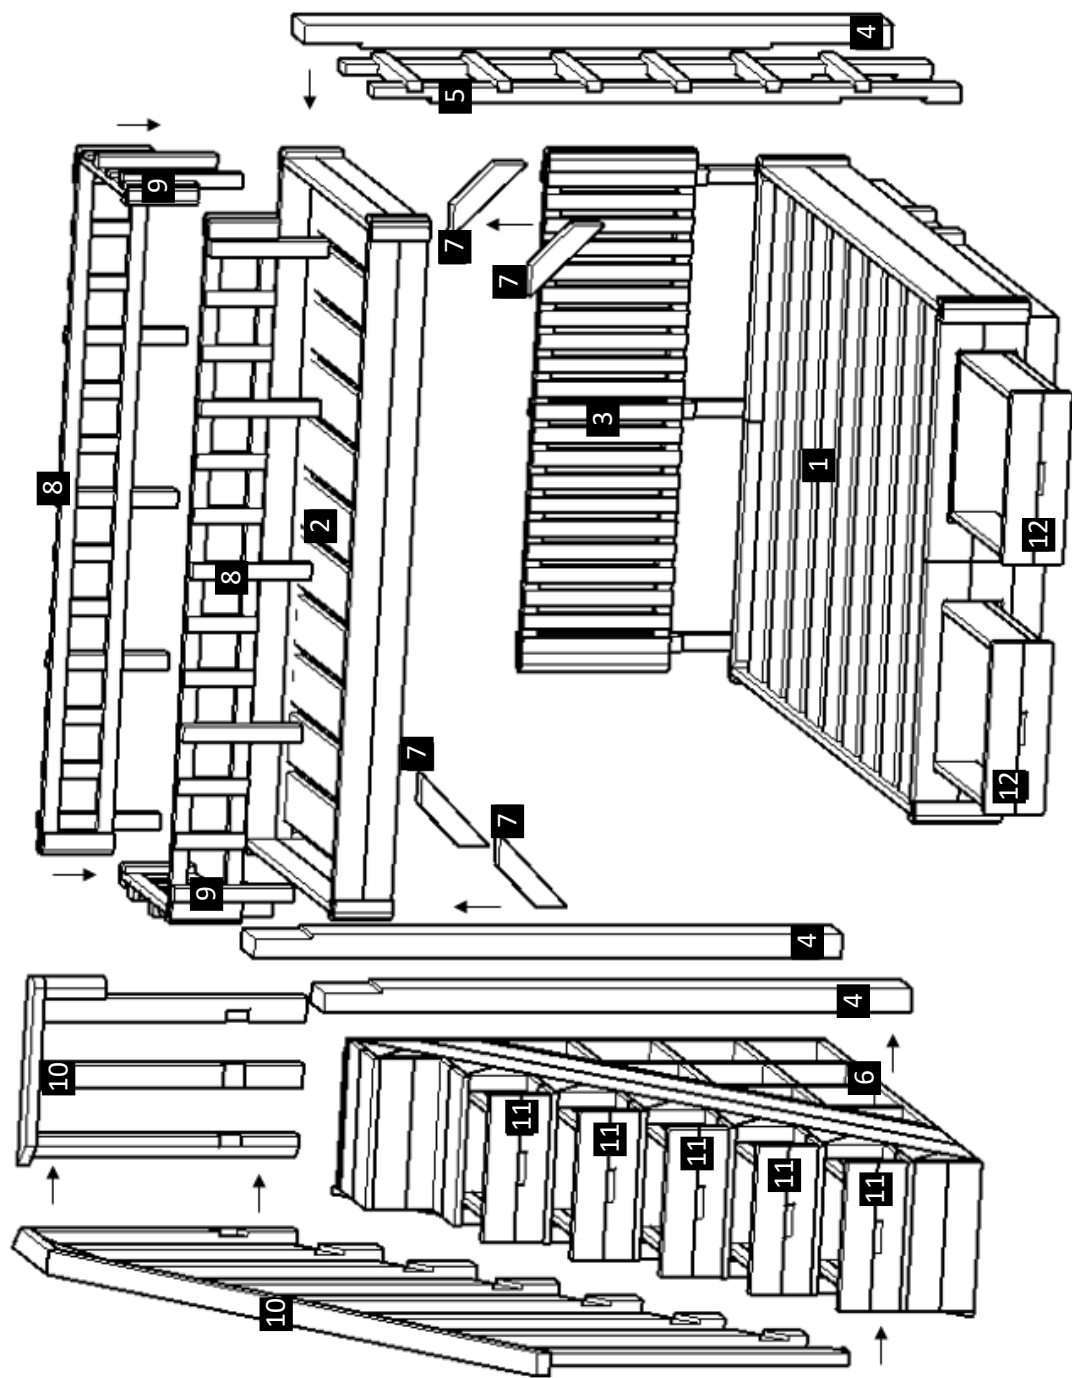


Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.

if your bed doesn't include the bottom base or the headboard, then go to step 2.


Step 1: Attach the headboard (3) to the bottom base (1) with 5/16" x 3" bolts (A) and 2 1/2" deck screws (B). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

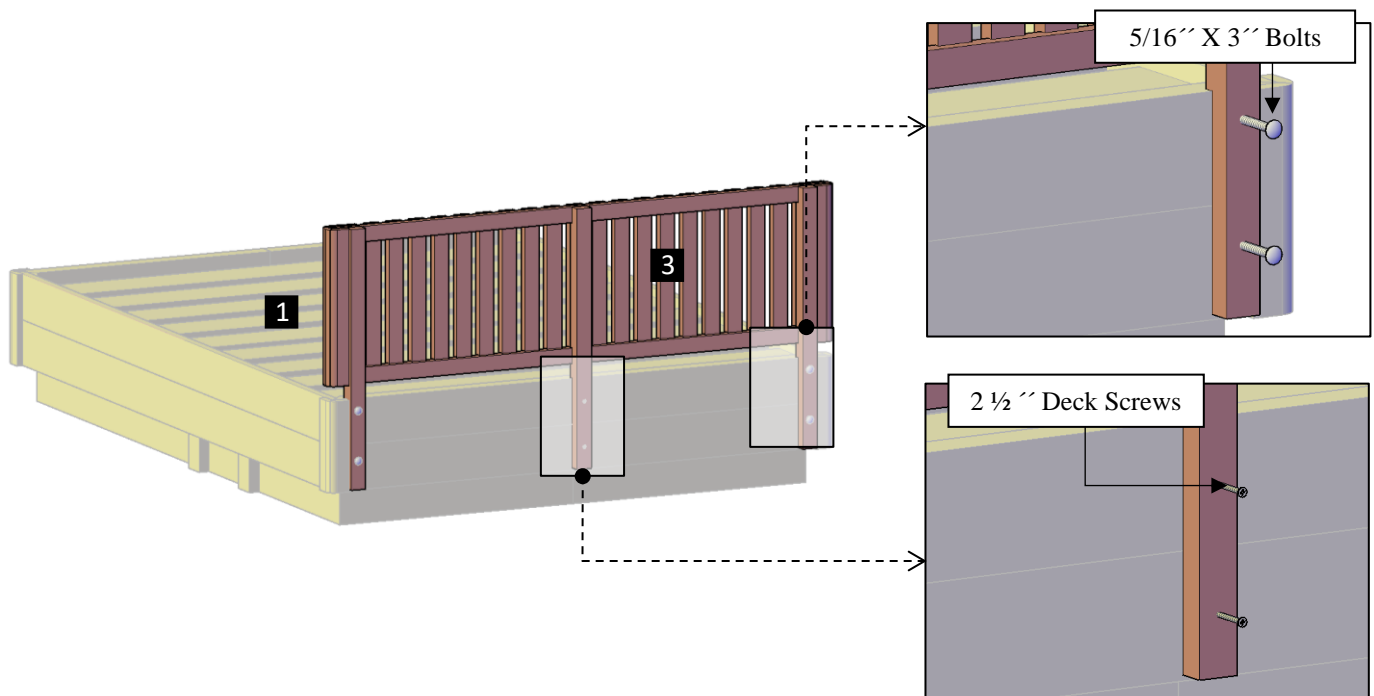


Step 2: Use 5/16" x 4" bolts (C) to one post (4) to the bottom base. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

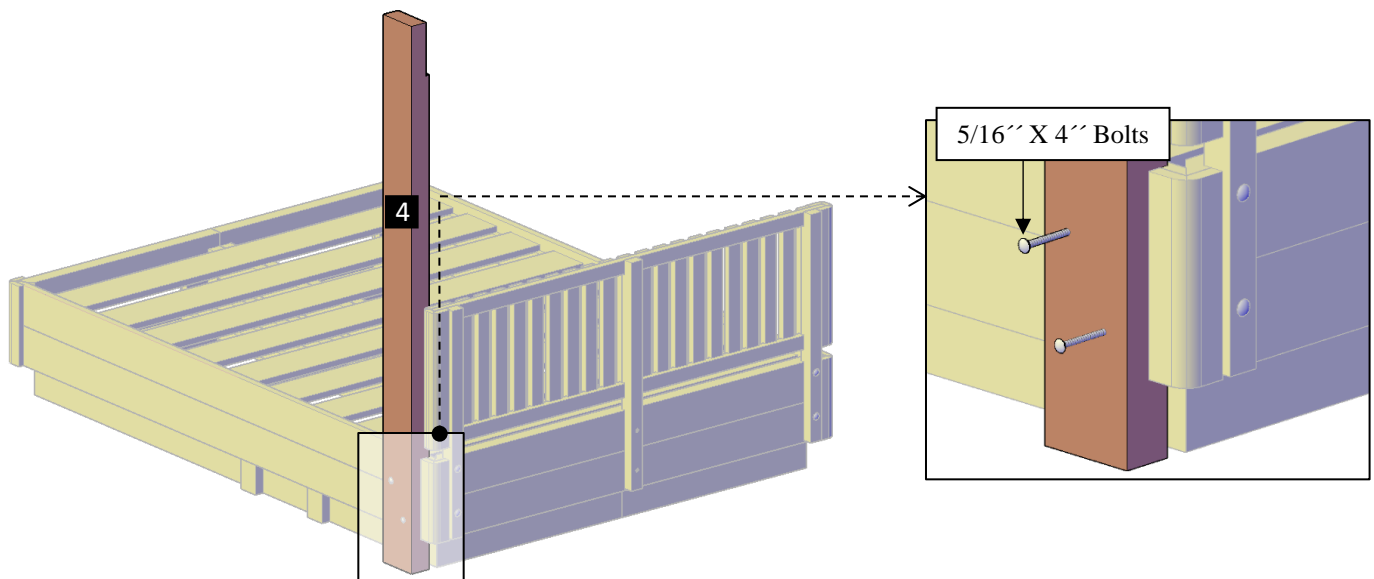


Step 3: Attach the ladder (5) to the bottom base with 5/16" x 3" bolts (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

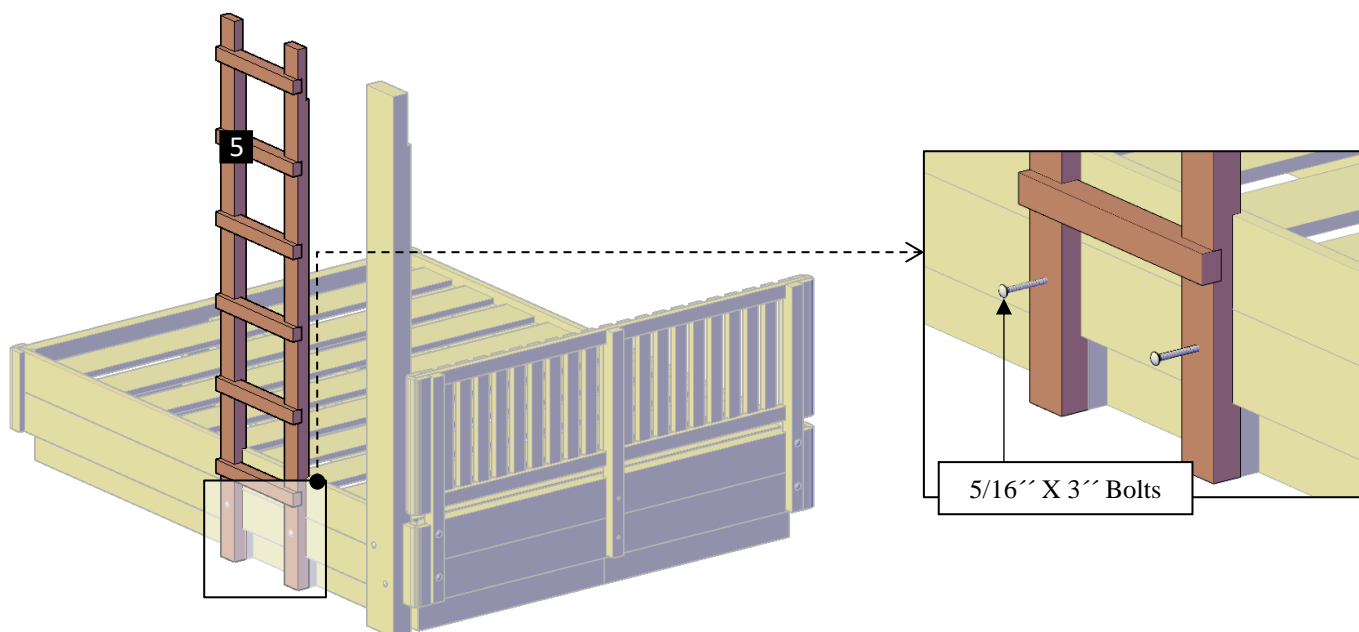


Step 4: Use 5/16" x 4 1/2" bolts (D) to attach the posts (4) to the stairway (6). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

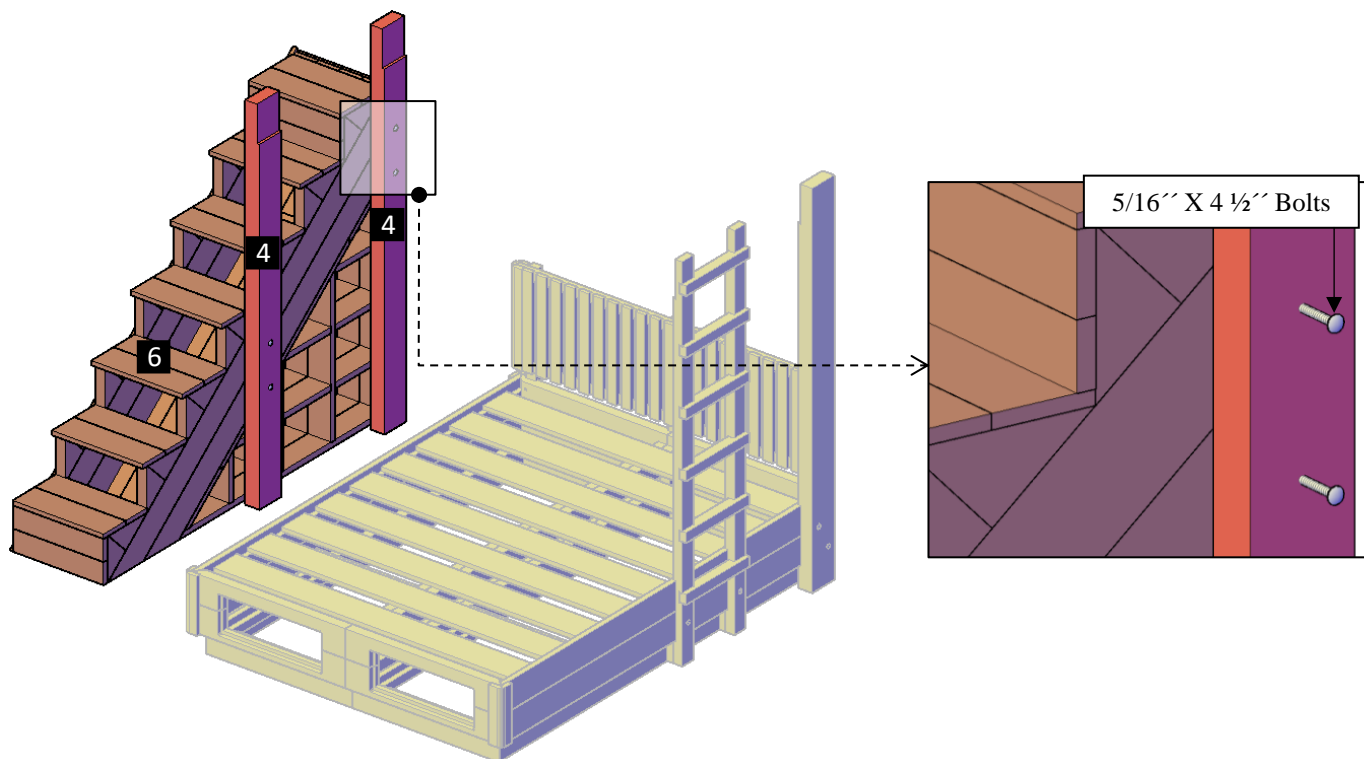


Step 5: Attach the top base (2) to the posts with 5/16" x 4" bolts (C). After that, use 5/16" x 3" bolts (A) to attach the top base to the ladder. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

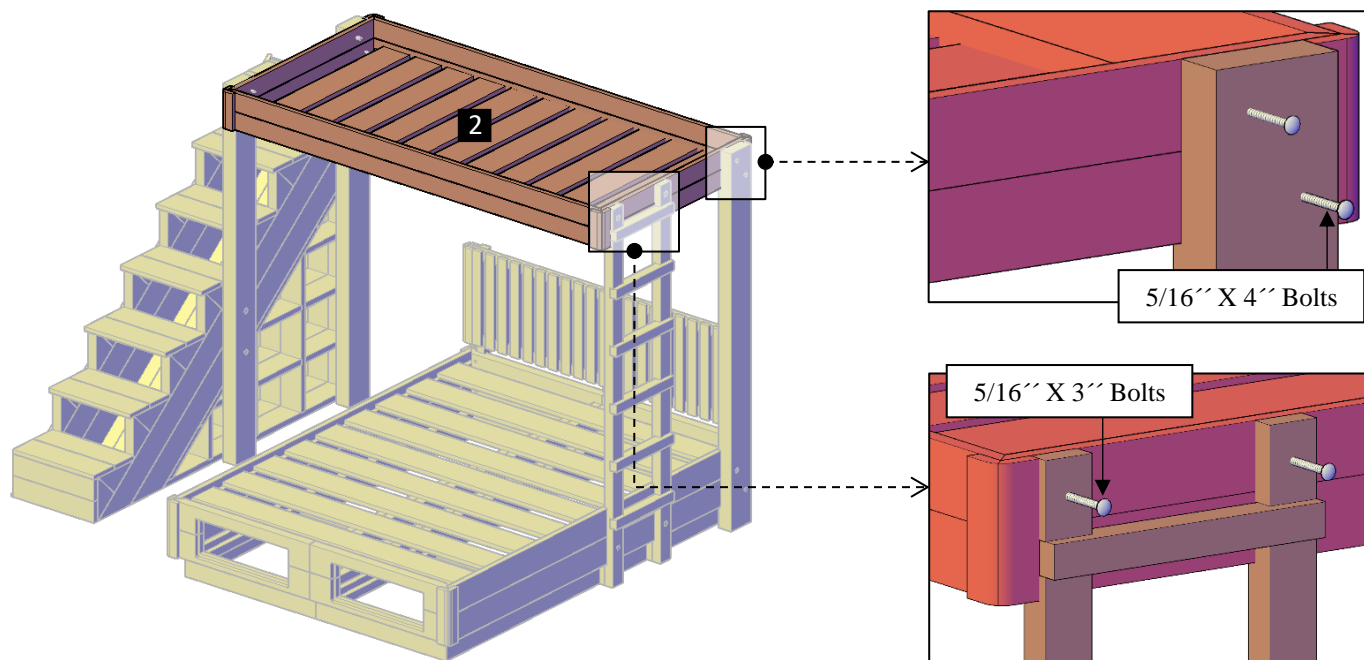


Step 6: Use 5/16" x 5 1/2" bolts (E) to attach the Knee Braces (7) to the posts. After that, attach to the top base with 5/16" x 3 1/2" bolts (F). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

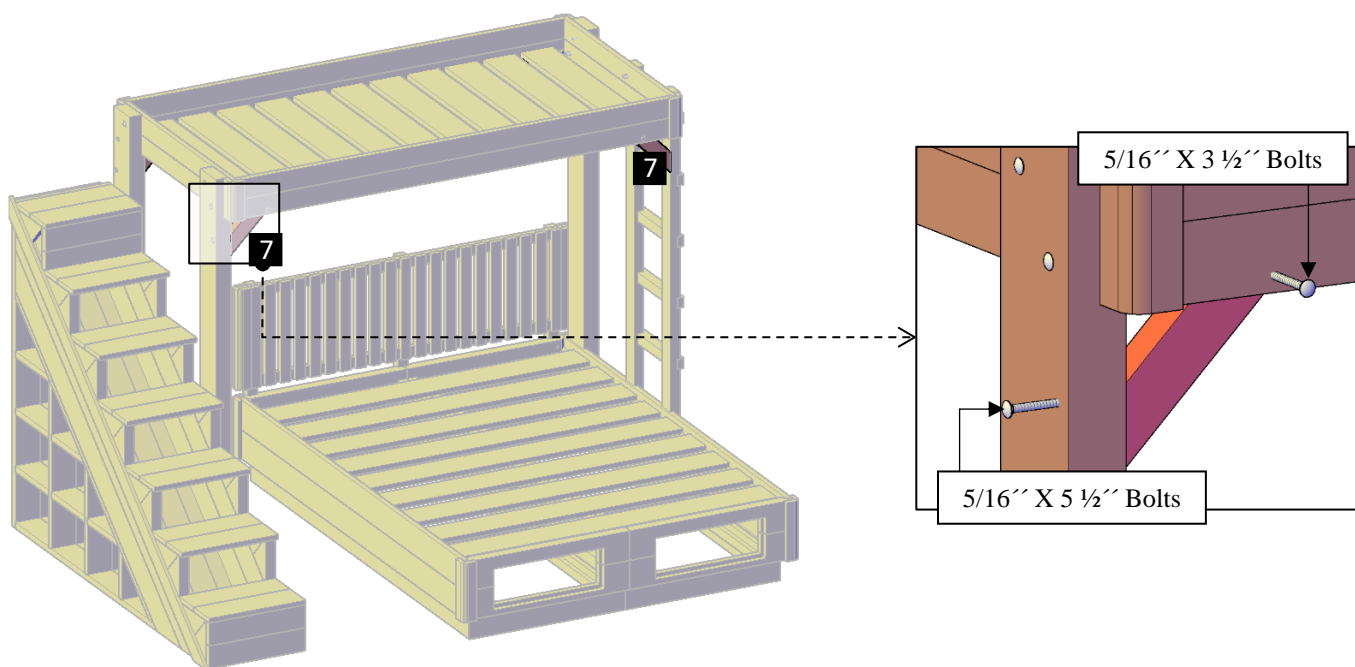


Step 7: Place the mattress on the top base. After that, attach the long safety rails (8) to the top base with 5/16" x 2 1/2" bolts (G). Each part has a series of numbers that indicate here to attach the part with the corresponding number.

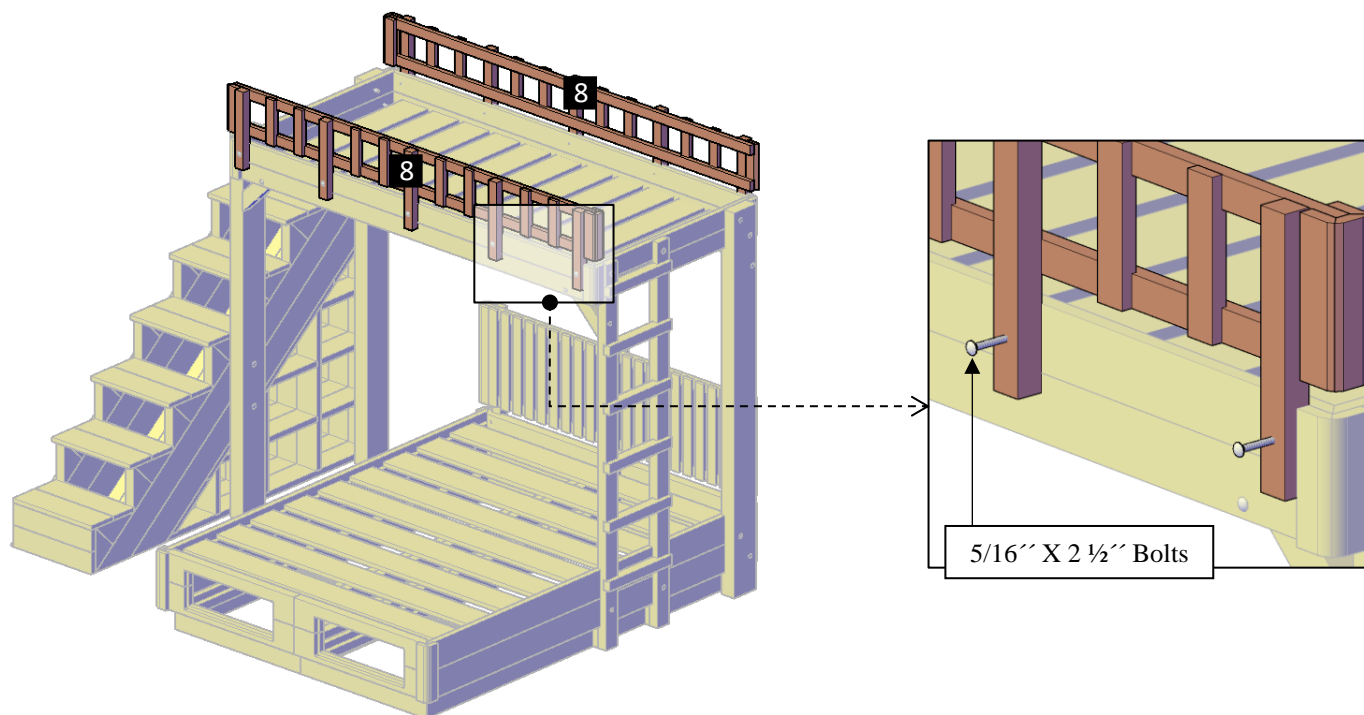


Step 8: Use 5/16" x 3 1/2" bolts (F) to attach the short safety rails (9) to the top base. After that, attach to the long safety rails with 2" deck screws (B). Each part has a series of numbers that indicate here to attach the part with the corresponding number.

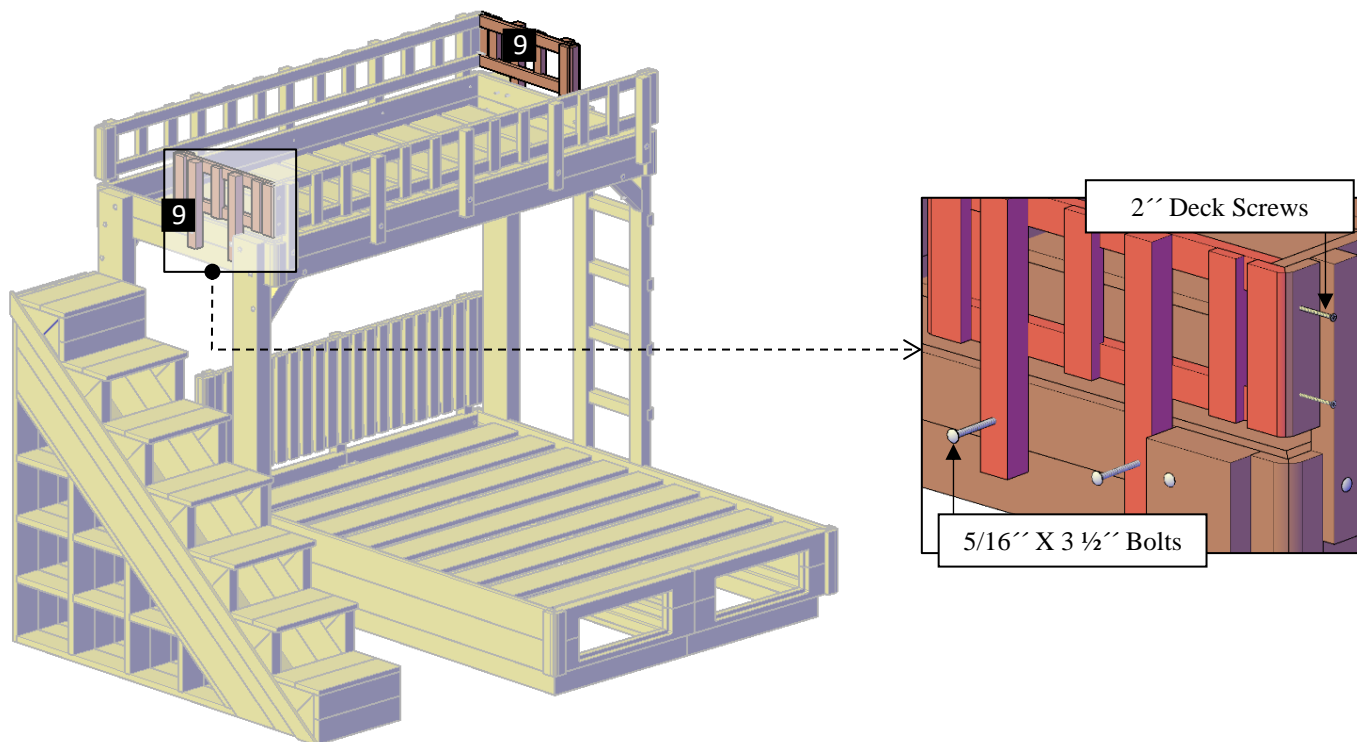

Step 9: Attach the stairway rails (10) to the stairway with 5/16" x 4" bolts (C) on the first step and 2 1/2" deck screws (B) on the rest. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

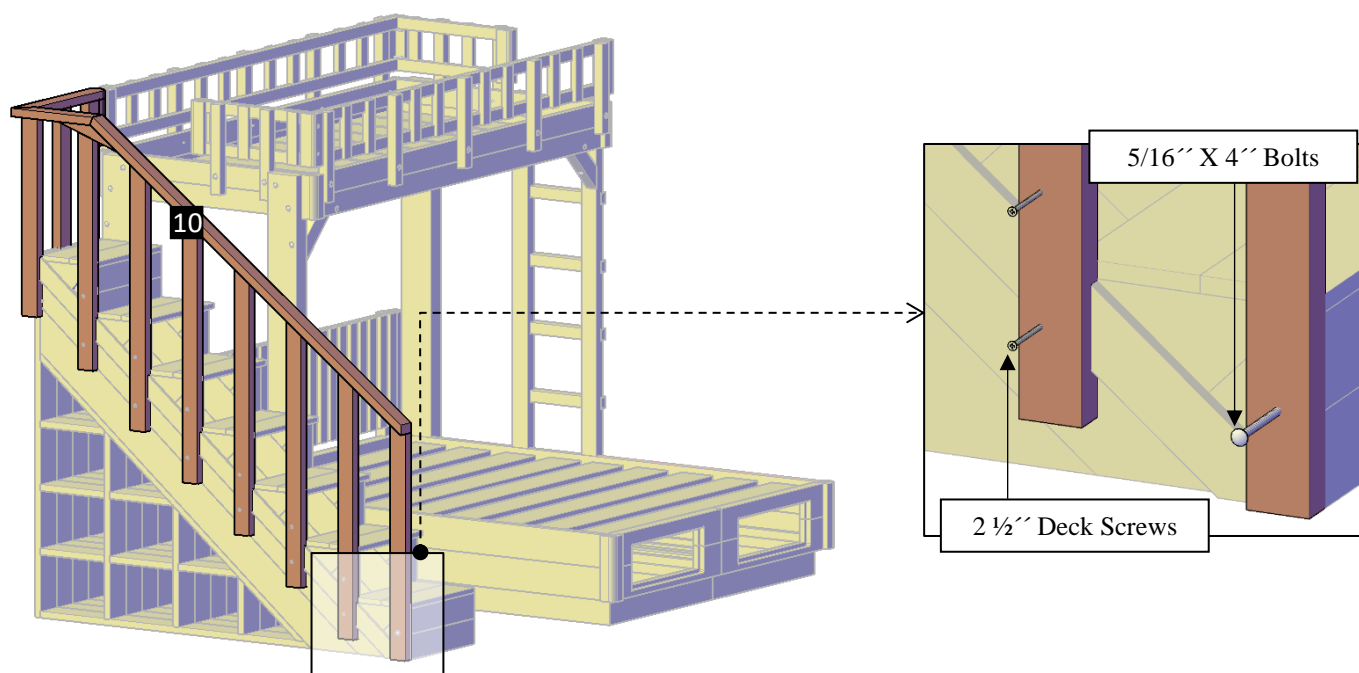

Step 10: Finally, place your drawers (11,12). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

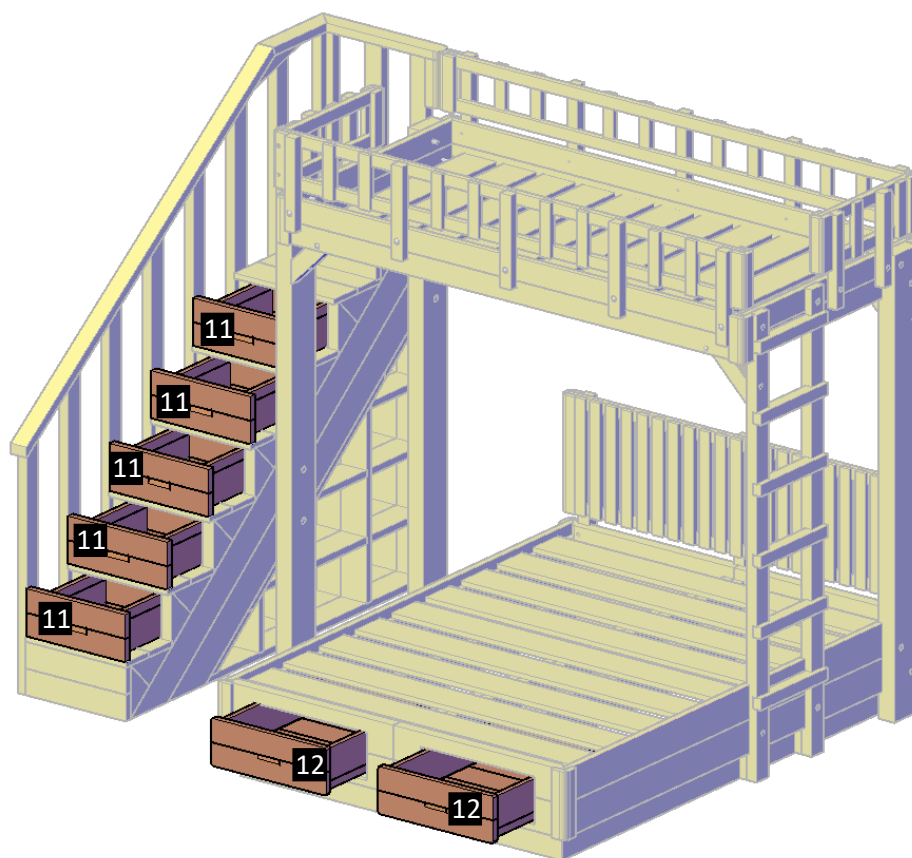



This completes the Bunk Assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.