
















FOREVER REDWOOD

From the Forest, For the Forest since 1995

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR **THE SUNSET PATIO PAVILION**




CONTENT OF BOXES			
Qty.	Description	Drawing	No.
Will vary	Posts		1
	Single Supports-A		2
	Single Supports-B		3
	Central Supports		4
	In-Between Blocking		5
	In-Between Covers		6
	Single Lateral Supports		7
	Roof Boards		8
	Boots If ordered		9
	Tap L-Plaques		10
	L-Plaques		11
	Standard or High Wind Anchor Bases If ordered	 	12

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.



HARDWARE LIST		
Description	Drawing	No.
5/16'' X 3'' lag bolts (To attach the anchor bases to the ground).		A
5/16'' X 4'' Lag Bolts (o attach the Single Supports-A to the Central Supports/to attach the Single Lateral Supports to the Supports).		B
3'' Deck Screws (o attach the Single Supports-A to the Central Supports/to attach the Single Supports-A to the Short Central Supports/to attach the In-Between Blocking to the Supports/to attach the Single Lateral Supports to the Supports).		C
3/8'' X 8'' bolts (to attach the Single Supports-A&B to the post).		D
3/8'' x 7'' Bolts (to attach the In-Between Blocking to the Supports).		E
3/8'' x 2'' lag bolts (to attach the L-Plaques to the posts).		F
2 1/2'' Deck Screw (to attach the Tap L to the posts and to the supports)		G
2'' Deck Screws (to attach the Roof Boards to the Supports).		H

Note: Dimensions of your hardware will vary depending on size.

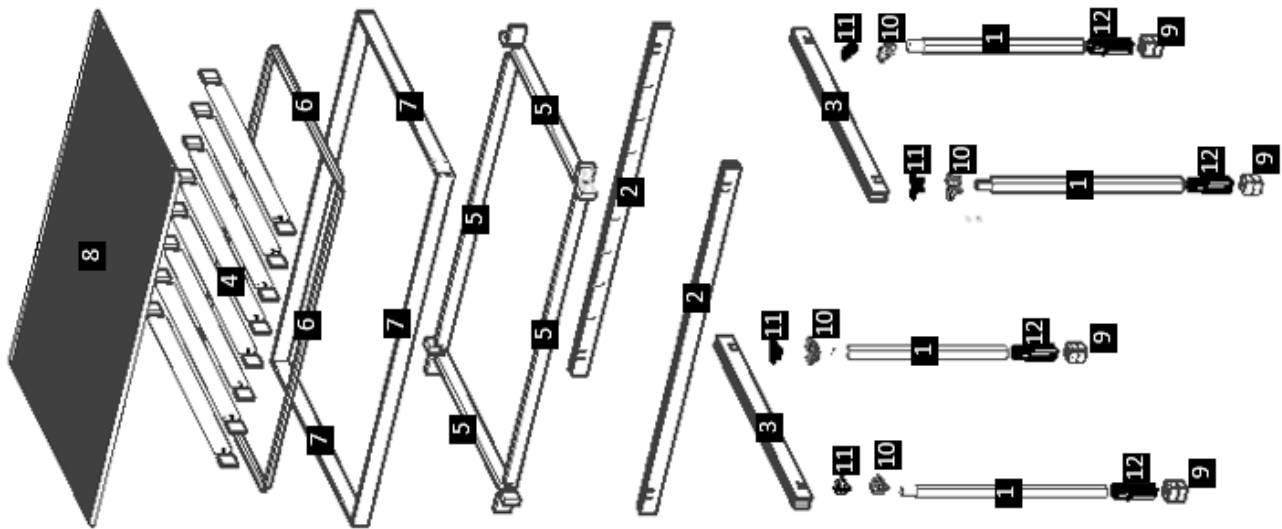


DESCRIPTION	No.
Posts	1
Single Supports-A	2
Single Supports-B	3
Central Supports	4
In-Between Blocking	5
In-Between Covers	6
Single Lateral Supports	7
Roof Boards	8
Boots	9
Tap L-Plaques	10
L-Plaques	11
Gale Wind Bases	12


Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.

NOTE: In order to know where the post needs to be placed, check the numbers on them. If the post is not marked, then place the single Supports on the ground to locate the markings for each post position and clearly set your bearings. (“Don’t attach yet, only place them on the ground to begin with”).


Step 1: Install the anchor bases (12). Please see the “How to anchor your pergola document” for all details. Set your post (1) in the saddle of the anchor bases. Drill a $\phi \frac{1}{4}$ hole in the post prior to anchoring to facilitate the ratcheting of the hardware. After that, use 5/16" X 3" lag bolts (A) to attach each post to its respective anchor base.

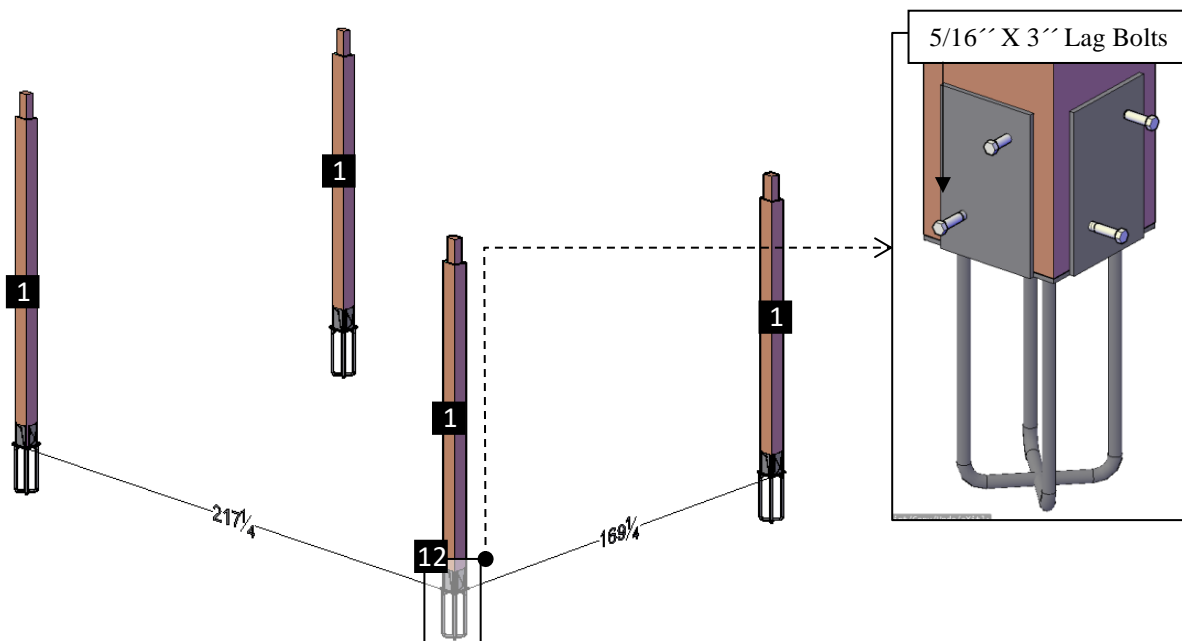


Step 2: Use 5/16" X 4" Lag Bolts (B) and 3" Deck Screws (C) to attach the Single Supports-A (2) to the Central Supports (4). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

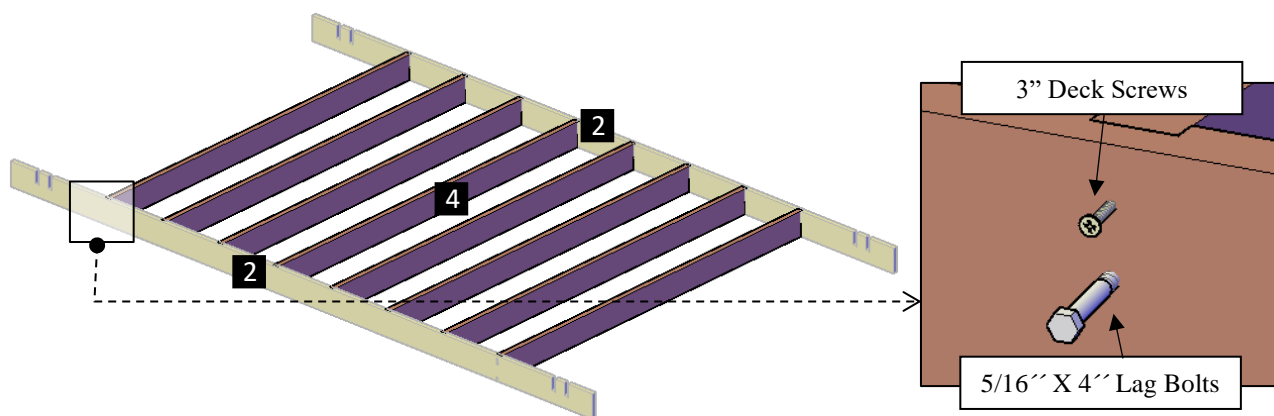


Step 3: Use 3" Deck Screws (C) to attach the Single Supports-A (2) to the Short Central Supports (4). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

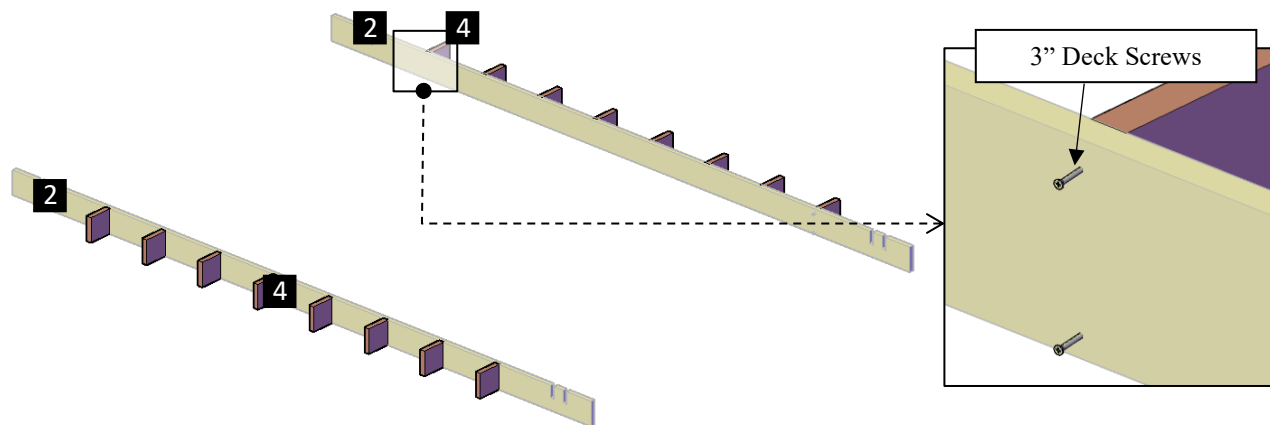


Step 4: Use 3/8" X 8" bolts (D) to attach the Single Supports-A (2) to the post (1). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

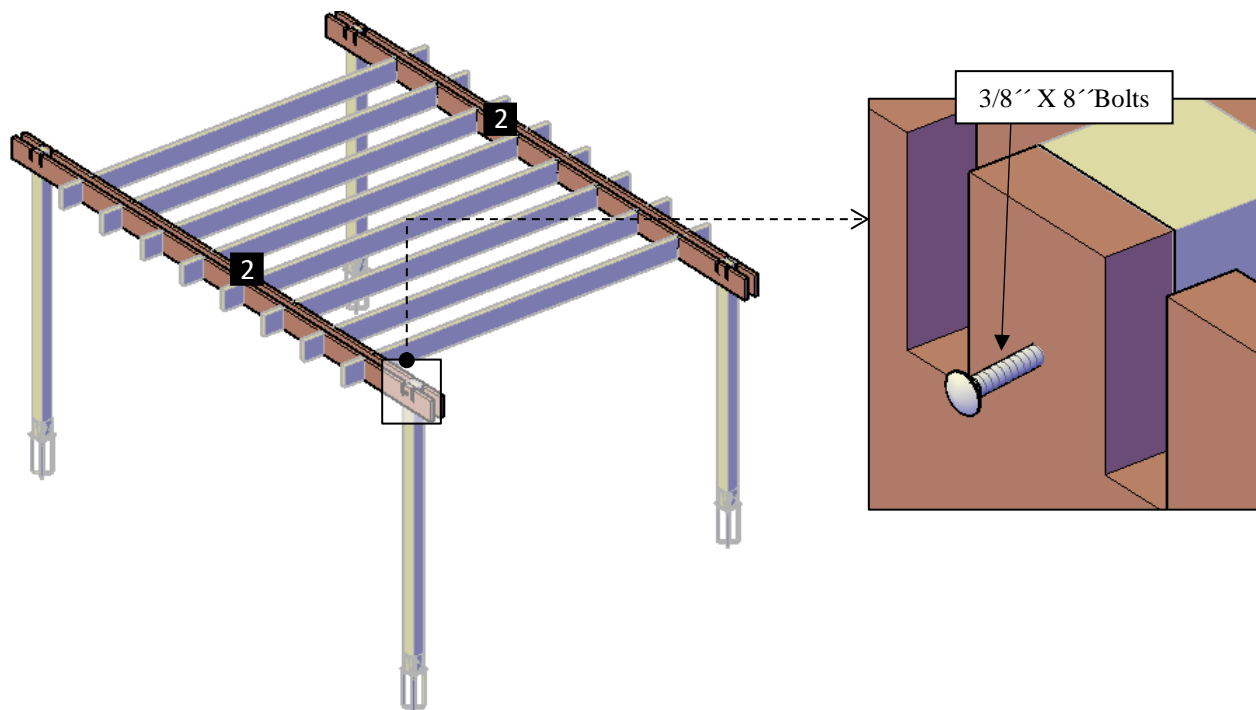


Step 5: Use 3/8" X 8" bolts (D) to attach the Single Supports-B (3) to the post (1). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

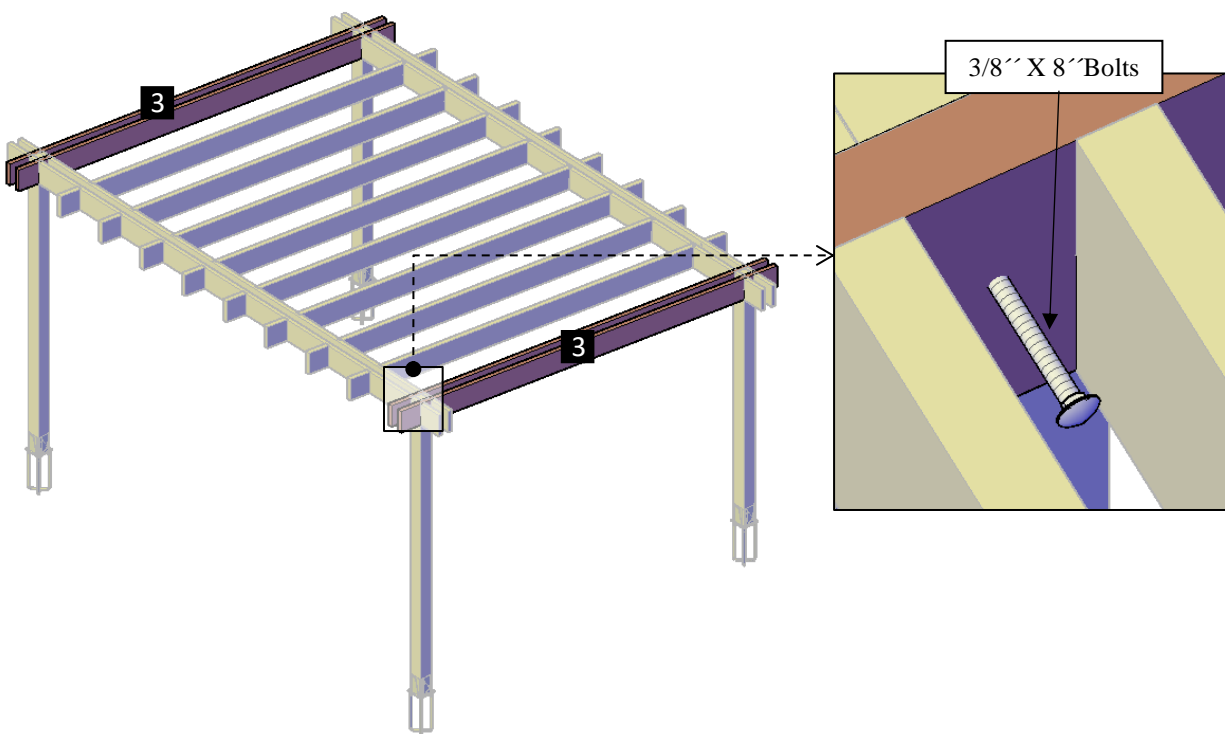


Step 6: Use 3/8" x 7" Bolts (E) to attach the In-Between Blocking (5) to the Supports. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

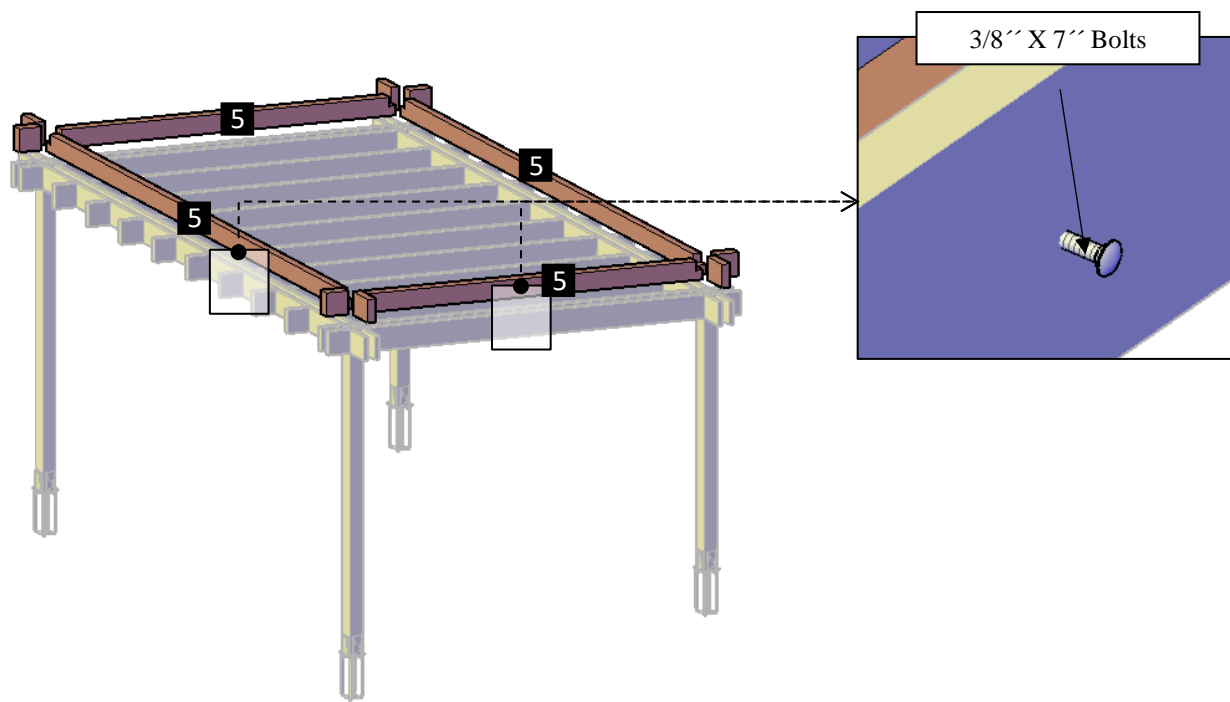


Step 7: Use 3/8" x 7" Bolts (E) and 3" Deck Screws (C) to attach the In-Between Blocking (5) to the Supports. After that, Cover the Deck Screws with taps. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

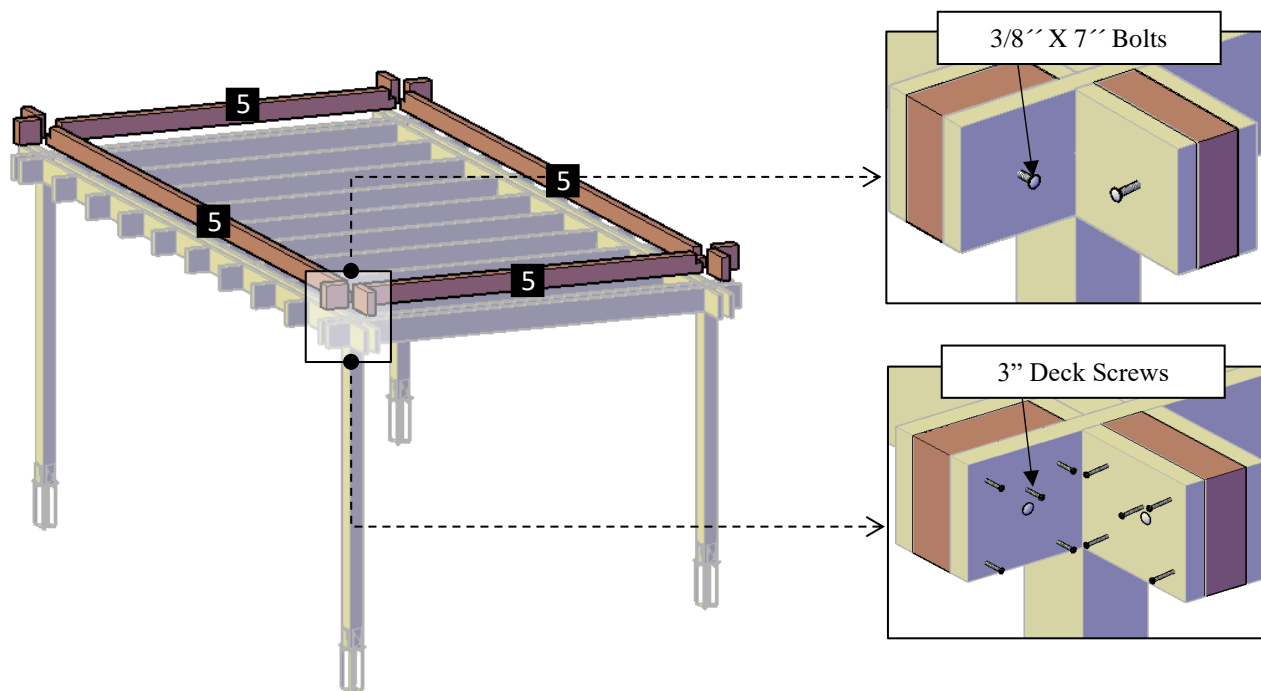


Step 8: Attach the In-Between covers (6) to the Supports with 3" Deck Screws (C). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

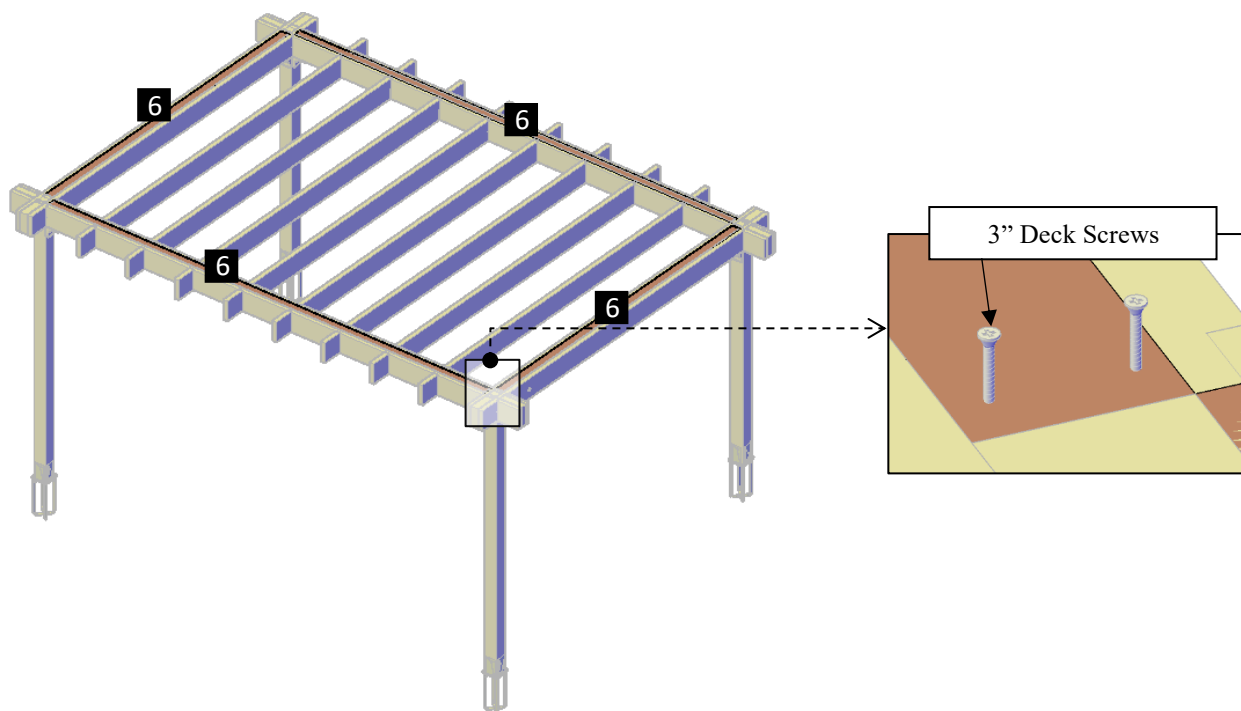


Step 9: Use 5/16" x 4" Lag Bolts (**B**) and 3" Deck Screws (**C**) to attach the Single Lateral Supports (**7**) to the Supports. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

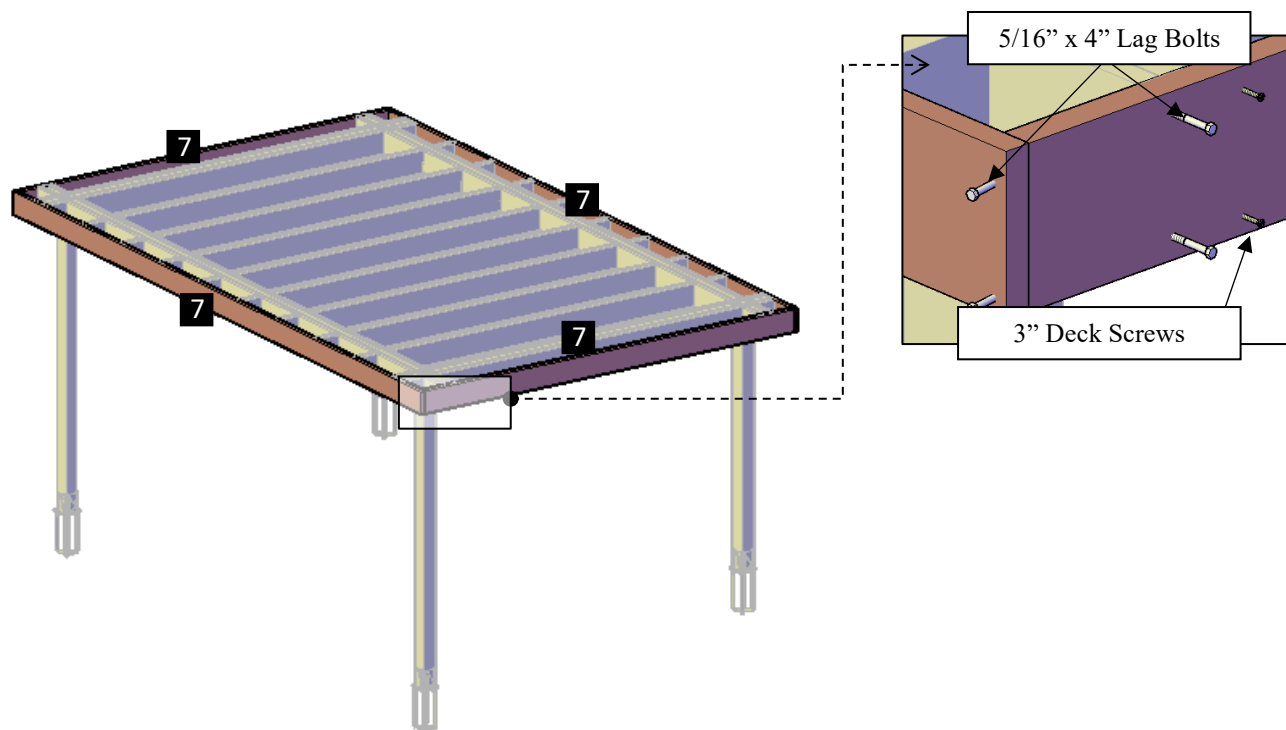


Step 10: Use 3/8" x 2" lag bolts (**F**) to attach the L-Plaques (**11**) to the posts (**1**), and to the supports. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

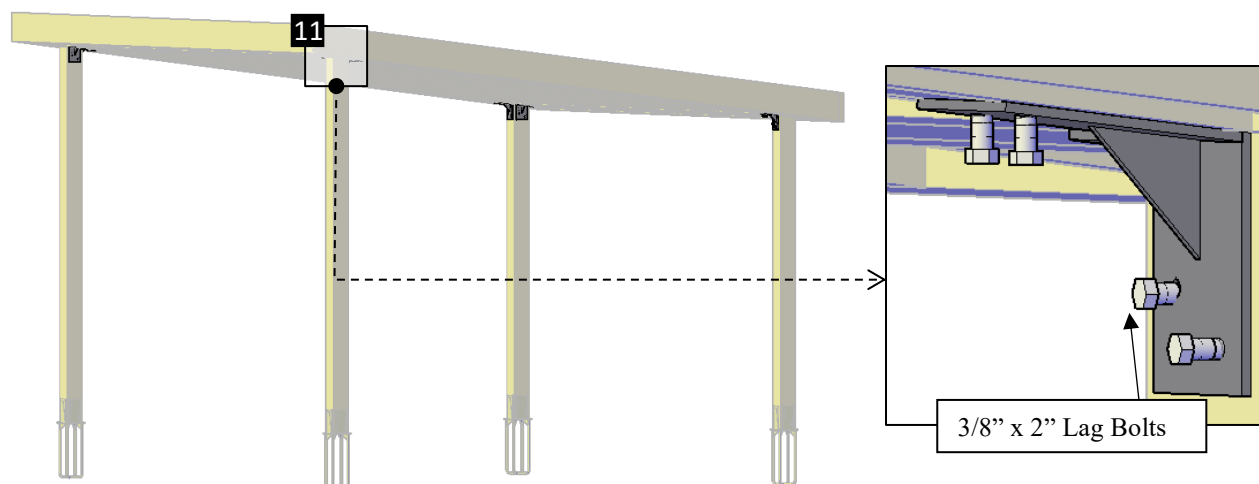



Step 11: Use 2 ½" Deck Screw (G) to attach the Tap L (10) to the posts and to the supports. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

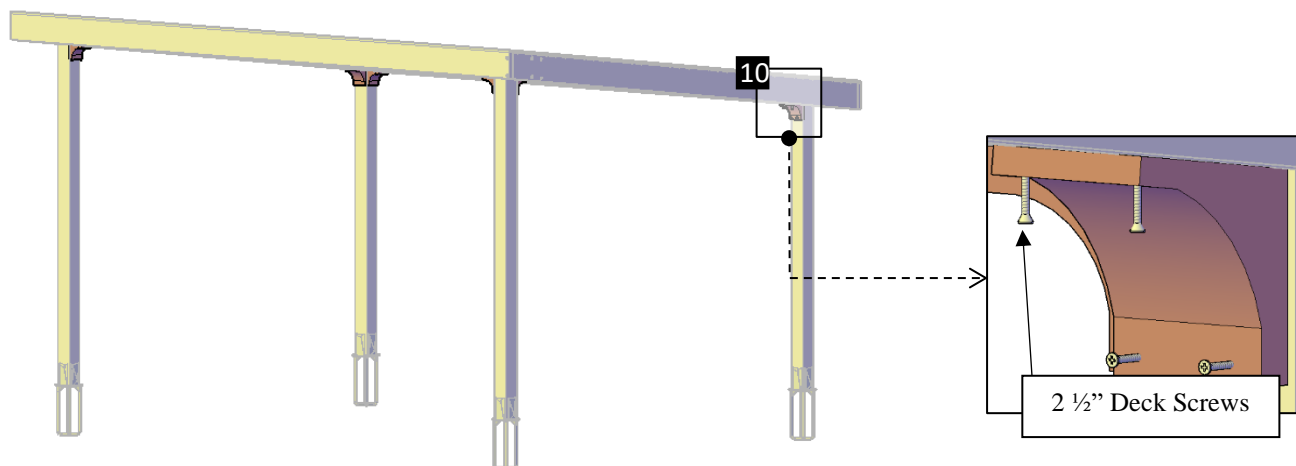

Step 12: Use 2" Deck Screws (H) to attach the Roof Boards (8) to the Supports. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

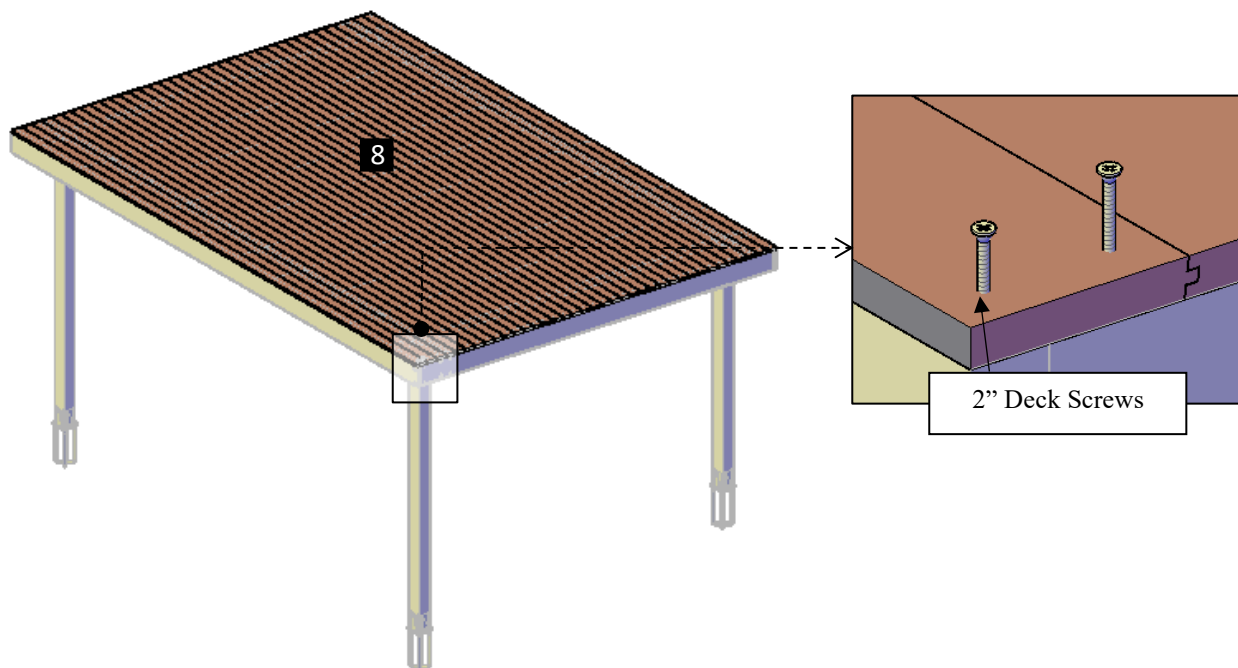

Step 13: Finally, attach the boots (9) to the posts with 3'' Deck Screws (C). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

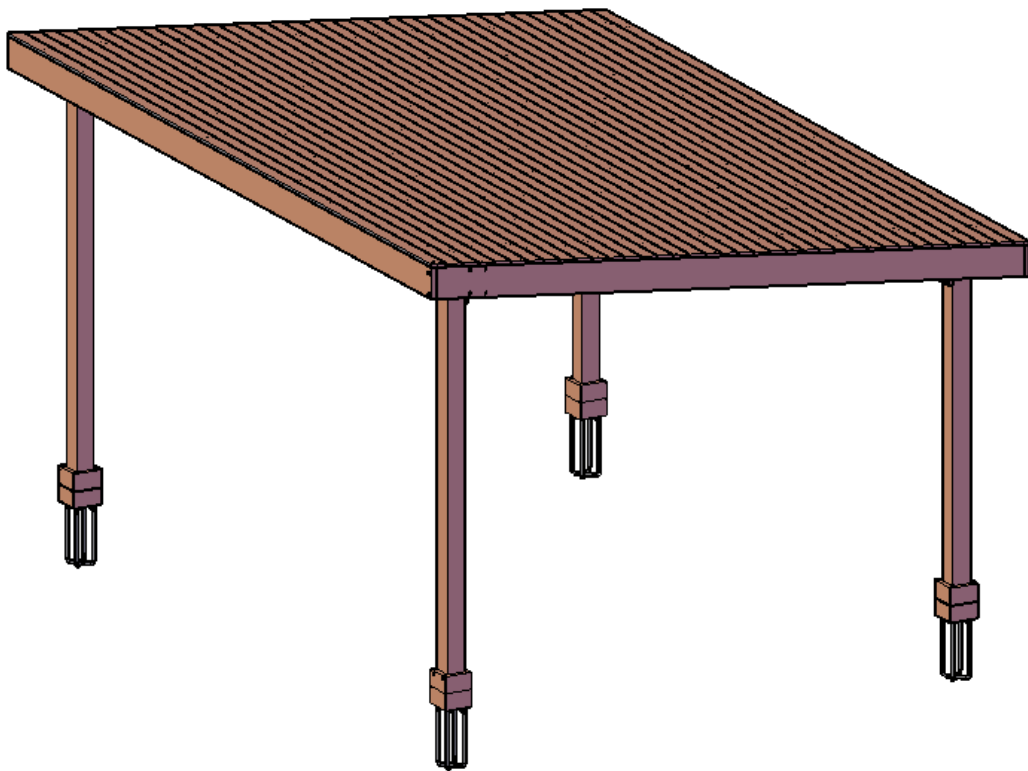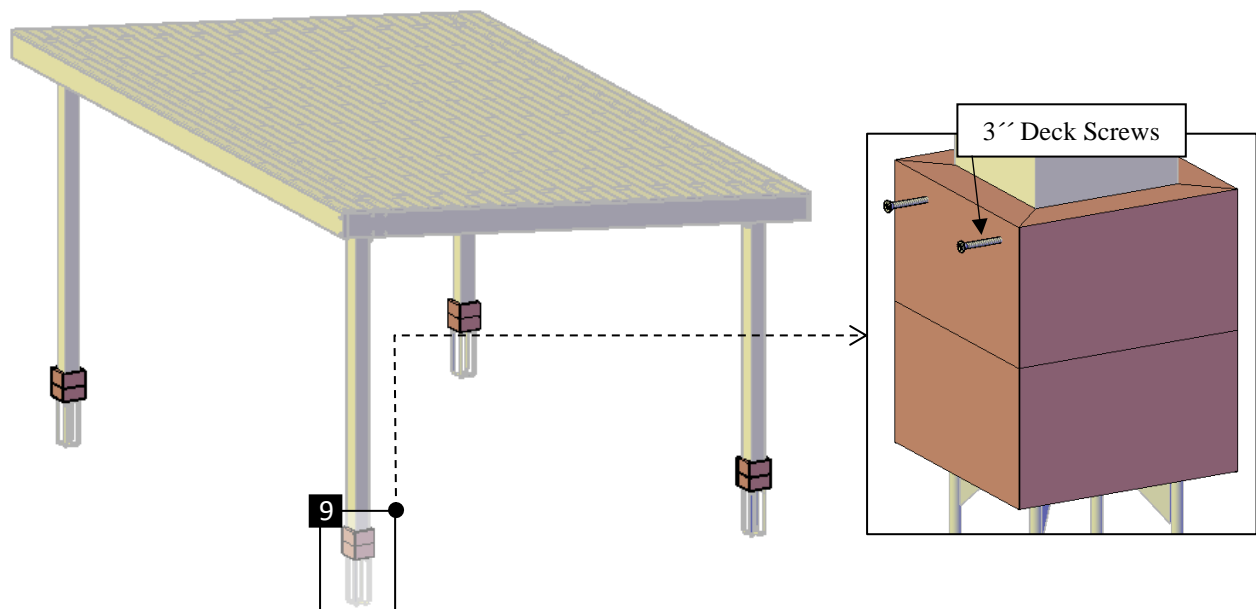



This completes the Pergola assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.