




FOREVER REDWOOD







From the Forest, For the Forest since 1995

866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday







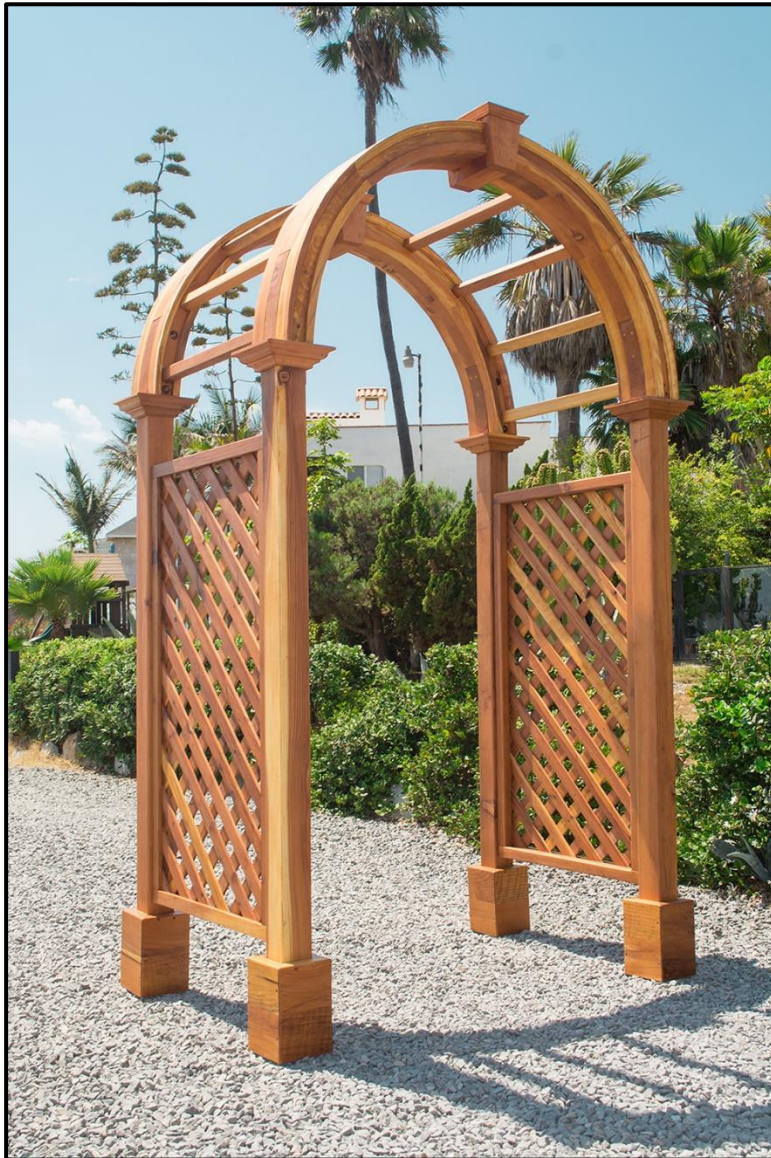ASSEMBLY INSTRUCTIONS FOR THE **THE VERSAILLES ARBOR**



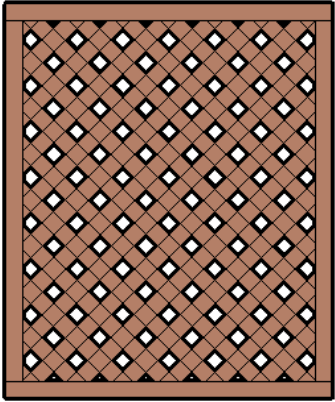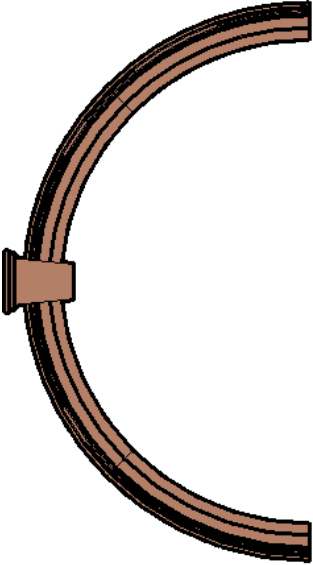


CONTENT OF BOXES			
Qty.	Description	Drawing	No.
4	Posts		1
2	Lattice Panels		2
2	Arches		3
8	Slats		4
4	Boots		5
4	Anchor Base		6

Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.

CONTENT OF BOXES		
Description	Drawing	No.
-1/2" X 3" Anchor Bolts (To attach the anchor bases to the ground).		A
5/16" X 3" Lag Bolts (To attach the anchor bases to the posts).		B
3" Deck Screws (To attach the arched rafters to the support. / To attach the slats to the arched rafters. / To attach the boots to the posts).		C
3/8" X 6" Bolts (To attach the single supports to the posts. / To attach the main knee braces to the support).		D
Washers		E
3/8" Nuts		F

Note: Dimensions of your hardware will vary depending on size.

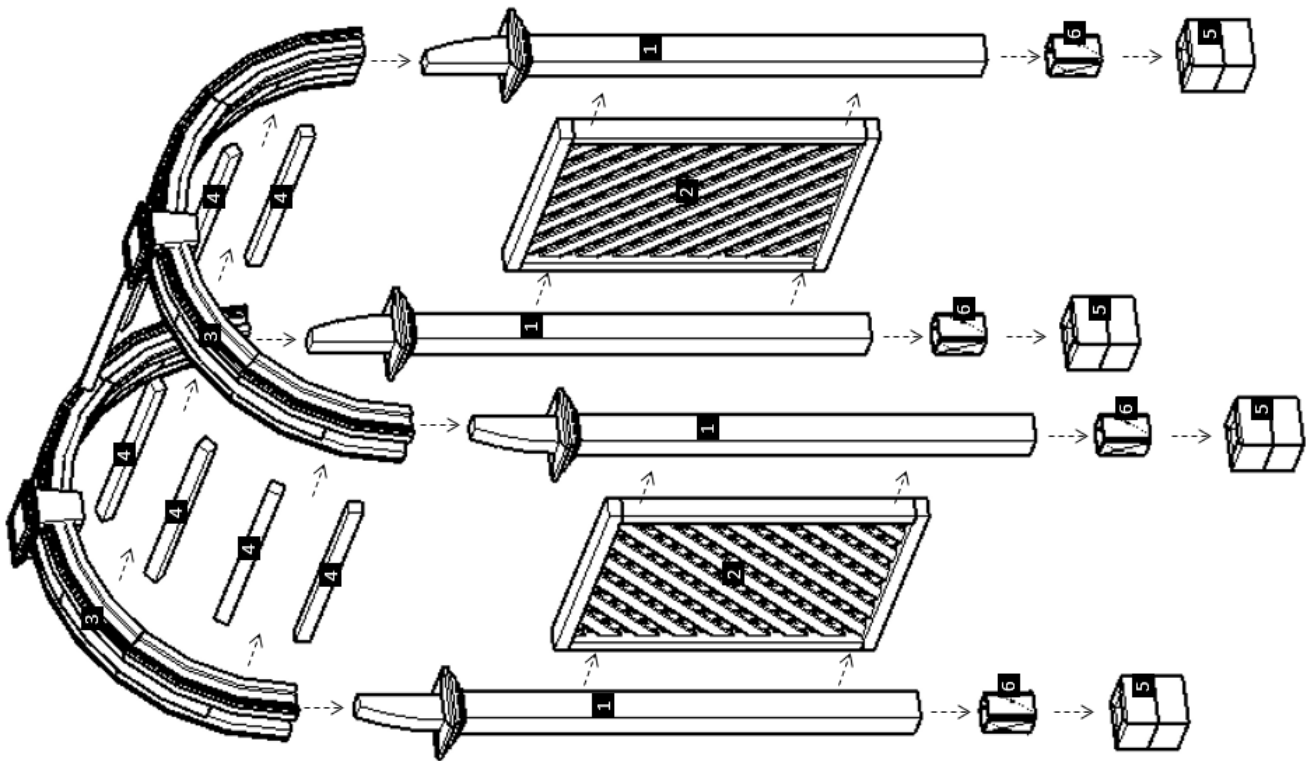


DESCRIPTION	No.
Posts	1
Lattice Panels	2
Arches	3
Slats	4
Boots	5
Anchor Base	6


Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.

NOTE: In order to know where the post needs to be placed, check the numbers on them. If the post is not marked, then place the single Supports on the ground to locate the markings for each post position and clearly set your bearings. (“Don’t attach yet, only place them on the ground to begin with”).


Step 1: Install the anchor base (6) with $\frac{1}{2}$ " X 3 $\frac{1}{2}$ " anchor bolts (A) or lag bolts. Please see the “How to anchor your pergola document” for all details. Set your post (1) in the saddle of the anchor bases. Drill a ϕ $\frac{1}{4}$ " hole in the post prior to anchoring to facilitate the ratcheting of the hardware. After that, use a $\frac{5}{16}$ " X 3" lag bolts (B) to attach each post to its respective anchor base.

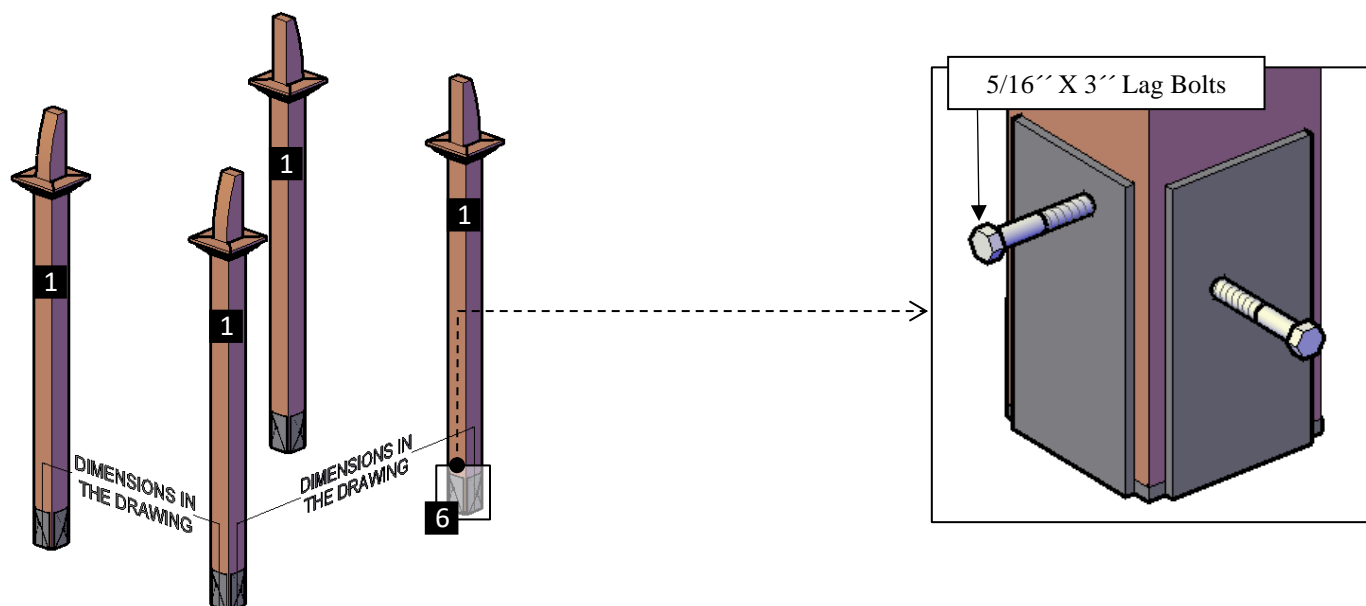


Step 2: Attach the lattice panels (2) to the posts (1) with 3" deck screws (C). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

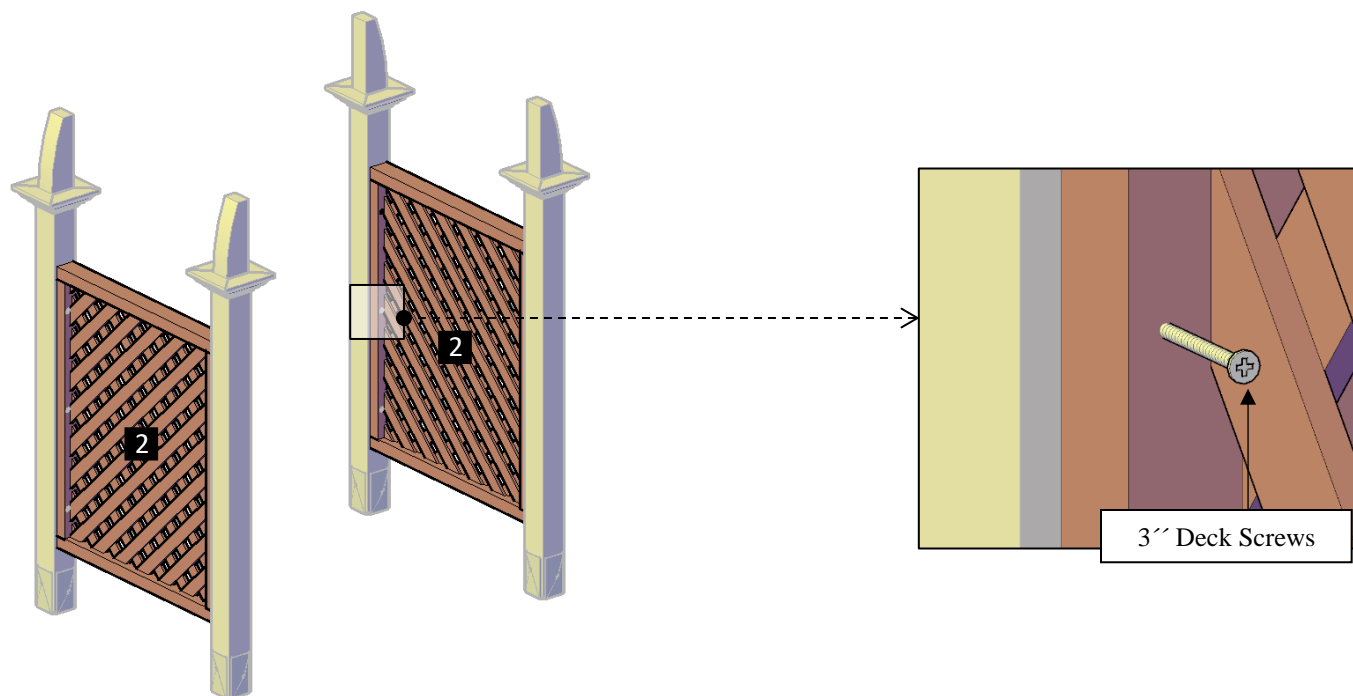



Step 3: Place the arches (3), into the post notches as shown and attach to the posts with 3/8" X 6" bolts (D). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

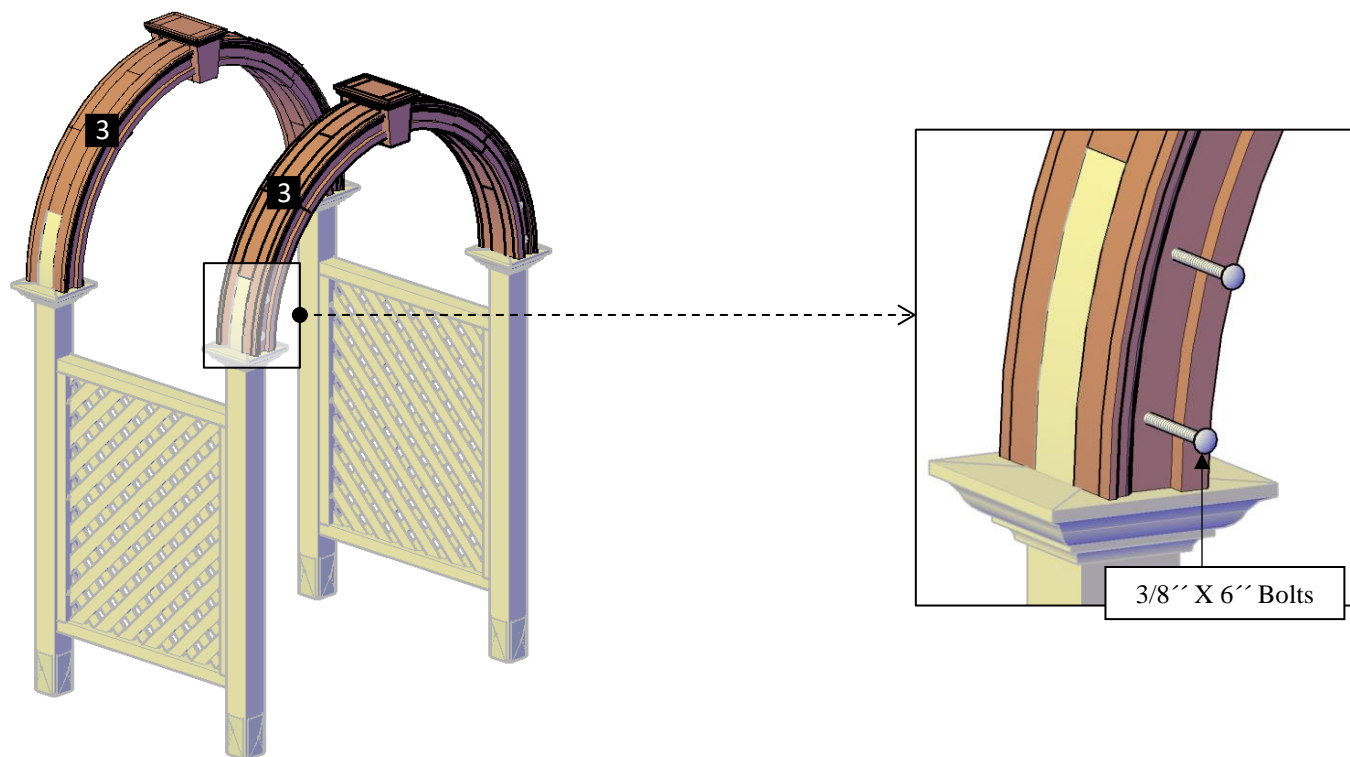

Step 4: Attach the slats (4) to the arches with 3" deck screws (C). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

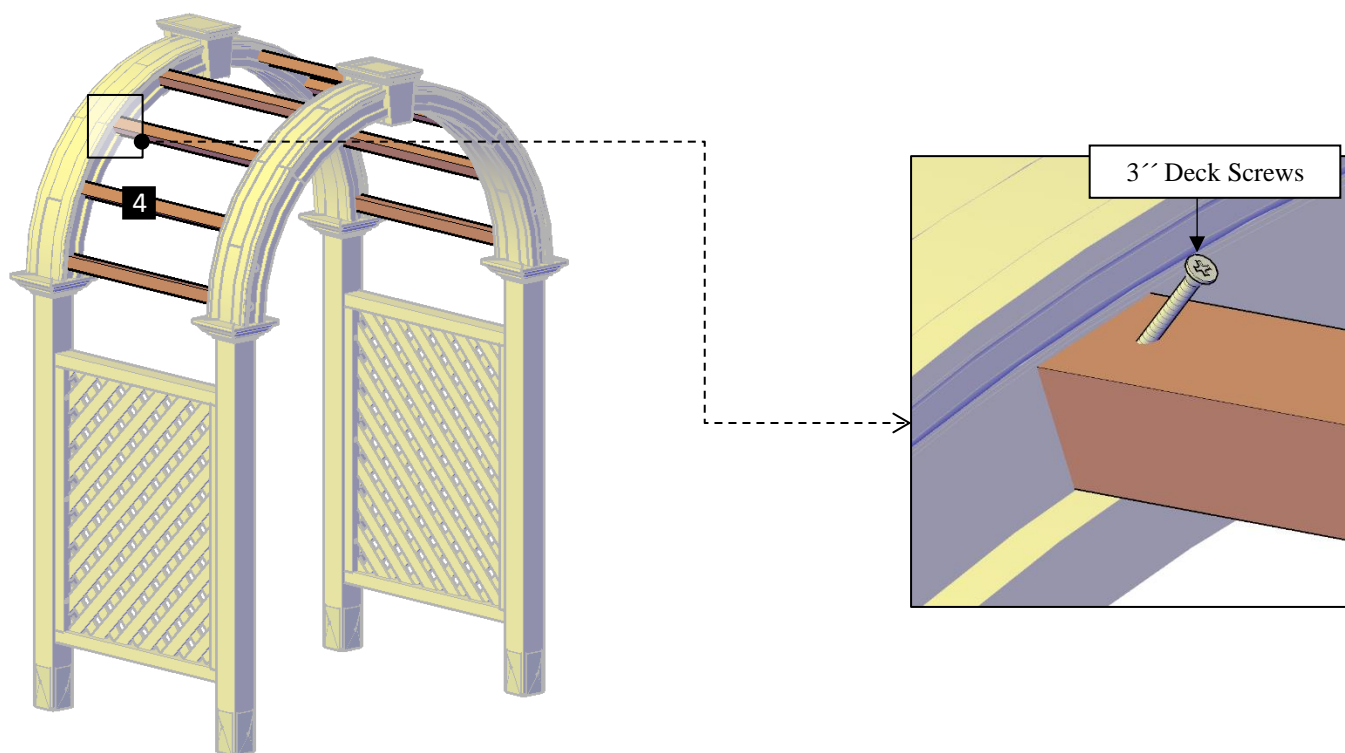

Step 5: Finally, attach the boots (5) to the posts with 8'' x 3'' deck screws (C). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

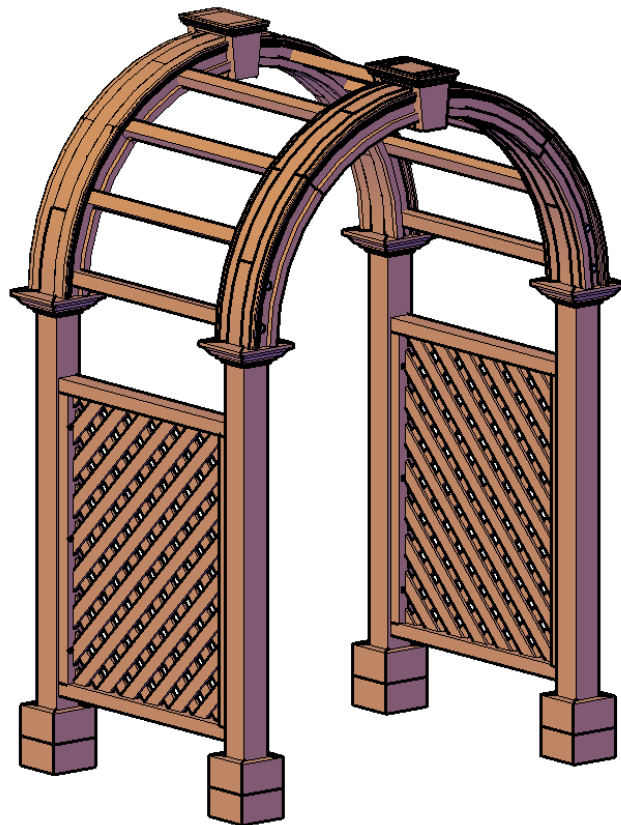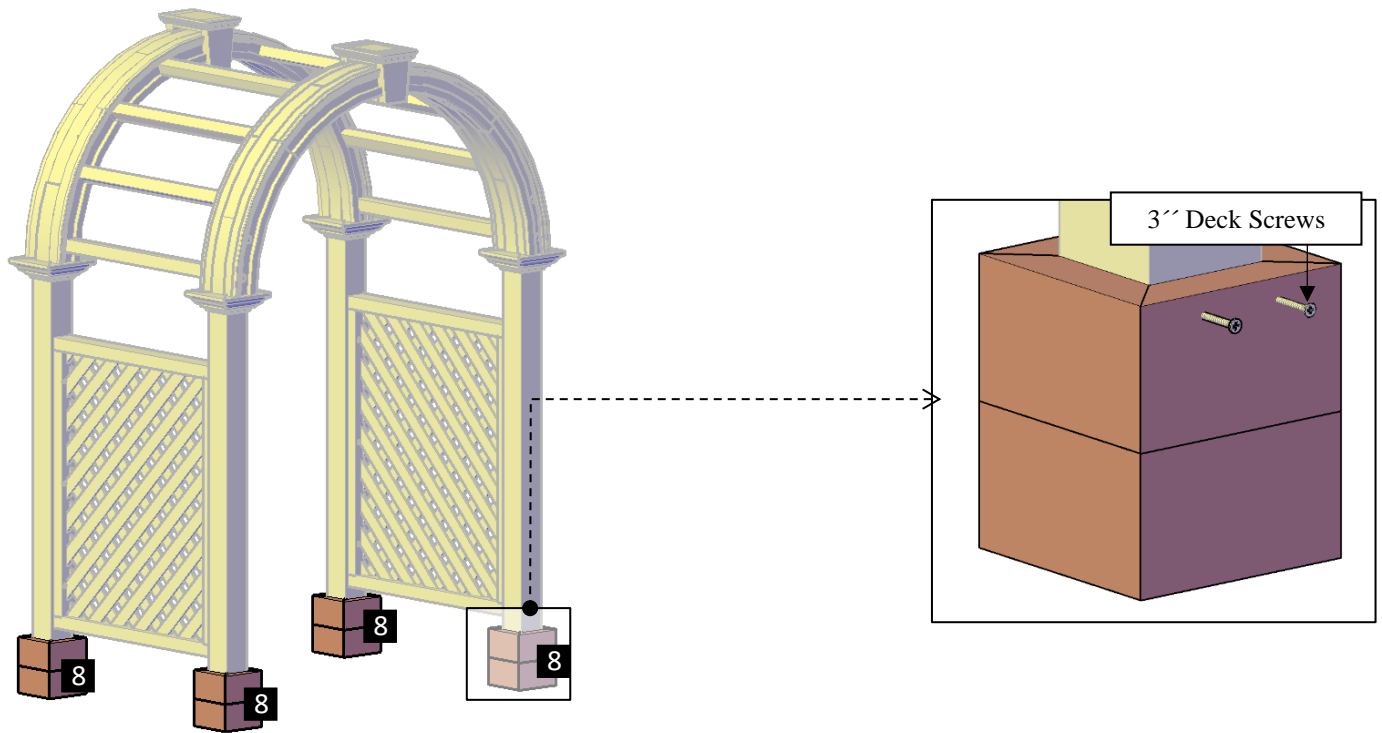



This completes the Arbor assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.