

866.332.2403 (Toll Free); 7am-7pm Pacific Time, Monday-Saturday

Assembly instructions for: **TONY LOUNGERS**



www.foreverredwood.com

Number of boxes: 4

<u>Box 1 of 4</u>

Quantity	Description	Drawing
20	Carriage Bolts 3 ¹ / ₂ " x	
	5/16",	
	Washers and	
	Nuts	
1	Snack Trays (A)	
2	Armrest assemblies Left (B) & Right (C)	

<u>Box 2 of 4</u>

Quantity	Description	Drawing
2	Leg assemblies Left (E) & Right (D)	

$\underline{Box 3 of 4}$


Quantity	Description	Drawing
1	Backrest Support (F)	F

<u>Box 4 of 4</u>

Quantity	Description	Drawing
1	Bed (G)	G

ASSEMBLY INSTRUCTIONS

CONTENT OF THE BOXES

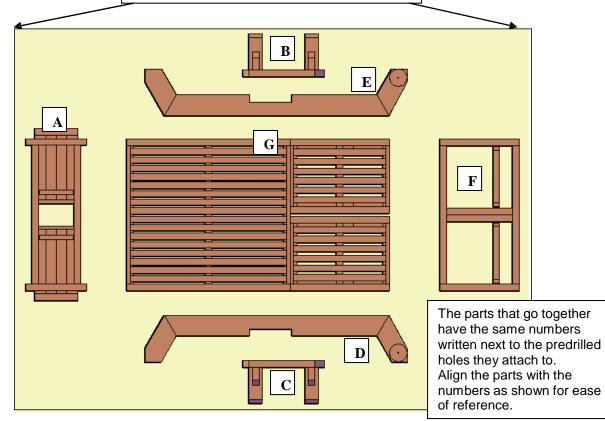



<u>STEP 1:</u>

Attach part C (Arm assembly right) to part D (Leg assembly right), with four bolts $(3 \frac{1}{2}^{"} \times 5/16")$, washers & nuts (holes number one & X into holes number one & X). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

<u>STEP 2:</u>


Attach part B (Arm assembly left) to part E (Leg assembly left), with four bolts ($3\frac{1}{2}$ " x 5/16"), washers & nuts (holes number two & X into holes number two & X). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

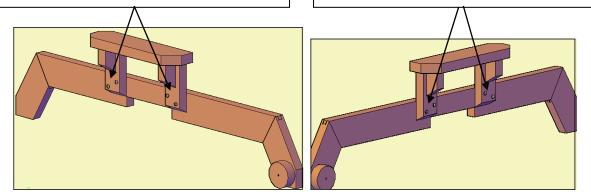


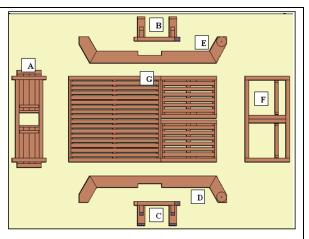

<u>STEP 3:</u>


Attach part D (Leg assembly right) to part G (Bed), with two bolts ($3\frac{1}{2}$ " x 5/16"), washers & nuts (hole number three into hole number three). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

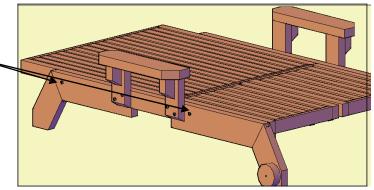

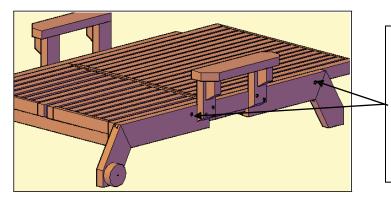


STEP 4:

Attach part D (Leg assembly left) to part G (Bed), with two bolts ($3\frac{1}{2}$ " x 5/16"), washers & nuts (hole number four into hole number four). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

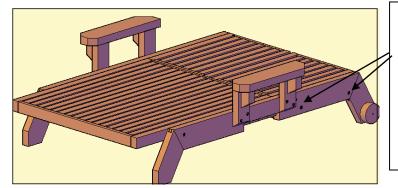


<u>STEP 5:</u>

Attach part D (leg assembly right) to part F (Backrest support), with two bolts ($3\frac{1}{2}$ " x 5/16"), washers & nuts (hole number five into hole number five). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

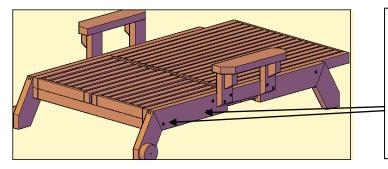


STEP 6:


Attach part E (leg assembly left) to part F (Backrest support), with two bolts ($3\frac{1}{2}$ " x 5/16"), washers & nuts (hole number six into hole number six). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

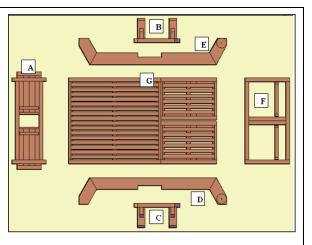

<u>STEP 7:</u>

Attach part E (Leg assembly Left) to part A (Snack Trays), with two bolts ($3 \frac{1}{2}$ " x 5/16"), washers & nuts (hole number seven into hole number seven). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.

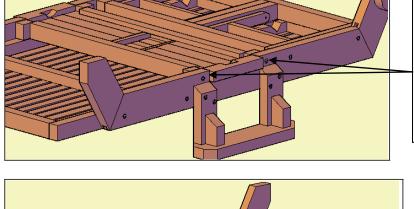

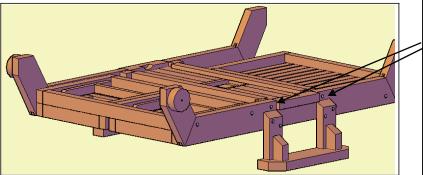

STEP 8:

Attach part E (Leg assembly right) to part A (Snack Trays), with two bolts ($3 \frac{1}{2}$ x 5/16"), washers & nuts (hole number eight into hole number eight). Tap the bolt all the way into the wood to set it. Then add a washer and nut and lightly tighten.



Tony Loungers

www.foreverredwood.com