


866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

ASSEMBLY INSTRUCTIONS FOR THE WAGON WHEEL WOODEN BENCH



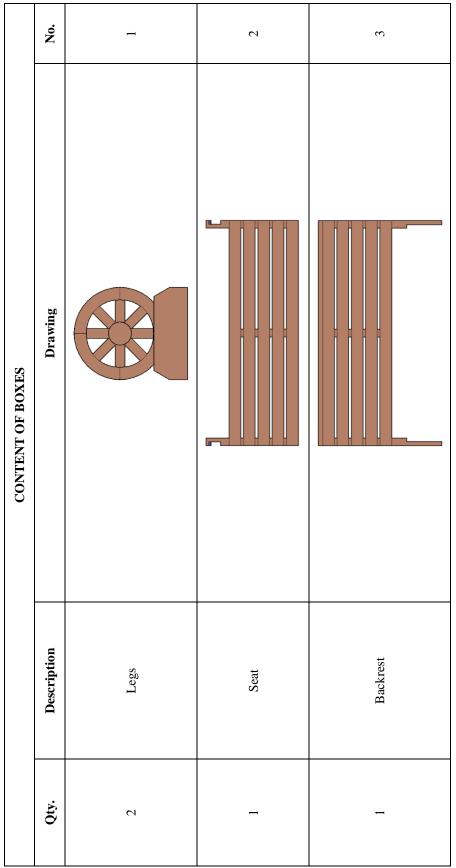


Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.

| | .oN | A | В |
|---------------|-------------|---|---|
| HARDWARE LIST | Drawing | | |
| | Description | 3/8" X 3 ½" Anchor Bolts (To attach the Legs to the ground) | 5/16" X 3" Lag Bolts (To attach the boards to the legs) |


Note: Dimensions of your hardware will vary depending on size.

| DESCRIPTION | No |
|-------------|----|
| Legs | 1 |
| Seat | 2 |
| Backrest | 3 |

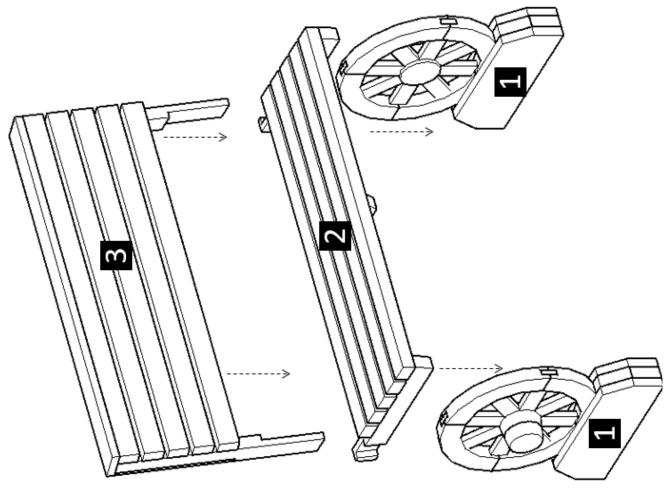



Note: Part numbers in the <u>Drawing</u> are for reference only. These do not match to the numbers marked on the parts sent.

Step 1: Use 5/16" x 3 1/2" bolts (**A**) to attach the legs (**1**) to the seat (**2**). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

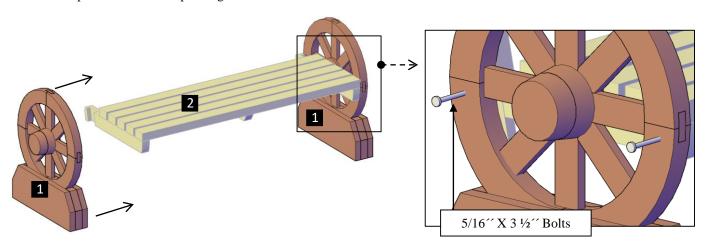

Step 2: Finally, attach the backrest (3) to the legs (1) with 5/16 x 3 bolts (B) and 5/16 x 3 ½ bolts (A). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

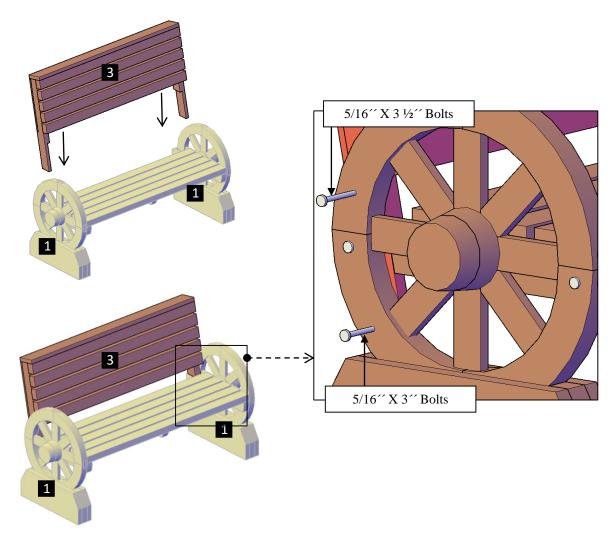

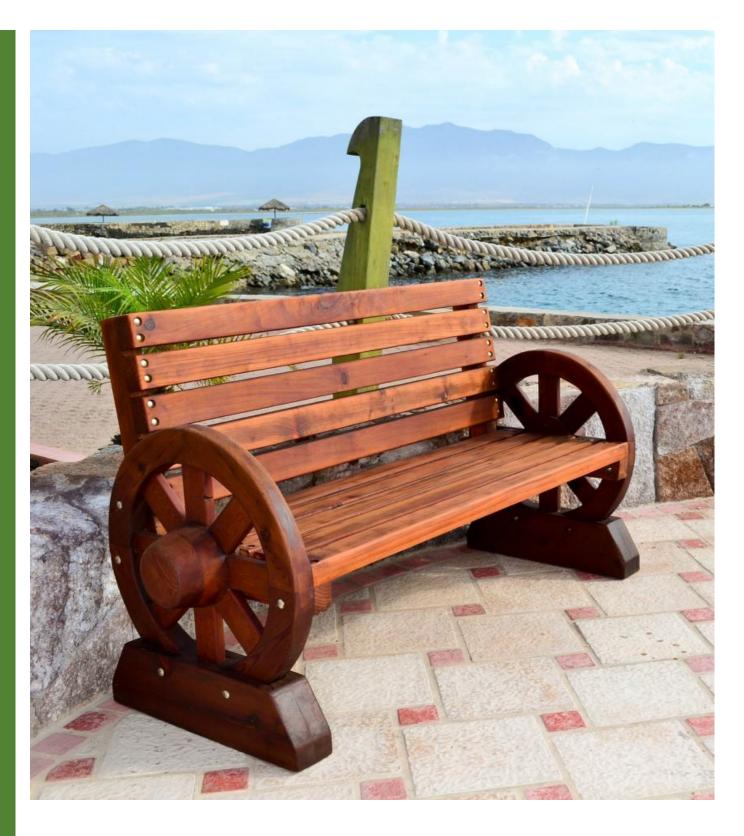

This completes the Bench assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.